 


ASSEMBLY INSTRUCTIONS

Massage Recliner_DTGGIN0145

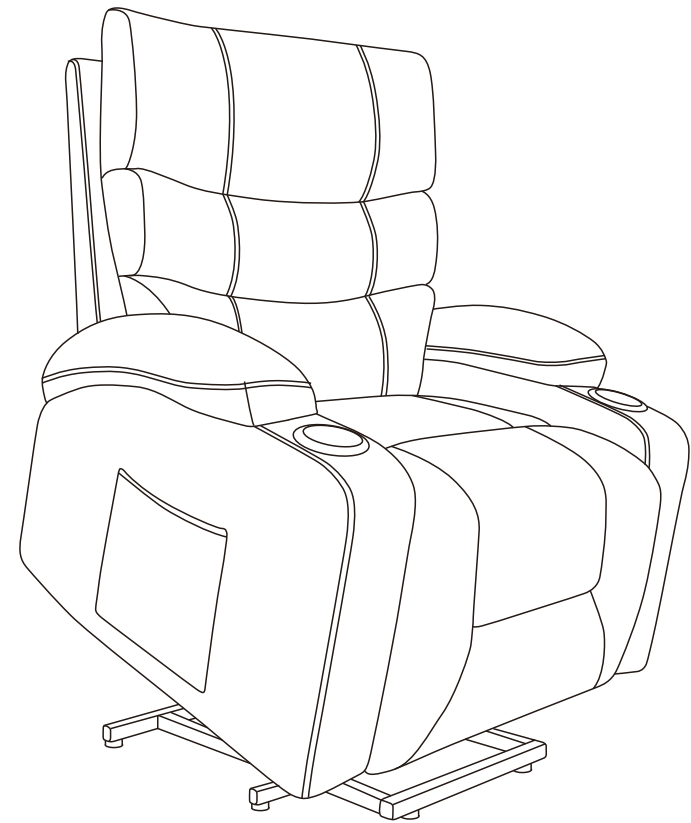

WARRANTY

So glad you have completed the assembly and can enjoy it. If you are satisfied with our products, thank you for showing your favored massage recliner to your around.

Our products come with a 12-month warranty, you can feel free to contact us at any time.

Methods:

If you choose Amazon, going to your Amazon order detail page, Order>sold by>contact seller
(guaranteed response within 24 hours)

AFTER-SALE POLICY

For return reason:

Wrong purchase, bought by mistake, no longer needed, doesn't meet expectation, a size smaller than expectation, customer need to cover the return shipping fee.

For cancel order:

Customer needs to pay for shipping fee and carrier handle fee if the item has been shipped out.

For change address: customer needs to pay for extra shipping fee and carrier handle fee if the item has been shipped out.

Customer Service:

Any problem with the product or shipping issue, please feel free to contact us via service @homrest.com, we will try our best to serve and help.

 
 
 
 
 
 
ATTENTION

Thanks for choosing our product.


- 1. Please check the manual carefully and make sure you have received all the parts.**
- 2. If there is any missing, please let us know the letter of the parts you need.**
- 3. If there is any damage, please send clear photos to us, we will check and offer you best solution soon.**
- 4. The whole product has only one box in total.**

Assembly Instruction

Parts List

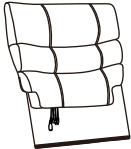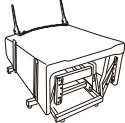A  Chair Base	B₁  B1-L  B1-R	B₂  Back	C 	D 
1 pc	2 pcs	1 pc	1 pc	1 pc
E  E-R  E-L	F  F-R  F-L	G 	H 	
2 pcs	2 pcs	4 pcs	2 pcs	
I 	J 	K 	L 	
1 pc	4 pcs	4 pcs	2 pcs	
M 	N 	O 	P 	
4 pcs	1 pc	20 pcs	1 pc	

 Just feel free to chat us if you have any problems, we will try our best to help you solve the issue.

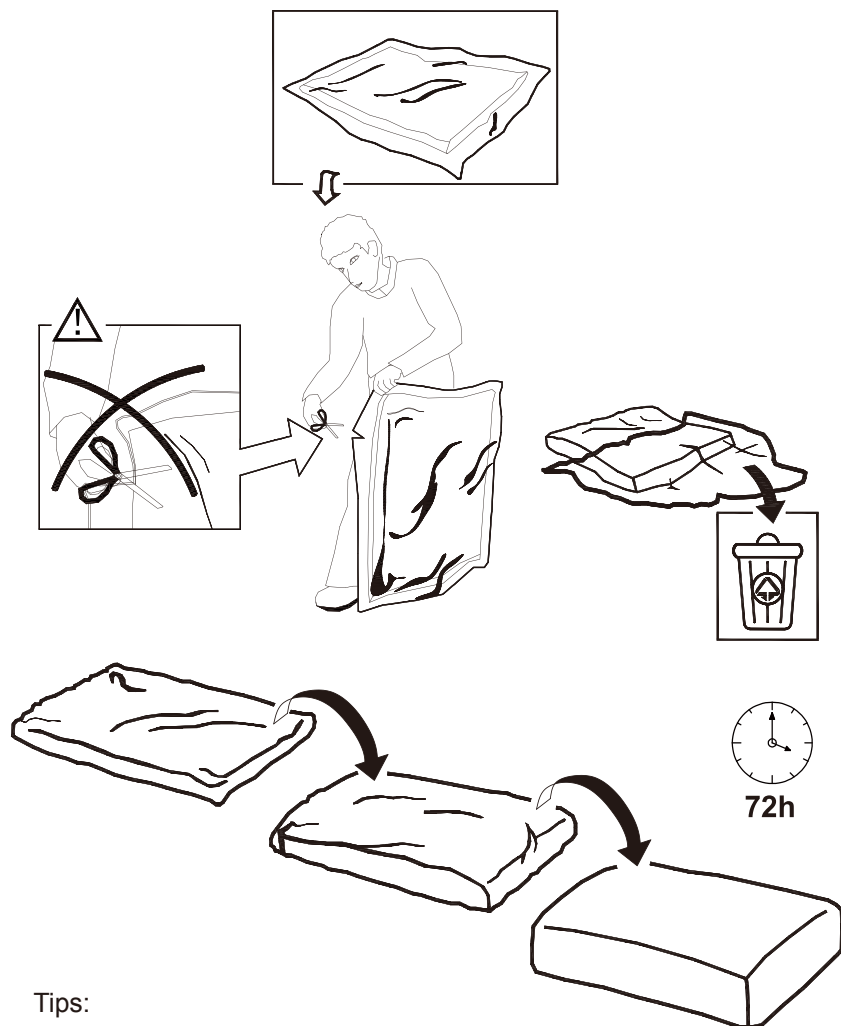


Tips:

1. Please note that the back cushion and armrest pillow of the recliner is vacuum-packed to reduce the overall size of the package. Please open the plastic bag with caution to avoid damaging the upholstery of chair.
2. It's normal phenomenon that the backrest looks a little deflated when taken out of the bag. The condition will improve in 24-72 hours. You may also expedite the recovery speed by tapping and squeezing the backrest.

Assembly Instruction

Step 1

 
Turn over the base part, you will find the power wire and remote wire being binded by three cable ties. Please cut off the #1 & #2 & #3 cable ties.

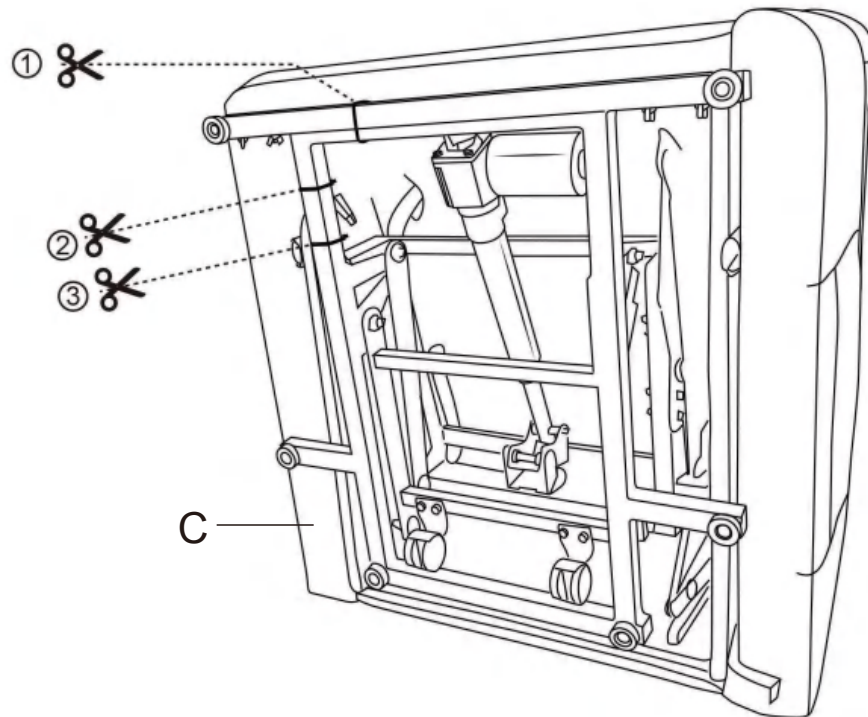

Assembly Instruction

Step 2

 
C*1

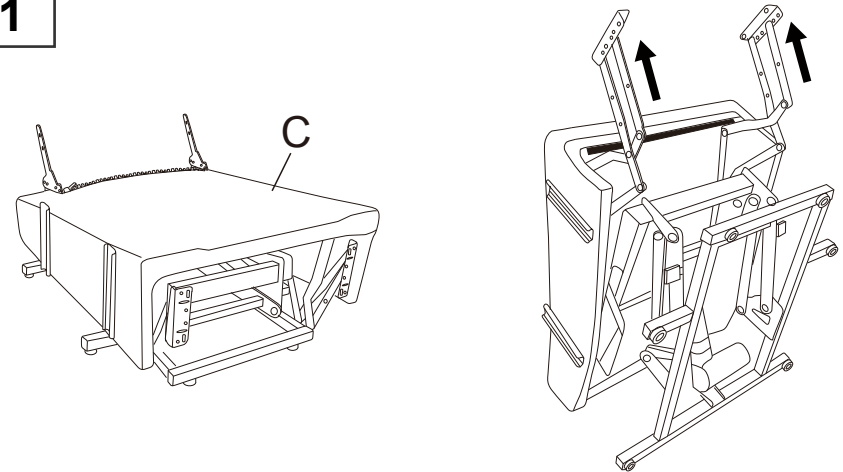

Assemble left and right armrests into the slots on the chair base.

Step 3

 D*1

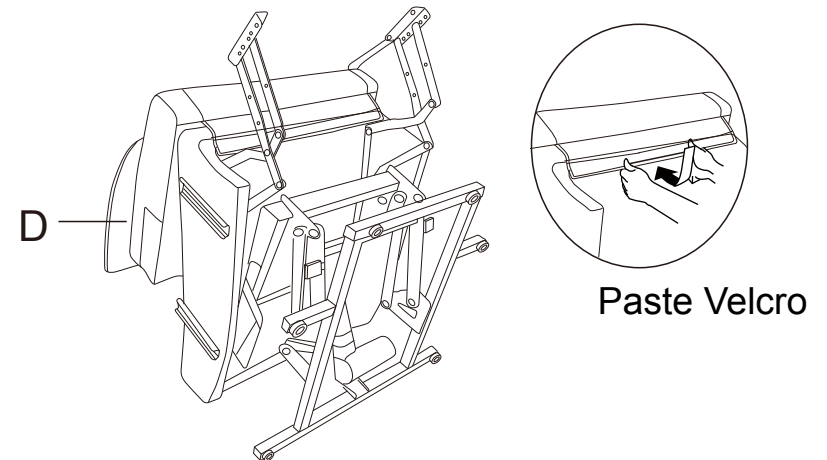


Noted: The cup holder is facing outward

Assembly Instruction

Step 4


O*4

 P*1

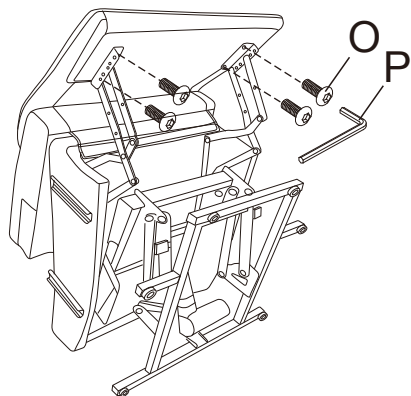

Note: If the armrest or back shakes after assembly, please knock down and assemble again, and make sure that all the slots are properly aligned.

 Step 5

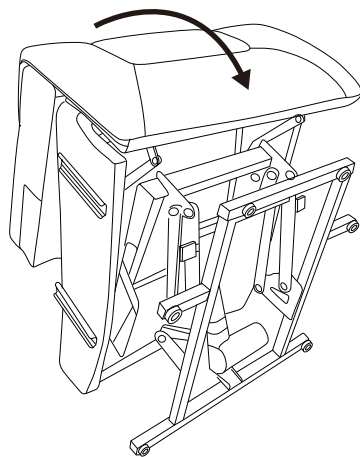

Attach brackets to the base with wing nuts.

 
 
Assembly Instruction

Step 6



E*1

O*4

P*1

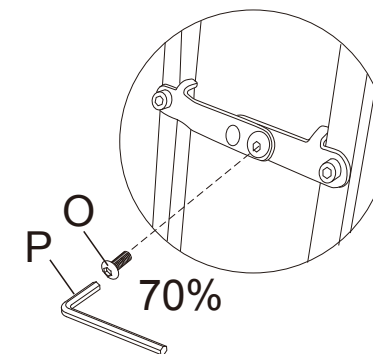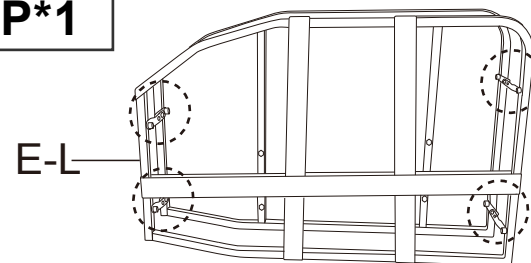

  
Step 7

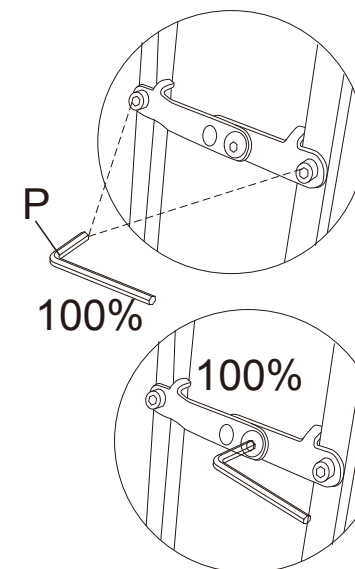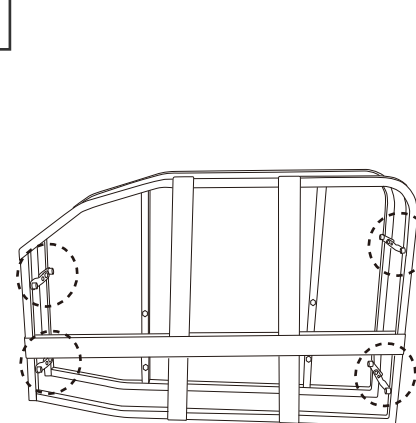

Assembly Instruction

Step 8

 
F*1

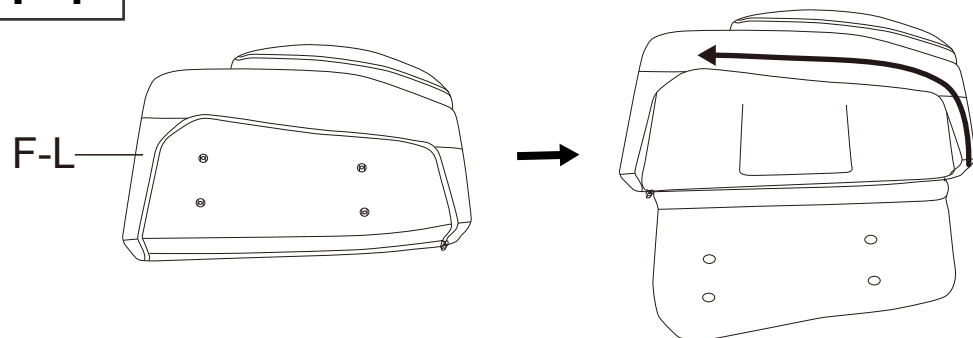

Step 9

E*1

 F*1

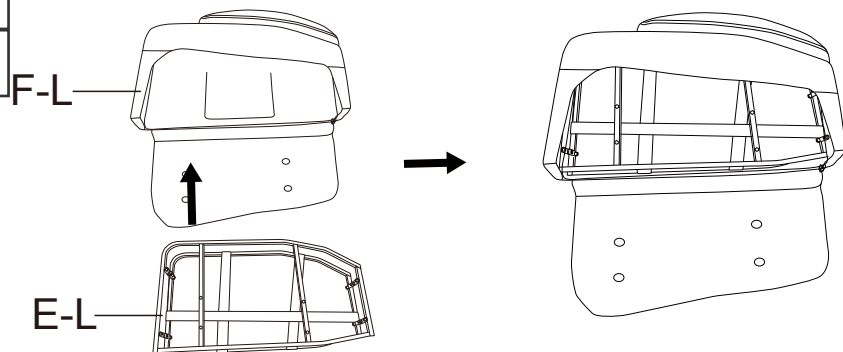


Assembly Instruction

Step 10


G*2

O*4

 P*1

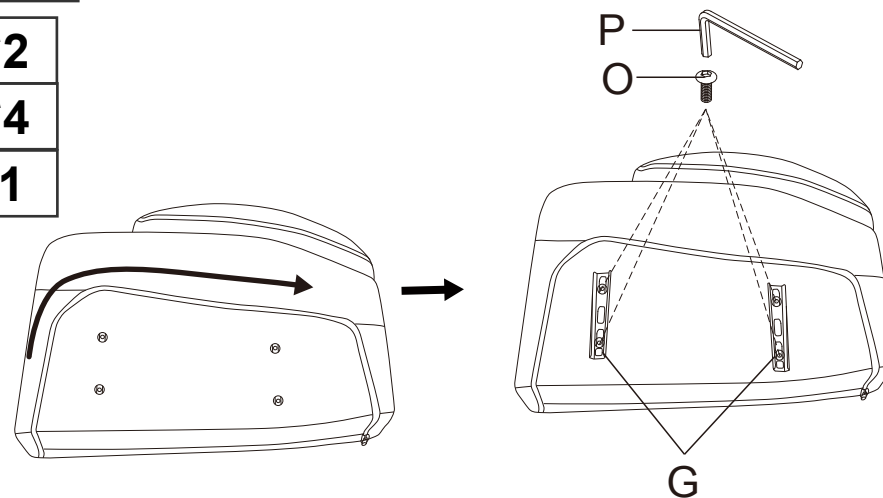


 Step 11

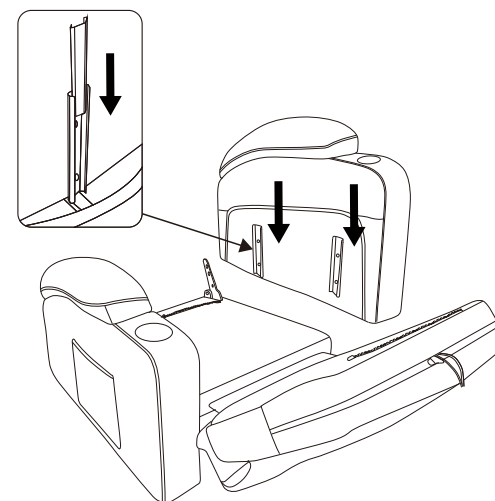

Assembly Instruction

 Step 12

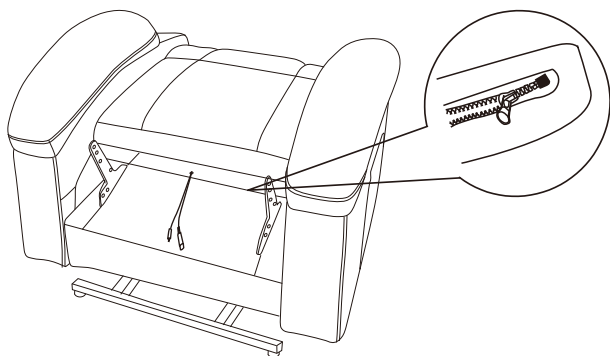


Step 13

A*1

B1*2

 
B2*1

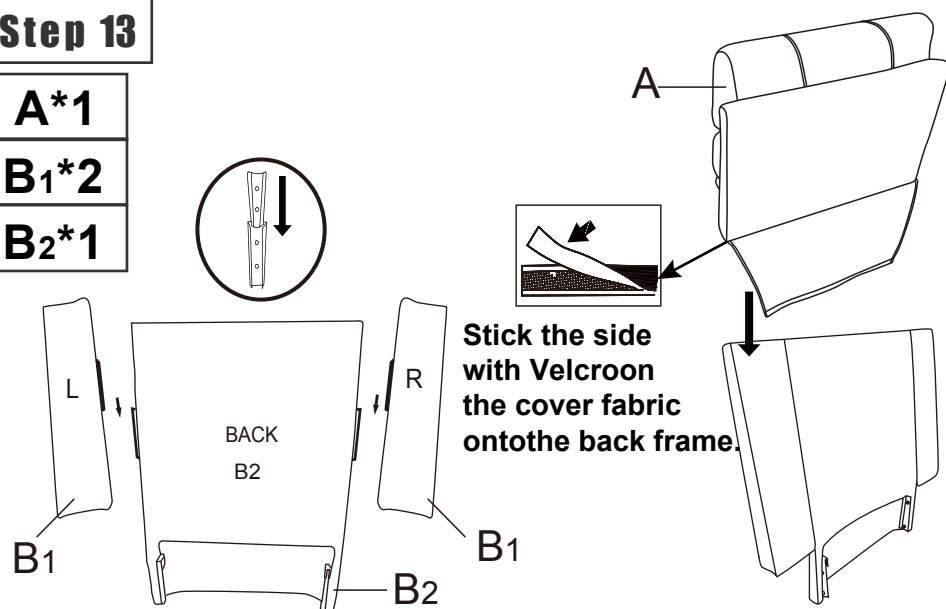

Assembly Instruction

Step 14

 
H*2

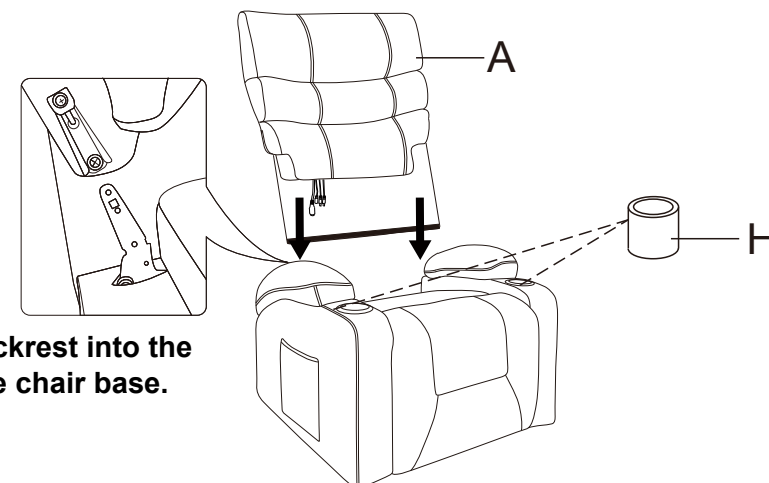

Assemble backrest into the slots on the chair base.

Attach both backrest ears B(R&L) to the back cushion H by aligning and sliding the metal grooves as well

 Step 15

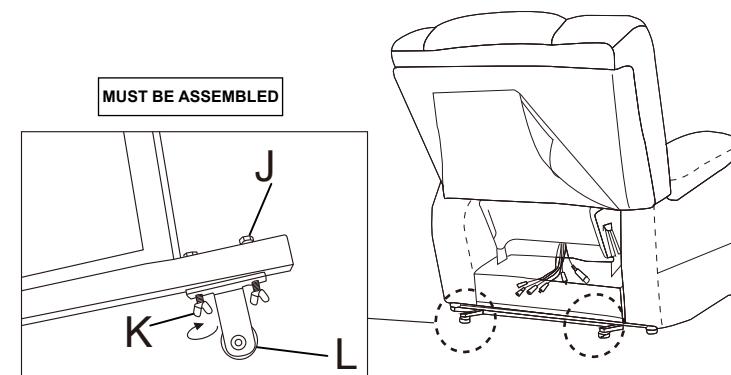

Connect L with screws J and nuts K, tighten screws

 
Assembly Instruction

Instructions of connecting the power cords

Connect wire ①② with wires of same color from the seat base

Connect wire ③ with Power Cord ② and wire ④ with Massage Remote ①


Connect wire ⑤ with Remote Control ① and wire ⑥ with Adapter and Wire ③

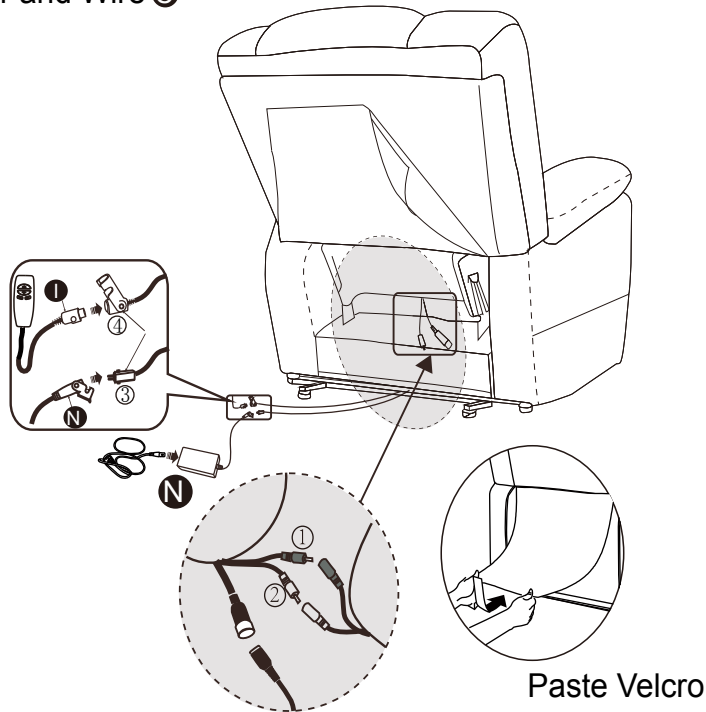

The method of connecting the power cords.

Assembly Instruction

 How to use remote control

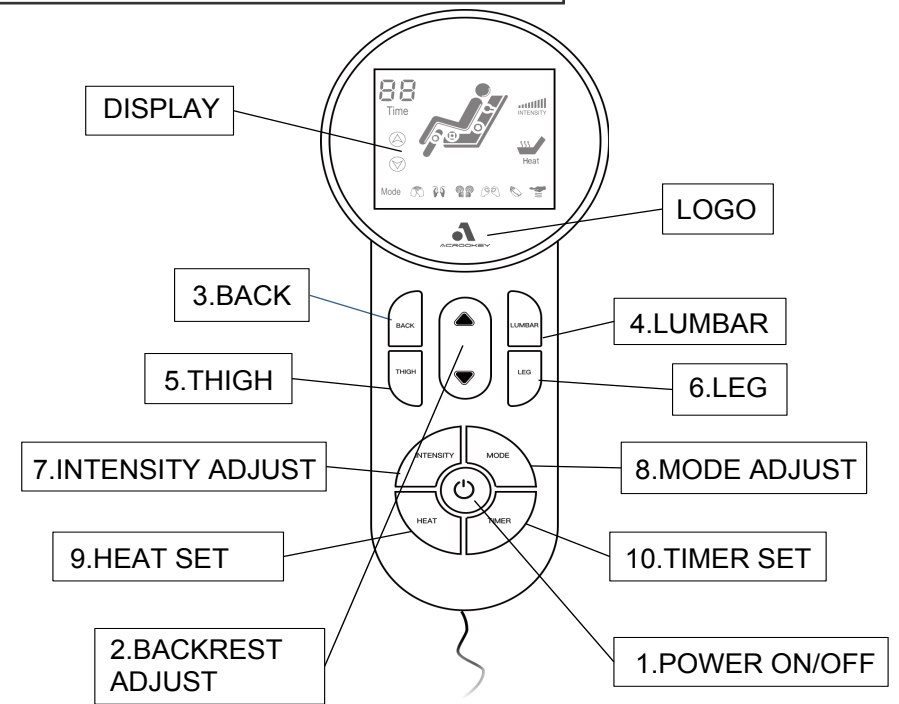


KEY OPERATION INSTRUCTIONS:

1. KEY: LONG PRESS FOR 2s "ON/OFF" ; SHORT PRESS FOR "PAUSE/RUN"
2. KEY: BACKREST CONTINUES TO RISE; PRESS PAUSE AGAIN;
 KEY: BACKREST CONTINUES TO DOWN; PRESS PAUSE AGAIN
3. BACK KEY: BACK MESSAGE "ON/OFF";
4. LUMBAR KEY: LUMBAR MESSAGE "ON/OFF" ;
5. THIGH KEY: THIGH MESSAGE "ON/OFF" ;
6. LEG KEY: LEG MESSAGE "ON/OFF" ;
7. INTENDITY KEY: THIRD GEAR ADJUSTMENT, LOW / MIDDLE / HIGH;
8. MODE KEY: SELECT MODE OF SIX MESSAGE MODES;
9. HEAT KEY: THIRD GEAR ADJUSTMENT, LOW / MIDDLE / HIGH;
10. TIMER KEY: SET MESSAGE TIME, MAX 60min.

Assembly Instruction

 
DESCRIPTION OF SCREEN DISPLAY

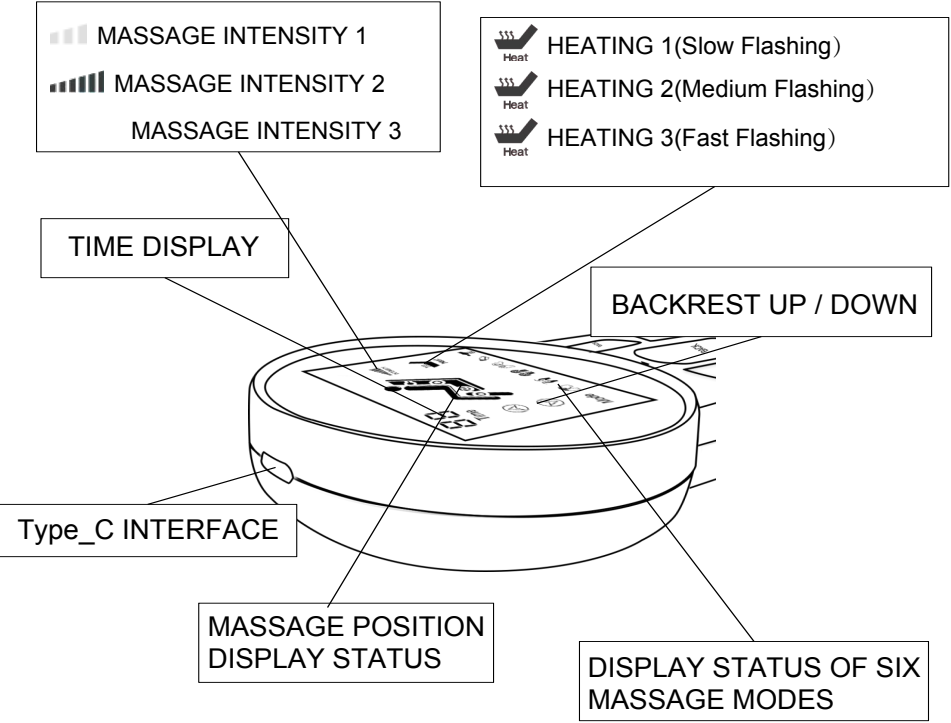


*FAST CHARGING PROTOCOL:
SUPPORT PPS/PD/QC/AFC/FCP/SCP/PE/SFCP

Warning

 Do not sit on or press armrest

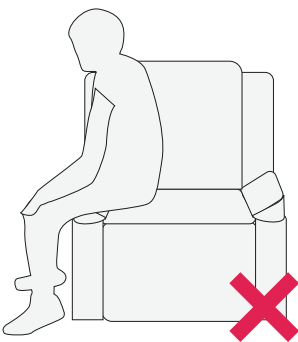

Do not press backrest after recline


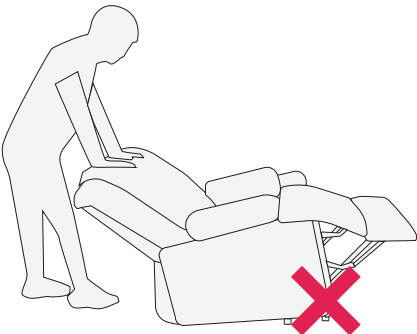 


Do not sit on or press armrest




Warning

  Do not sit/kick/stand on the footrest after lift up

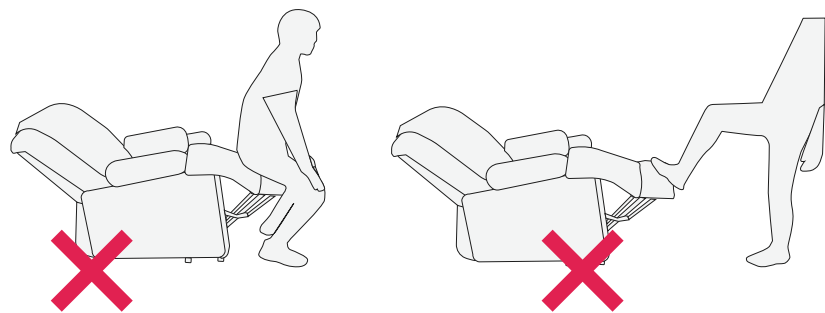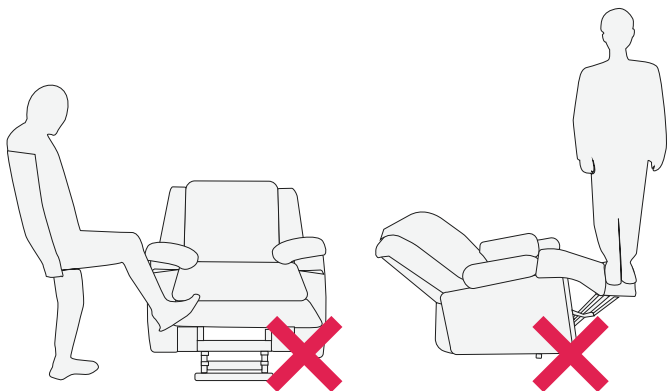


 Leave enough space between chair back and wall before recline

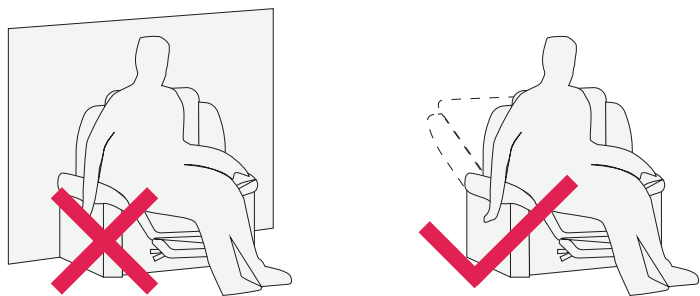


Warning

 
2-Person lift

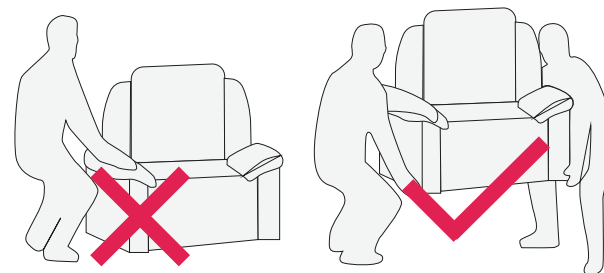

Do not move chair when it's reclining

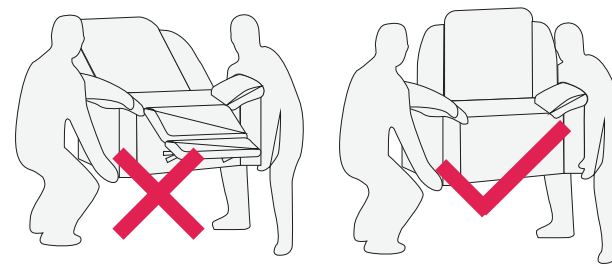 

 Unplug all power source from socket, then unplug all wires connection before move chair

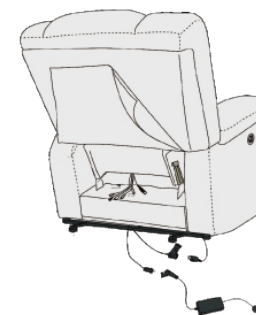

Answers & Questions

FAQ

1.Q: Missing parts.

A: Please check all necessary parts if you have already received one boxes. If not, kindly send messages to let us know missing part name regarding to this instruction, we will send the replacement to you asap.

2.Q: Some parts damaged when arrived.

A: Please send damaged parts photos to us as message attachment, we will check and offer good solution soon.

3.Q:The lift and reclining function does not work, e.g.The chair is stuck on lifting or reclining position, and there is no response when you press the lifting or reclining button.

A: Please help to unplug and plug all the wires as per Step 5&6, when all the wires are connected well, first, please check if the indicator light on power source(E) is ON or NOT, if the light on power source does not turn on, the power source is defective. If the light on power source is ON but the control panel at left arm has no blue light, that's the problem with the control panel. When the power source and control panel both have light, that's the problem of the lift motor. When you have this problem, please don't worry, you just need to contact us thru Amazon message and describe the problem, then we will send the needed replacement to you immediately.

Answers & Questions

FAQ

4.Q: The vibration massage functions are not working.

A: Please check if all wires at the back of recliner chair are connected correctly. The power cord also be plugged into the wall outlet. Then please check the lights on when you press "POWER" button on the remote. If not, the remote is defective and you can contact us for new one to replace.

5.Q: The heat function doesn't work or can't feel.

A: Please check all wires connection as same as question 4 first. If the remote also works well, you will need wait for 5-10 mins after you press the "HEAT" button. The heating function only works at lumbar position and the heat temperature isn't very hot.