


OUTDOOR PORCH SWING

ASSEMBLY INSTRUCTION

GGOT0230BG/BU/GR

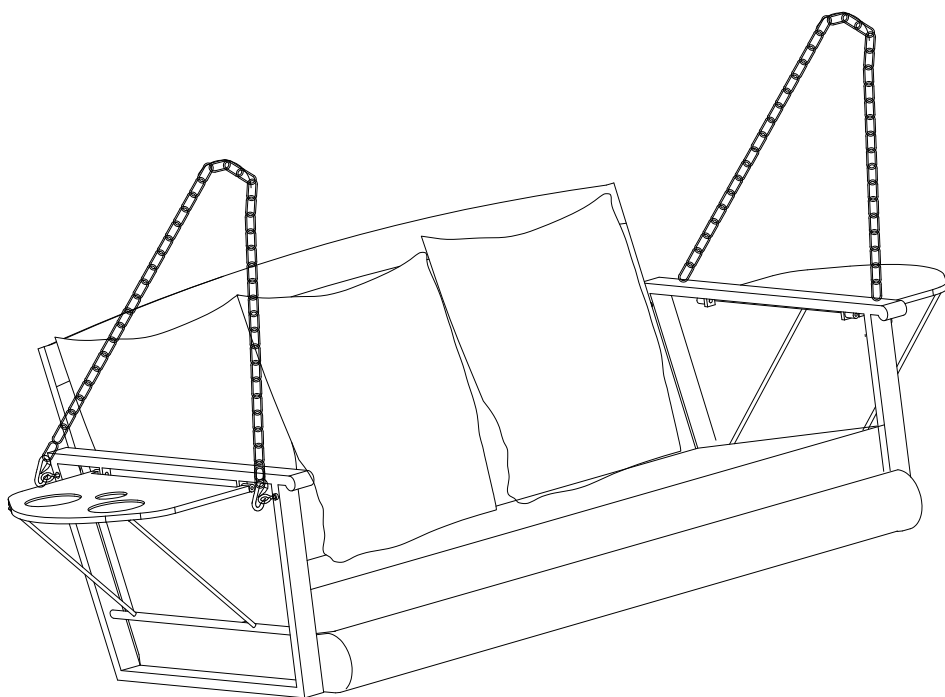

ATTENTION

Thanks for choosing our product.

1. Please check the part list carefully to make sure you've received all the parts.
2. **If there are any missing parts, please contact us with the number and quantity. We will send them to you ASAP.**
3. If there are any damaged parts, please contact us with clear pictures or video. We'll offer you the best solution after confirming it.

NOTE

1. If one or some screws are fully tightened during assembly, the others screws may not be aligned with screw holes. 50% tighten before fastening all screws. Allen wrench is recommended instead of an electric drill.
2. If some screws are not aligned with holes during assembly, please loosen all the other screws to 50% and continue the assembly process.
3. If the items is not stable, please loosen all the screws, adjust it on a flat ground and tighten all the screws.
4. Please don't put the furniture outside without any sunshades in rainy, snowly days. Waterproof cover is recommended for keeping it last several years.
5. The set is manually woven by hands. The PE rattan weave of each set is different. Each model is unique.

Get Installation Guide Video



Scan for Installation Video



 
 
 
 
 
Homrest YouTube Channel

1. Scan the left QR code to directly access the product installation video on YouTube. If you encounter any security prompts, please don't worry.

2. Scan the right QR code or search for "Homrest" on YouTube. Within the account's video list, locate the video corresponding to product's SKU: GGOT0230

Assembly Instruction

Parts List


A 	B 	C 	D 	E  M6*40
1pc	1pc	1pc	1pc	7pcs
F 	G 	H 	I  M10*50	J  M10*90
7pcs	2pcs	6pcs	2pcs	2pcs
K 	L 	M 		
1pc	1pc	3pcs		

Assembly Instruction

We recommend tightening the screws to about 60% tightness during the initial installation, and tighten all the screws until all the installation is complete.


Step1

C*1	D*1
E*3	F*3

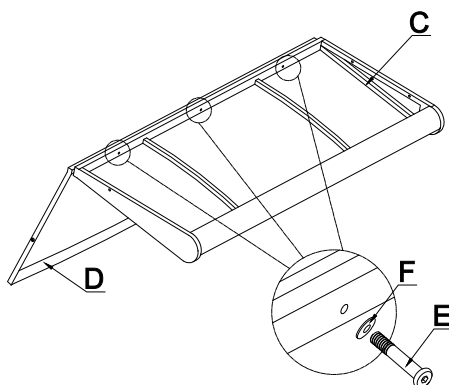


Step2

A*1	B*1
E*4	F*4

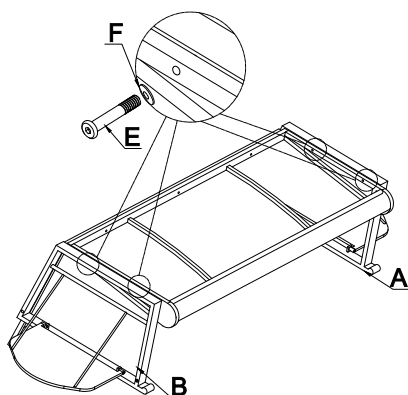

Step3


D*1	J*2
I*2	

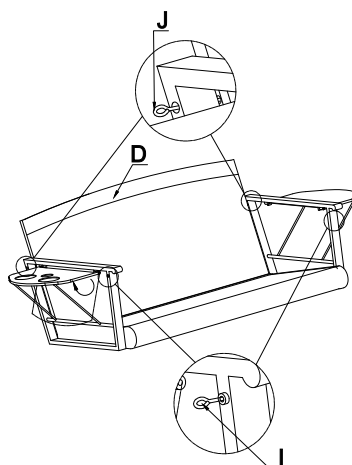

Assembly Instruction


Step4

G*2	H*4

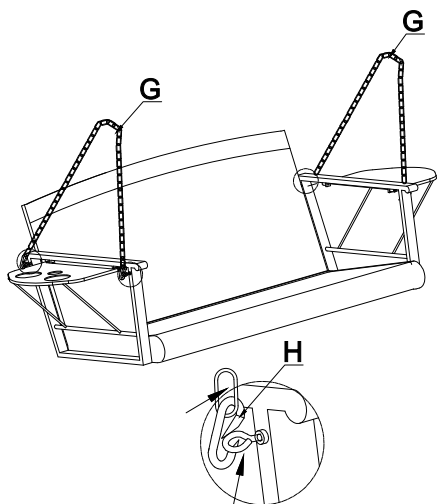

Step5

M*3	L*1

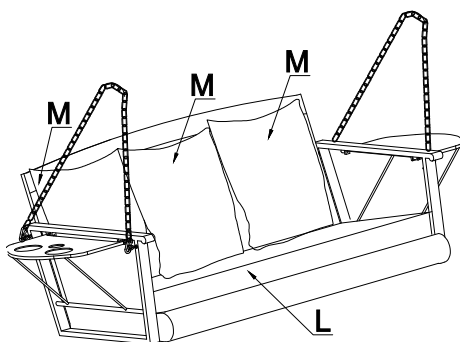

WARRANTY

So glad you have completed the assembly and can enjoy it. If you are satisfied with our products, thank you for showing your favored outdoor porch swing to your around.

Our products come with a 12-month warranty, you can feel free to contact us at any time.

Methods:

If you choose Amazon, going to your Amazon order detail page, Order>sold by>contact seller
(guaranteed response within 24 hours)

AFTER-SALE POLICY

For return reason:

Wrong purchase, bought by mistake, no longer needed, doesn't meet expectation, a size smaller than expectation, customer need to cover the return shipping fee.

For cancel order:

Customer needs to pay for shipping fee and carrier handle fee if the item has been shipped out.

For change address: customer needs to pay for extra shipping fee and carrier handle fee if the item has been shipped out.

Customer Service:

Any problem with the product or shipping issue, please feel free to contact us, we will try our best to serve and help.