 


BATHROOM VANITY

PXLMHM053MS

PXLMHM054MS

 
 
 
 
 
 
 
 
PXLMHM055MS

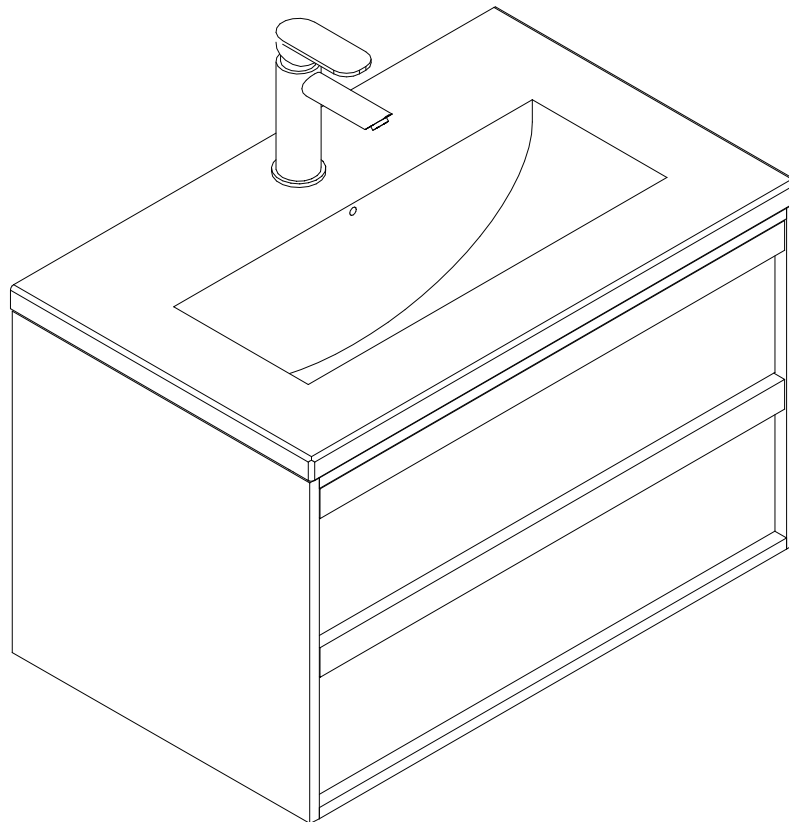



ATTENTION:



1. Please check the manual carefully and make sure you have received all the parts.
2. If there is any missing, please let us know the letter of the parts you need.
3. If there is any damage, please send clear photos to us, we will check and offer you best solution soon.

Package List

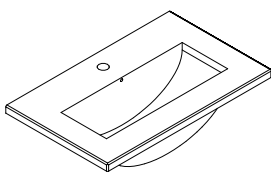Parts List			Parts List		
NO.	Description	QTY	NO.	Hardware list	QTY
1		1	A		2
2		1	B	 B1	1
3		1		 B2	1
4		1		 B3	1
5		1		 B4	4
6		1		 B5 4x75mm	4
7		2		 B6 4x16mm	12
8		2	C	 CAM SCREW	45
9		2	D	 CAM LOCK	45
10		2	E	 8x30mm	8
11		1	F	 4x30mm	14
12		1	G	 4x12mm	26
13		1	H		45
14		1	I		1
15		1	J		1
16		1			
17		1			
18		1			
19		1			

  Package List

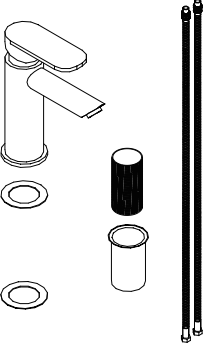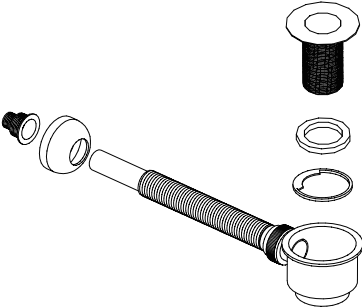Parts List		
NO.	Hardware list	QTY
K		1
L		1

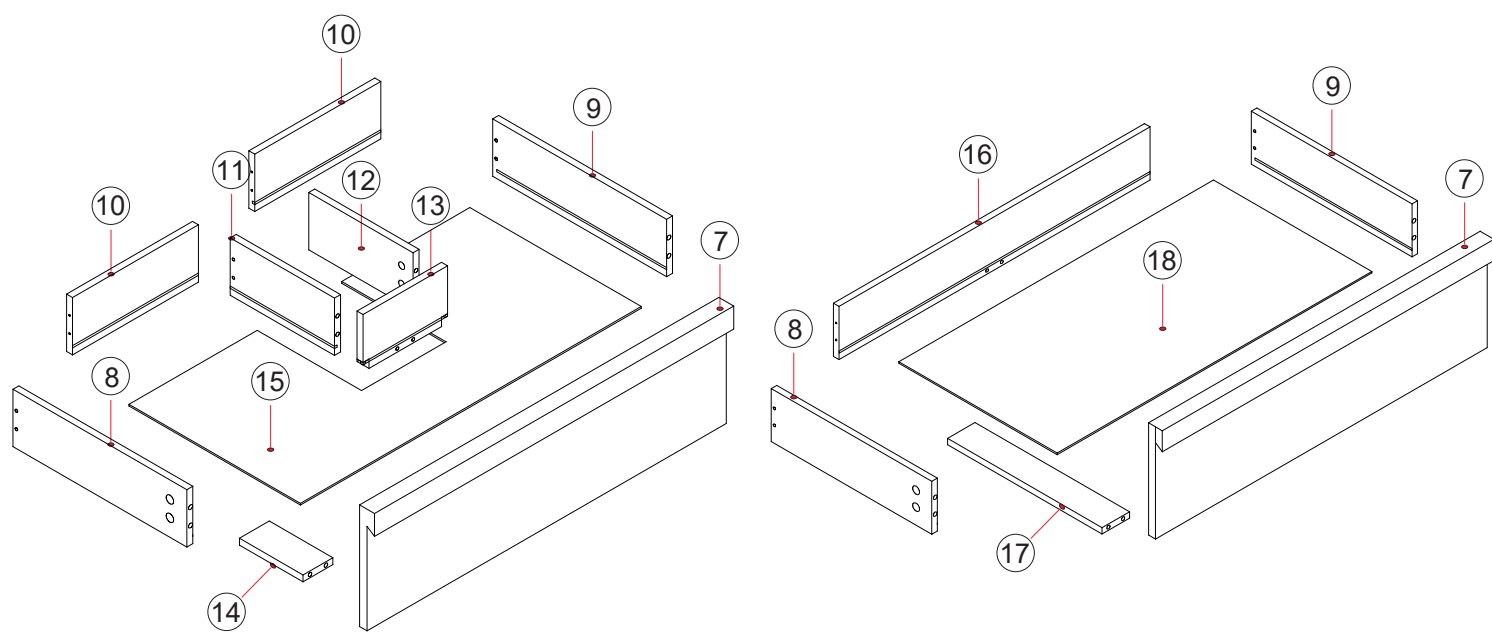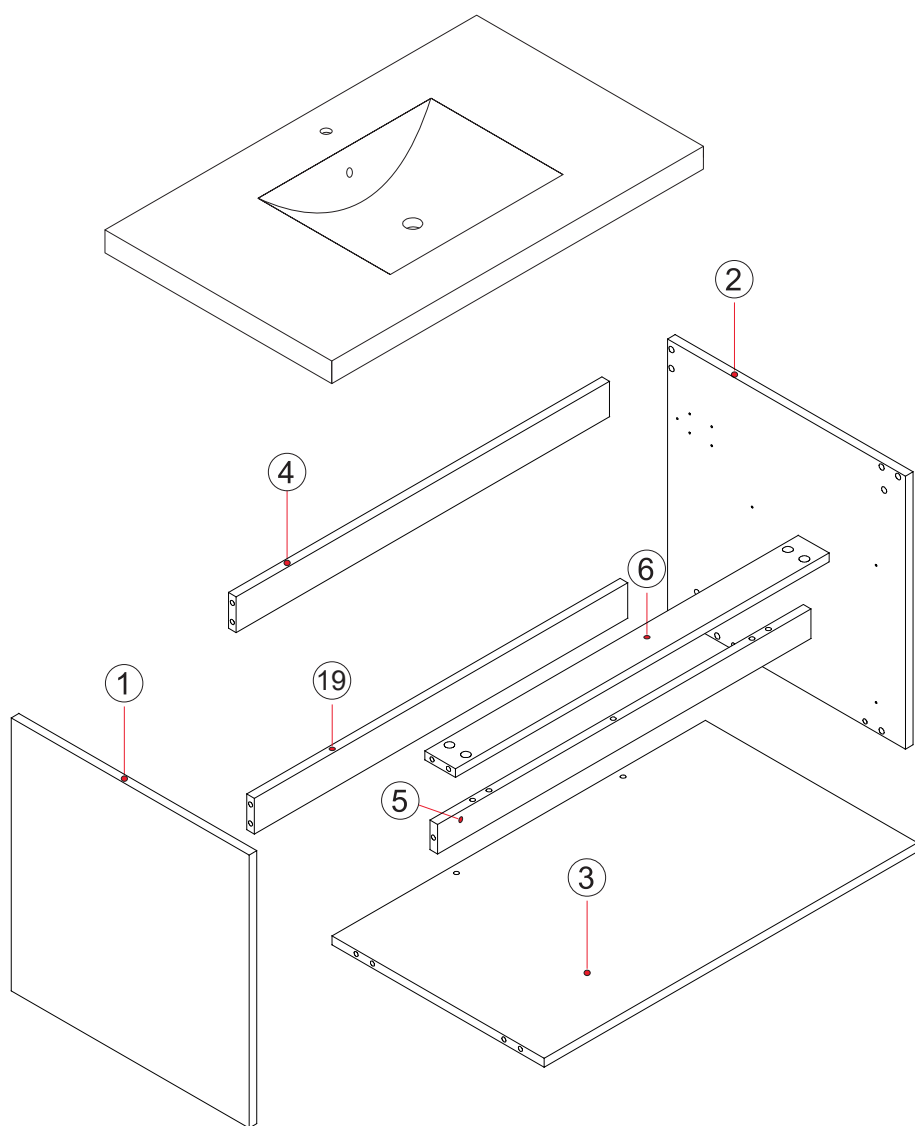  


Installation Manual


Step 1

HARDWARE LIST

(A)		2

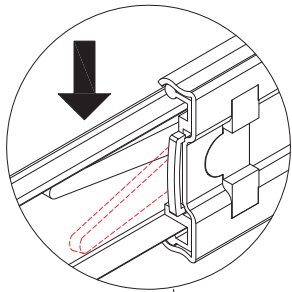 

 
Pull the slide rail A fully out to the position shown in the figure, and move the internal latch structure according to the arrow, and pull out the A2 part.

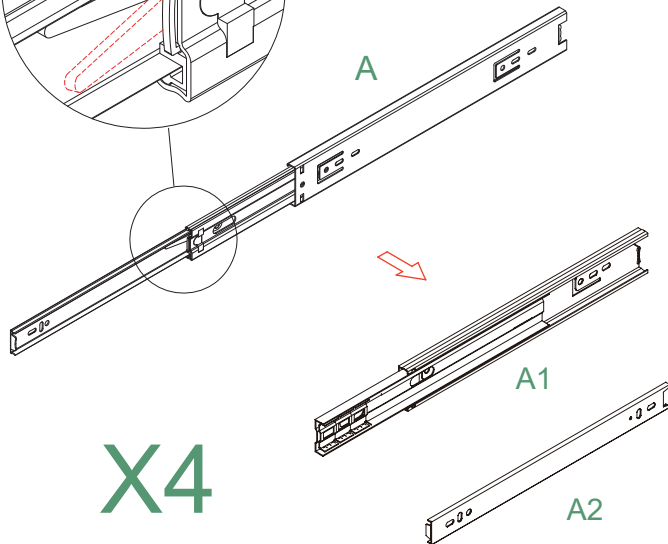

Step 2

HARDWARE LIST


(A1)		4
(B1)		1
(C)		18
(G)		8
(B6)		10

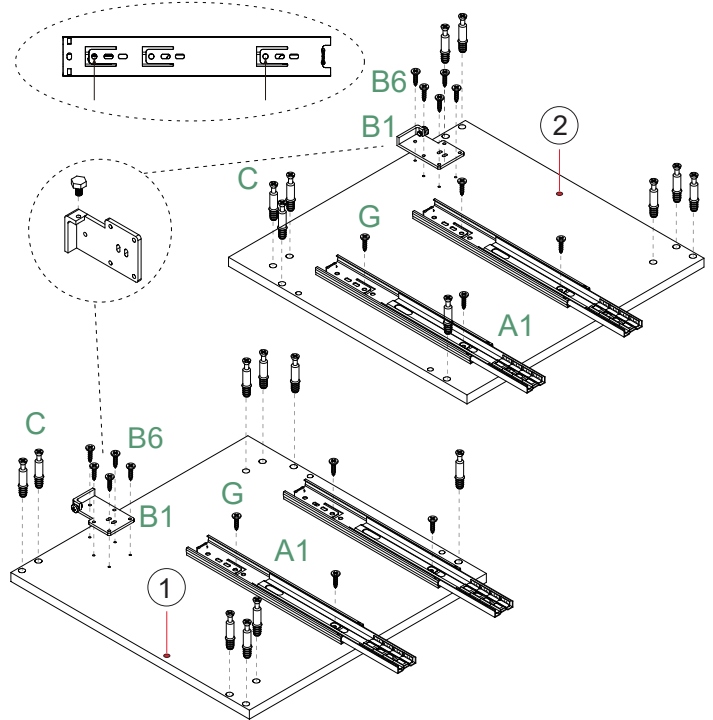 

Step 3

HARDWARE LIST


(C)		5
(D)		5
(E)		2

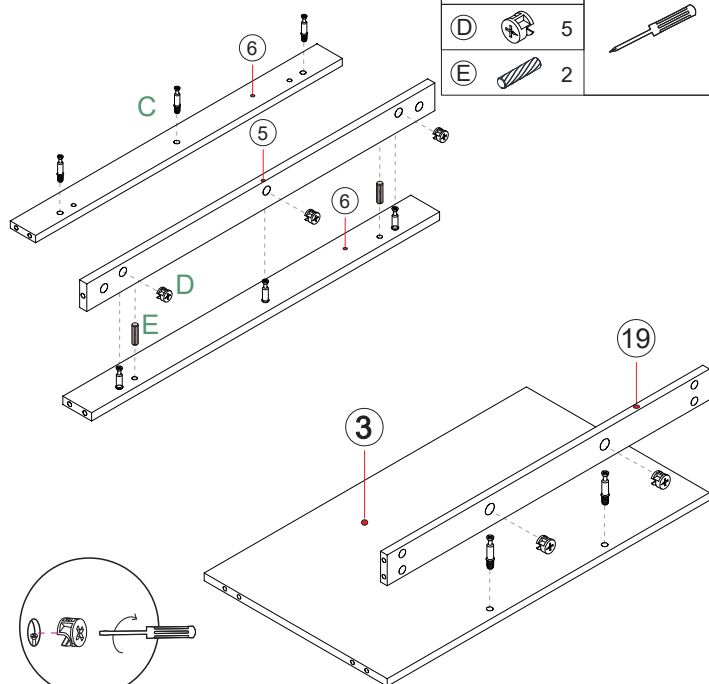 

Step 4

HARDWARE LIST

(D)		9
(E)		2

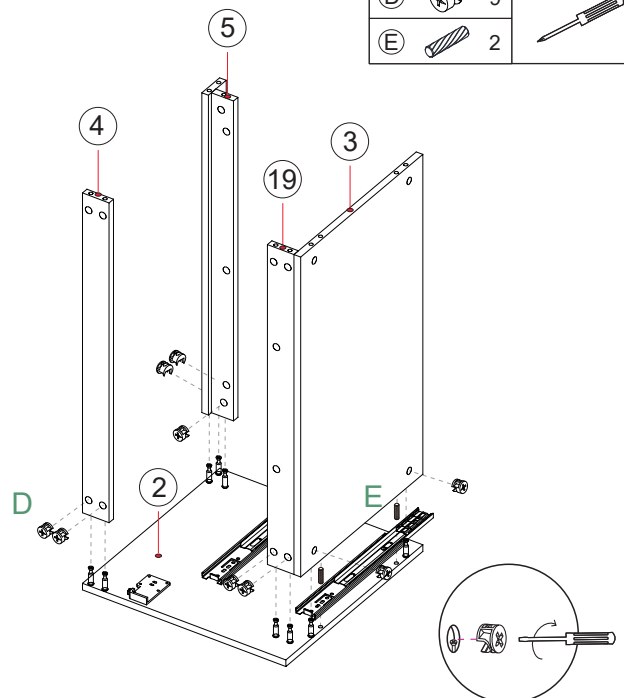 


Installation Manual

Step 5

HARDWARE LIST


(D)		9	
(E)		2	

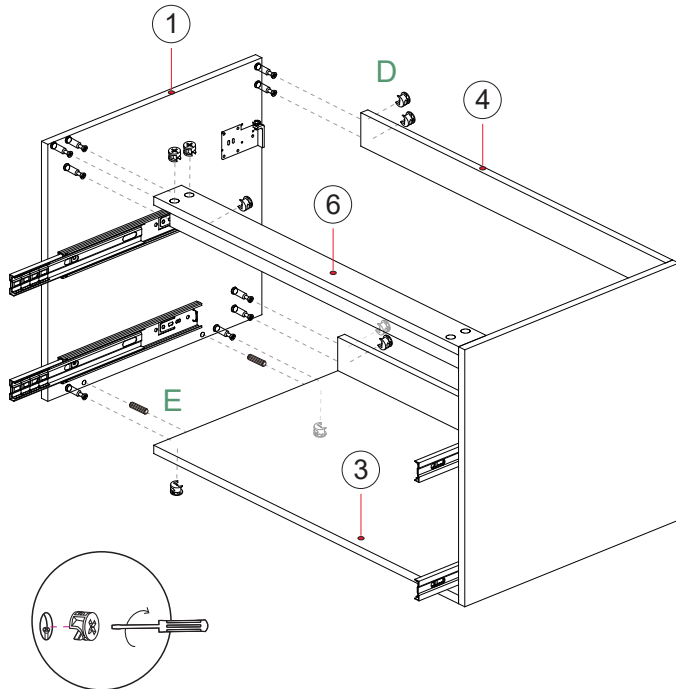 

Step 6

HARDWARE LIST


(C)		6	
(F)		4	

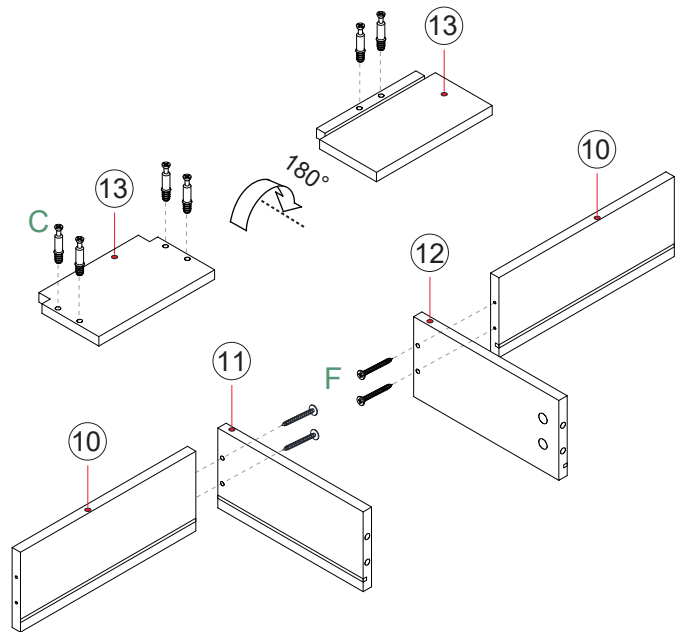 

Step 7

HARDWARE LIST


(D)		4	

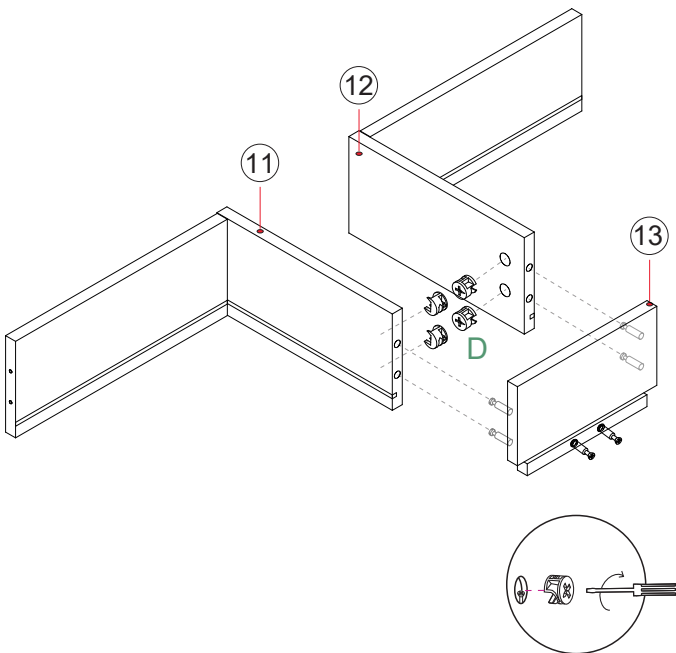 

Step 8


HARDWARE LIST

(D)		2	
(F)		4	

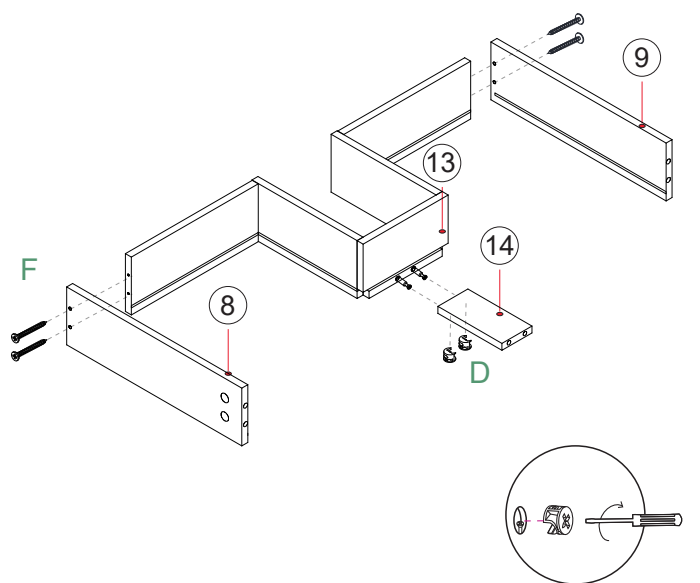 

Installation Manual

 
Step 9

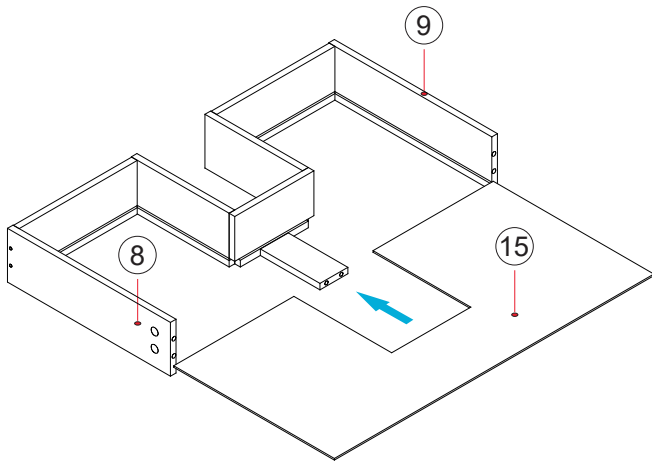

Step 10

HARDWARE LIST


C		6
D		6

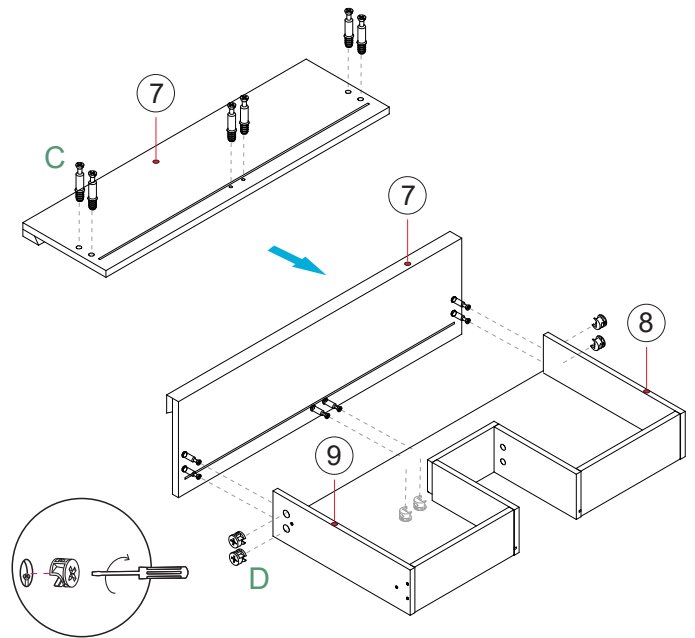 


Step 11

HARDWARE LIST

C		2
F		4
D		2

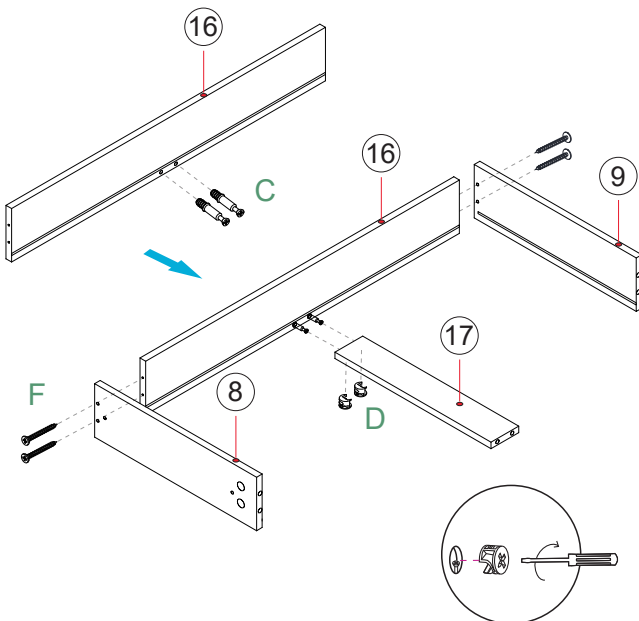 

 Step 12

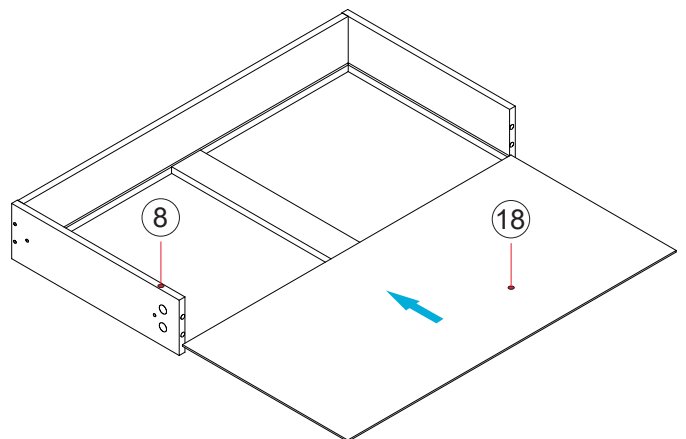


Installation Manual

Step 13

HARDWARE LIST


(C)		6	
(D)		6	

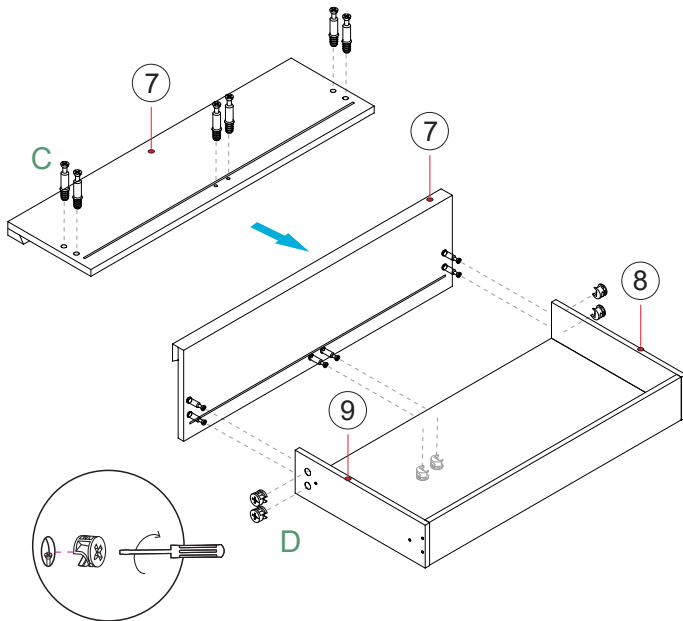 

Setp 14

HARDWARE LIST


(A2)		4	
(G)		8	

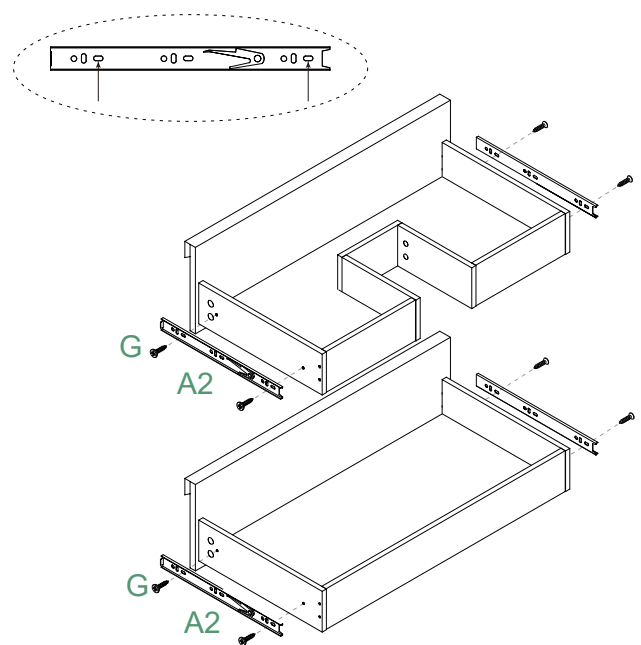 


Setp 15

HARDWARE LIST


(B2)		1	
(B4)		4	
(B5)		4	

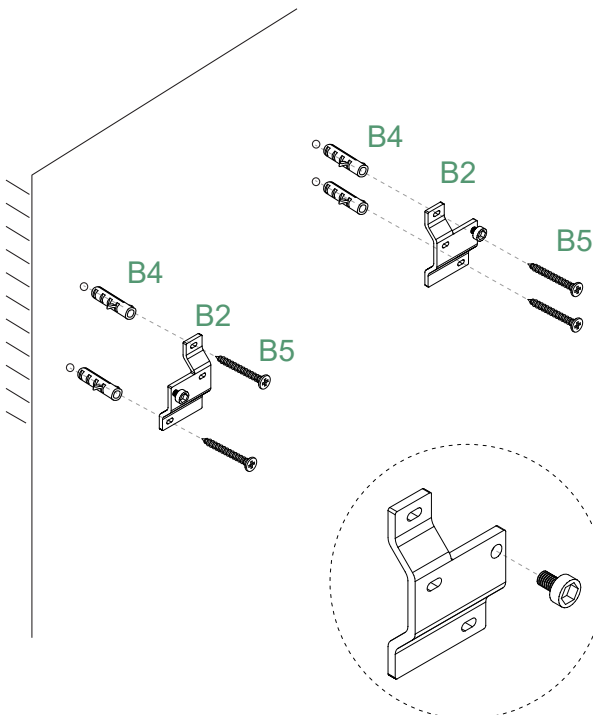 

Setp 16

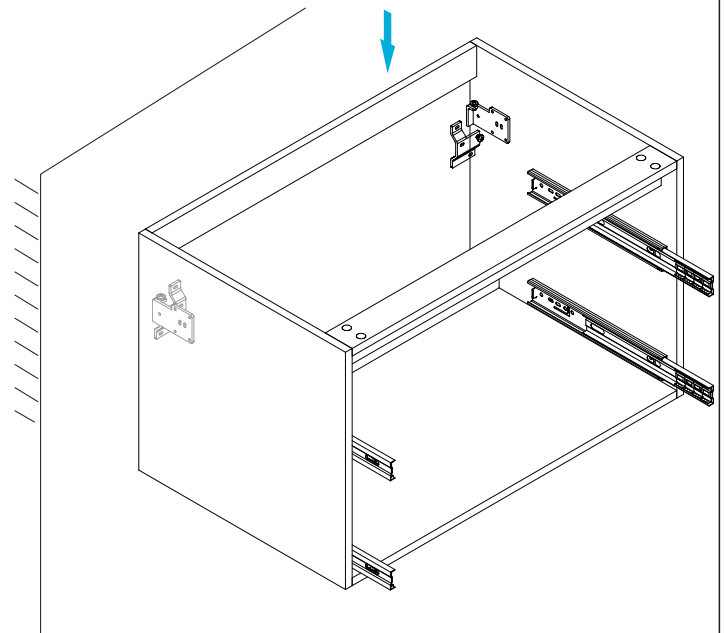 

 Rotate the screw to adjust the cabinet up and down, front and back as shown in the figure.

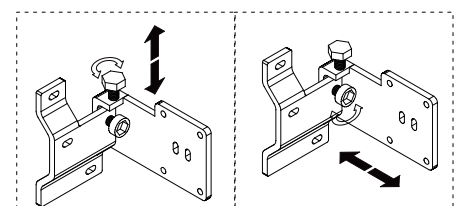


Installation Manual


Setp 17

HARDWARE LIST

 
(B3) 1

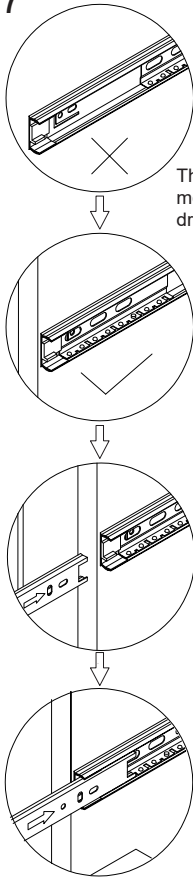

 The internal ball bearing part of the slide needs to be moved to the front and then aligned to insert into the drawer, it is incorrect to move the backend.

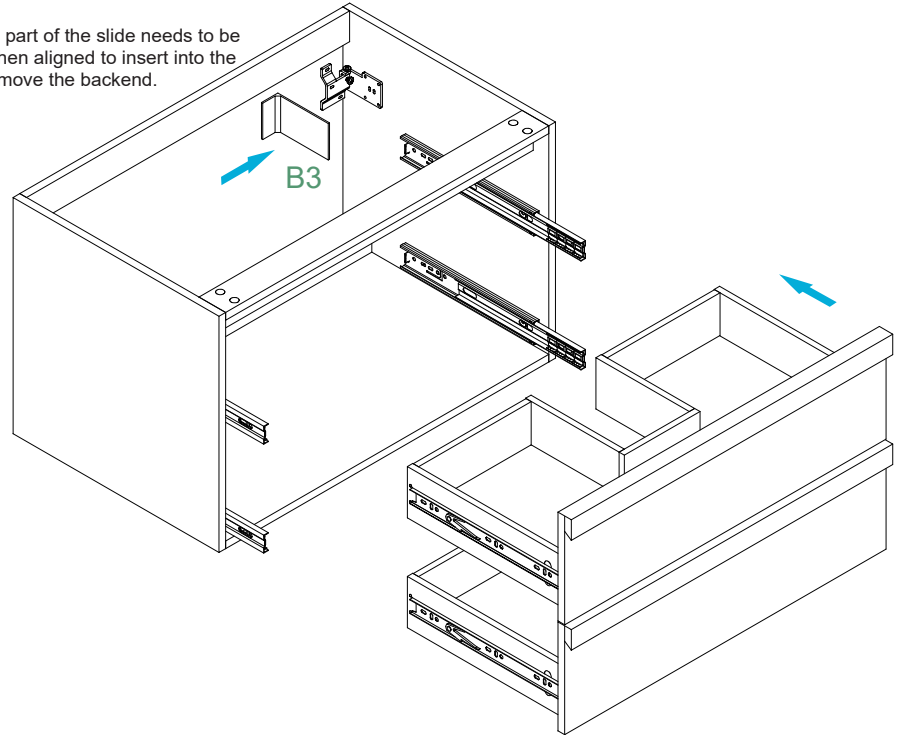


Setp 18

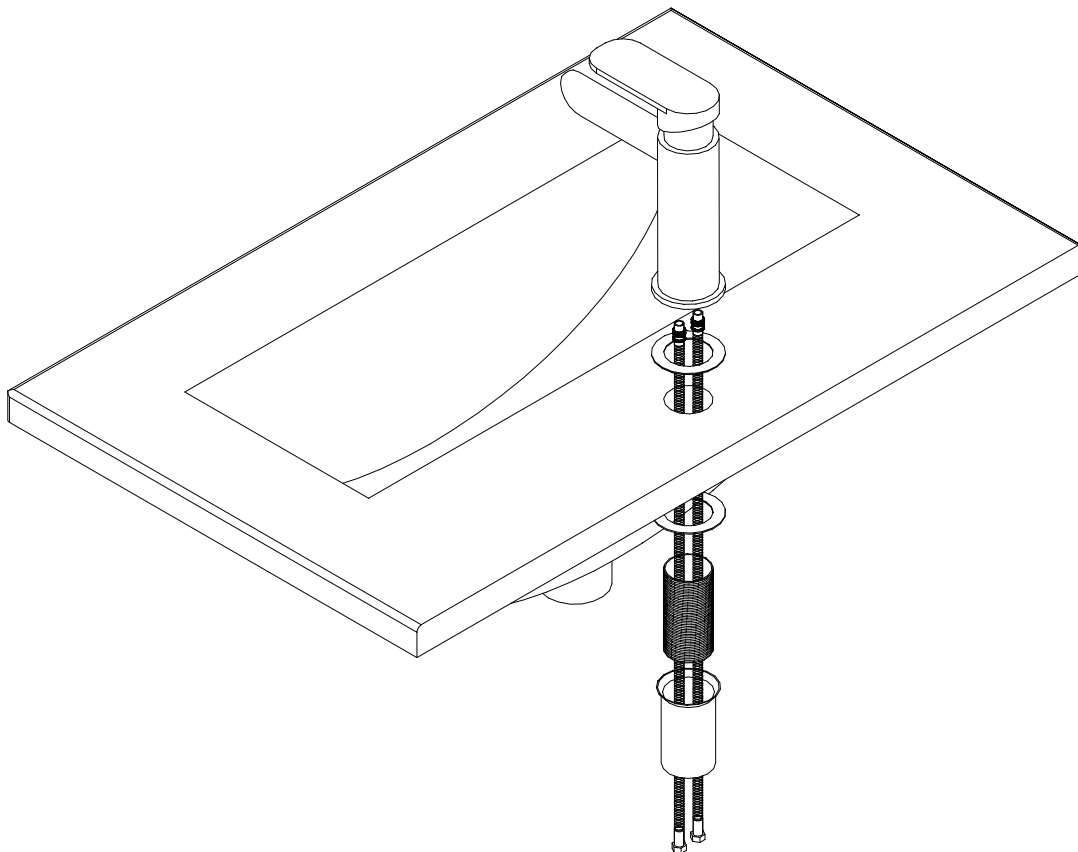 


Installation Manual

 Setp 19

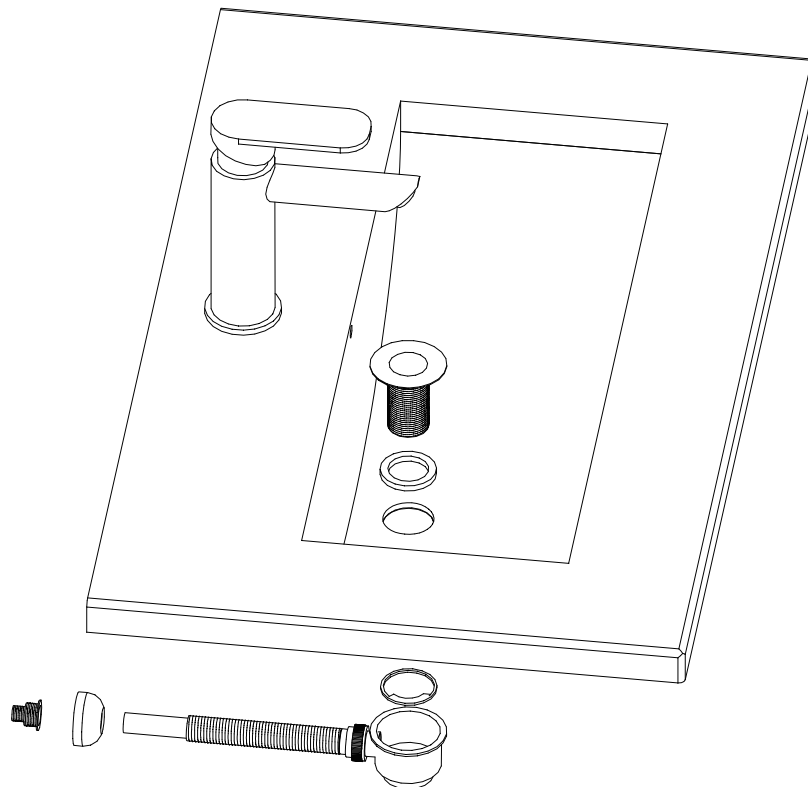

Setp 20

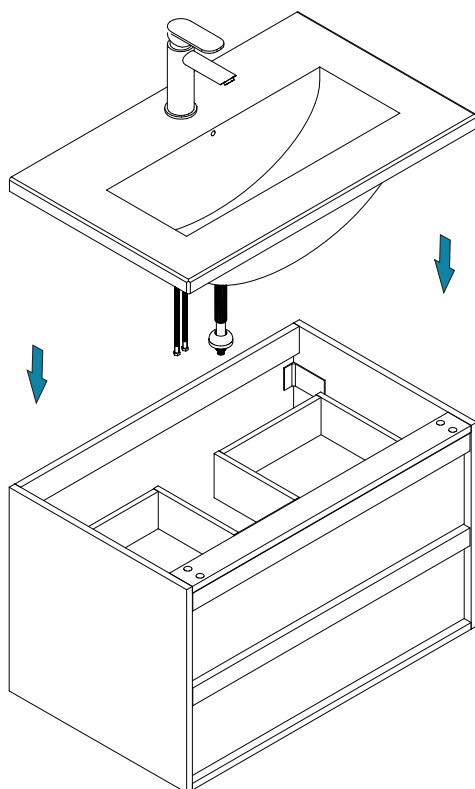 

Setp 21

HARDWARE LIST

(H) 45

