


INSTRUCTION MANUAL

20x40FT Party Tent

SKU:PXWQOT292WH

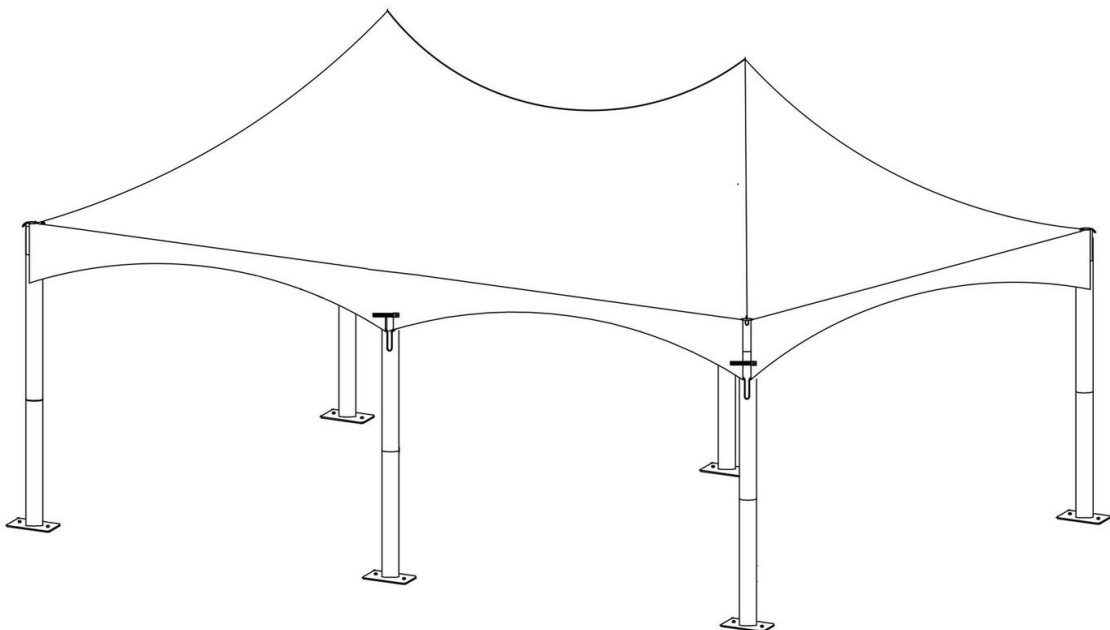

Please read the instructions **COMPLETELY** before assembly. Please check if you have all the parts listed in the part list. If you have any missing parts, please contact us. If there's any damage might be caused in the transportation, please send us clear pictures for replacements.

This tent **MUST** be securely anchored.

THIS IS A TEMPORARY STRUCTURE AND NOT RECOMMENDED AS A PERMANENT STRUCTURE

Warning!

1. Before installation, consult with all local municipal codes regarding the installation of temporary shelters. The owner of the tent has the sole responsibility to make sure that these local rules are followed and that the mounting is correct.
2. **We are not responsible for damage to the unit or the contents from acts of nature.**
3. Periodically check the anchors to ensure stability of shelter.
4. In case of extreme weather conditions, the tent cover must be removed.
5. Any shelter that is not anchored securely has the potential to fly away and cause damage. **We are not responsible for any shelter that blows away.**
6. **This canopy is intended to protect against the effects of sun, rain, light snow, etc. It is not designed to hold the loads that can accompany wind, rain, snow, or ice storms. This structure is not tested for specific snow, rain, and wind loads.**
7. A tight cover ensures longer life and performance. Always maintain a tight cover. Loose fabric can accelerate the deterioration of cover fabric.
8. Do not use open fire, welding equipment, or other ignition sources in the tent.
9. **We recommend you insure the tent, or check if it is covered by home contents insurance, in case of unplanned events, accidents, or bad weather.**

CARE AND CLEANING:

- **Immediately remove any accumulated water, snow, or ice from the roof structure with a broom, mop, or other soft-sided instrument.**
- NEVER leave this tent up overnight, particularly with roof and side panels on when a gust of winds can damage it.
- DO NOT use bleach or harsh abrasive products to clean the fabric cover. The cover is easily cleaned with mild soap and water.

Before putting up

When unpacking the parts, keep them away from children. Smaller parts could be swallowed and suffocation can be caused by plastic bags! Choose a suitable location for your pavilion.

Pay attention to the following points when choosing a location:

- The pavilion must stand on a flat, non-slip, and safe place .
- Choose a sheltered location .
- Avoid damaging the material, please place the pavilion in a position where it cannot rub or chafe against branches, parts of buildings, etc.
- Put up the pavilion at a safe distance from fireplaces and pay attention to the direction of the wind .
- After use, allow your pavilion to dry in an upright position before packing it away.

Box A

Part number	Photo	Part name	Quantity (pcs)
3		Spreader bar # 3	14
6		Hip Rafter # 6	8

Box B

Part number	Photo	Part name	Quantity (pcs)
4		Spreader bar # 4	7
5		Hip Rafter # 5	16
8		Pipe # 8	2



Box C

Part number	Photo	Part name	Quantity (pcs)
1		Leg Pole # 1	6
2		Leg Pole # 2	6

Box E

Part number	Photo	Part name	Quantity (pcs)
14		Roof	1

  BOX D

Part number	Photo	Part name	Quantity (pcs)
A		Corner Fitting	4
B		Side tee	2
D		4-Way Crown	2
7		Jacking pipe	2
10		Base Plate	6
11		Tightener	6
12		Rope	4
13		Ground Nail	16
15		M6X50 mm Screw	28
16		M6X60 mm Screw	6
17		Nut	34
18		Bungee Ball	18



Allen Key X 1




Hex Wrench X 1



Glove X 2

STEP 1


Connect 2pcs part(3) and 1pc part (4) as shown in the below diagram to make 6 crossbars. Connect the part (A) or part (B) to the aligned crossbar as shown in the below diagram using screws (part 15) and nuts (part 17).

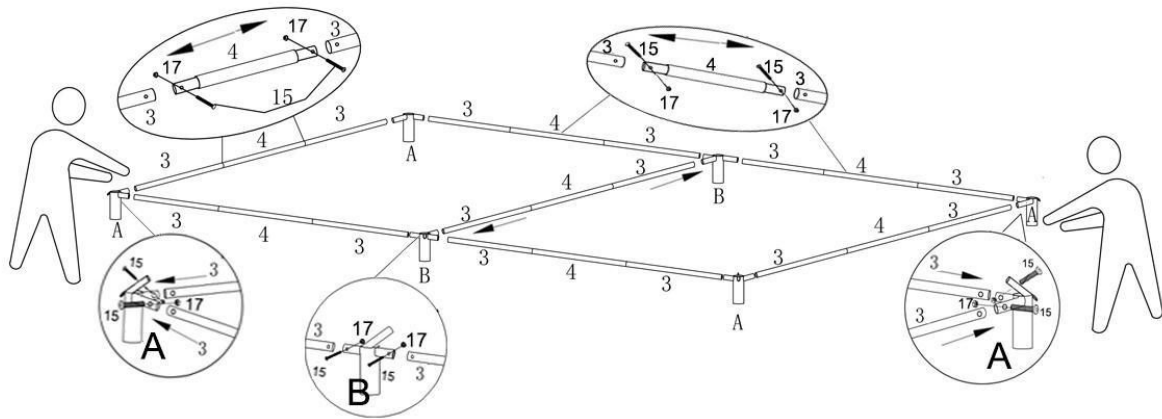

3 x 14	4 x 7	A x 4	B x 2	15 x 28	17 x 28
Spreader bar	Spreader bar	Corner Fitting	Side tee	M6X50 mm Screw	Nut
# 3	# 4				

STEP 2


Connect 2 pcs part (5) and 1pc part (6) as shown in the below diagram to make 8 extended hip rafters . Place the 2 part D in the center, connect one side of the the extended hip rafter to part (A) or part (E) , the other side to part (D) as shown in the below diagram.

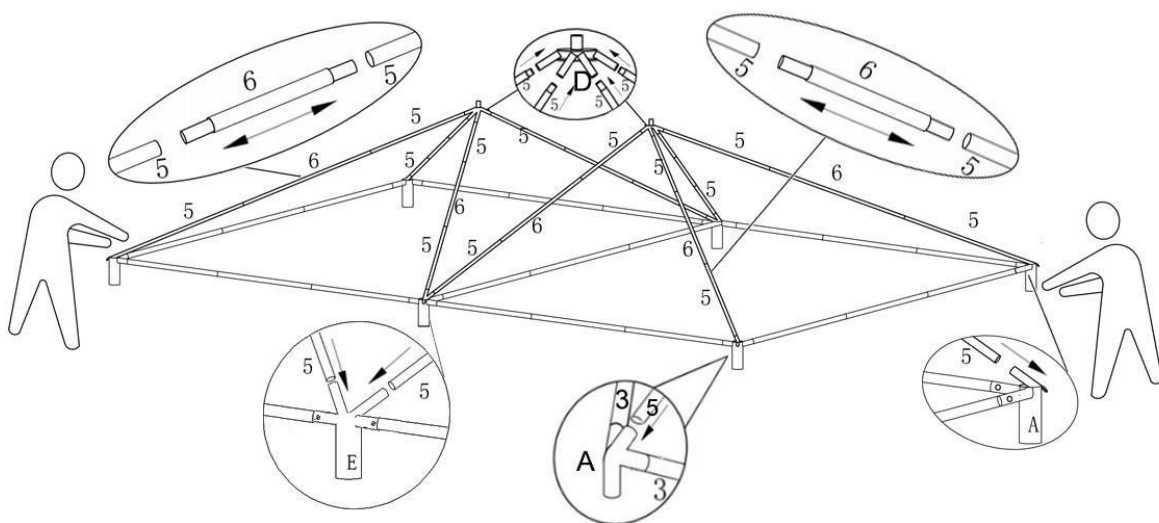

5 x 16	6 x 8	D x 2
Hip Rafter	Hip Rafter	4-Way Crown
# 5	# 6	

STEP 3

Cover the frame with the roof(part 14) . Secure the velcros on all of the 4 corners.

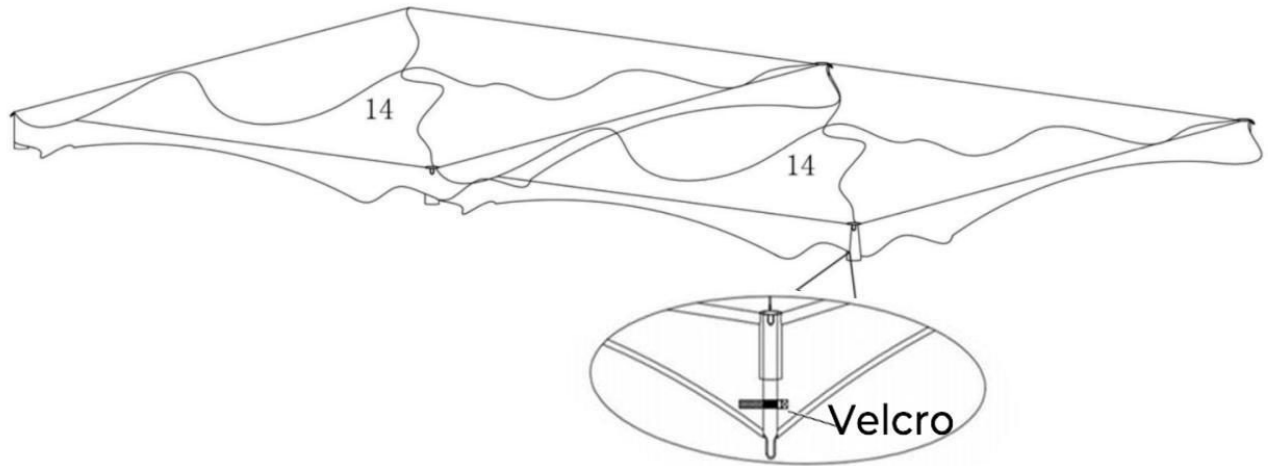


14 x 1

Roof

STEP 4

Insert one side of part (8) to the top of the part (D) , connect the other side to the bottom of the part (7).Poke the top of part (7) through the roof, secure the velcro to the rings on the part(7).

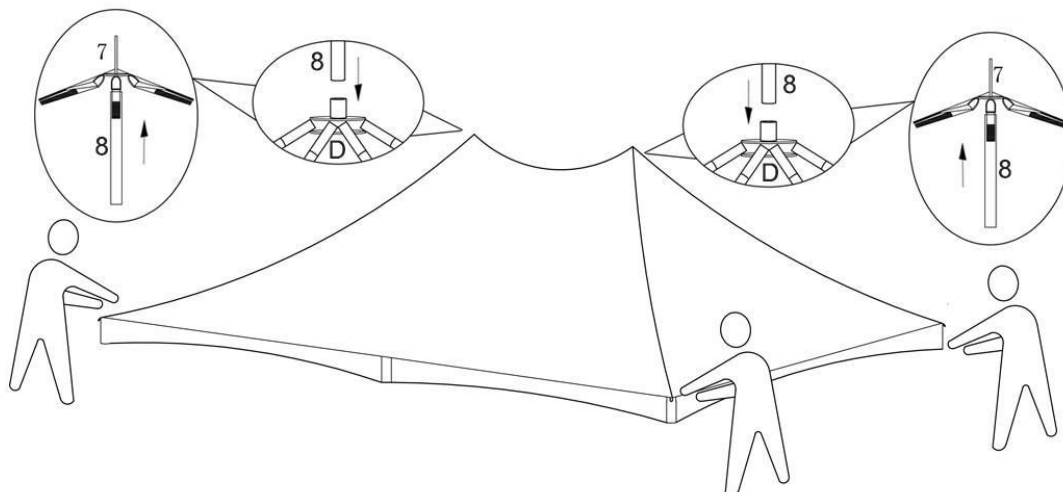

7 x 2


Jacking pipe

8 x 2

Pipe #8

STEP 5

Lift the frame, attach the leg poles(part 2) to it. Fasten 3 pcs of the bungee ball (part 18) on both of the 20 FT sides, fasten 6pcs of the bungee ball (part 18) on both of the 40FT sides.

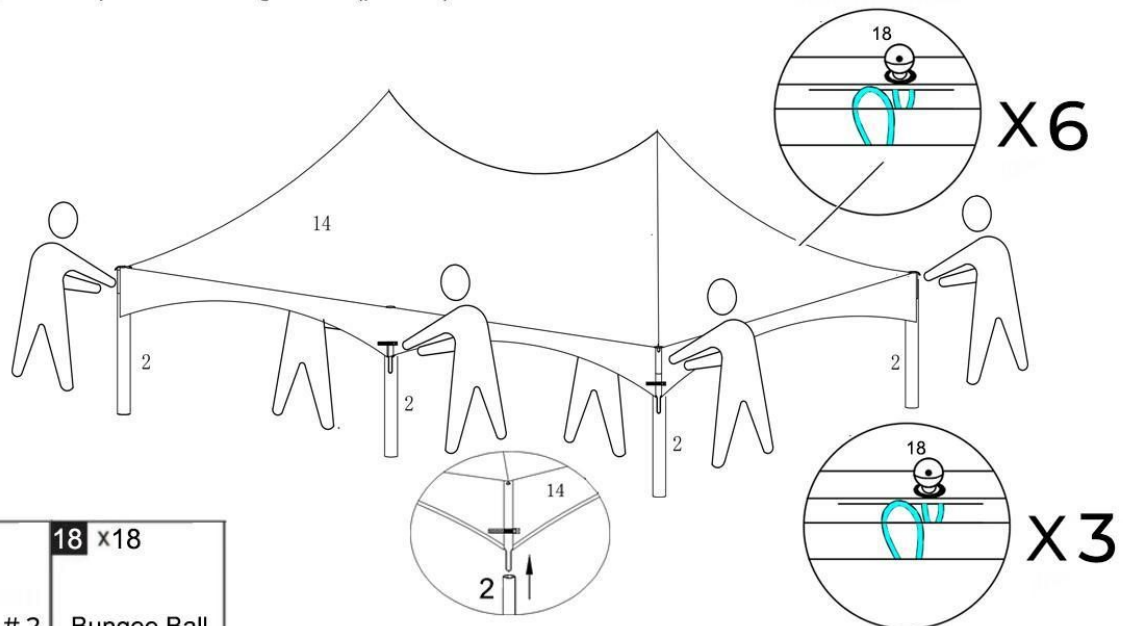

2 x 6


18 x 18

Leg Pole # 2

Bungee Ball

STEP 6

Connect 6 pcs of part (1) to part (2) as demonstrated.

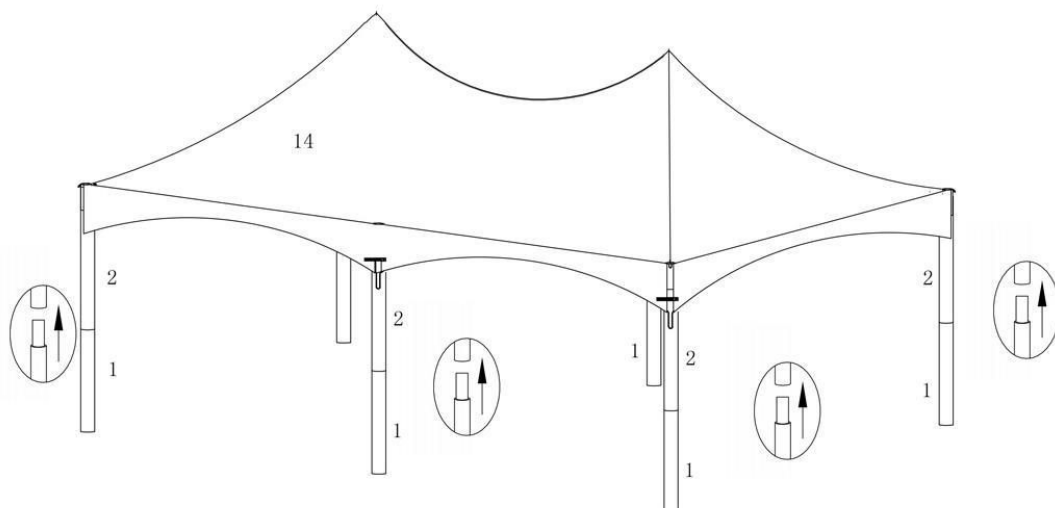


1 x 6

Leg Pole # 1

STEP 7

Attach 6 pcs of part (10) to part (1) by using screws(part 16) and nuts (part 17).

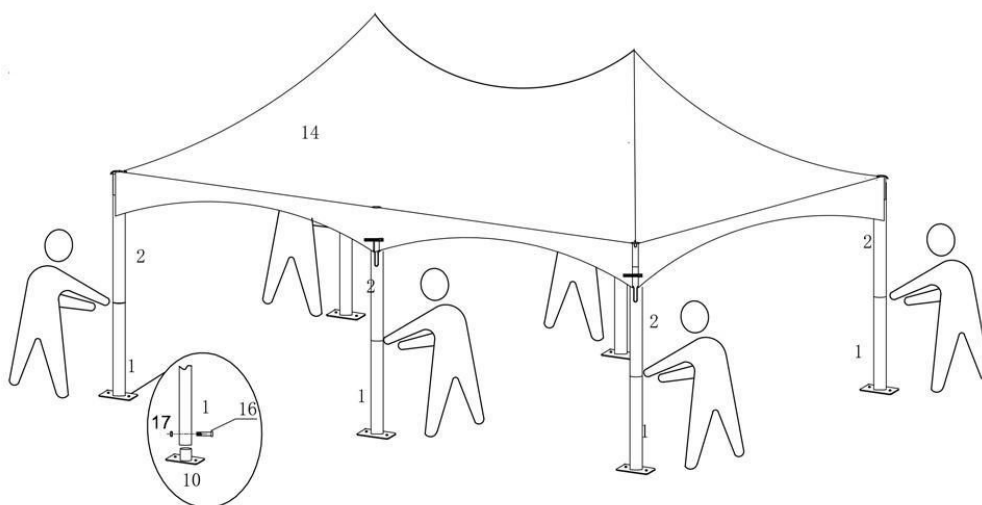

10 x 6

Footplate

16 x 6


M6 X 60mm
Screw

17 x 6

Screw nut


STEP 8

Tighten the tighteners properly to ensure the roof is firmly secured to the leg poles.

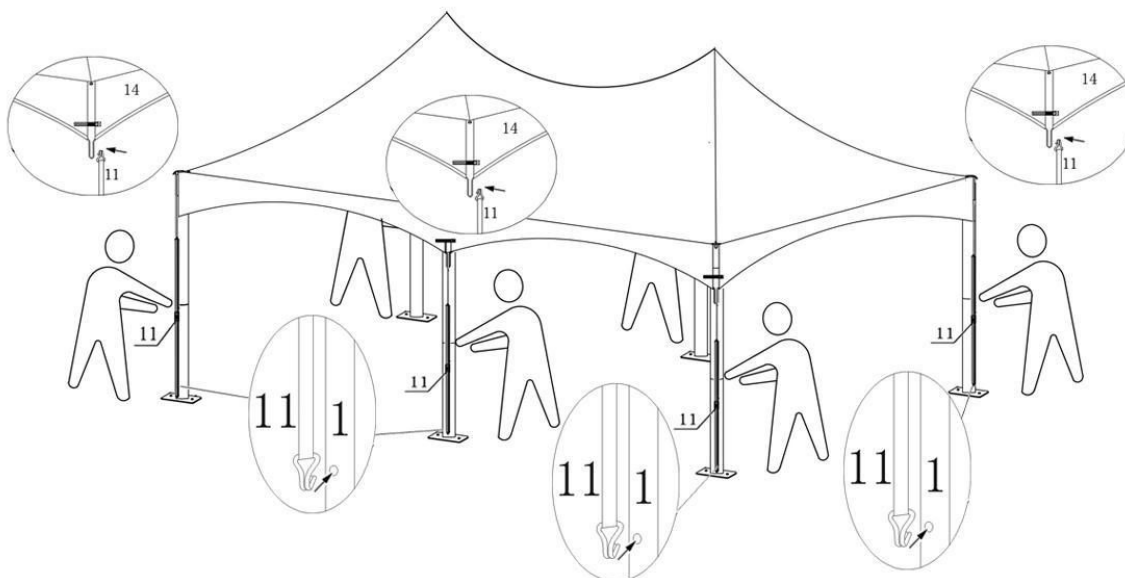

11 x 6


Tightener

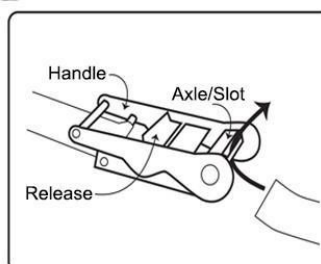

- Pass strap underneath and through the slot (as shown)
- While holding the whole strap, attach both ends
- Push 'release' - lift handle and tighten the tightener
- Roll-up any excessive strap, put under handle and close handle

STEP9

Use ground nails (part 13) to secure the footplate (part 10) to the ground, then use ropes (part 12) and ground nails (part 13) to secure the party tent firmly to the ground.

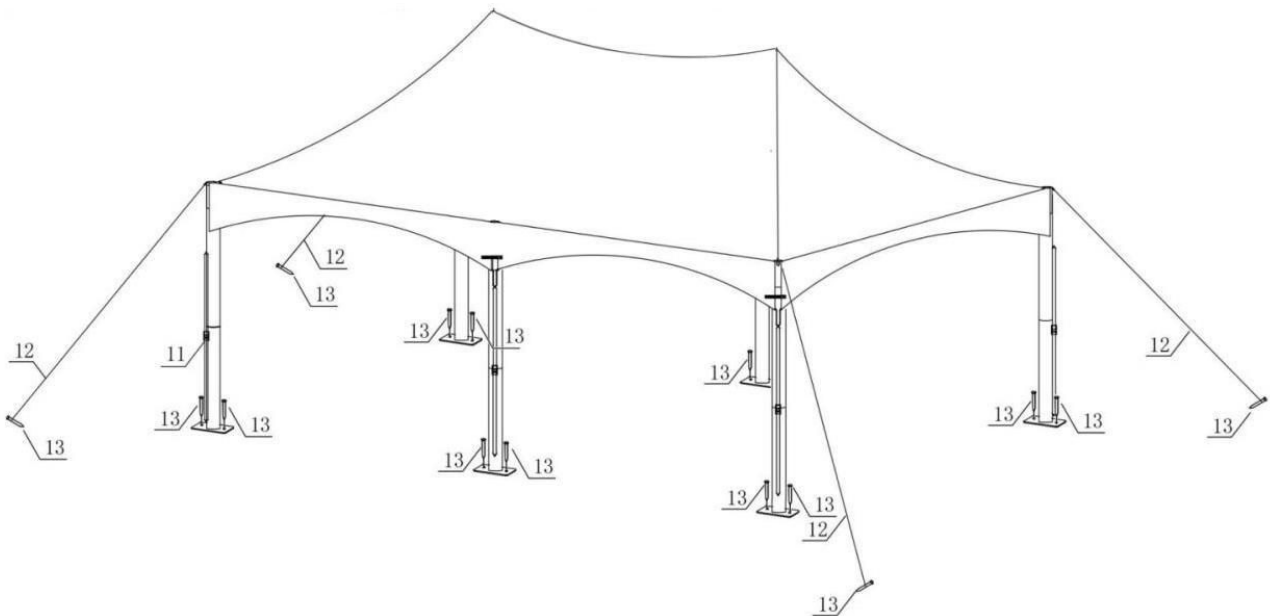

13 x16	12 x 4
Ground nail	Rope

Now you can enjoy your party tent.