


INSTRUCTION MANUAL

20x20FT Party Tent

SKU: WQG108WH-2

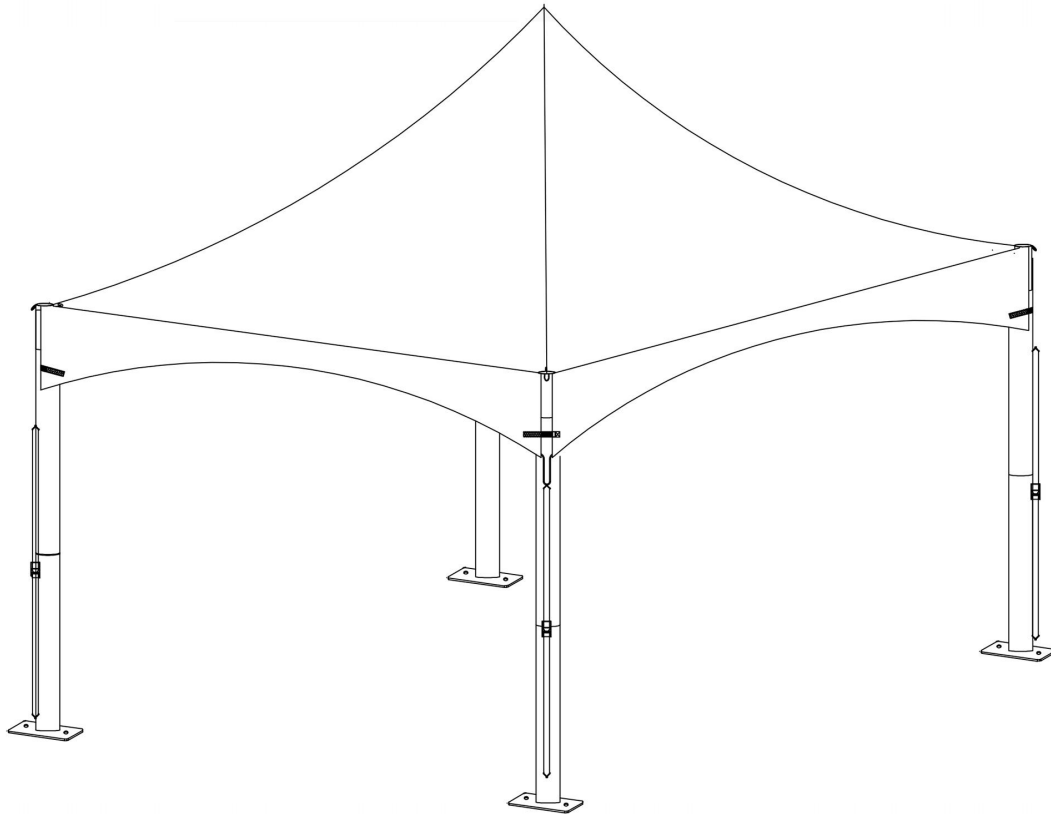

Please read the instructions **COMPLETELY** before assembly. Please check if you have all the parts listed in the part list. If you have any missing parts, please contact us. If there's any damage might be caused in the transportation, please send us clear pictures for replacements.

This tent **MUST** be securely anchored.

THIS IS A TEMPORARY STRUCTURE AND NOT RECOMMENDED AS A PERMANENT STRUCTURE

Warning!

1. Before installation, consult with all local municipal codes regarding the installation of temporary shelters. The owner of the tent has the sole responsibility to make sure that these local rules are followed and that the mounting is correct.
2. **We are not responsible for damage to the unit or the contents from acts of nature.**
3. Periodically check the anchors to ensure stability of shelter.
4. In case of extreme weather conditions, the tent cover must be removed.
5. Any shelter that is not anchored securely has the potential to fly away and cause damage. **We are not responsible for any shelter that blows away.**
6. **This canopy is intended to protect against the effects of sun, rain, light snow, etc. It is not designed to hold the loads that can accompany wind, rain, snow, or ice storms. This structure is not tested for specific snow, rain, and wind loads.**
7. A tight cover ensures longer life and performance. Always maintain a tight cover. Loose fabric can accelerate the deterioration of cover fabric.
8. Do not use open fire, welding equipment, or other ignition sources in the tent.
9. **We recommend you insure the tent, or check if it is covered by home contents insurance, in case of unplanned events, accidents, or bad weather.**

CARE AND CLEANING:

- **Immediately remove any accumulated water, snow, or ice from the roof structure with a broom, mop, or other soft-sided instrument.**
- NEVER leave this tent up overnight, particularly with roof and side panels on when a gust of winds can damage it.
- DO NOT use bleach or harsh abrasive products to clean the fabric cover. The cover is easily cleaned with mild soap and water.

 
 
Before putting up

When unpacking the parts, keep them away from children. Smaller parts could be swallowed and suffocation can be caused by plastic bags! Choose a suitable location for your pavilion.


Pay attention to the following points when choosing a location:

- The pavilion must stand on a flat, non-slip, and safe place .
- Choose a sheltered location .
- Avoid damaging the material, please place the pavilion in a position where it cannot rub or chafe against branches, parts of buildings, etc.
- Put up the pavilion at a safe distance from fireplaces and pay attention to the direction of the wind .
- After use, allow your pavilion to dry in an upright position before packing it away.

Box A

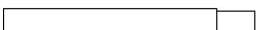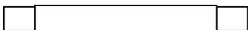Part number	Photo	Part name	Quantity (pcs)
3		Spreader bar # 3	8
4		Spreader bar # 4	4
5		Hip Rafter # 5	8
6		Hip Rafter # 6	4




 
Box B

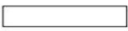Part number	Photo	Part name	Quantity (pcs)
1		Leg Pole # 1	4
2		Leg Pole # 2	4
9		Pipe # 9	1

Box C

Part number	Photo	Part name	Quantity (pcs)
7		Jacking Pipe	1
A		Corner Fitting	4

  Box C

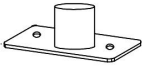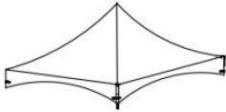Part number	Photo	Part name	Quantity (pcs)
D		4-Way Crown	1
10		Base Plate	4
11		Tightener	4
12		Rope	4
13		Ground Nail	12
14		Roof	1
15		M6X50 mm Screw	16
16		M6X60 mm Screw	4
17		Nut	20
18		Bungee Ball	12



Allen Key X 1




Hex Wrench X 1



Glove X 2

STEP 1

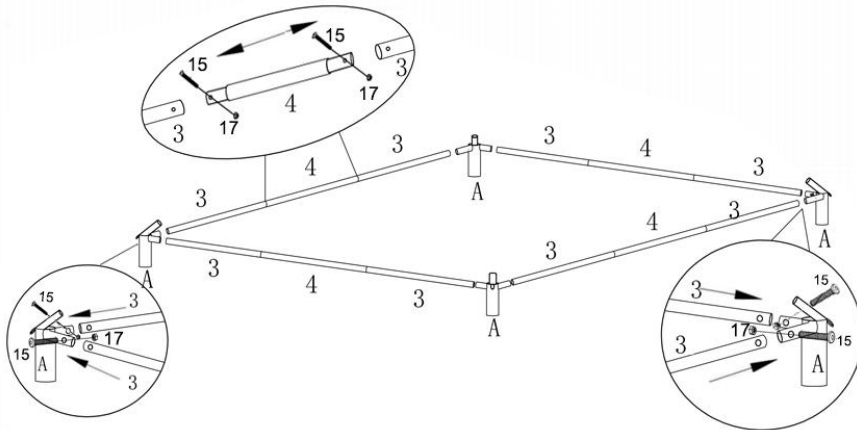

3 x 8

Spreader bar # 3

4 x 4

Spreader bar # 4

A x 4

Corner Fitting

15 x 16


M6X50 mm
Screw

17 x 16

Nut

Connect 2pcs part(3) and 1pc part (4) using part(15) and part(17) on the 4 sides respectively ; connect the part(A) to the crossbar aligned by part(3) and part (4) as demonstrated in the diagram.

STEP 2

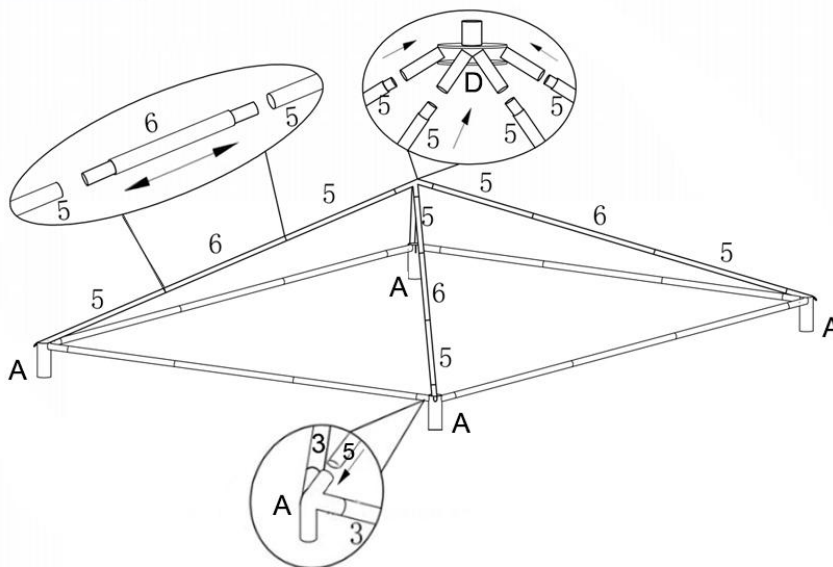

D x 1

4-Way Crown

5 x 8

Hip Rafter # 5

6 x 4

Hip Rafter # 6


Place the 4-way crown (part D) in the center of the frame. Line up part (5), part (6) and part(5), connect them. Attach one side to the corner fitting (part A), the other side to the 4-way crown(part D).

STEP 3

14 x 1

Roof

Cover the frame with the roof(part 14) . Secure the velcros on all of the 4 corners.

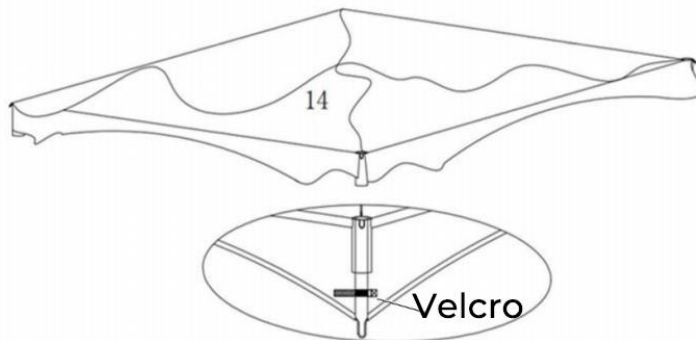


STEP 4

7 x 1

Jacking pipe


9 x 1

Pipe #9

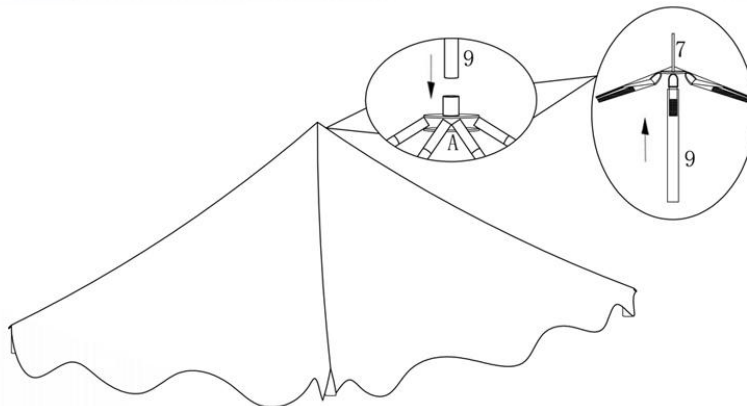

Insert one side of part (9) to the top of the part (A) , connect the other side to the bottom of the part (7).Poke the top of part (7) through the roof, secure the velcro to the rings on the part(7).

STEP 5

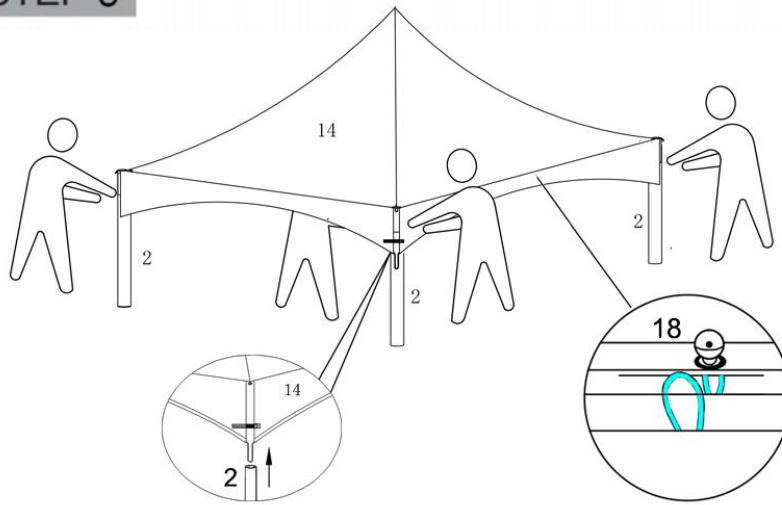

2 x 2

Leg Pole # 2

18 x 12

Bungee Ball


x3

Lift the frame, attach the leg pole (part 2) to the corner fitting on all the corners respectively.

Fasten 3 pcs of the bungee ball (part 18) on all the 4 sides respectively.

STEP 6

Connect 4 pcs of part (1) to part (2) as demonstrated.

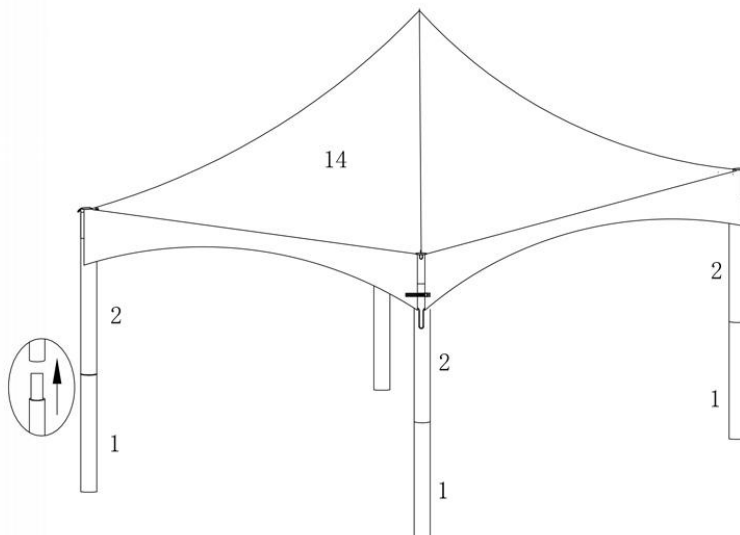


1 x 4

Leg Pole # 1

STEP 7

Attach 4pcs of part (10) to part (1) by using screw (part 16) and nuts (part 17).

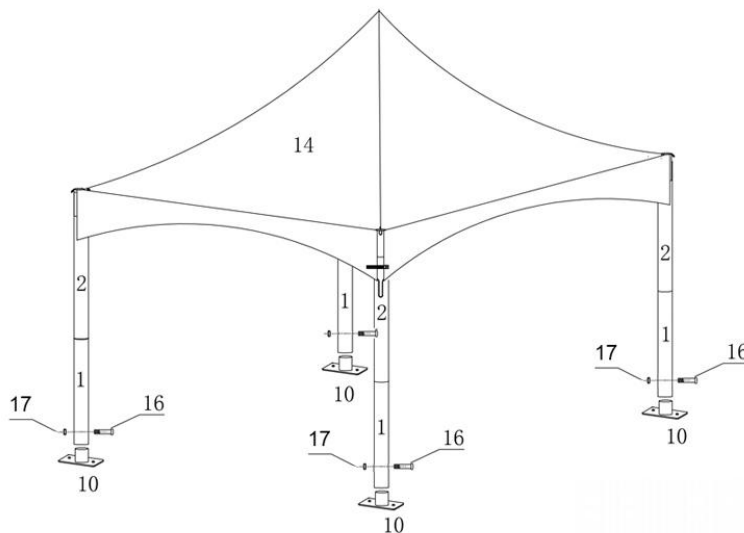

10 x 4

Base Plate

16 x 4


M6X60 mm
Screw

17 x 4

Nut


STEP 8

Tighten the tighteners properly to ensure the roof is firmly secured to the leg poles.

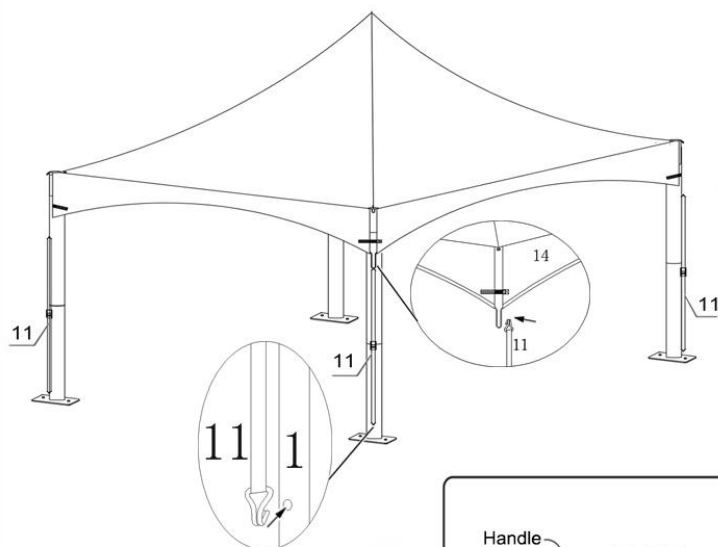

11 x 4

Tightener

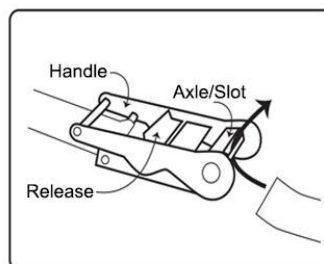

- Pass strap underneath and through the slot (as shown)
- While holding the whole strap, attach both ends
- Push 'release' - lift handle and tighten the tightener
- Roll-up any excessive strap, put under handle and close handle

STEP 9


Use ground nails (part 13) to secure the footplate (part 10) to the ground, then use ropes (part 12) and ground nails (part 13) to secure the party tent firmly to the ground.

13 x 12

Ground nail

12 x 4

Rope

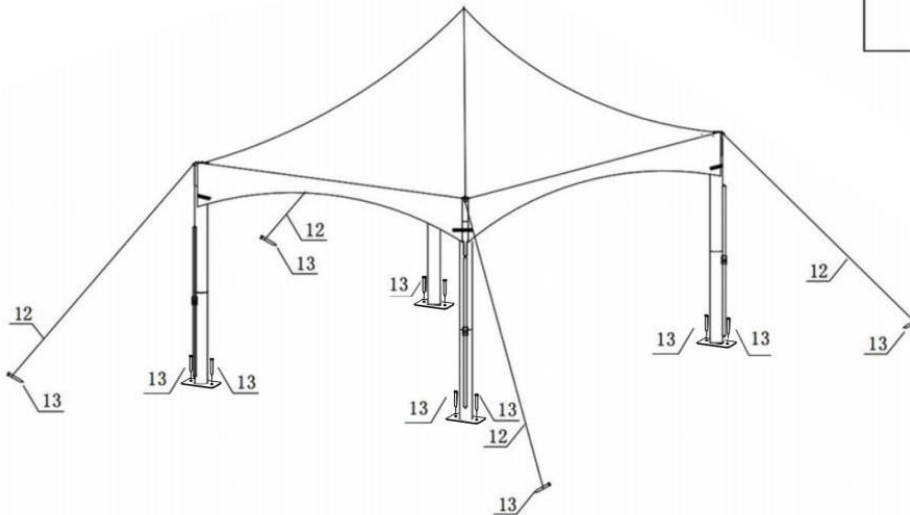

Now you can enjoy your party tent.