


INSTRUCTION MANUAL

20x30FT Party Tent

SKU:WQG109WH-2

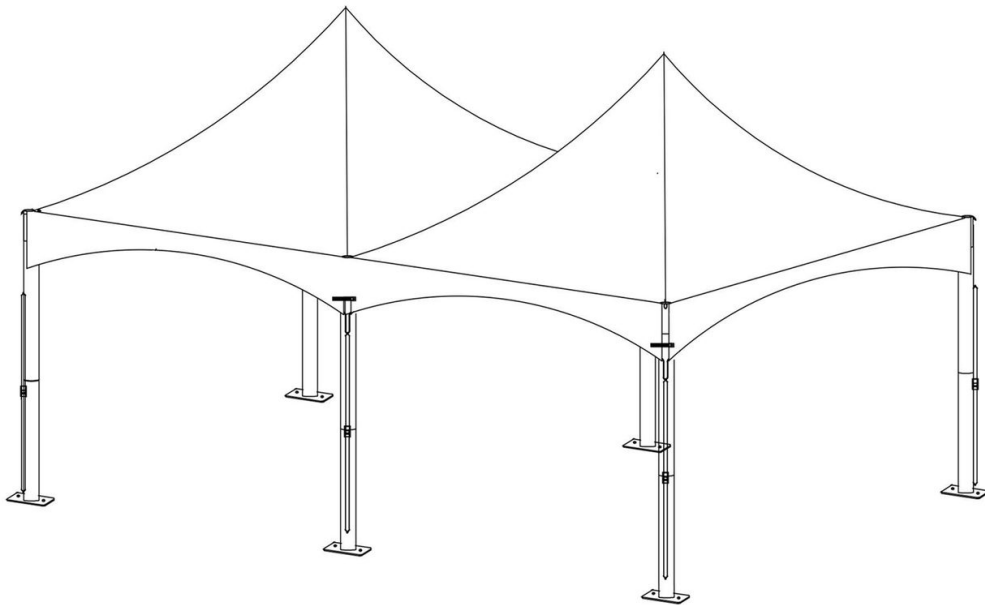

Please read the instructions **COMPLETELY** before assembly. Please check if you have all the parts listed in the part list. If you have any missing parts, please contact us. If there's any damage might be caused in the transportation, please send us clear pictures for replacements.

This tent **MUST** be securely anchored.

THIS IS A TEMPORARY STRUCTURE AND NOT RECOMMENDED AS A PERMANENT STRUCTURE

Warning!

1. Before installation, consult with all local municipal codes regarding the installation of temporary shelters. The owner of the tent has the sole responsibility to make sure that these local rules are followed and that the mounting is correct.
2. **We are not responsible for damage to the unit or the contents from acts of nature.**
3. Periodically check the anchors to ensure stability of shelter.
4. In case of extreme weather conditions, the tent cover must be removed.
5. Any shelter that is not anchored securely has the potential to fly away and cause damage.
We are not responsible for any shelter that blows away.
6. **This canopy is intended to protect against the effects of sun, rain, light snow, etc. It is not designed to hold the loads that can accompany wind, rain, snow, or ice storms. This structure is not tested for specific snow, rain, and wind loads.**
7. A tight cover ensures longer life and performance. Always maintain a tight cover. Loose fabric can accelerate the deterioration of cover fabric.
8. **Immediately remove any accumulated water, snow, or ice from the roof structure with a broom, mop, or other soft-sided instrument.**
9. Do not use open fire, welding equipment, or other ignition sources in the tent.
10. **We recommend you insure the tent, or check if it is covered by home contents insurance, in case of unplanned events, accidents, or bad weather.**

CARE AND CLEANING:

- A tight cover ensures longer life and performance. Always maintain a tight cover. Loose fabric can accelerate the deterioration of cover fabric.
- **Immediately remove any accumulated water, snow, or ice from the roof structure with a broom, mop, or other soft-sided instrument.**
- NEVER leave this tent up overnight, particularly with roof and side panels on when a gust of winds can damage it.
- DO NOT use bleach or harsh abrasive products to clean the fabric cover. The cover is easily cleaned with mild soap and water.

Before putting up

When unpacking the parts, keep them away from children. Smaller parts could be swallowed and suffocation can be caused by plastic bags! Choose a suitable location for your pavilion.


Pay attention to the following points when choosing a location:

- The pavilion must stand on a flat, non-slip, and safe place
- Choose a sheltered location
- Avoid damaging the material, please place the pavilion in a position where it cannot rub or chafe against branches, parts of buildings, etc.
- Put up the pavilion at a safe distance from fireplaces and pay attention to the direction of the wind
- After use, allow your pavilion to dry in an upright position before packing it away.


Box A

Part number	Photo	Part name	Quantity (pcs)
2		Leg pole # 2	4
3		Spreader bar # 3	4
4		Spreader bar # 4	2
5A		Hip rafter # 5A	8
6A		Hip rafter # 6A	4


 
Box B

Part number	Photo	Part name	Quantity (pcs)
1		Leg pole # 1	6
2		Leg pole # 2	2
3A		Spreader bar #3A	8
4A		Spreader bar #4A	4
6B		Hip rafter #6B	2



Box B

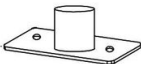Part number	Photo	Part name	Quantity (pcs)
8		Tube # 8	2
9		Spreader bar #9	2
10		Base plate	6

Box C

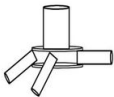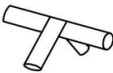Part number	Photo	Part name	Quantity (pcs)
D1		3-Way crown	2
B		Central tee	1
7		Jacking pipe	2
C1		Corner fitting	2
C2		Corner fitting	2
E		Side tee	2

  Box C

Part number	Photo	Part name	Quantity (pcs)
11		Tightener	6
12		Rope	4
13		Ground nail	16
14		Roof	1
15		M6X50 mm Screw	24
16		M6X60 mm Screw	6
17		Nut	30
18		Bungee ball	18



Allen Key X 1




Hex Wrench X 1



Glove X 2

STEP 1


Connect part (3), part (4) and part (3) to make 2 crossbars on the 20FT sides by using screws (part 15) and nuts (part 17). Connect one side of the crossbar to the part (C1) and the other side to the part (C2) by using screws (part 15) and nuts (part 17). Connect part (3A), part (4A) and part (3A) to make 4 crossbars on the 30FT sides by using screws (part 15) and nuts (part 17). Connect one side of the crossbar to part (C1 or C2), the other side to part (E) by using screws (part 15) and nuts (part 17) as shown in the diagram.

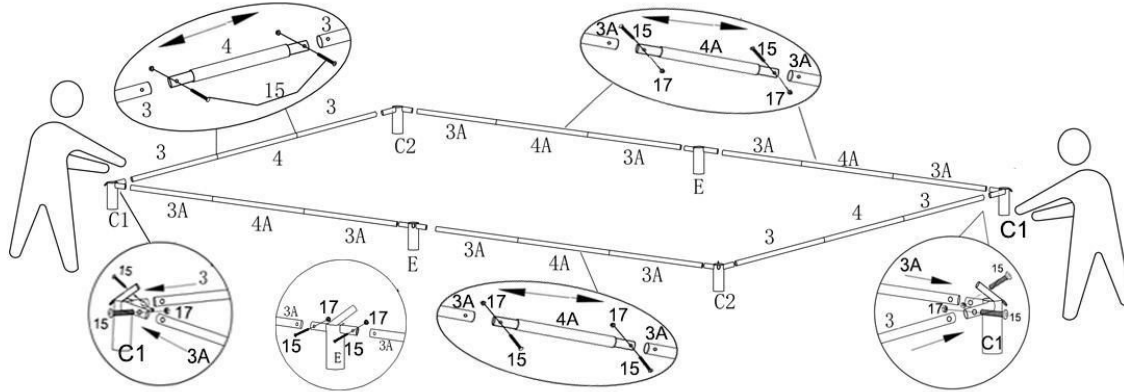

3 x 4	4 x 2	3A x 8	4A x 4	C1 x 2	C2 x 2	E x 2	15 x 24	17 x 24
Spreader bar # 3	Spreader bar # 4	Spreader bar #3A	Spreader bar #4A	Corner fitting	Corner fitting	Side tee	M6X50 mm Screw	Nut

STEP 2


Connect part (5A) and part (6A) to make 4 hip rafters. Attach one side to part (C1 or C2), connect the other side to part (D1). Connect part (5A) and part (9) to make 2 crossbars, attach one side to part (D1), attach another side to part (B). Connect part (5A) and part (6B) to make another 2 hip rafters. Attach one side to part (E), attach the other side to part (B).

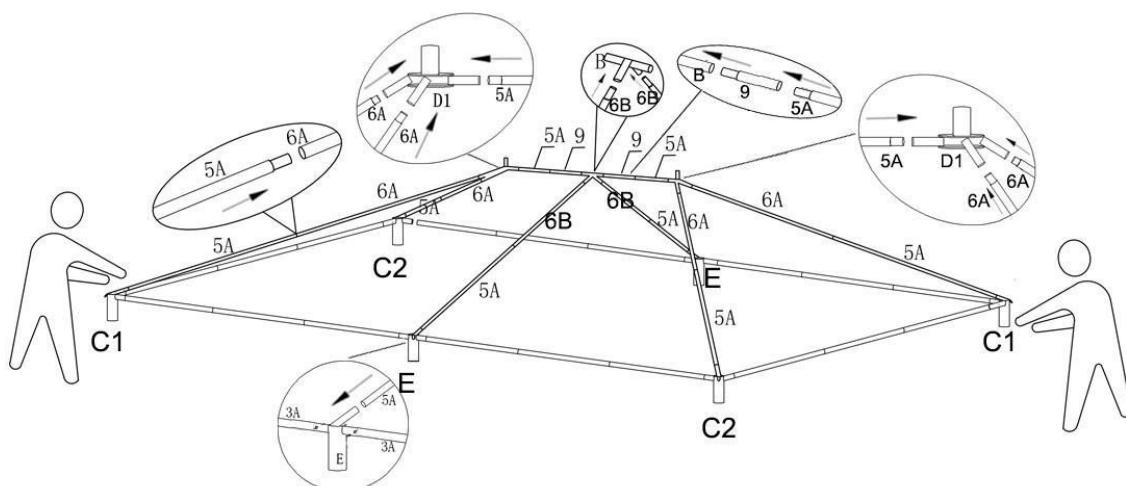

5A x 8	6A x 4	6B x 2	9 x 2	D1 x 2	B x 1
Hip rafter #5A	Hip rafter # 6A	Hip rafter # 6B	Spreader bar #9	3-Way crown	Central tee

STEP 3

Cover the frame with the roof(part 14) . Secure the velcros on all of the 4 corners.

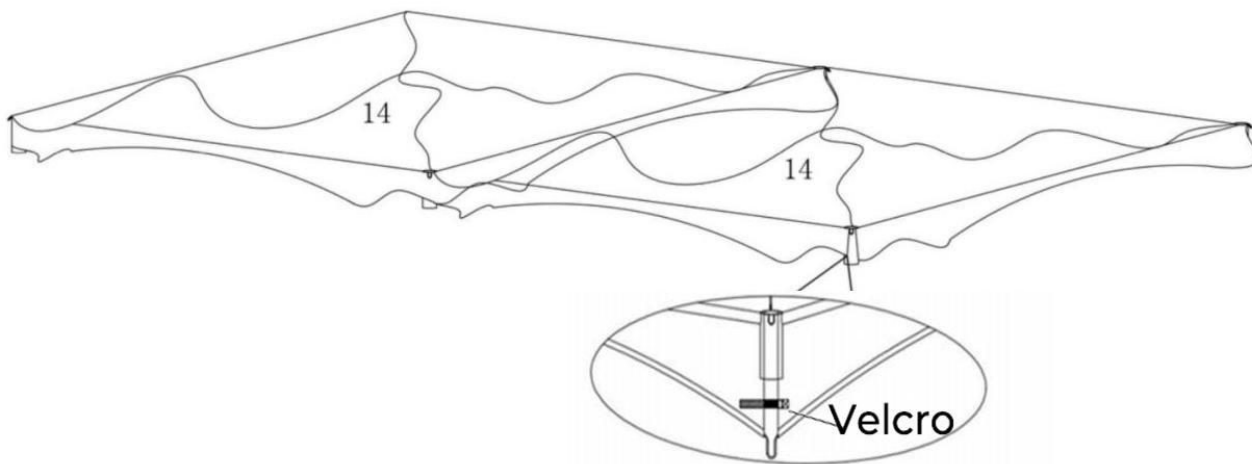


14 x 1

Roof

STEP 4

Insert one side of part (8) to the top of the part (D1) , connect the other side to the bottom of the part (7).Poke the top of part (7) through the roof, secure the velcro to the rings on the part(7).

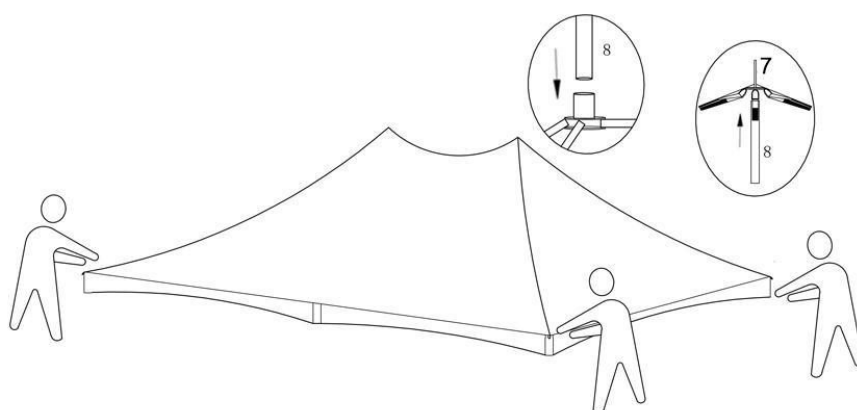

7 x 2


Jacking pipe

8 x 2

Pipe #8


STEP 5

Lift the frame, attach the leg poles(part 2) to it. Fasten 3 pcs of the bungee ball (part 18) on both of the 20 FT sides, fasten 6pcs of the bungee ball (part 18) on both of the 30FT sides.

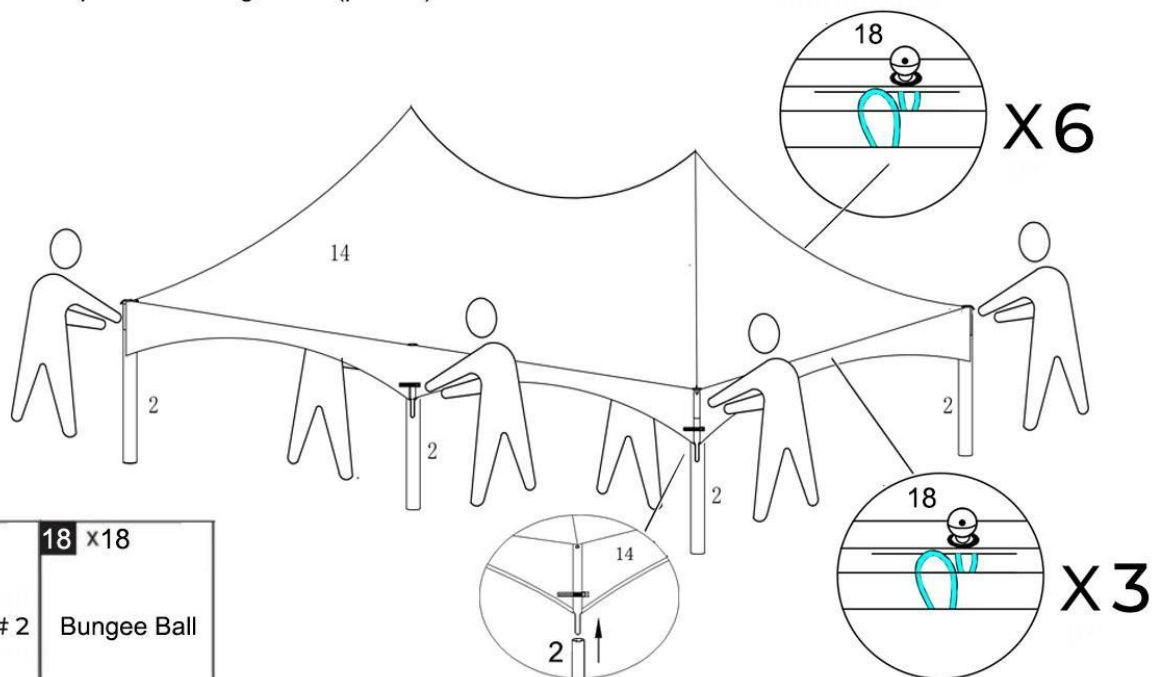

STEP 6


Connect 6 pcs of part (1) to part (2) as demonstrated.

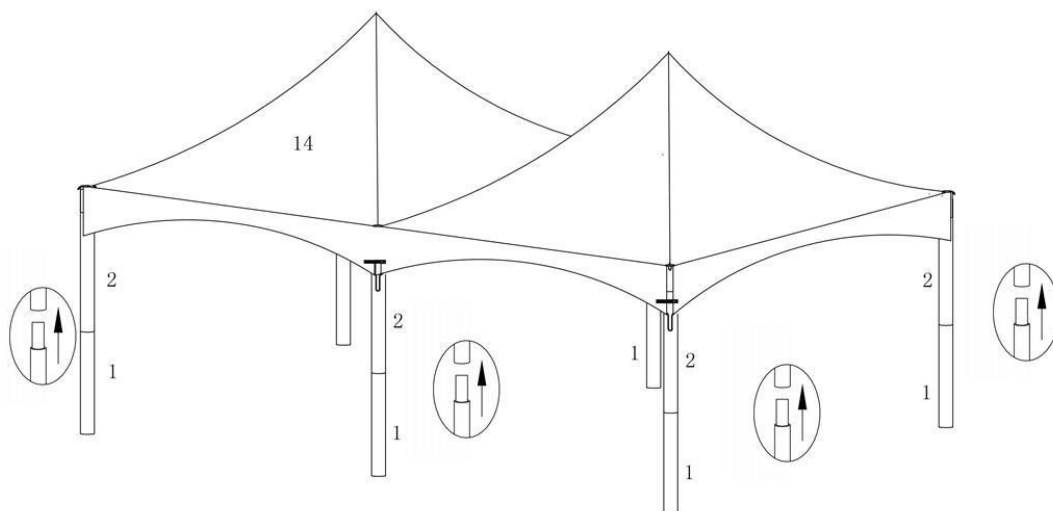

1 x 6
Leg Pole # 1

STEP 7


Attach 6 pcs of part (10) to part (1) by using screws(part 16) and nuts (part 17).

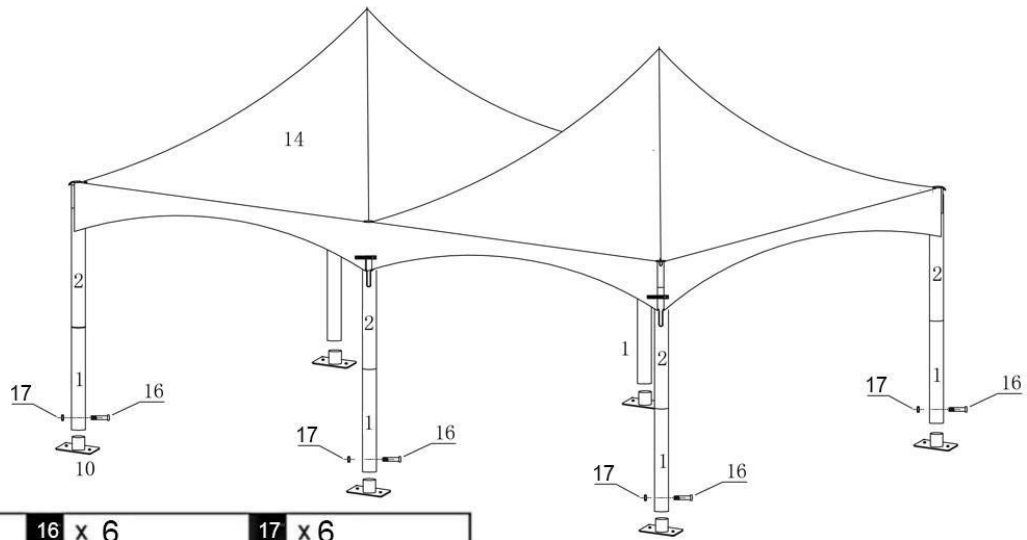


10 x 6	16 x 6	17 x 6
Footplate	M6 X 60mm Screw	Screw nut

STEP 8

Tighten the tighteners properly to ensure the roof is firmly secured to the leg poles.

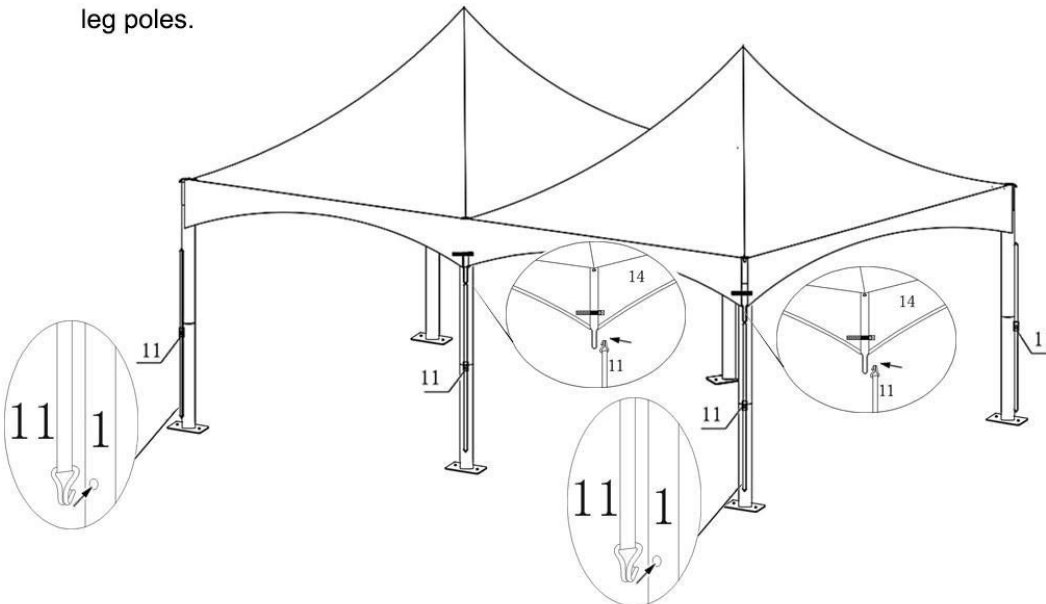


11 x 6
Tightener

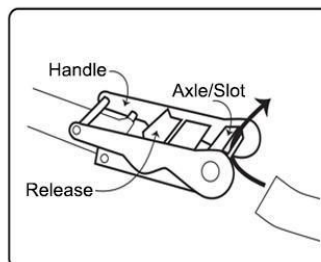

- Pass strap underneath and through the slot (as shown)
- While holding the whole strap, attach both ends
- Push 'release' - lift handle and tighten the tightener
- Roll-up any excessive strap, put under handle and close handle

STEP9

Use ground nails (part 13) to secure the footplate (part 10) to the ground, then use ropes (part 12) and ground nails (part 13) to secure the party tent firmly to the ground.

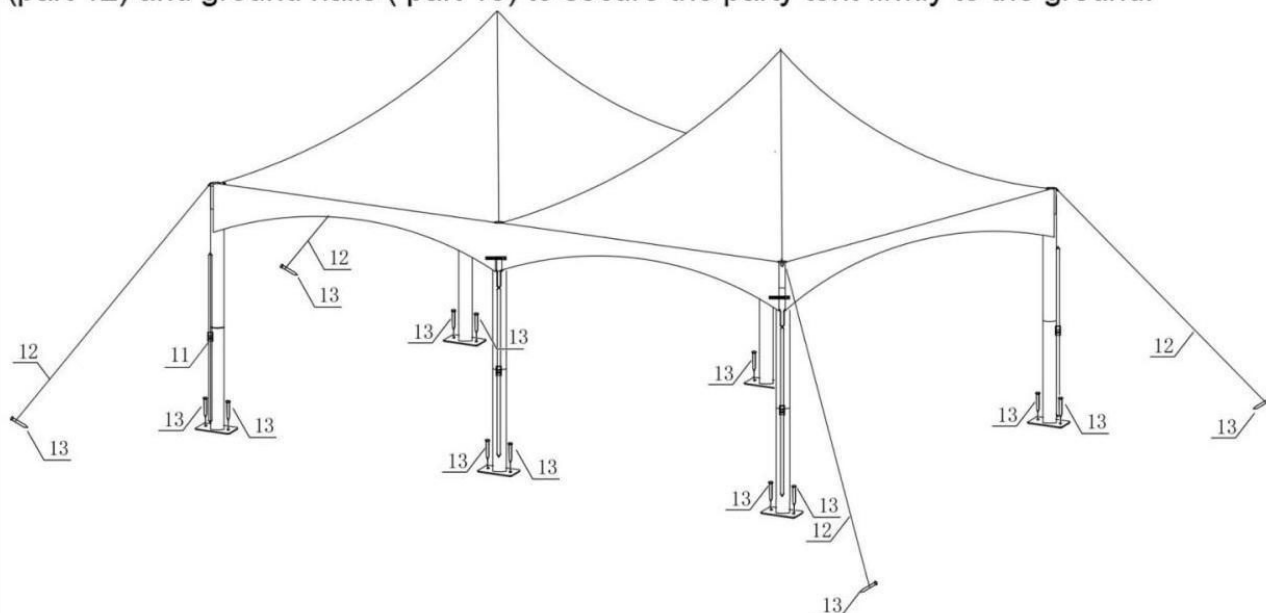

Now you can enjoy your party tent.

13 x 16	12 x 4
Ground nail	Rope