


INSTRUCTION MANUAL

20x30FT Pole Tent

SKU: WQG128WH

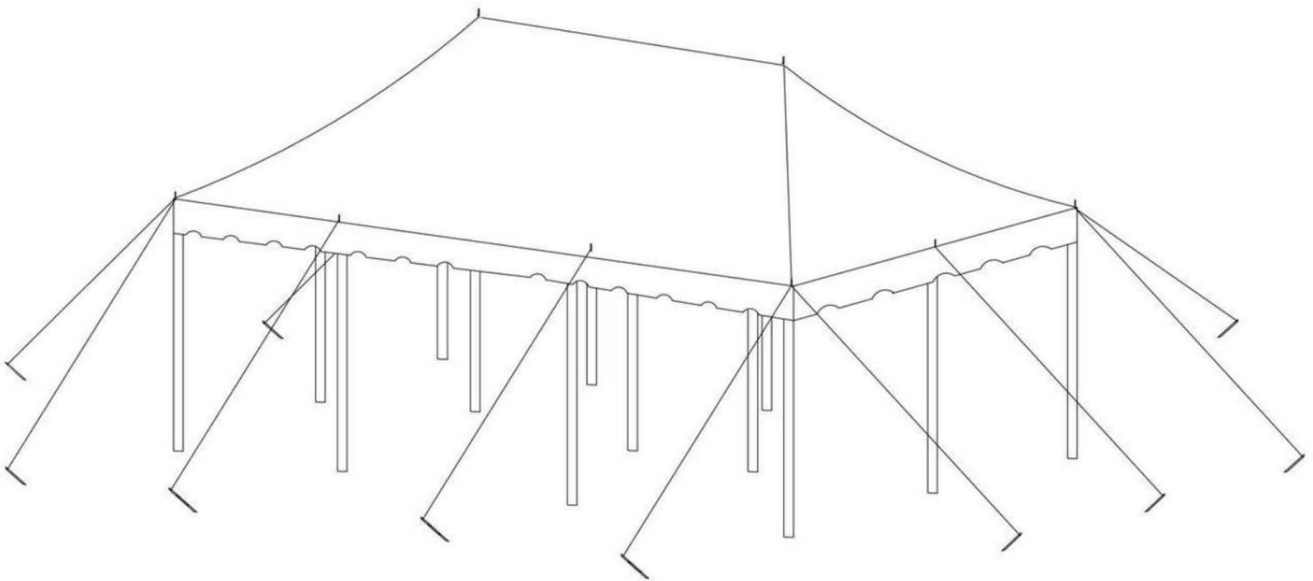

Please read the instructions **COMPLETELY** before assembly. Please check if you have all the parts listed in the part list. If you have any missing parts, please contact us. If there's any damage might be caused in the transportation, please send us clear pictures for replacements.


This tent **MUST** be securely anchored.

THIS IS A TEMPORARY STRUCTURE AND NOT RECOMMENDED AS A PERMANENT STRUCTURE

BOX A

Part number	Photo	Part name	Quantity(pcs)
G		ROOF	1

BOX B

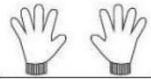Part number	Photo	Part name	Quantity(pcs)
D		Rope	14
E		Triangle Anchor	14
F		GLOVE	2

BOX C

Part number	Photo	Part name	Quantity(pcs)
A		Side Poles #1	10
B		Center Poles upper part #2	2
C		Center Poles bottom part #3	2
H		Top pole male	1
I		Top pole female	1

Warning!

1. Before installation, consult with all local municipal codes regarding the installation of temporary shelters. The owner of the tent has the sole responsibility to make sure that these local rules are followed and that the mounting is correct.
2. **We are not responsible for damage to the unit or the contents from acts of nature.**
3. Periodically check the anchors to ensure stability of shelter.
4. In case of extreme weather conditions, the tent cover must be removed.
5. Any shelter that is not anchored securely has the potential to fly away and cause damage.
We are not responsible for any shelter that blows away.
6. **This canopy is intended to protect against the effects of sun, rain, light snow, etc. It is not designed to hold the loads that can accompany wind, rain, snow, or ice storms. This structure is not tested for specific snow, rain, and wind loads.**
7. Do not use open fire, welding equipment, or other ignition sources in the tent.
8. **We recommend you insure the tent, or check if it is covered by home contents insurance, in case of unplanned events, accidents, or bad weather.**

CARE AND CLEANING:

- A tight cover ensures longer life and performance. Always maintain a tight cover. Loose fabric can accelerate the deterioration of cover fabric.
- **Immediately remove any accumulated water, snow, or ice from the roof structure with a broom, mop, or other soft-sided instrument.**
- NEVER leave this tent up overnight, particularly with roof and side panels on when a gust of winds can damage it.
- DO NOT use bleach or harsh abrasive products to clean the fabric cover. The cover is easily cleaned with mild soap and water.

Before putting up


When unpacking the parts, keep them away from children. Smaller parts could be swallowed and suffocation can be caused by plastic bags! Choose a suitable location for your pavilion.

Pay attention to the following points when choosing a location:

- The pavilion must stand on a flat, non-slip, and safe place
- Choose a sheltered location
- Avoid damaging the material, please place the pavilion in a position where it cannot rub or chafe against branches, parts of buildings, etc.
- Put up the pavilion at a safe distance from fireplaces and pay attention to the direction of the wind
- After use, allow your pavilion to dry in an upright position before packing it away.

STEP 1

Prepare all the poles, connect Pipe B and C by spring button

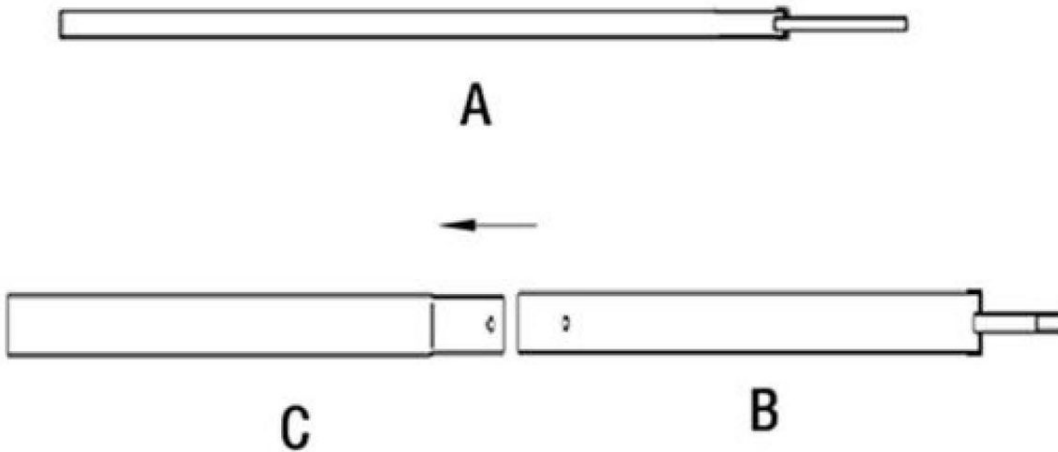

A x10



B x 2





C x 2



STEP 2


Unroll and unfold the tent top on the desired spot to be covered, keep the tent top edges as square as possible. The center of the tent top will not be totally flat due to the peak of the tent.

G x 1

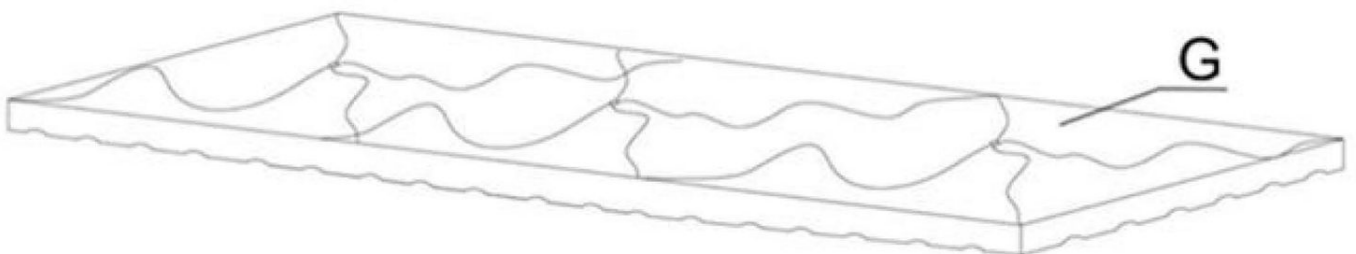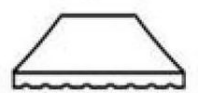

STEP 3

Place all the poles and roof as picture shows

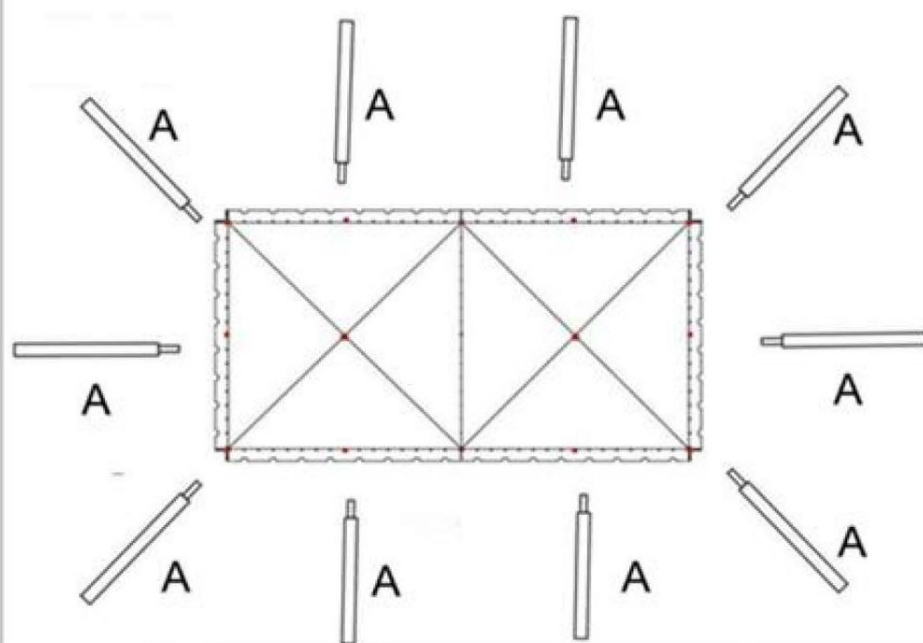

A x10

B+C x2

B+C

STEP 4


Hammer the anchors (Part E) into the ground as shown below, approximately 3.5' from the grommet locations and 2 anchors on each corner location (place 90 ° apart). Loop the ropes (Part D) around the hole on the anchors while the tent top is laying on the ground. 4 anchors go to the middle of the 4 sides of the tent top respectively

E x14


D x14

Warning: Make sure that anchors are nailed into the ground firmly. If the ground is soft, tent might collapse. If there's no firm place to set up your tent, you must buy longer anchors to prevent collapse. Do not push anchors in by hand. Use a hammer to drive anchors firmly into the ground .

Anchoring point layout

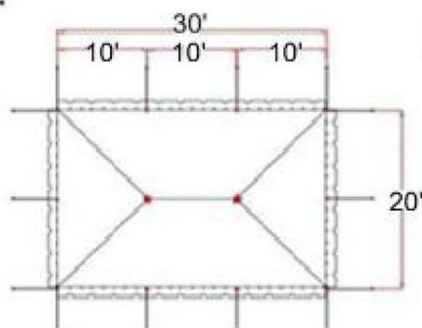


Side view of the Anchor and rope

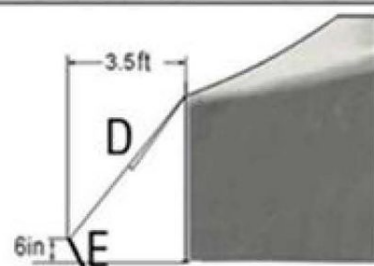

STEP 5

First, insert the Poles A into the grommets of four corners of the roof, and use guy ropes to keep the poles upright. Then, insert the Pole A to the grommets in the middle of roof and secure the guy ropes. (check photo to protect the roof and prevent tearing.)

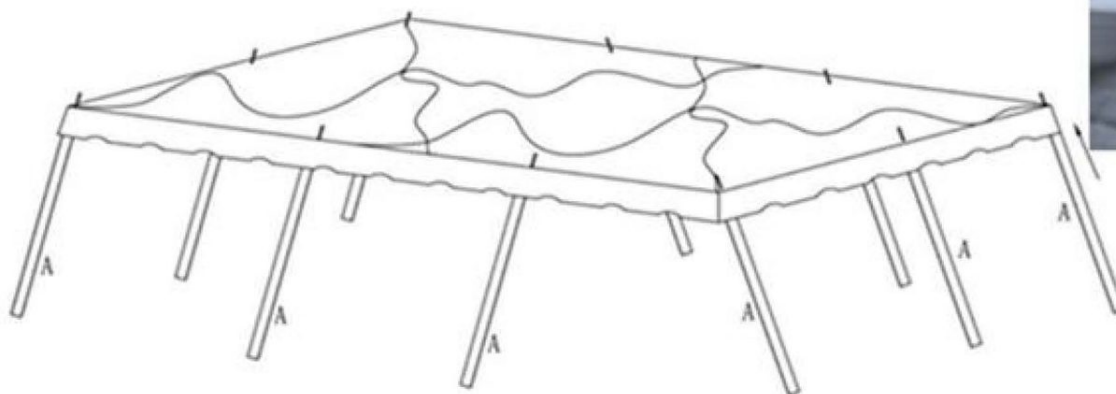


A x 10



STEP 6

Connect top pole I and H to make a complete top pole. Insert the center pole pin through the holes of H & I together with grommets on the roof top. Push all the centers into vertical position.

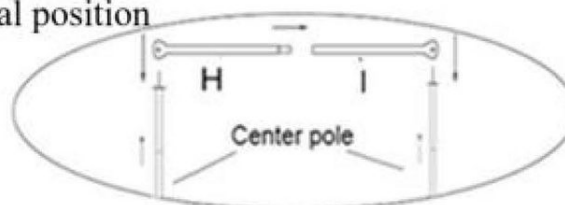



B+C x 2



I x 1




H x 1

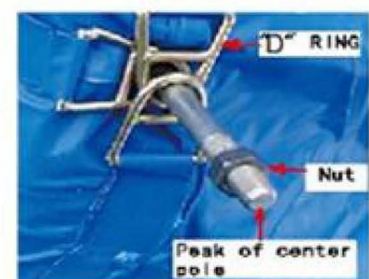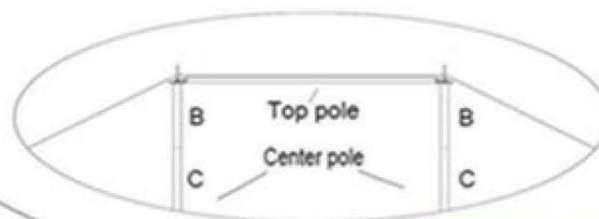


STEP 7

Adjust guy ropes tightness by moving the plastic part downwards to make sure all the side poles A are standing vertically straight (Make sure the other side of rope tie firmly to the hole on Anchors)

Pls use 2 sets of the ropes on each corner pole, and 1 set of rope for the pole in the middle as demonstrated below.

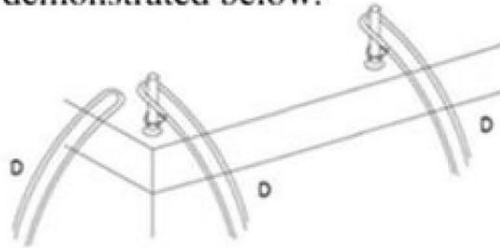

Warning: All the poles must be straight and all the ropes must be tightened to their limit to prevent tent collapse. If the poles are not straight, or the ropes are not tightened properly, the tent will collapse. Not liable for injuries or property damage.

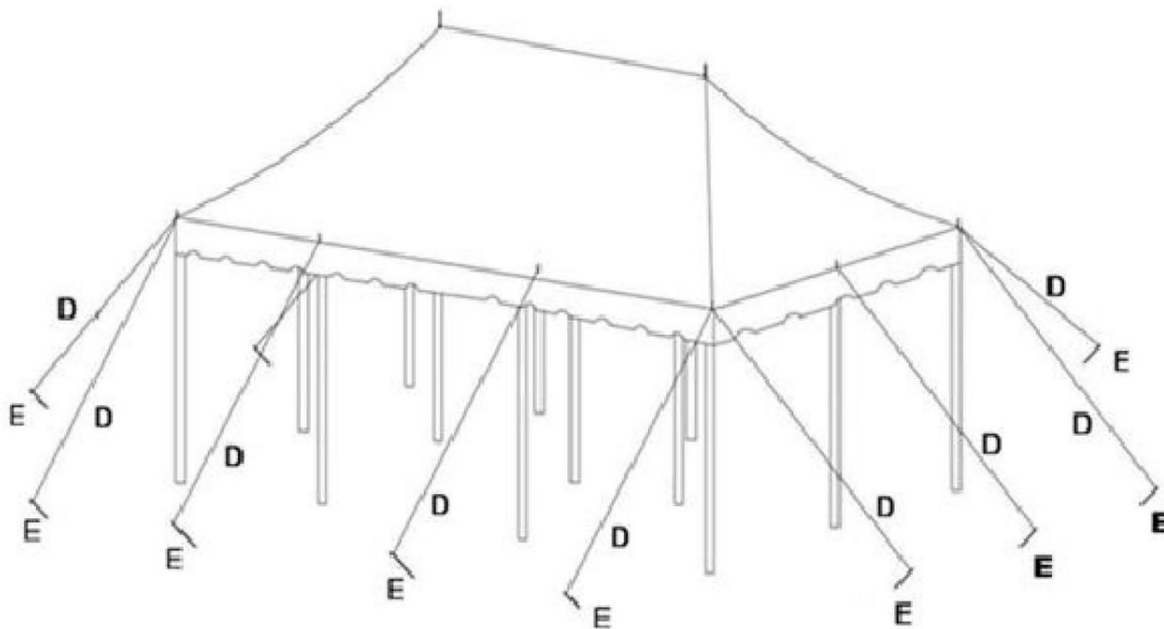

Now enjoy your Pole Tent!