 

WYXRHM219WH
WYXRHM219BK

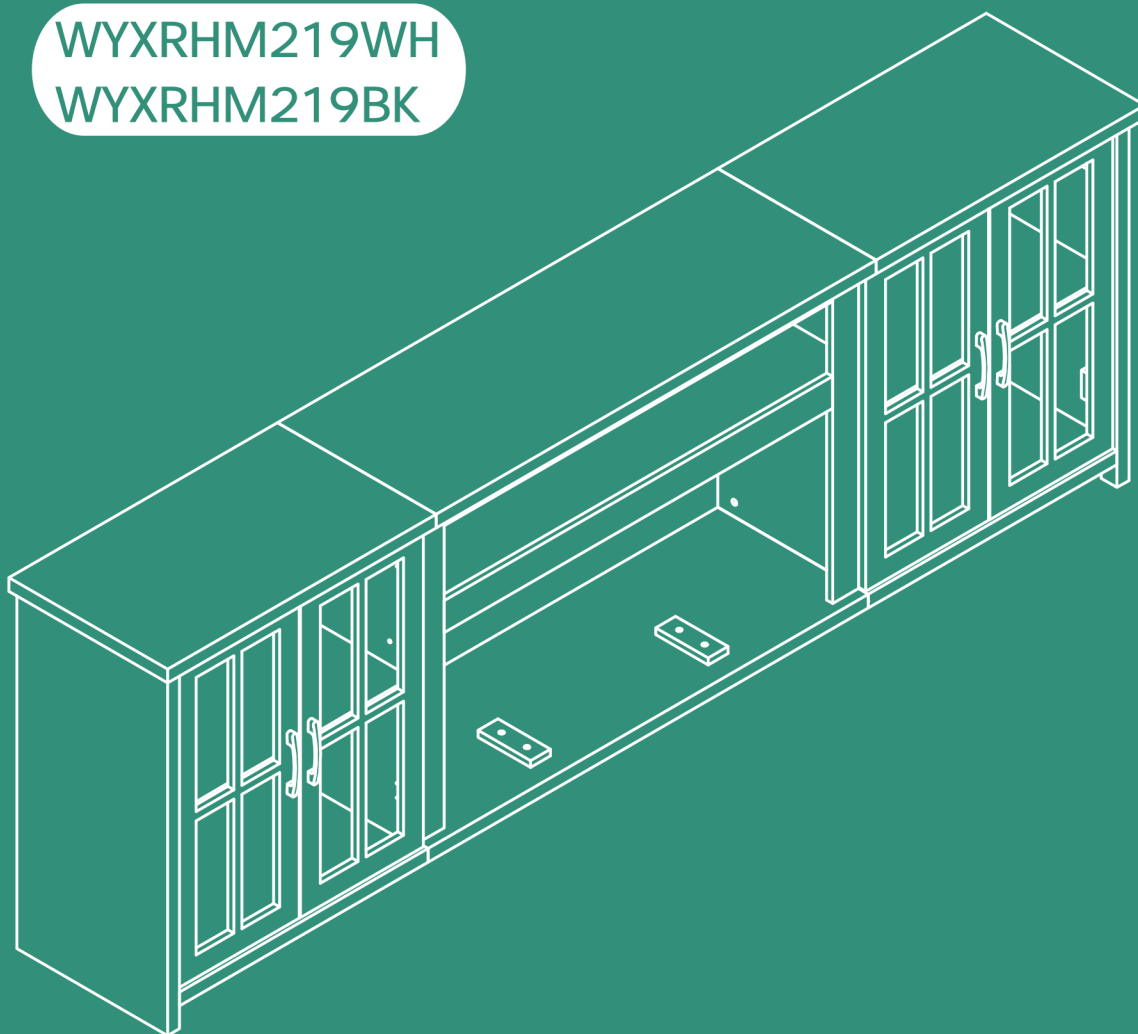

Furniture

Installation instructions

PRODUCT INSTRUCTION

i Remember that the assembly might take (2) hours and requires (2) people.

REMEMBER

EROMMY isn't responsible for replacing parts lost or damaged during assembly. If you have issues, Email: **service@erommy.com** or Tel: **8886766299** instead of returning the unit.

IMPORTANT

Finalize site preparation and foundation construction before unpacking. Remove all parts from the packaging and check the right count and type of pieces before assembling.

! CAUTION

- Consult local authorities to ensure you have the required permits and are aware of any applicable local building regulations.
- It's crucial to review the site preparation information in the manual beforehand to get everything ready.
- Read instructions thoroughly before starting assembly. Follow the steps carefully because the kit contains parts that might be damaged if constructed incorrectly.
- Please handle the kit with caution since some parts have sharp metal edges.
- Avoid working in severe winds or extreme cold and wear gloves, eye protection, and long sleeves during assembly or maintenance.
- When filling it, store heavier items near the bottom. The product isn't intended for children to play in, and don't stand, sit, or store anything on the roof.

 
BRAND STORY

With the ideology of “closer to life” in our mind, EROMMY is committed to bring you the most refined and trustworthy products that fits your need. Our vision is to empower every customer to stay close to nature and ultimately transform their lifestyles.















EROMMY, Closer to Life!



























PACKAGE CONTENTS

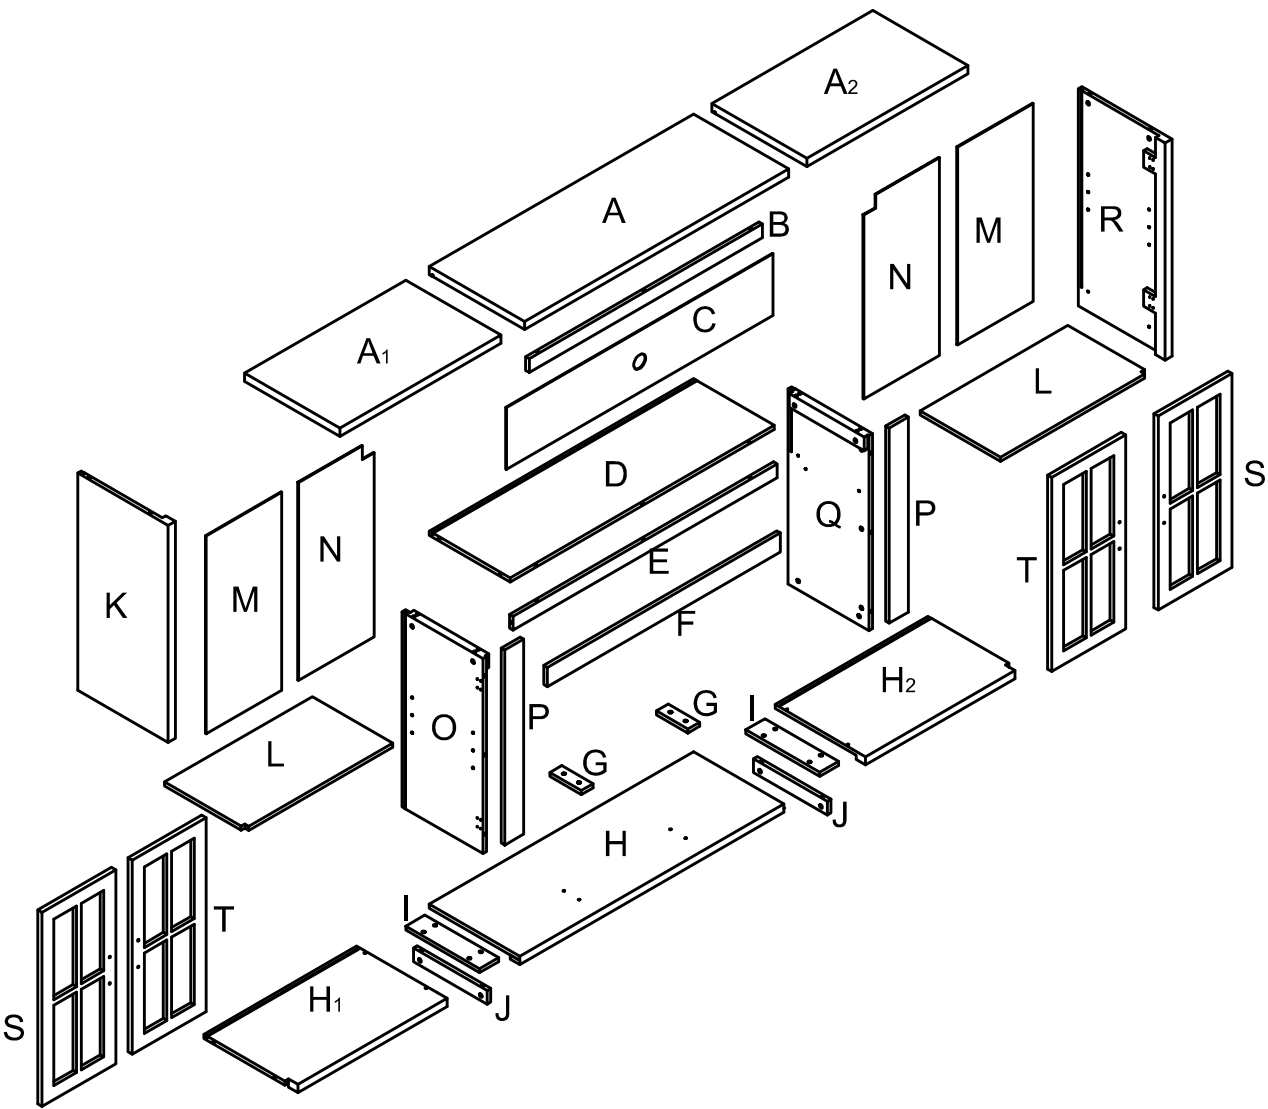

HARDWARE CONTENTS

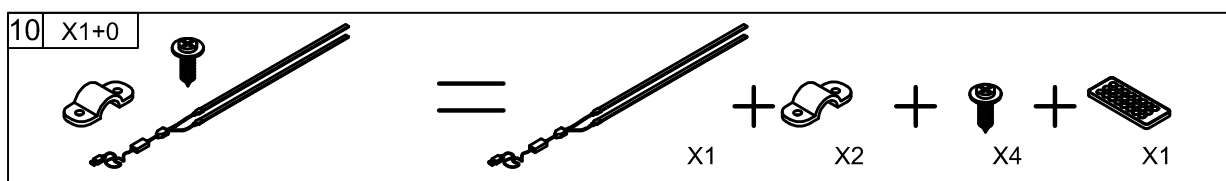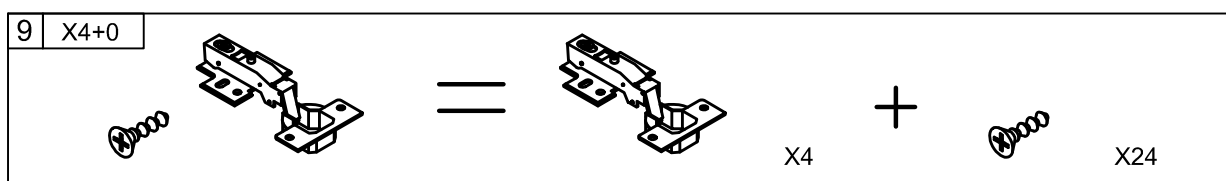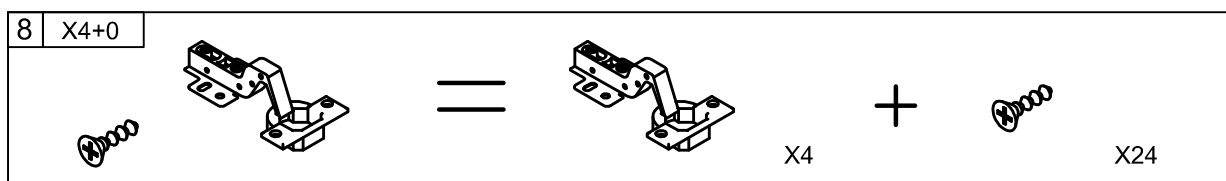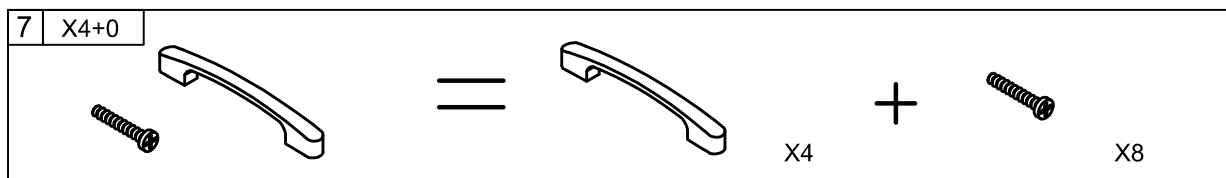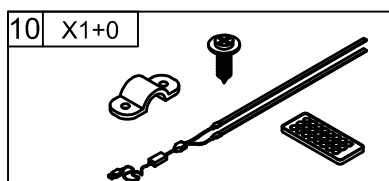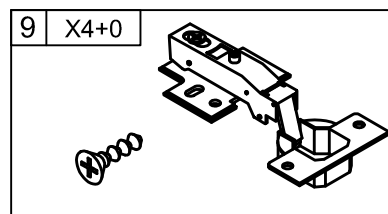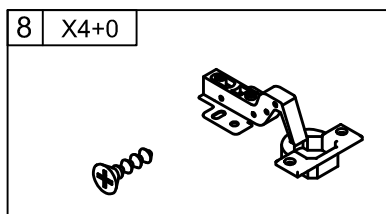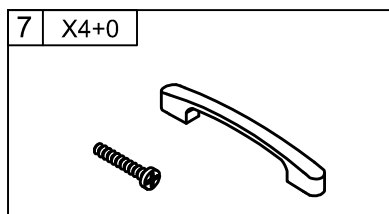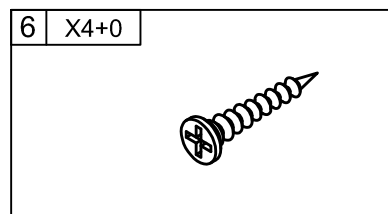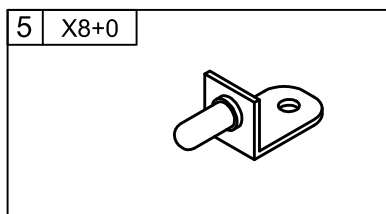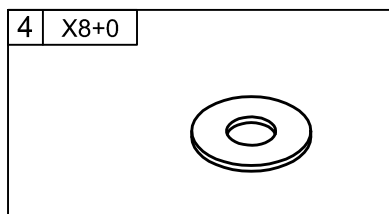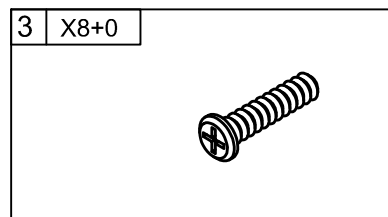            
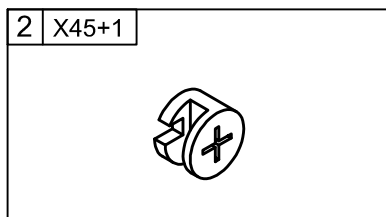 
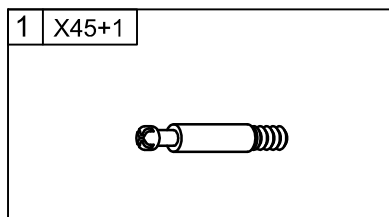 


PACKAGE CONTENTS

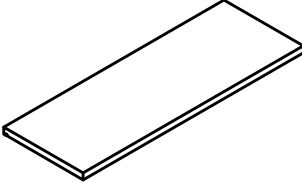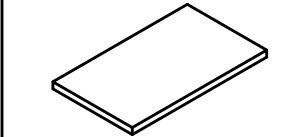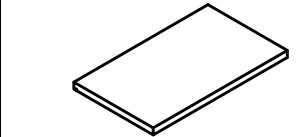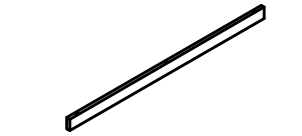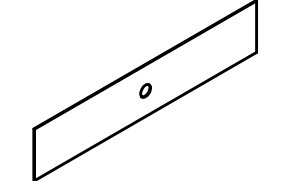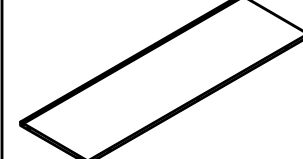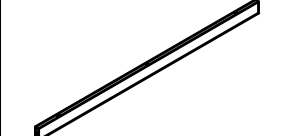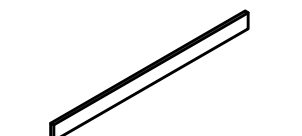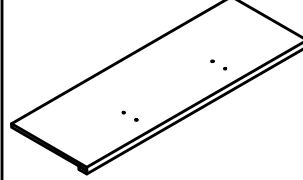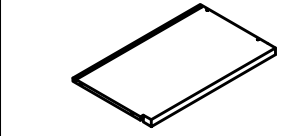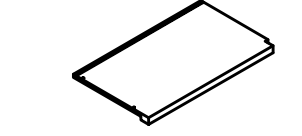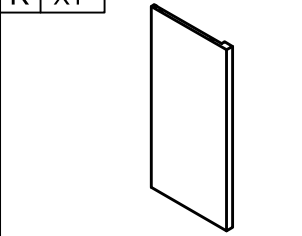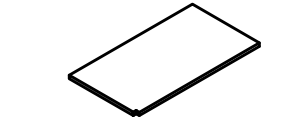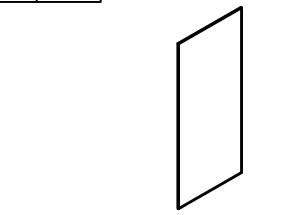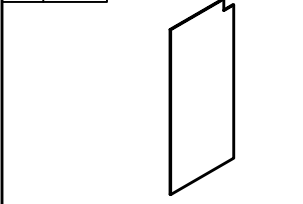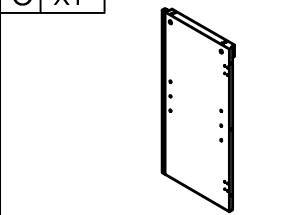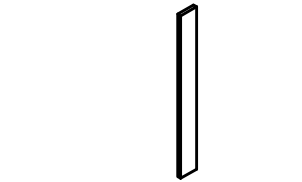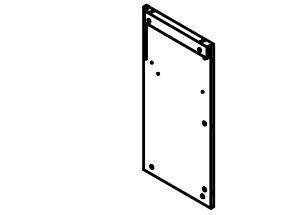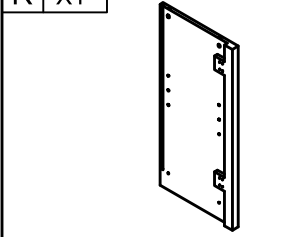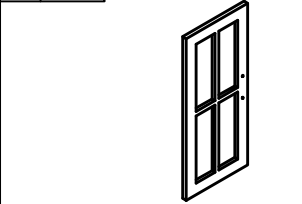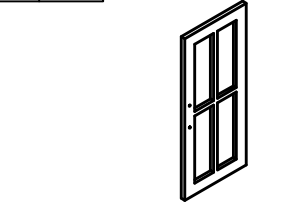                        A X1 	A1 X1 	A2 X1 	B X1 
C X1 	D X1 	E X1 	F X1 
G X2 	H X1 	H1 X1 	H2 X1 
I X2 	J X2 	K X1 	L X2 
M X2 	N X2 	O X1 	P X2 
Q X1 	R X1 	S X2 	T X2 



PACKAGE STEPS

   
1.

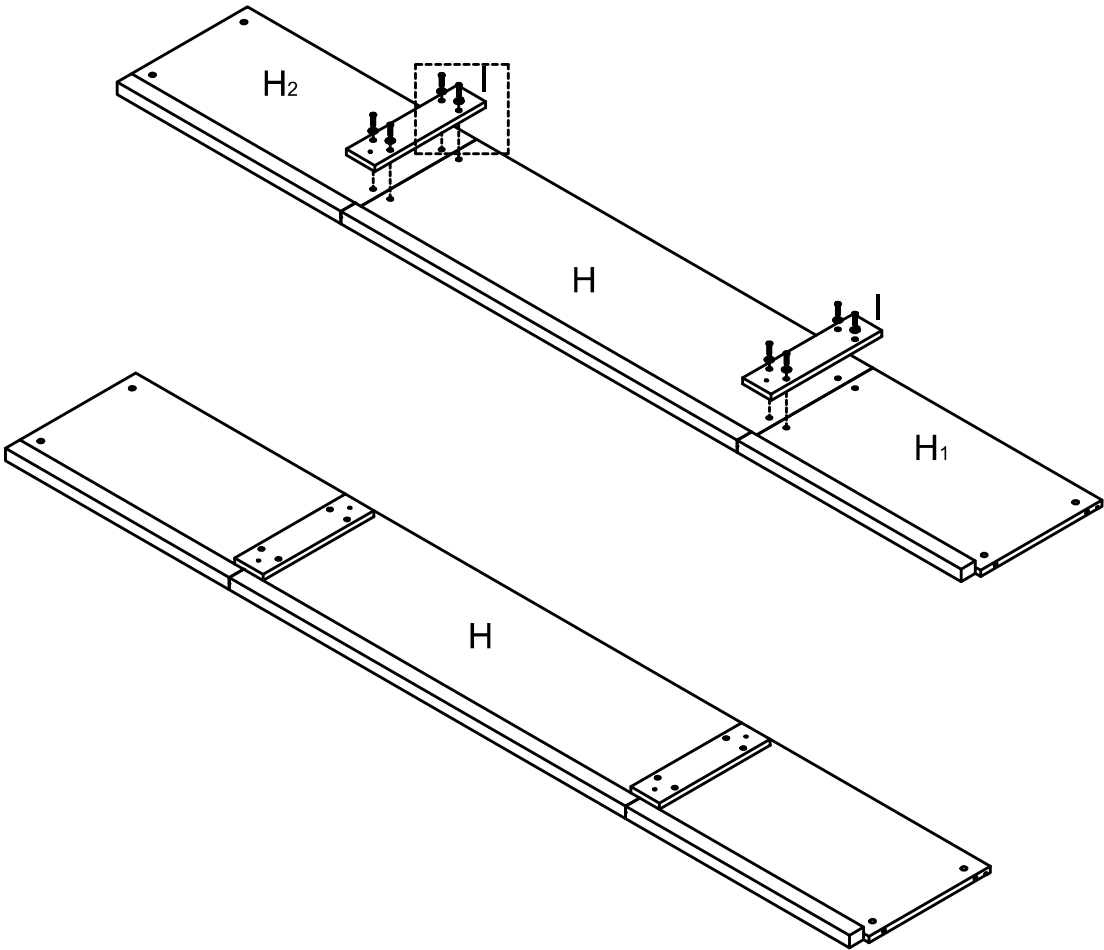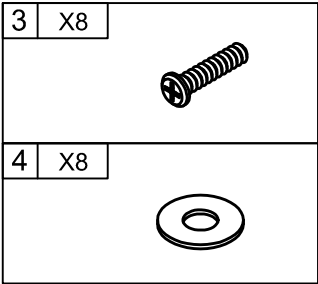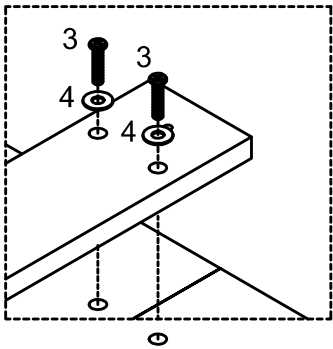


PACKAGE STEPS

   2.

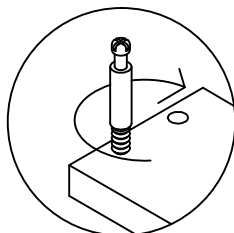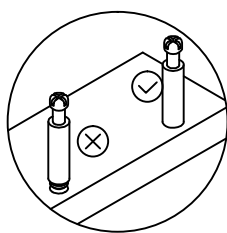



1	X4
	
2	X4
	

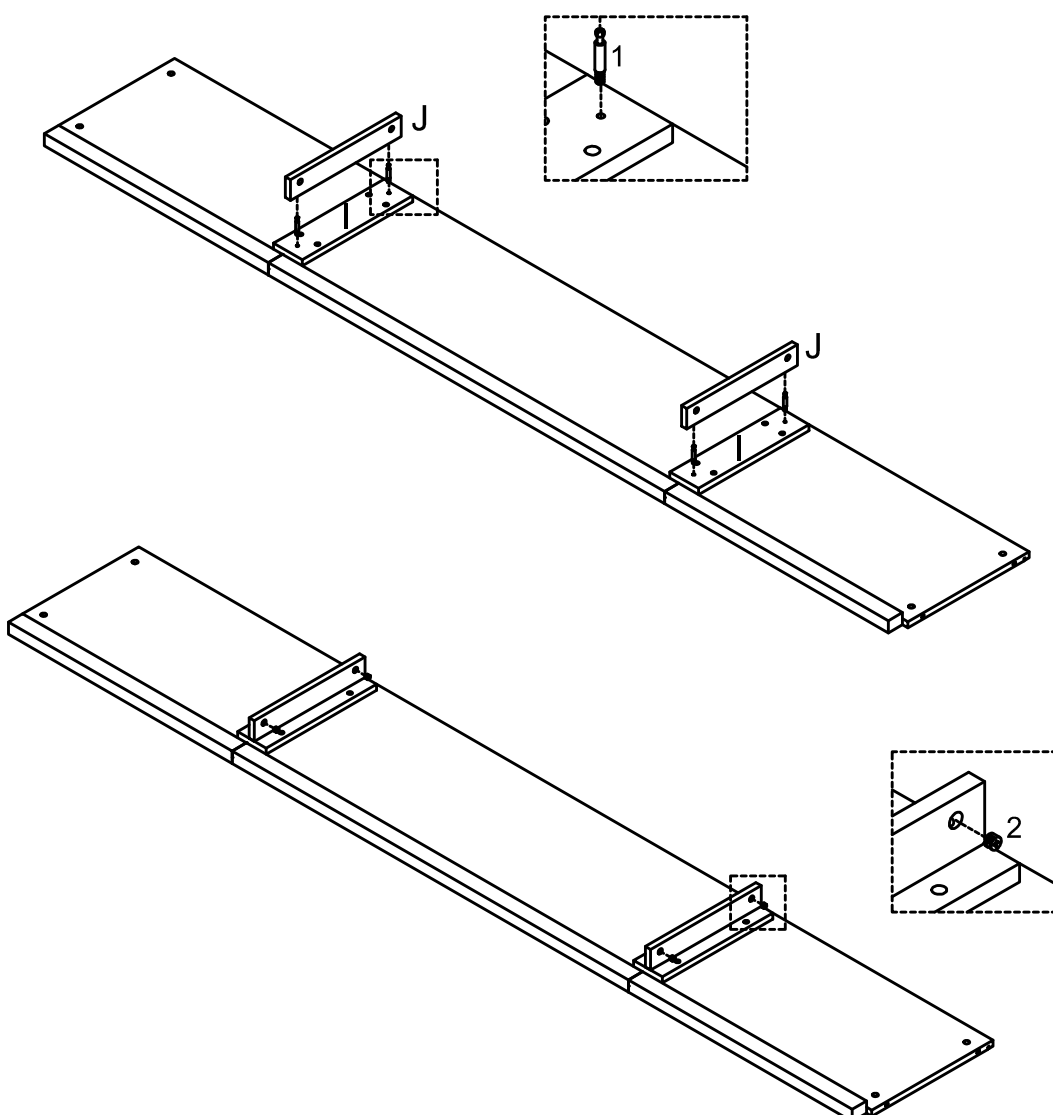 

PACKAGE STEPS

 
3.





1	X4
	
2	X4
	

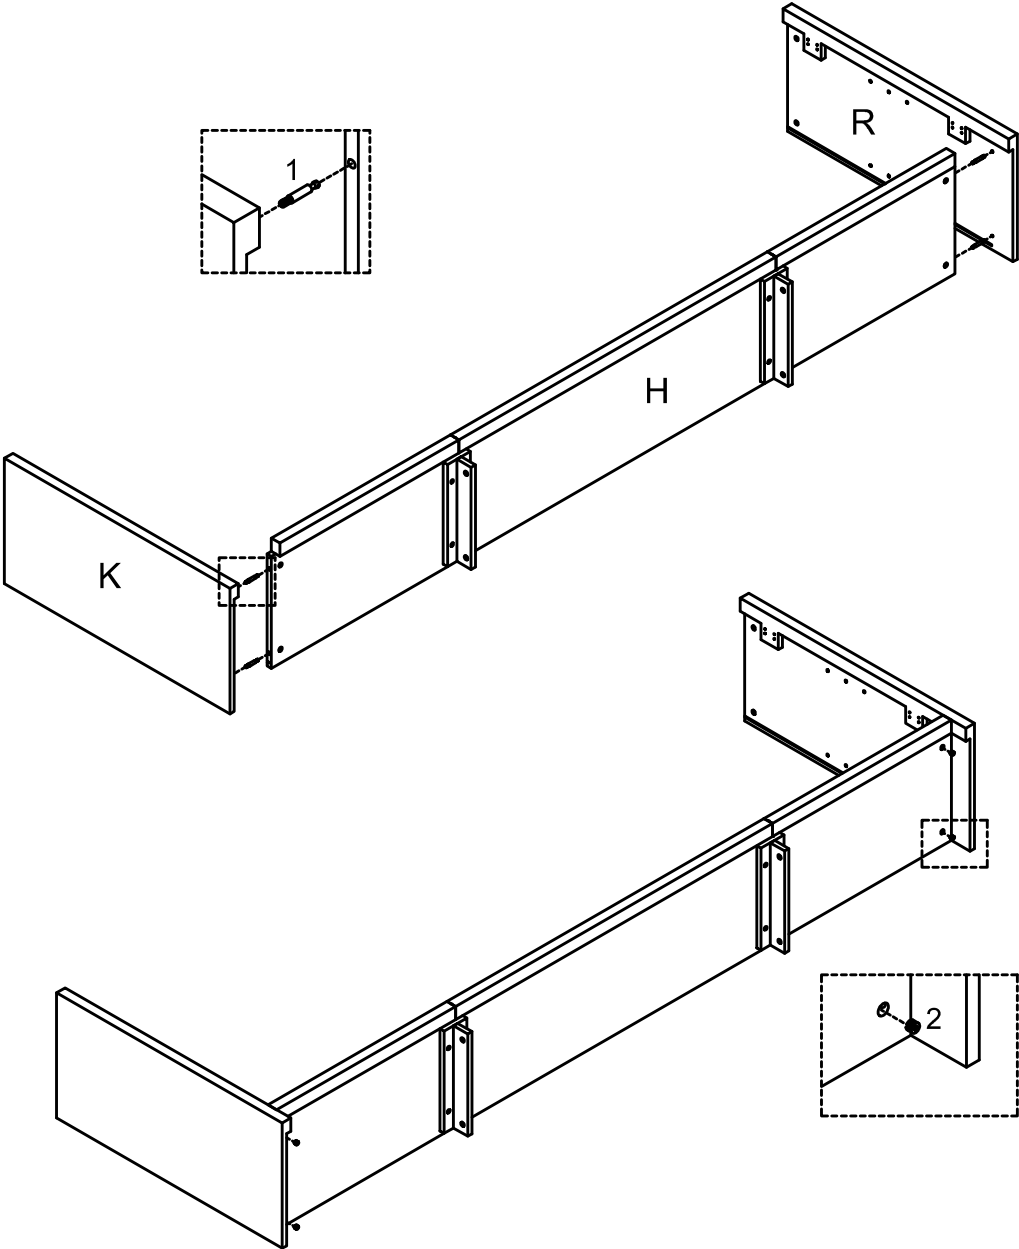 

PACKAGE STEPS

 
4.

1	X6
	
2	X6
	

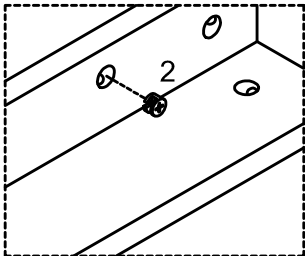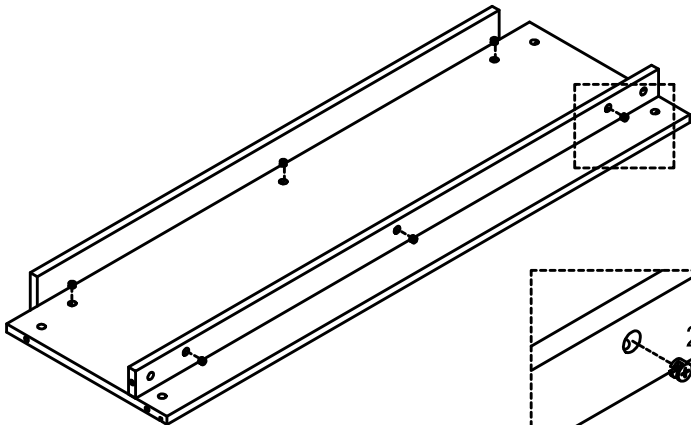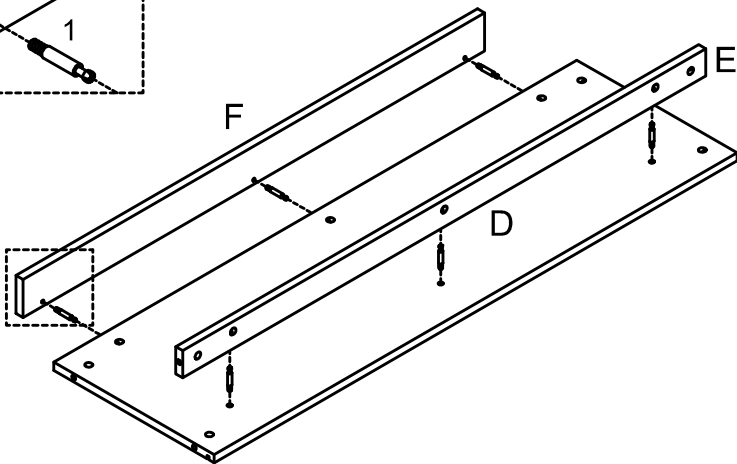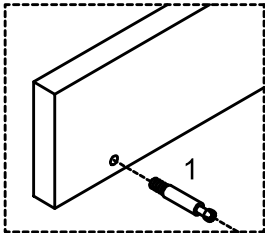    


PACKAGE STEPS

 
5.

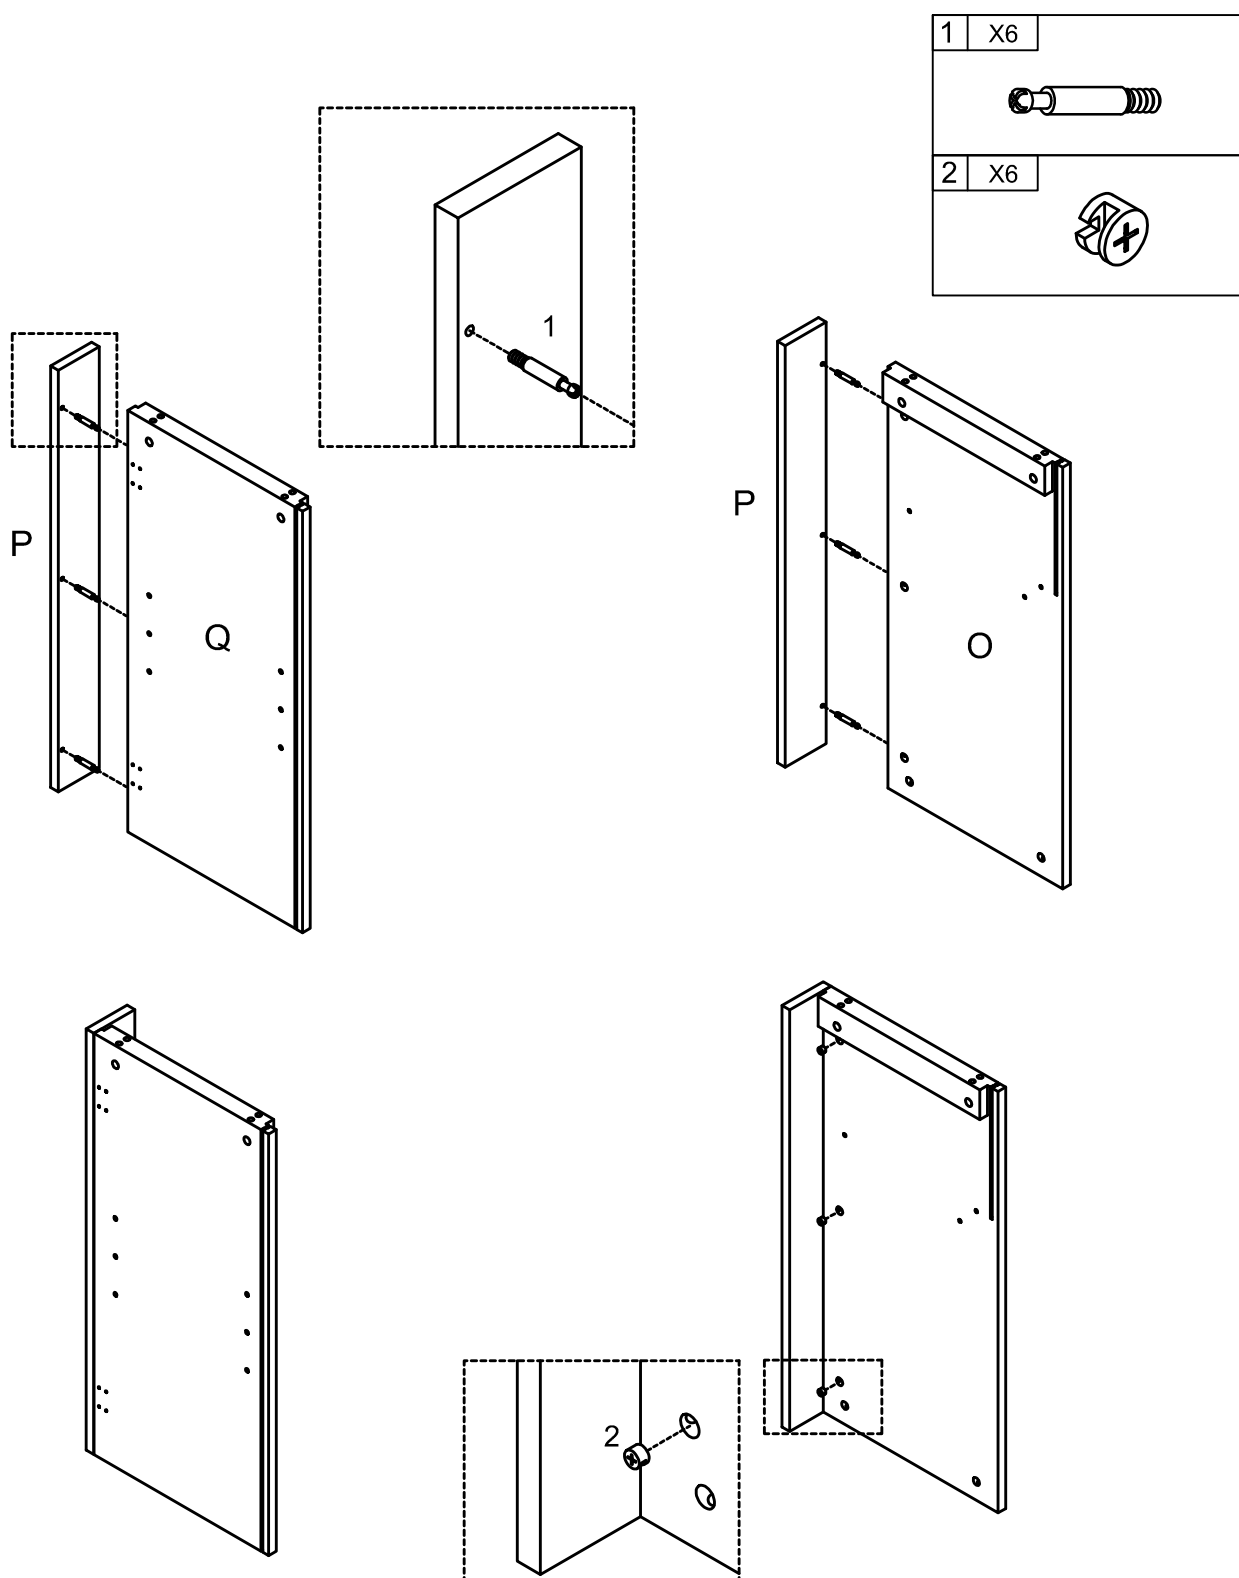

PACKAGE STEPS

 
6.


1	X6
	
2	X6
	

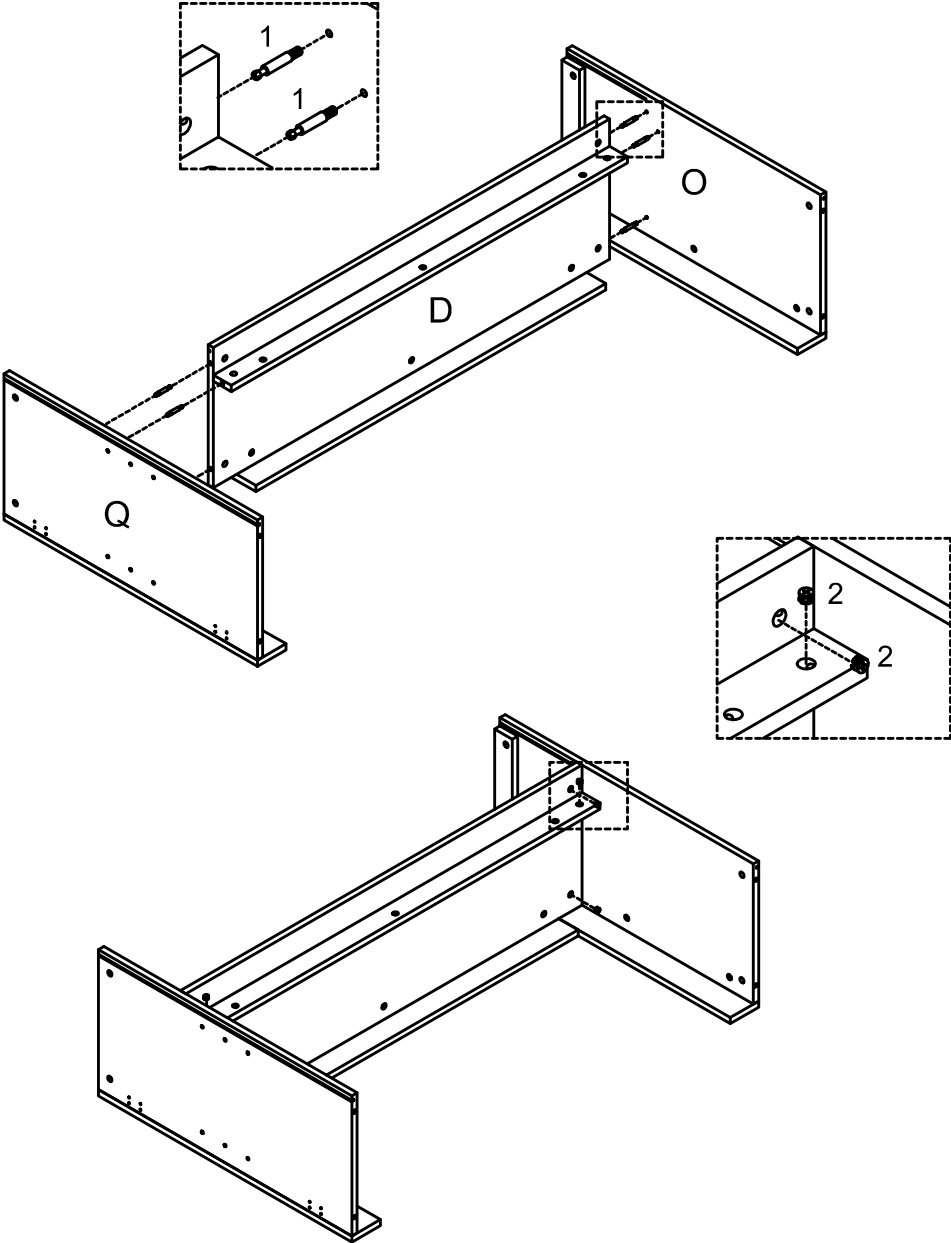 

PACKAGE STEPS

 
7.

1	X4
	
2	X4
	

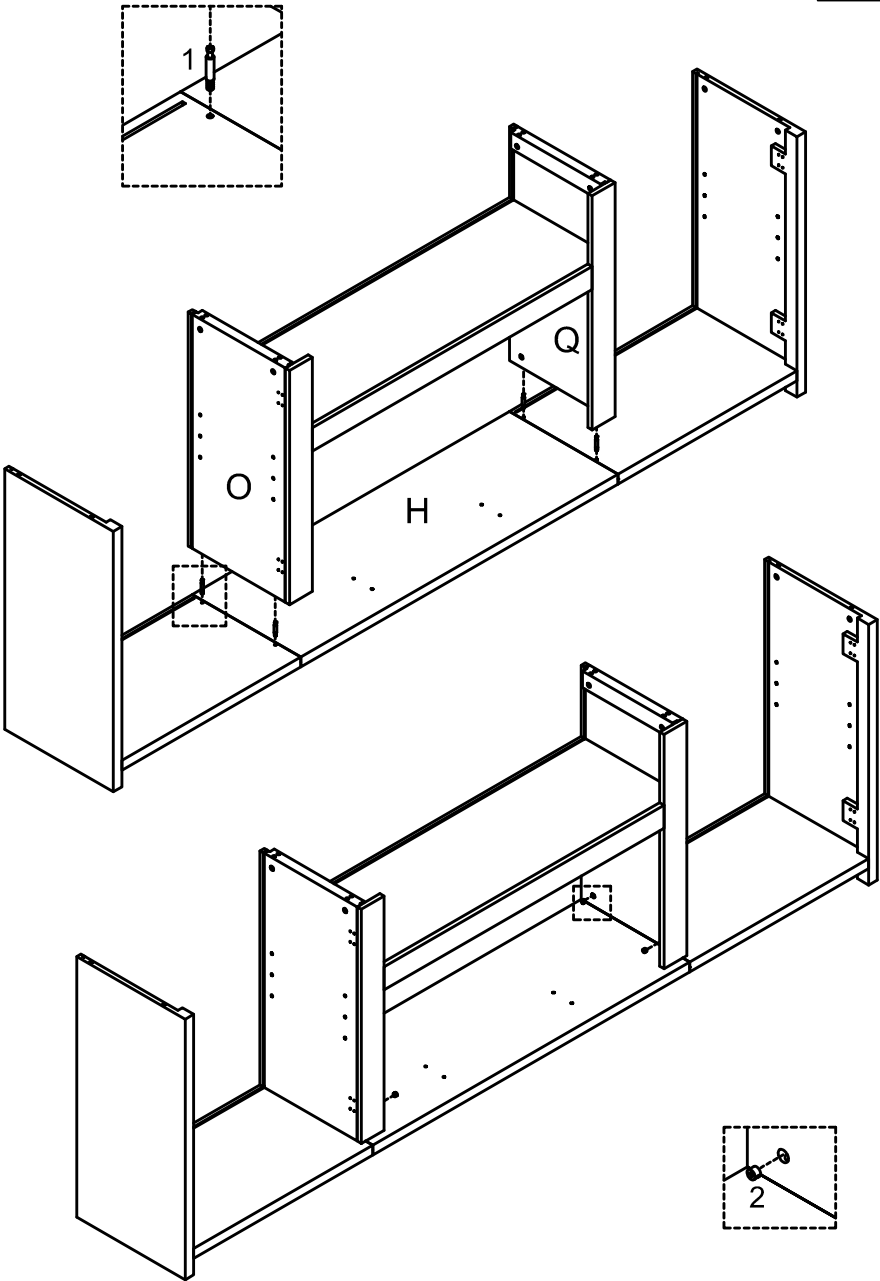 


PACKAGE STEPS

 
8.

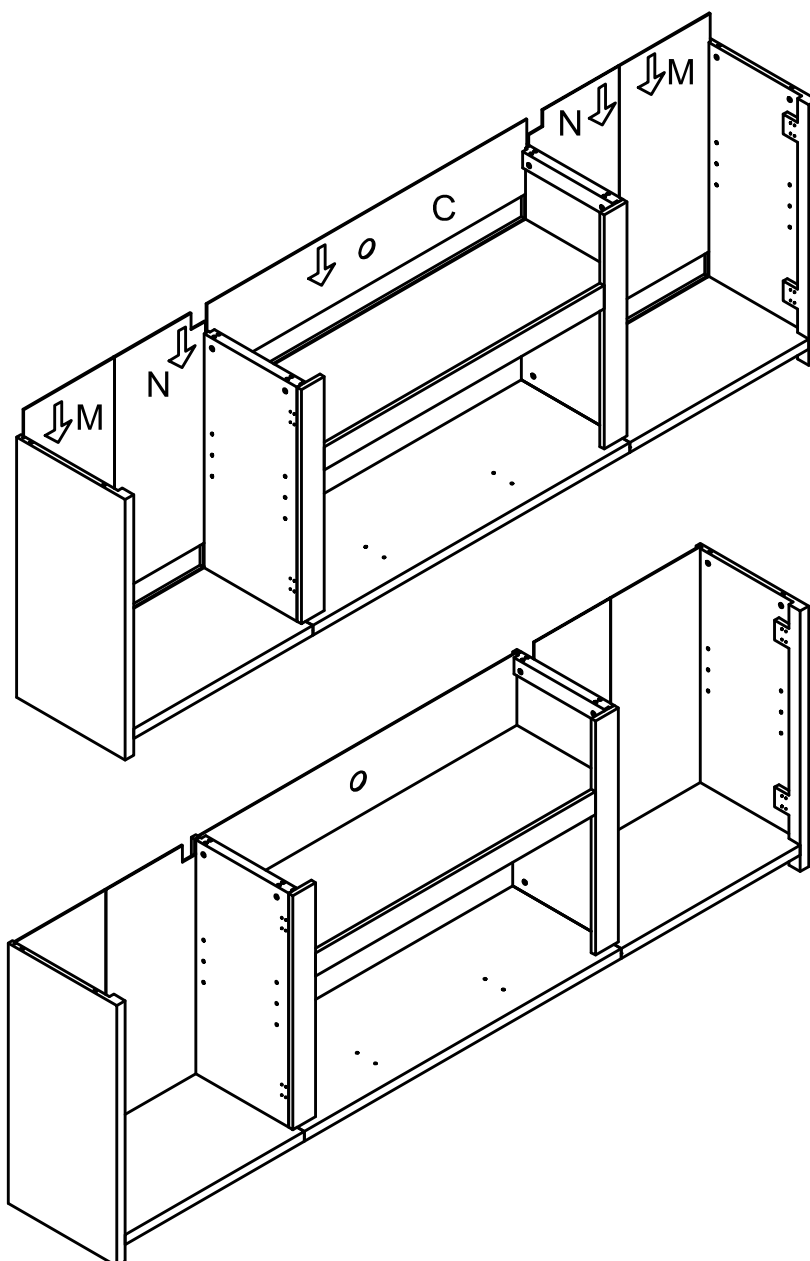

PACKAGE STEPS

 
9.


1	X3
	
2	X3
	


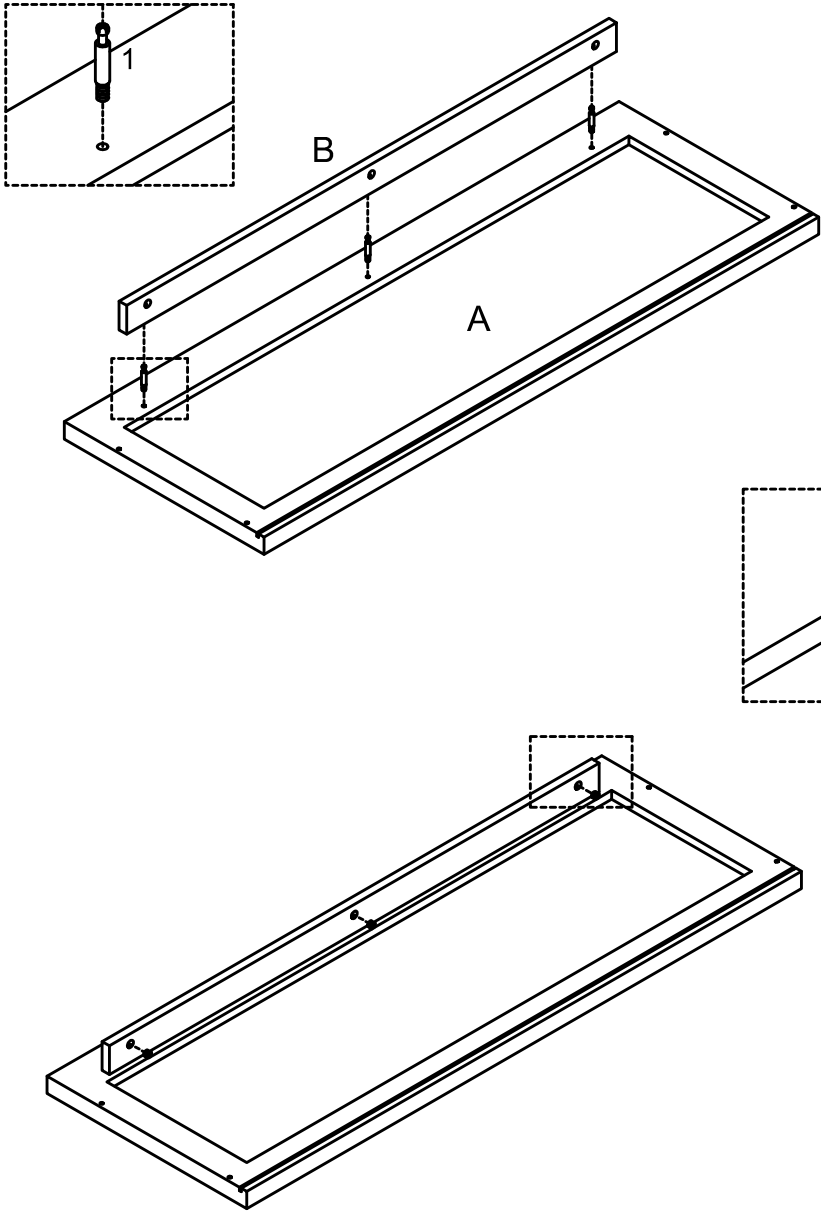 


PACKAGE STEPS

  10.

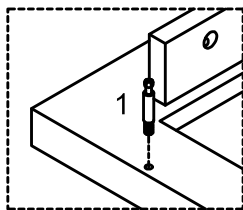


1	X4
	
2	X4
	

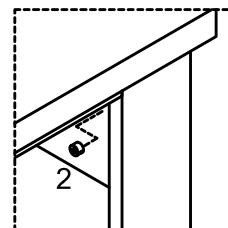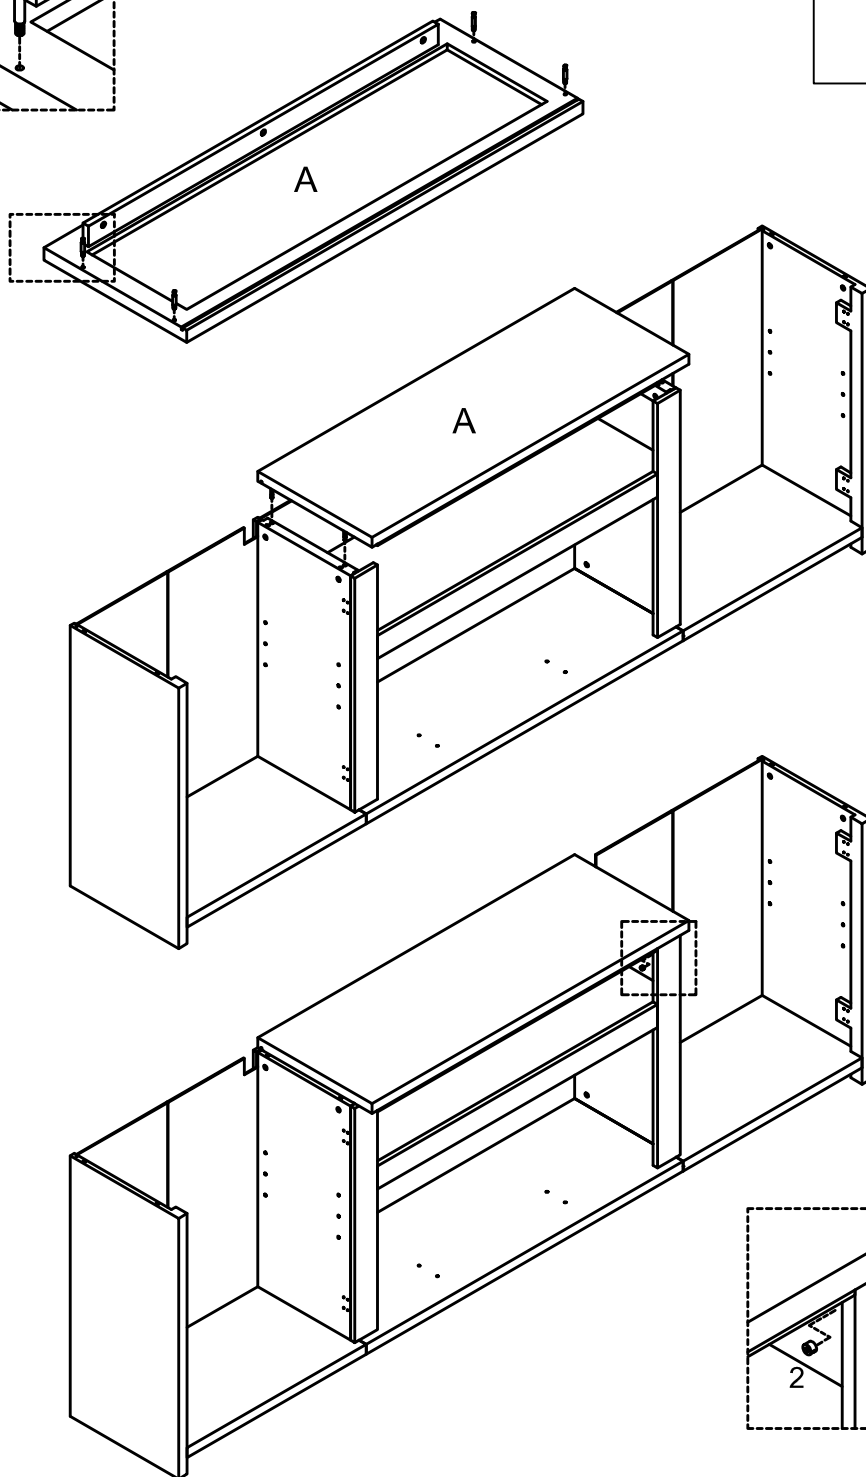  



PACKAGE STEPS

 11.

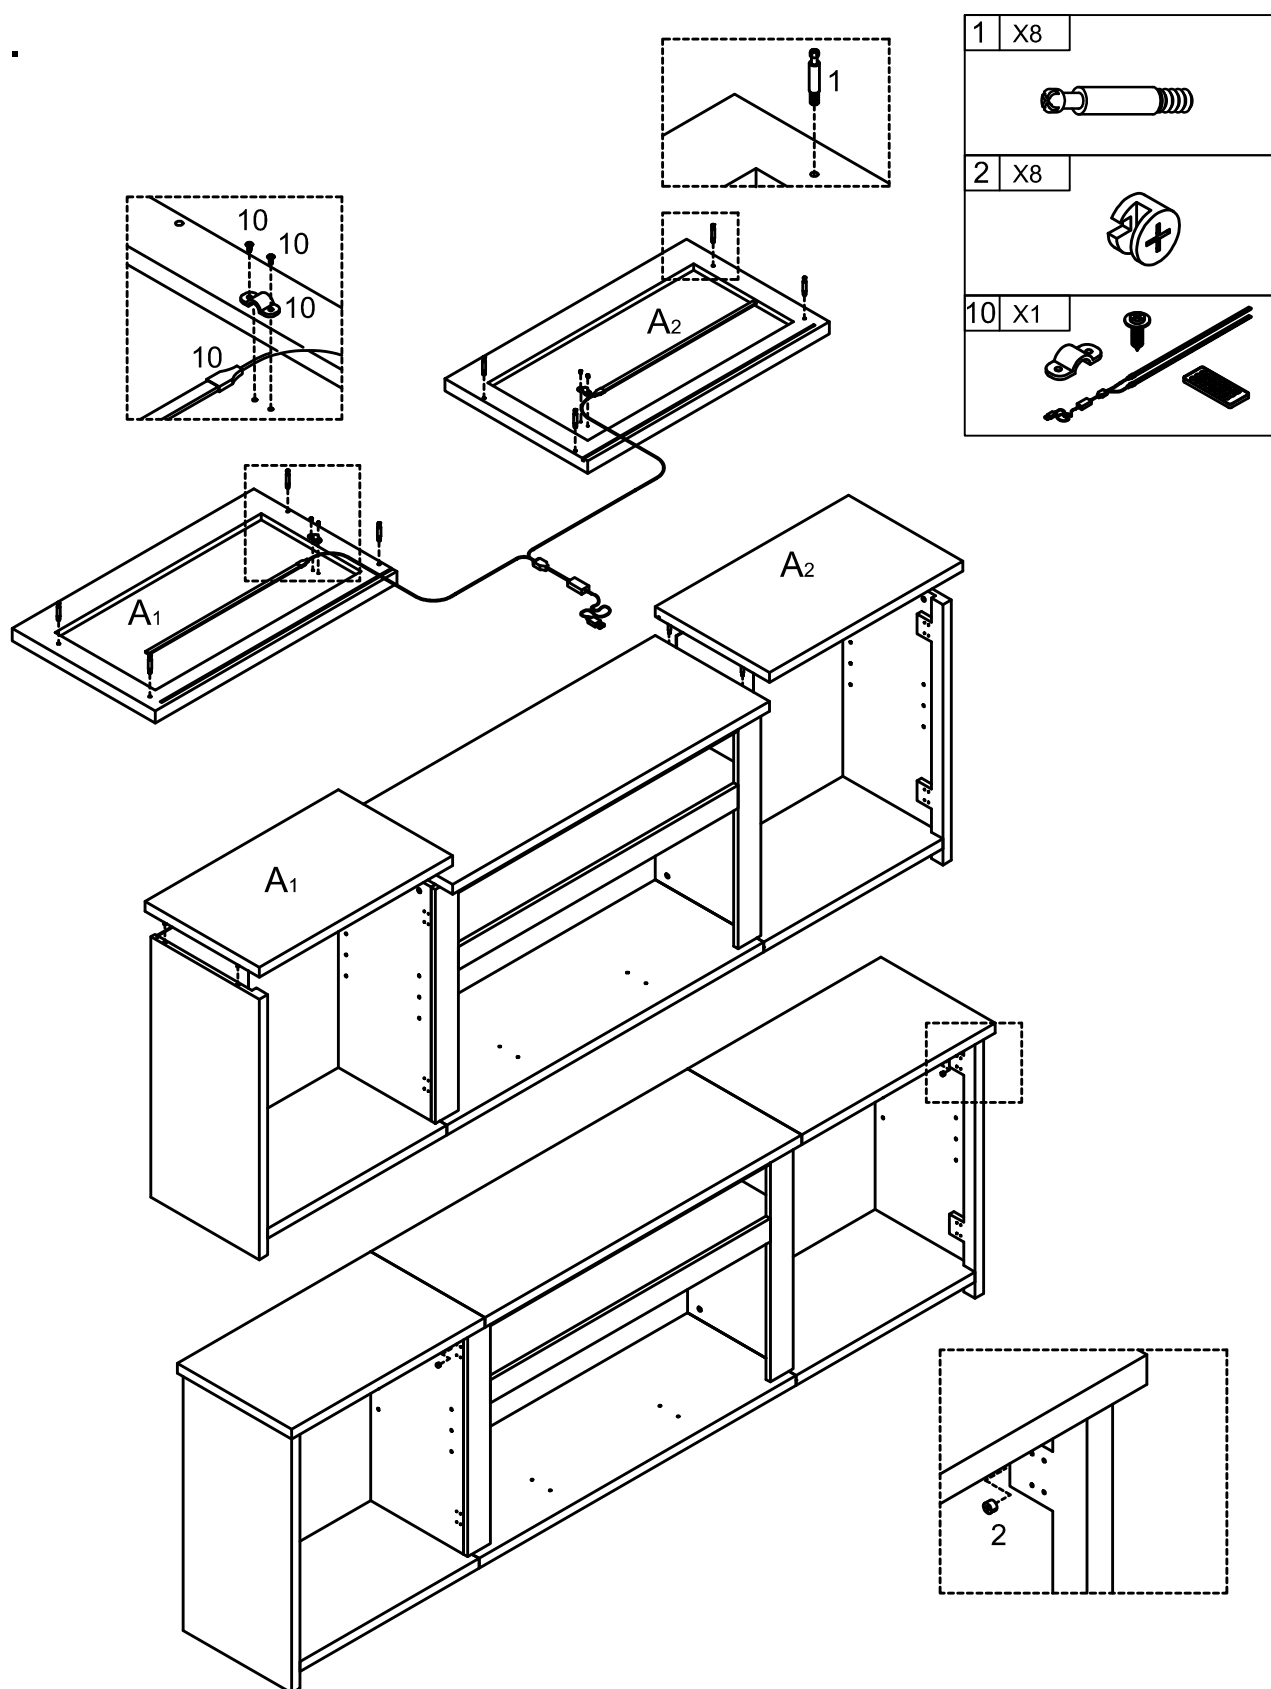



PACKAGE STEPS

  12.

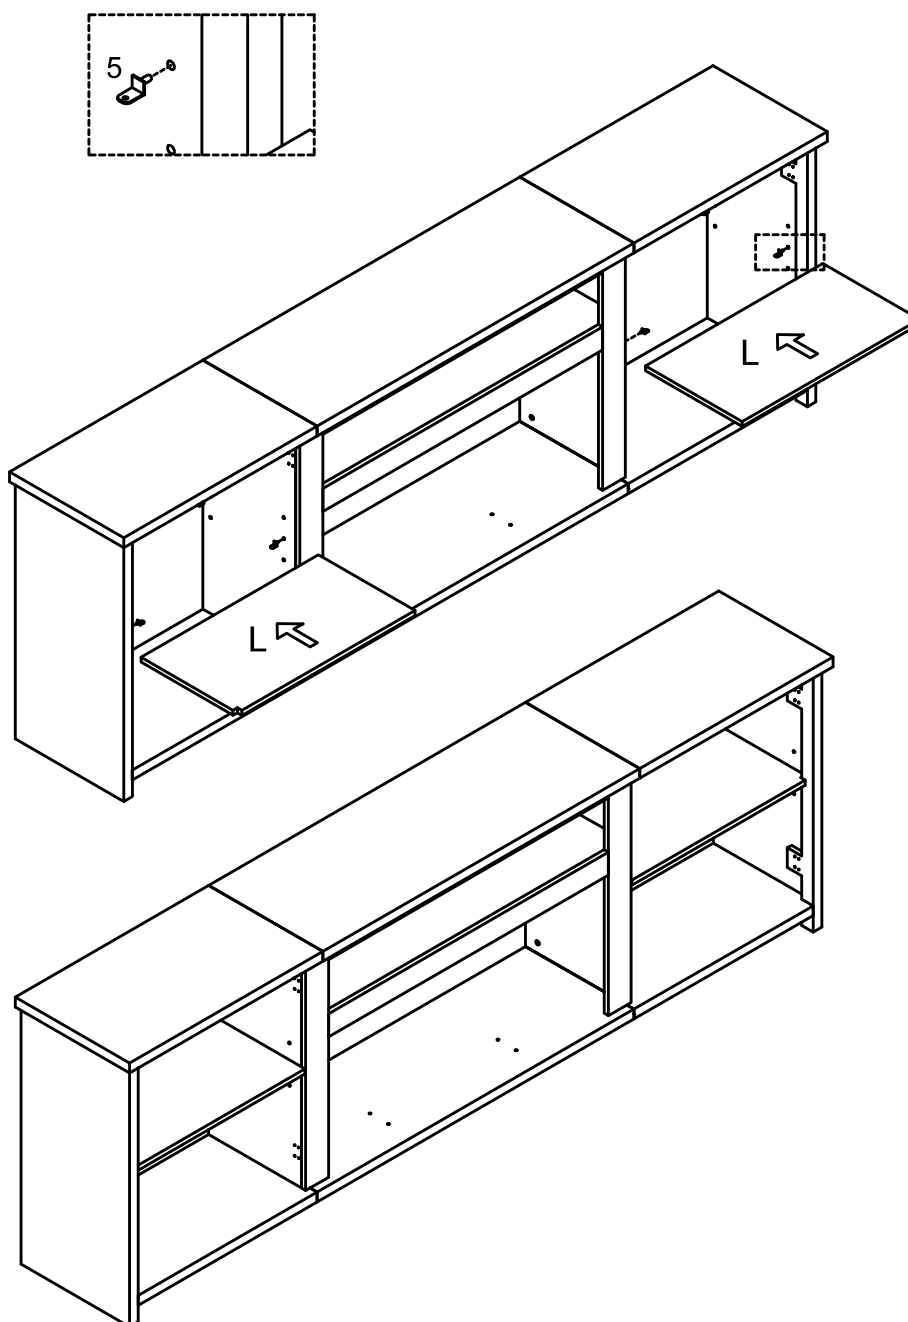
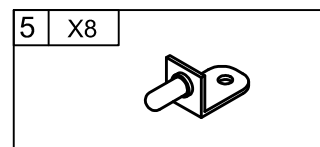


PACKAGE STEPS

  13.

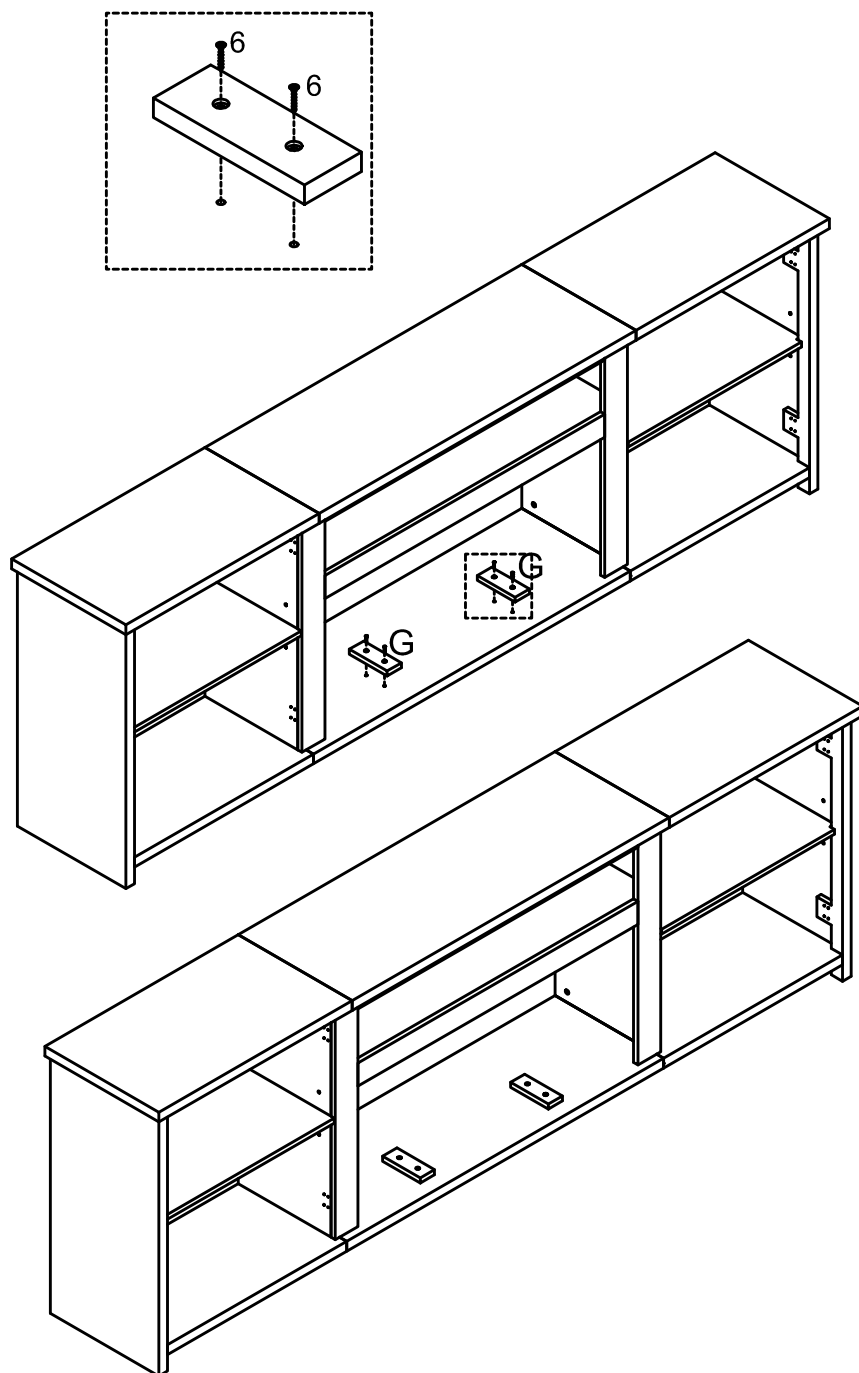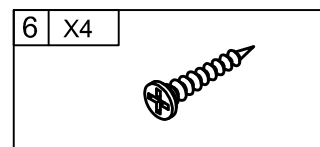


  14.

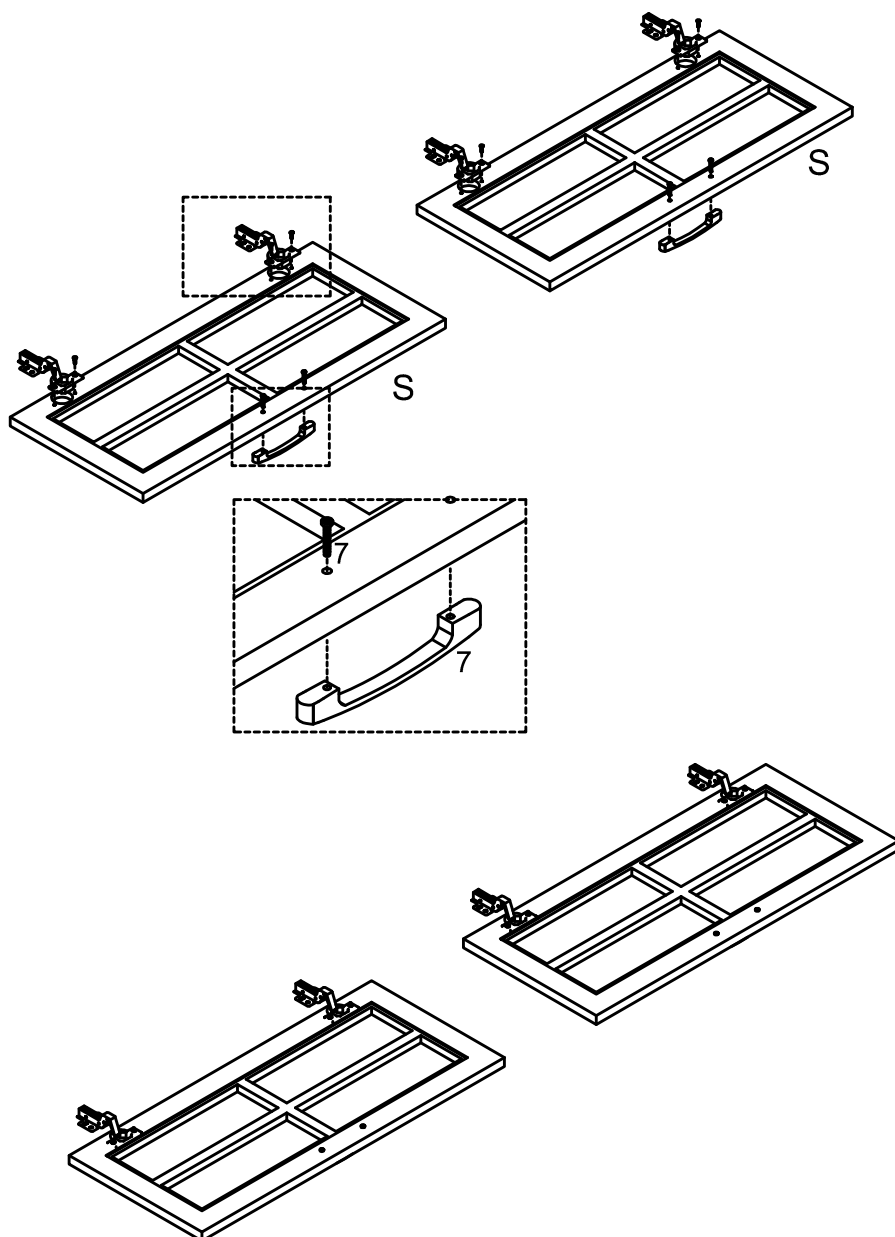
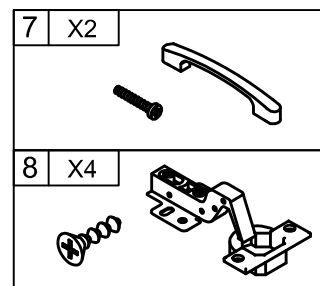


PACKAGE STEPS


 
15.

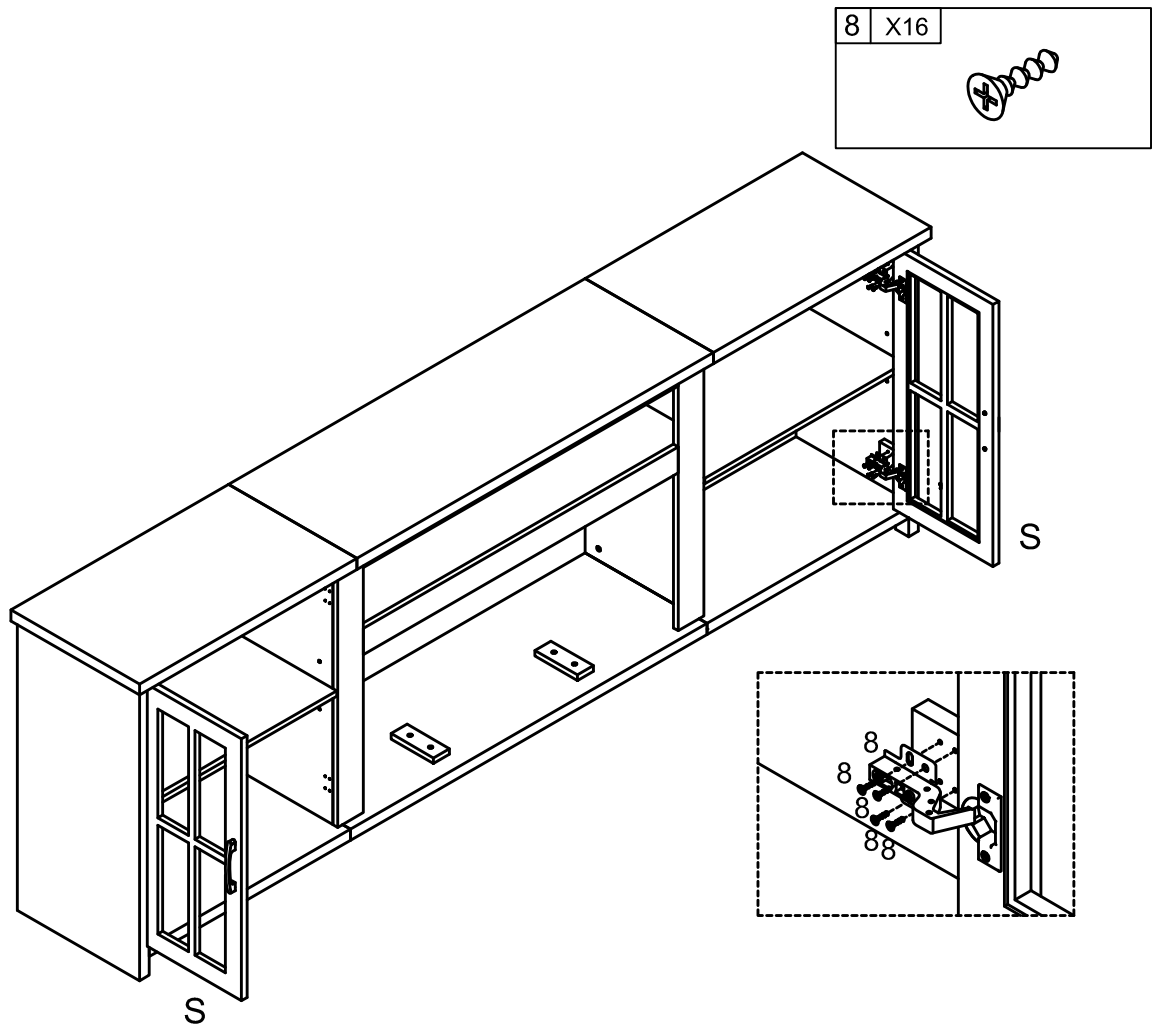

Hinges Adjustment Tips

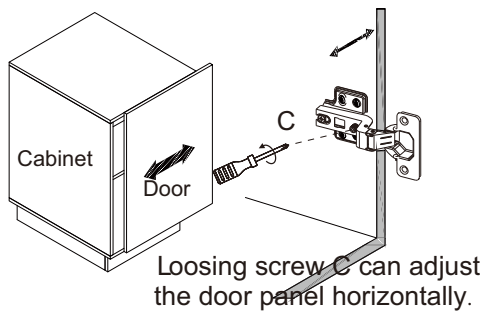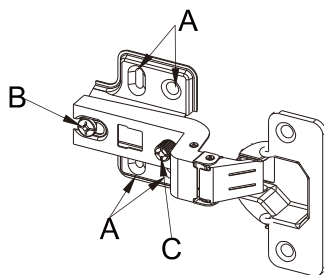  


  Loosening screw A can adjust the door panel vertically.

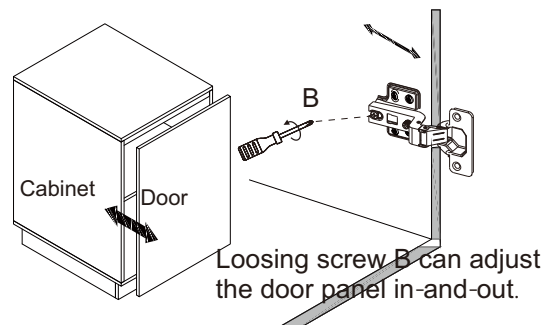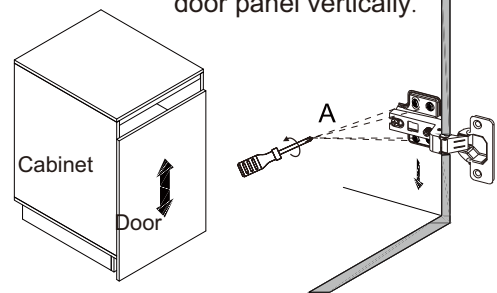




PACKAGE STEPS

 16.




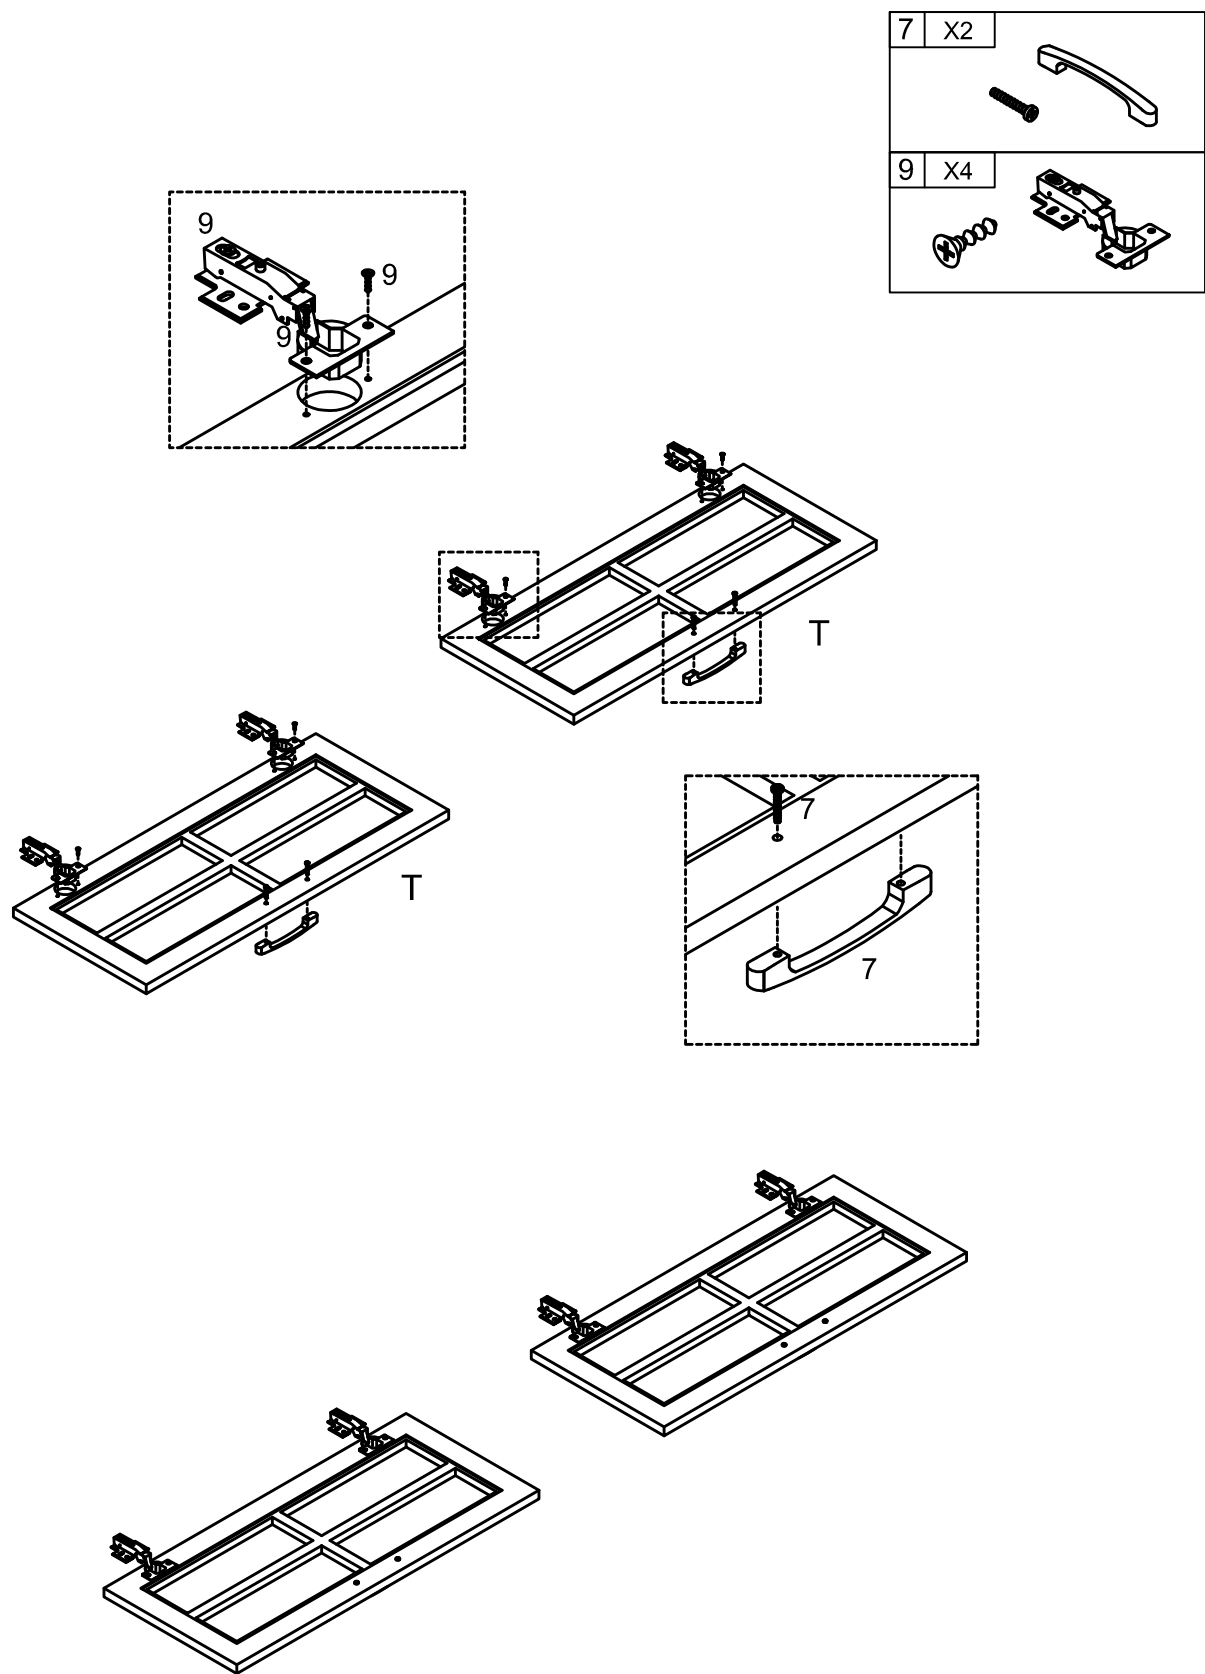


PACKAGE STEPS

   17.

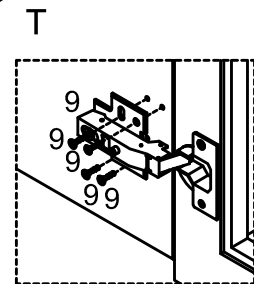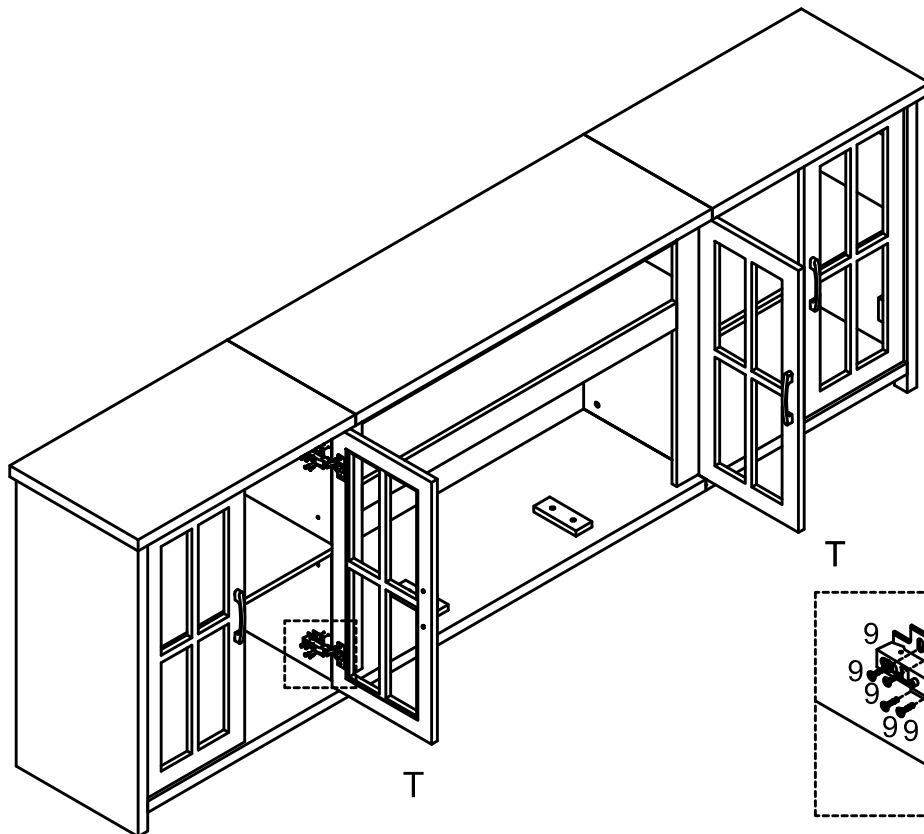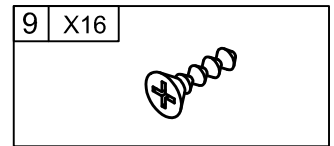


Hinges Adjustment Tips

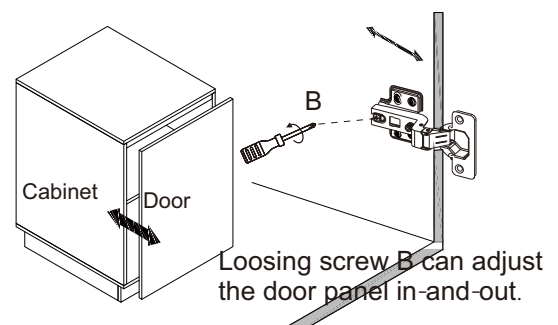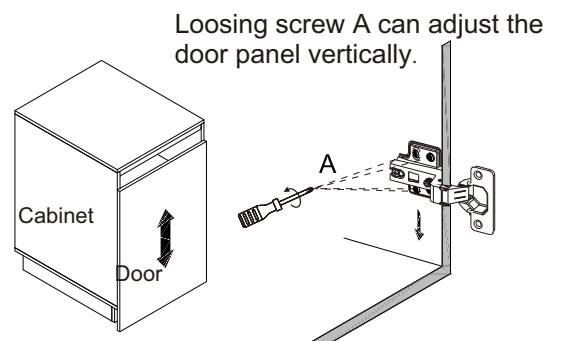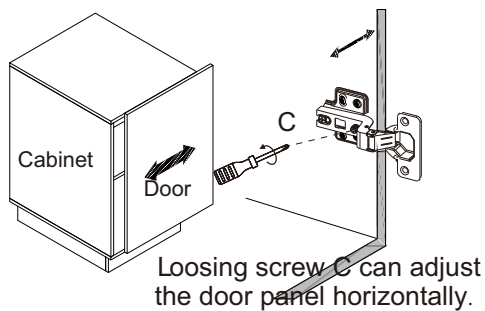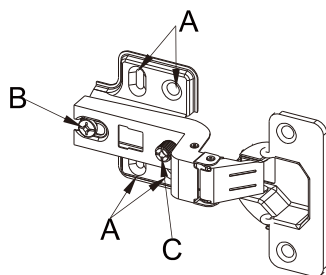    

PACKAGE STEPS

 18.

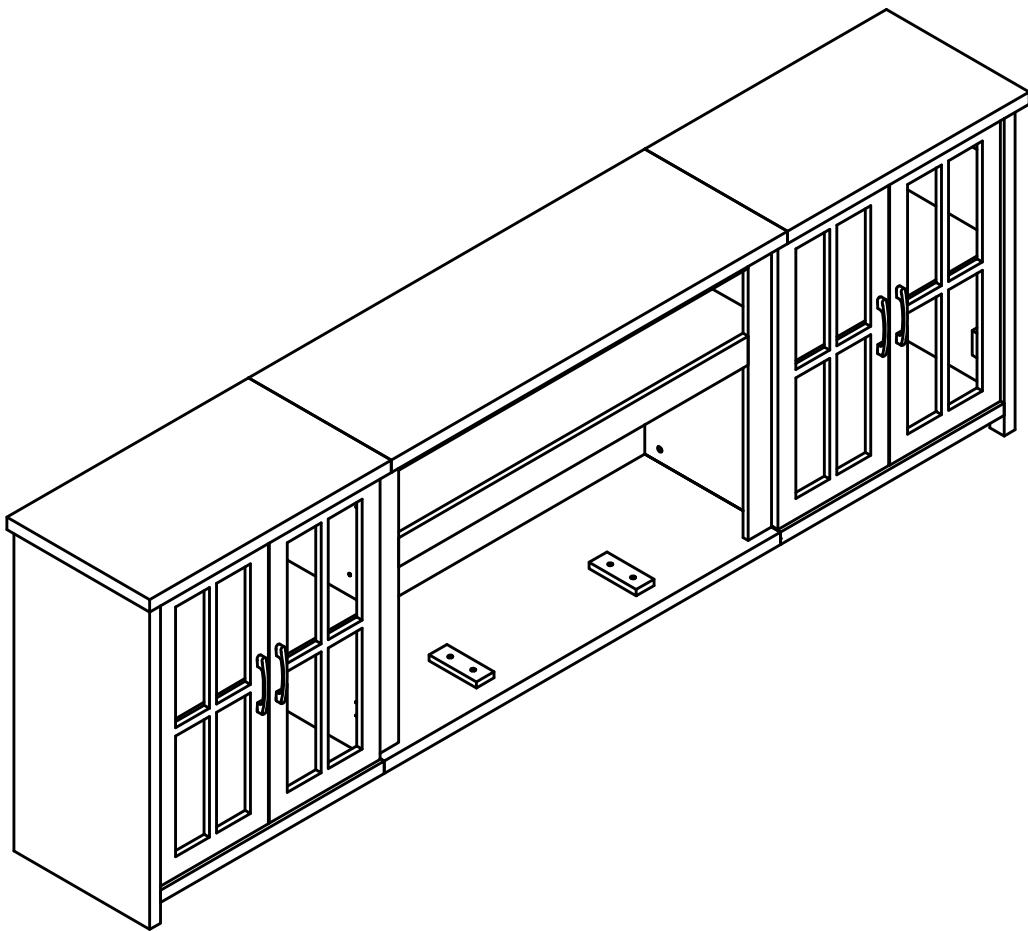

WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.
- Do not defeat or remove the drawer interlock system.

This is a permanent label.

Do not remove!

ATTENTION



Des enfants sont morts du basculement des meubles. Pour réduire le risque de basculement des meubles:

- TOUJOURS installer la retenue de basculement fournie.
- NE JAMAIS mettre de téléviseur sur ce produit.
- NE JAMAIS permettre aux enfants de se tenir debout, de grimper ou de s'accrocher à des tiroirs, des portes ou des étagères.
- N'ouvrez JAMAIS plus d'un tiroir à la fois.
- Placez les objets les plus lourds dans les tiroirs les plus bas.
- Ne désactivez pas et ne retirez pas le système de verrouillage du tiroir.

Ceci est une étiquette permanente.

Ne pas enlever!

WARNUNG



Kinder sind an einem Möbelkipp gestorben. So verringern Sie das Risiko eines Umkippens von Möbeln:

 
- Installieren Sie IMMER die mitgelieferte Kipprückhaltevorrichtung.
- Stellen Sie NIEMALS einen Fernseher an dieses Produkt.
- Lassen Sie Kinder NIEMALS an Schubladen, Türen oder Regalen stehen klettern oder hängen.
- Öffnen Sie NIEMALS mehr als eine Schublade gleichzeitig.
- Legen Sie schwerste Gegenstände in die untersten Schubladen.
- Besiegen oder entfernen Sie das Schubladenverriegelungssystem nicht.

Dies ist ein dauerhaftes Etikett.

Nicht entfernen!



WYXRHM073BK

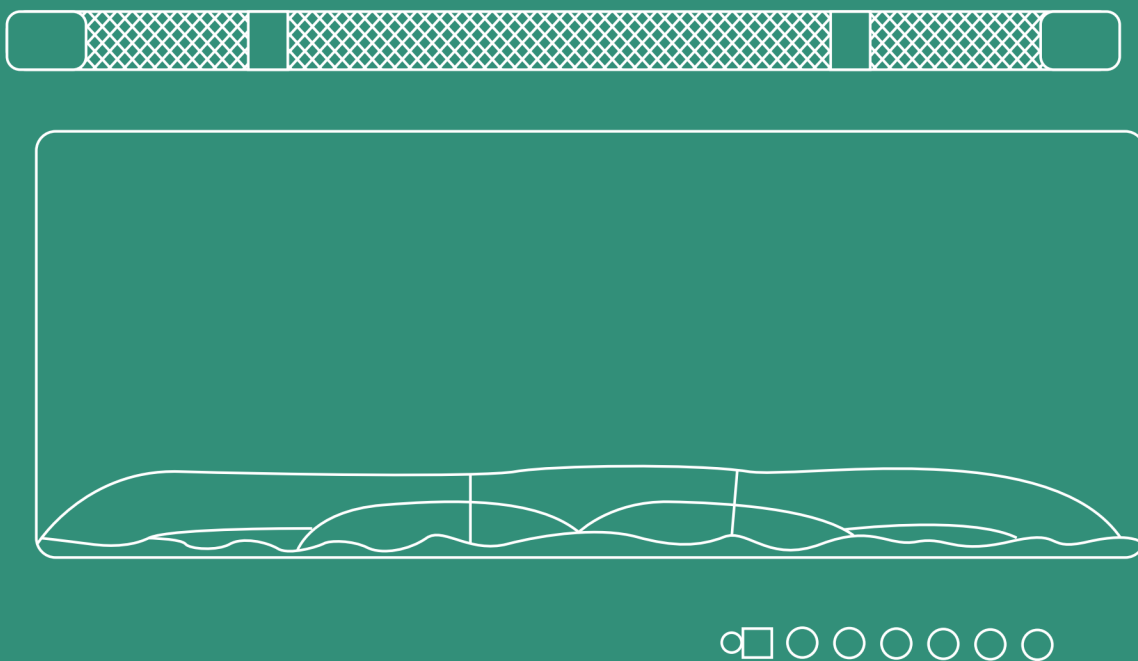

Electric Fireplace

Installation Instructions



IMPORTANT SAFETY INFORMATION!

i Remember that the assembly might take (1) hours and requires (2) people.

REMEMBER

EROMMY isn't responsible for replacing parts lost or damaged during assembly. If you have issues, Email: **service@erommy.com** or Tel: **8886766299** instead of returning the unit.

CONSUMER SAFETY INFORMATION

- Read this manual before installing and operating this appliance.
- Failure to follow these instructions may result in electric shock, fire property, or personal injury.
- Do not store or use gasoline or other flammable liquids in vicinity of this appliance.

WARNING

- Read all instructions before using this heater!
- This heater is hot when in use. To avoid burns, DO NOT let bare skin touch hot surfaces. If provided, use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9m) from the front of the heater, and keep them away from the sides and rear.
- Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
- DO NOT operate any heater with a damaged cord or plug or after the heater malfunctions has been dropped or damaged in any manner, Discard heater, or return to authorized service facility for examination and/or repair.
- DO NOT run power cord under carpeting. DO NOT cover power cord with throw rugs runners, or similar coverings. DO NOT route power cord under furniture or appliances. Arrange power cord away from traffic area, and where it will not be tripped over.

BRAND STORY

With the ideology of “closer to life” in our mind, EROMMY is committed to bring you the most refined and trustworthy products that fits your need. Our vision is to empower every customer to stay close to nature and ultimately transform their lifestyles.

EROMMY, Closer to Life!



IMPORTANT SAFETY INFORMATION!

WARNING

- Connect to properly grounded outlets ONLY.
- DO NOT insert or allow foreign objects to enter any ventilation or exhaust openings, as this may cause electric shock or fire, or damage the heater.
- To prevent a possible fire, DO NOT block air intakes or exhaust in any manner. Doing so could cause a fire. DO NOT use on soft surfaces, like a bed, where openings may become blocked.
- A heater has hot and arcing or sparking parts inside. Do NOT use it in areas where gasoline, paint, or flammable liquids are used or stored.
- Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- ALWAYS plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
- DO NOT place the heater near a bed because objects such as pillows or blankets can fall off the bed and be ignited by the heater.
- NEVER use this heater in bathrooms, laundry rooms, or any other location where the heater could fall into a bathtub or pool, become damp or come in contact with water.
- AVOID FIRE! Regularly inspect all air vents to make sure they are free from dust, lint, or other Blockage. Unplug the unit and clean with a vacuum ONLY. DO NOT rinse or get wet.
- ALWAYS mount to wall bracket before use. DO NOT set on the floor, or other surface, to use.
- NEVER use a wall mount bracket from another manufacturer.
- This product is not intended to be a primary heat source. It is for supplemental heat only.
- INDOOR use only! NEVER use this heater outdoors! Doing so may result in electric shock!
- Risk of electric shock! DO NOT OPEN! No user-serviceable parts inside!
- ALWAYS turn this heater off before unplugging it from the outlet.
- ALWAYS disconnect this unit from the power supply before performing any assembly or cleaning, or before relocating the electric fireplace.
- NEVER leave this heater unattended. ALWAYS unplug this heater when not in use.
- ALWAYS store this heater in a dry location. NEVER use the fireplace if it has become wet.
- NEVER plug this heater into an outlet that is old, cracked, or has any loose wires or connections. Plugging this heater into a faulty outlet could result in electric arcing within the outlet that could cause the outlet to overheat or catch fire.
- ALWAYS check your heater cord and plug connections with each use!
 1. MAKE SURE the plug fits tight in the outlet! Faulty wall outlet connections or loose plugs can cause the outlet to overheat.
 2. Heaters draw more current than small appliances. Overheating may occur even if it has not occurred with the use of other appliances.
 3. During use check frequently to see if the plug outlet or face plate is HOT!

IMPORTANT SAFETY INFORMATION!

 
4. If the outlet or face plate is HOT, discontinue use immediately and have a qualified electrician inspect and/or replace the faulty outlets.

- The power cord supplied with the heater has a plug with two flat blades (live and neutral) and one round pin (ground). If a 3-slot receptacle is not available, an adapter MUST be used. The adapter MUST be properly grounded to the outlet box (see figure at right). (Note: Adapter NOT INCLUDED.)

- **SAVE THE INSTRUCTIONS**

PREPARATION


- This product includes a GLASS panel! Always use extreme caution when handling glass. Failure to do so could result in personal injury or property damage.

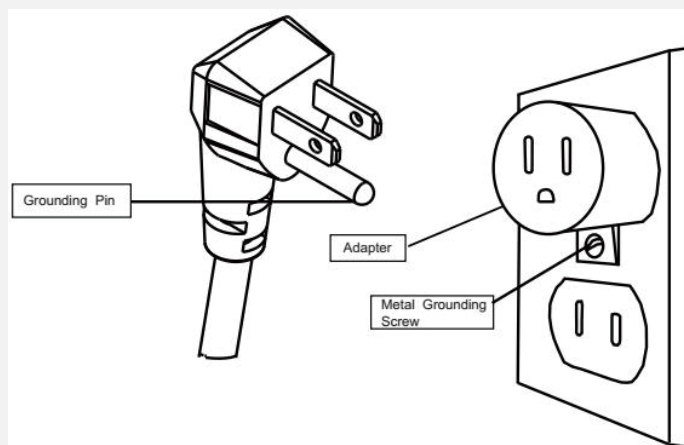

ACCESSORIES LIST


Serial Number & Figure Style

 A

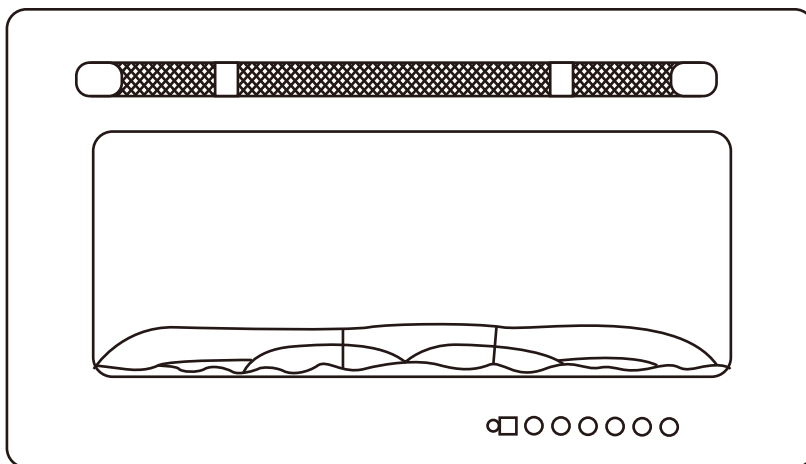

Fireplace x 1

 B

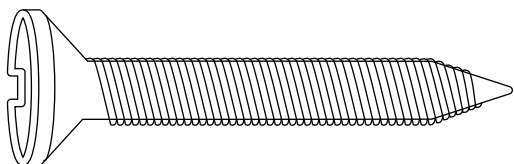


Wood Screws x 4

D




Log Set x 1

 E

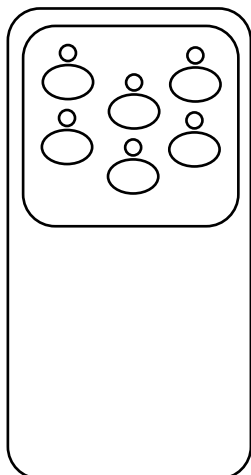

Remote Control x 1

 F

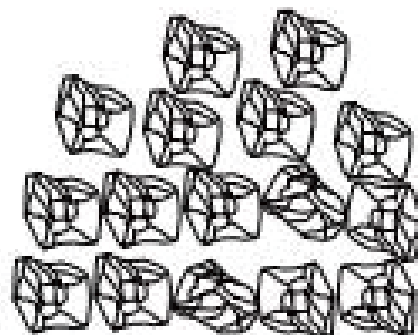

Decorative Crystals x 1

1. Take off the two screws in both sides of fireplace. Figure (A)

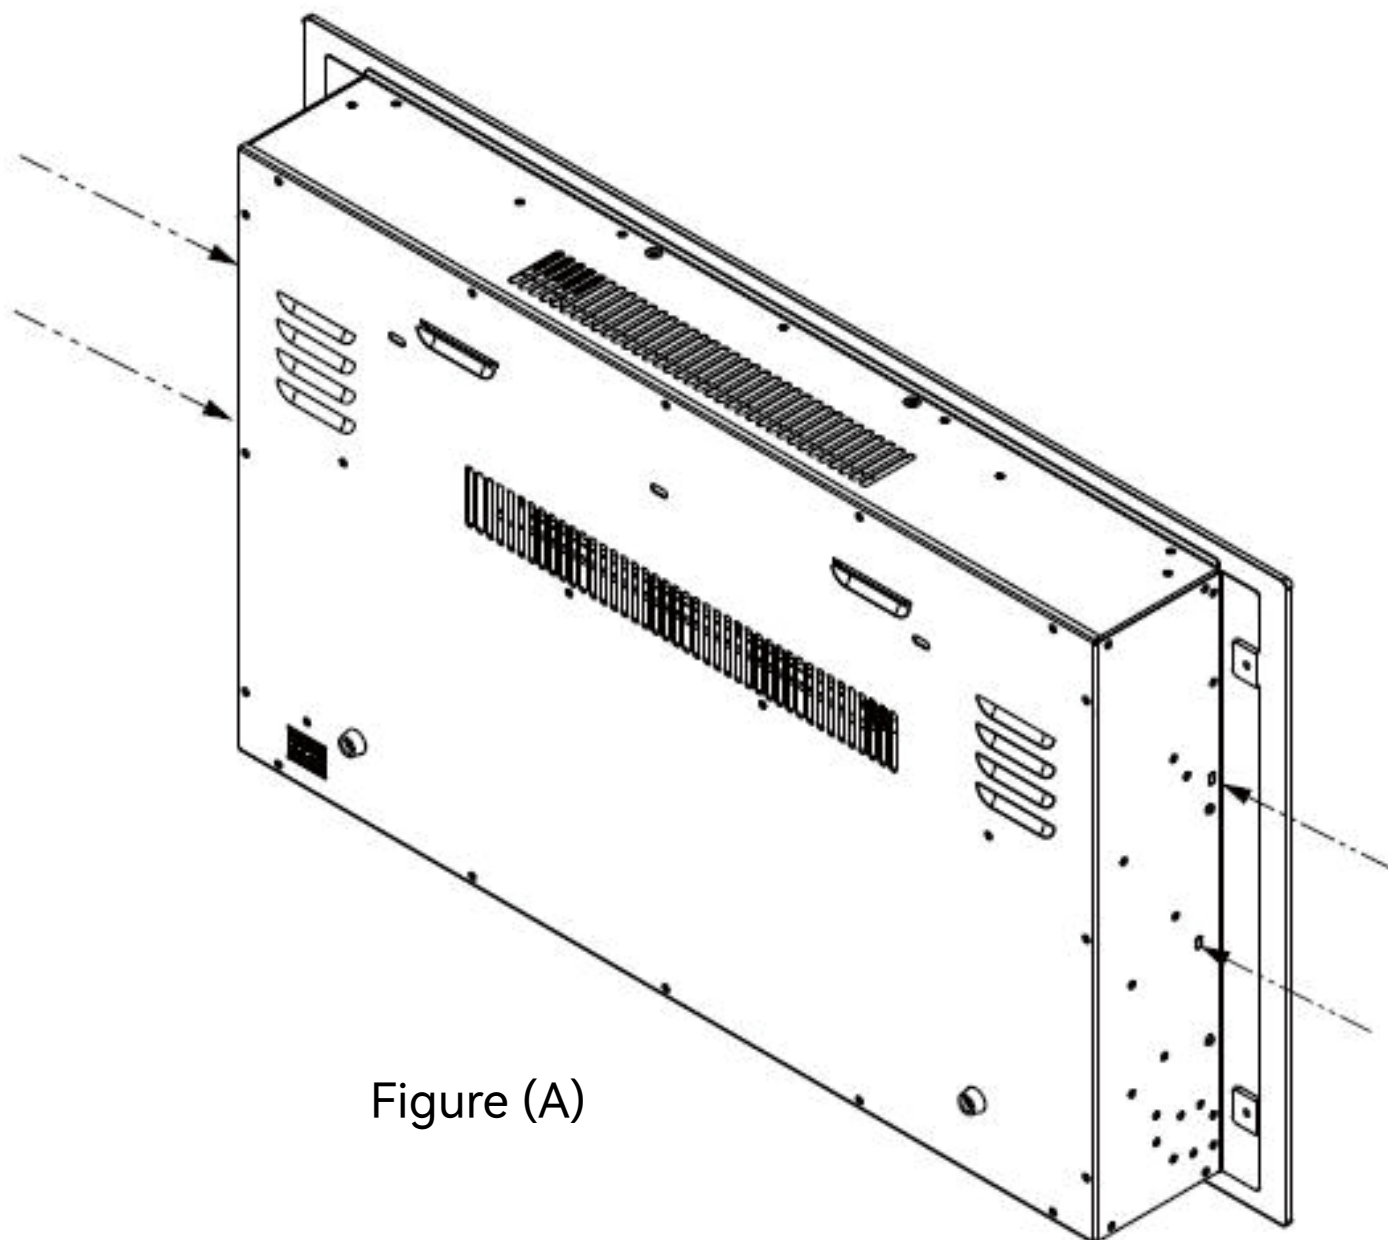 


Figure (A)

2. Have two person to take the glass panel out of the fireplace box. Place it to a soft and clean place. Figure (B), takes two pcs of foam out of fireplace(C).

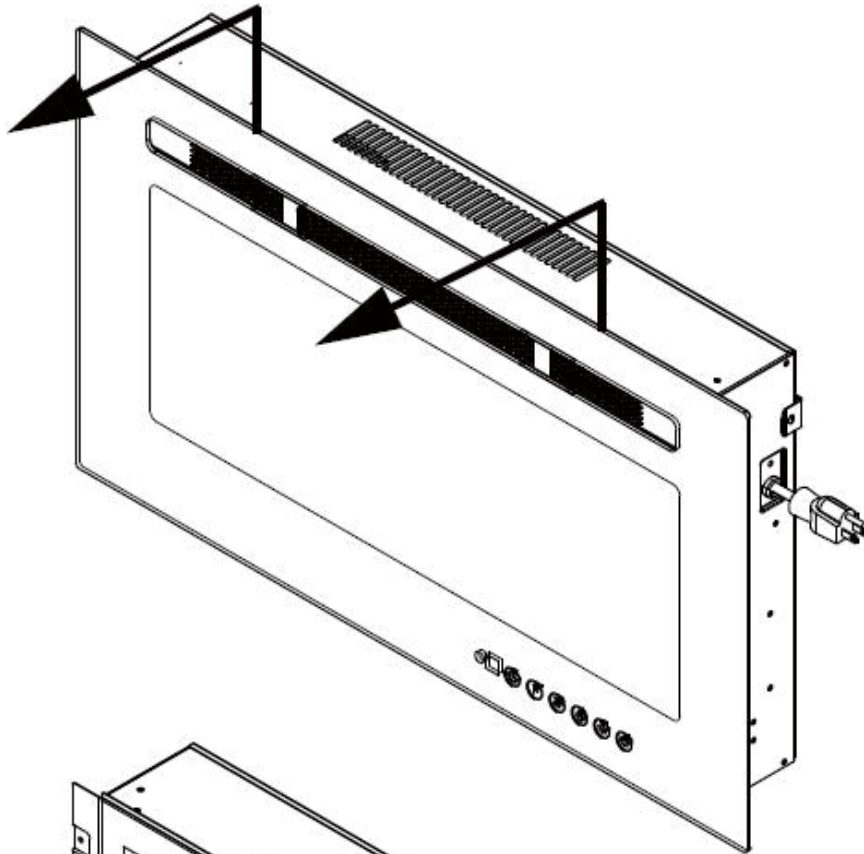 


Figure (B)

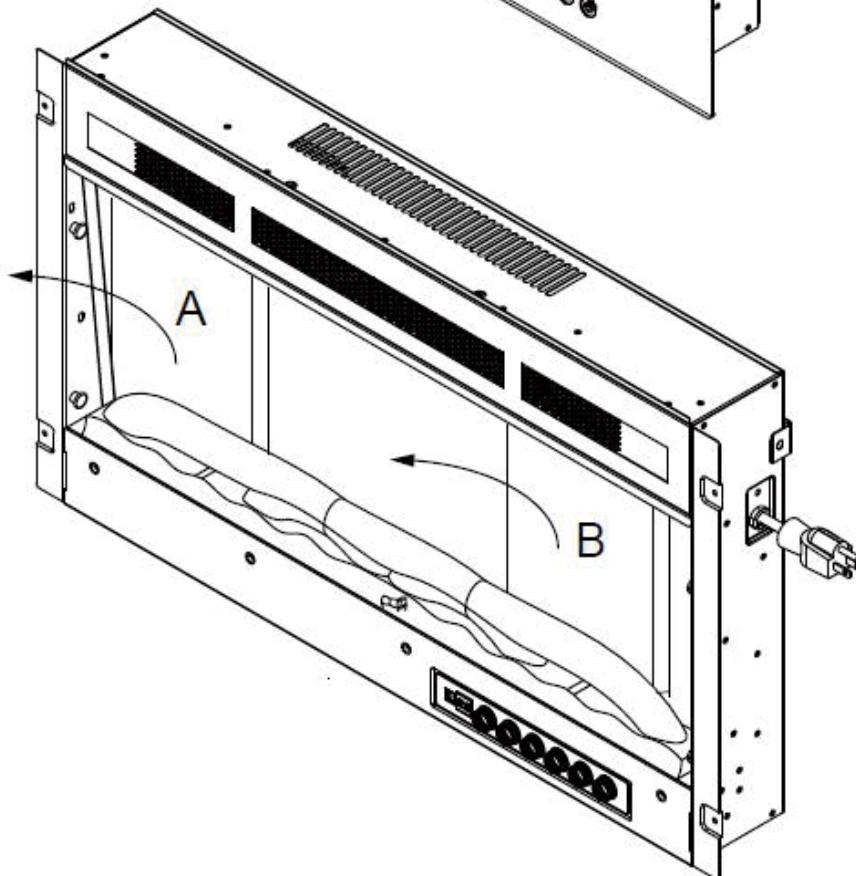 


Figure (C)

3. Have two person to move the fireplace box to the wall hole or fireplace mantel (D).

If the appliance is fully recessed into the wall:

- Use the 4 screws (provided) to lock the appliance into wall with the existing two side flanges, see Figure(E).
- Install the media and re-install the glass front.

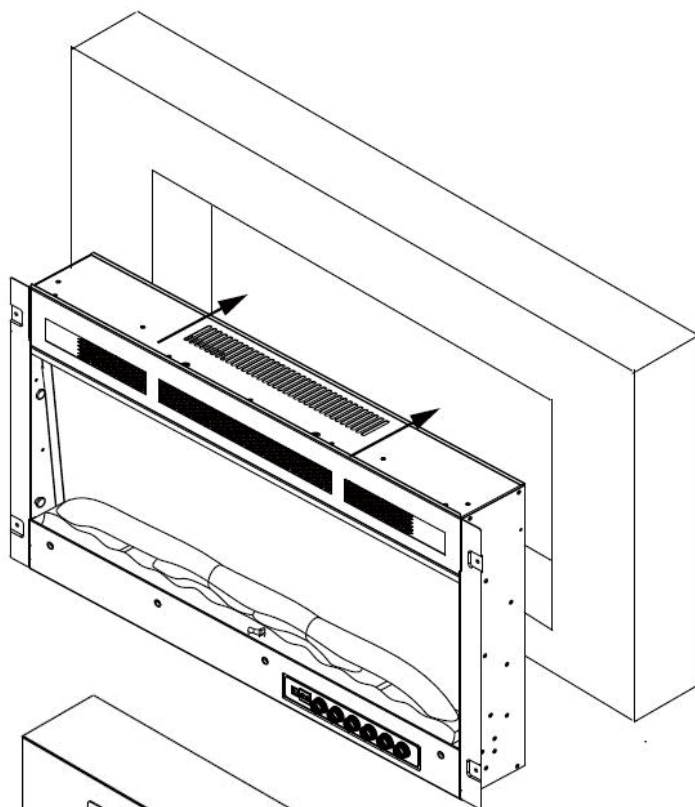 


Figure (D)

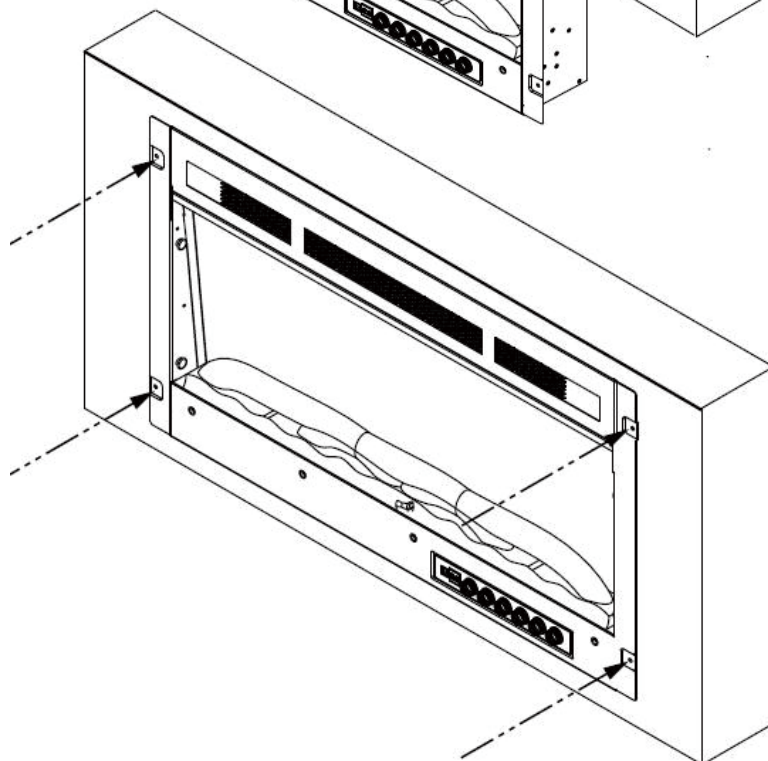 


Figure (E)

4. Place the front panel lock the appliance. See Figure (F).

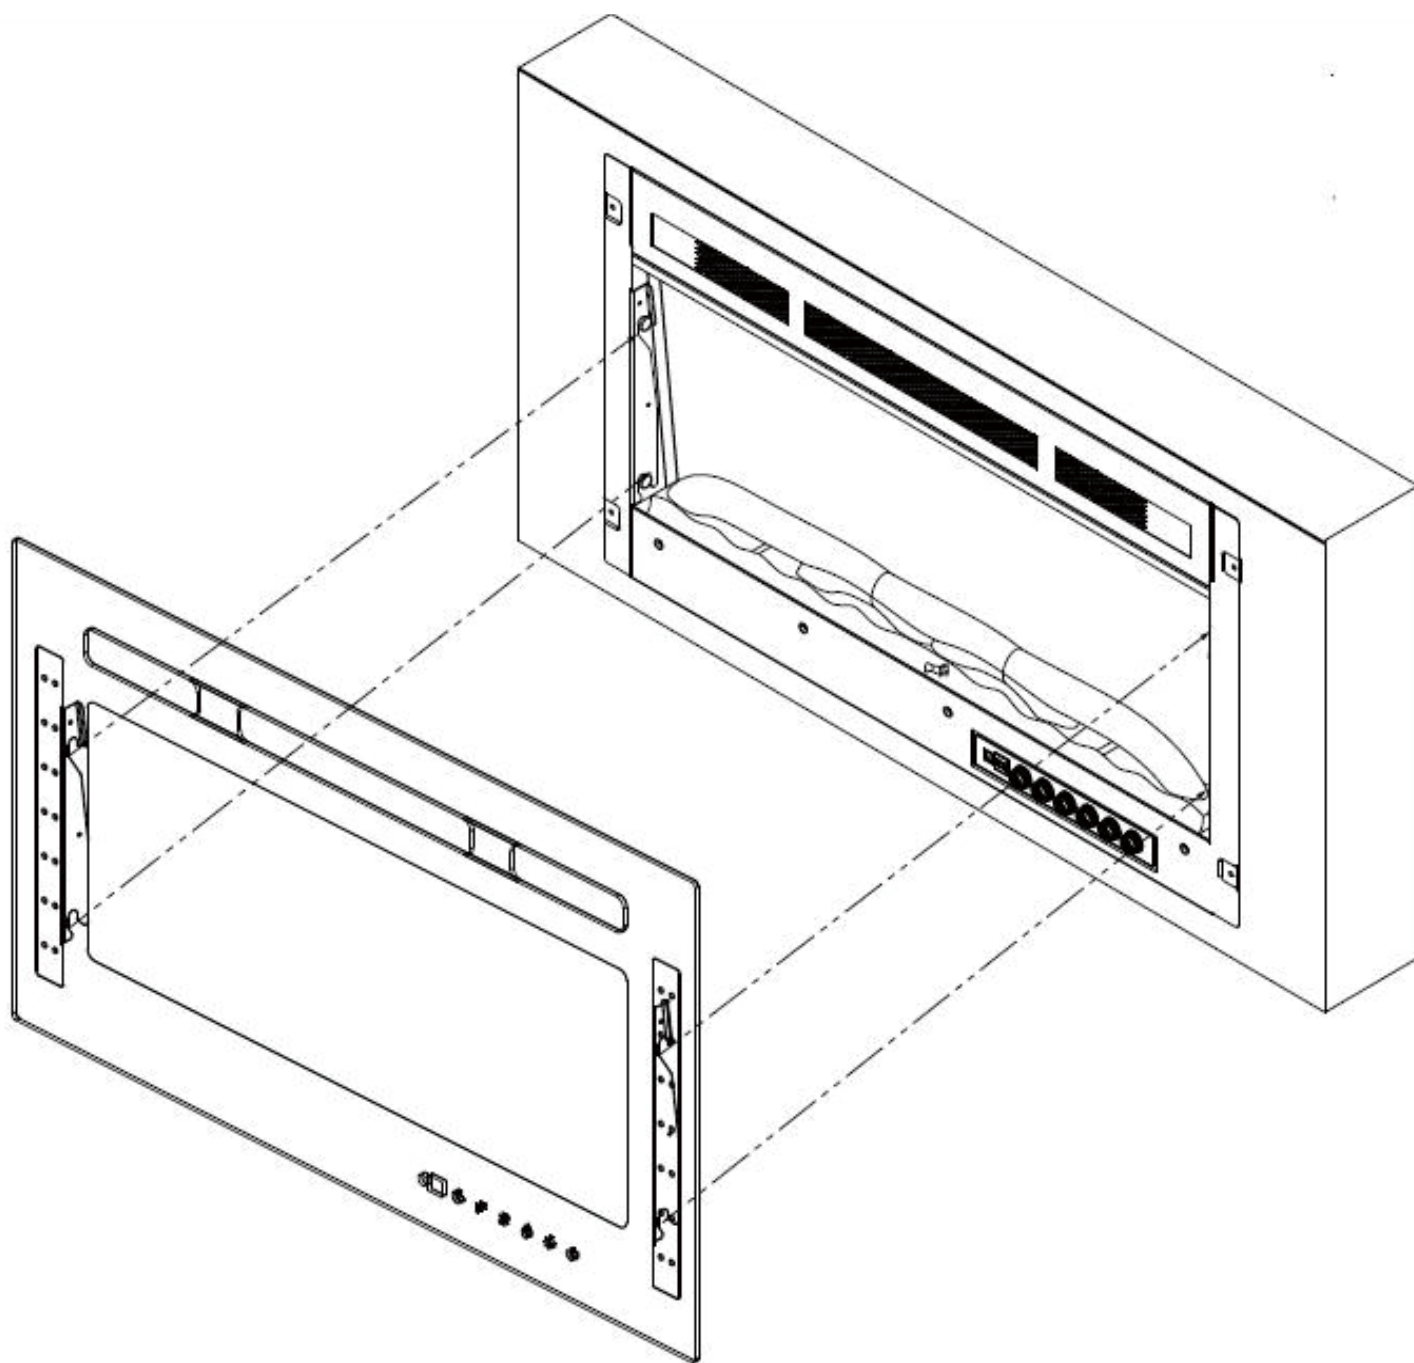 


Figure (F)

5. Fireplace will be like this after installation Figure (G).

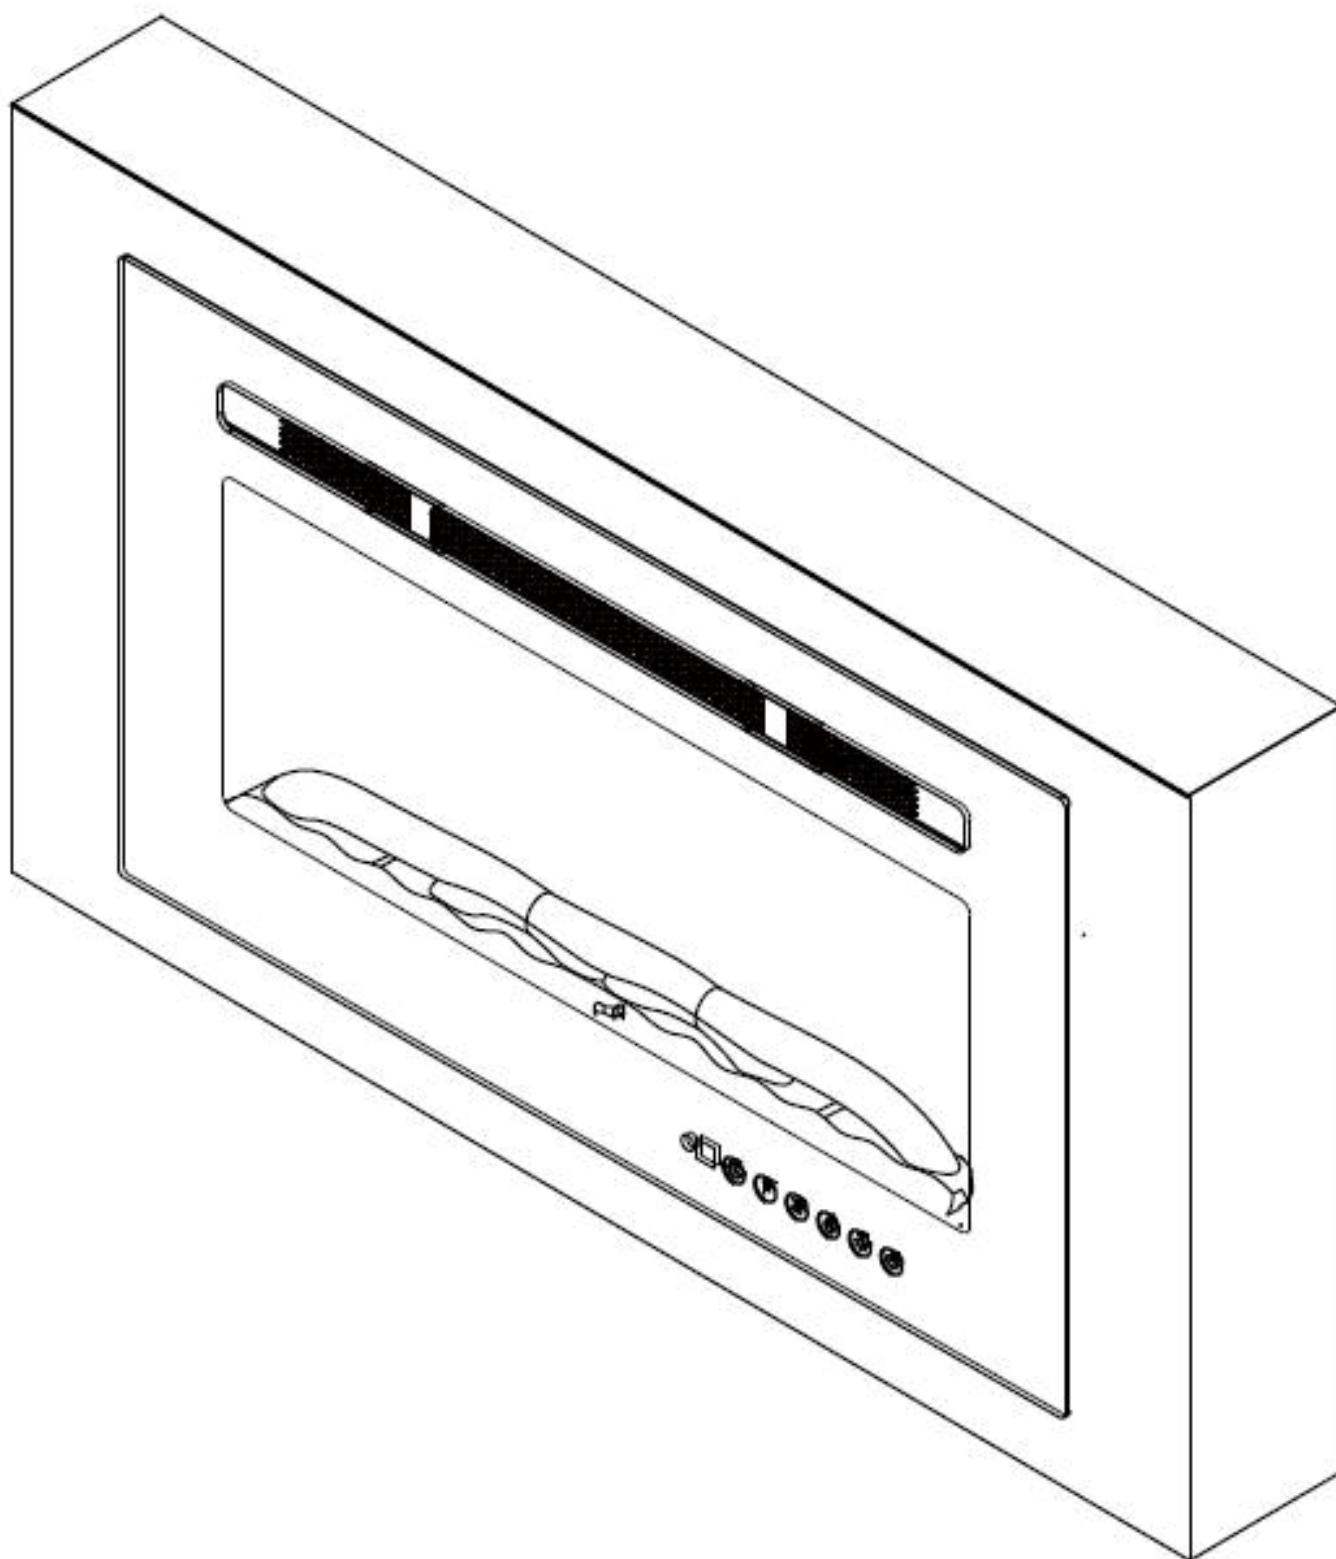 


Figure (G)

Note: Please make the installation according to the embers which you bought or selected.

A. Glass front must be removed and the appliance must be mounted in its final location before the logset/crystalembers are installed.

B. If your fireplace come with lotset, remove the logset from the package, put it to the fireplace designed place (Figure 1).

C. If your fireplace come with CLEAN CRYSTAL, MEDIA: crystal may have a fine oil residue that needs to be cleaned prior to installation. Clean them with mild dish soap, drain, rinse thoroughly and dry before placing into the tray.

D. Then carefully place crystal embers into the bottom tray on the front of the appliance as illustrated. Apply an even layer from side to side. (Figure 2).

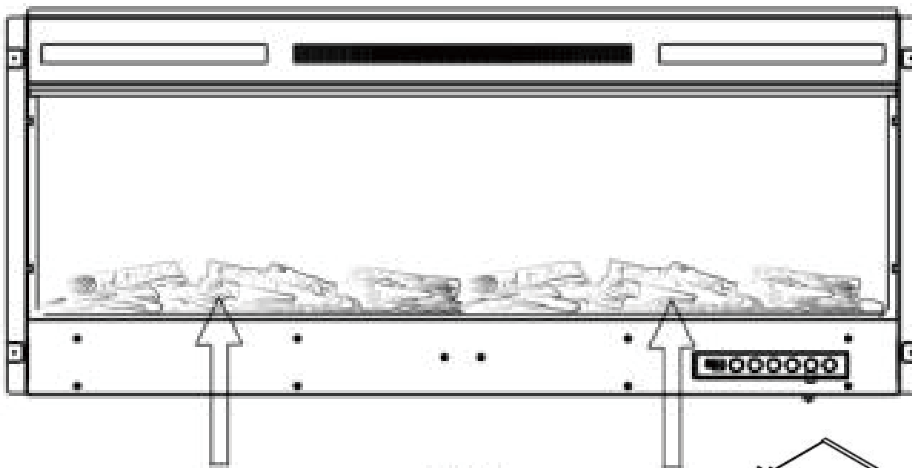 


Figure (1)

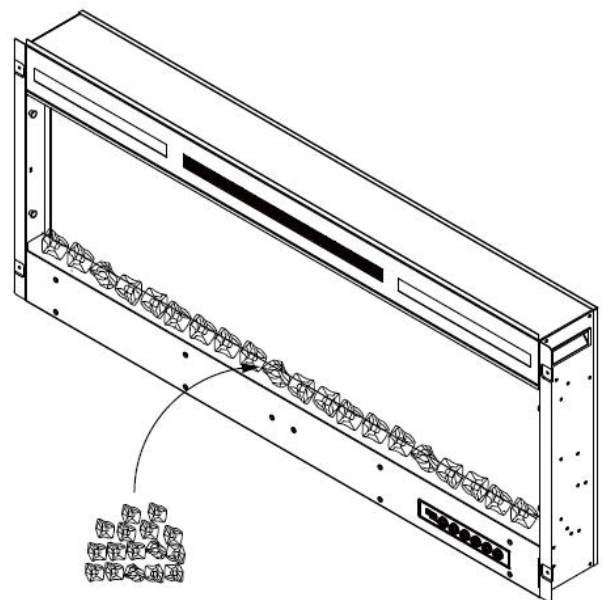 


Figure (2)

WARNING

Read and understand this entire owner's manual, including all safety information, before plugging in or using this product. Failure to do so could result in electric shock, fire, serious injury, or death.

Power

Plug the power cord into a 110-120V Volt 12 Amp grounded outlet (See IMPORTANT SAFETY INFORMATION on Pages 2 and 3). Make sure the outlet is in good condition and that the plug is not loose. NEVER exceed the maximum amperage for the circuit. DO NOT plug other appliances into the same circuit.

Methods of Operation

This electric fireplace can be operated by the TOUCH PANEL, located on the BOTTOM right side of the fireplace, or by the battery-powered REMOTE CONTROL. The operation and functions of the two methods are the same.

Before operating, please review the IMPORTANT SAFETY INFORMATION on Pages 2 and 3, and heed all warnings.



TOUCH PANEL/REMOTE CONTROL OPERATION

BUTTON	FUNCTION	ACTION & INDICATION
 POWER	ON: Enables control panel functions remote and control. Turn on flame effect. OFF: Disables control panel functions and remote control. Turn off flame effect.	1.Press once. Indicator light turns on. All functions enabled. 2.Press again. Indicator light turns off. Power turns on. All functions will off.
 COLOR	EMBER COLOR button: Makes the ember bed color effect changing. NOTE: Keep pressing for 3 seconds to make ember bed effect dimmer and brighter..	1. Press once. Ember bed color effect gets changing.(12 color) 2. Press again until desired setting is reached. 3. When set the color to C0, the ember bed color will automatic changing.
 FLAME	FLAME button:Makes the flame color effect changing. NOTE:Keep pressing for 3 seconds to make flame effect dimmer and brighter.	1. Press once. Flame color effect gets changing. 2. Press again. Until desired setting is reached. 3. When set the color to FO, the flame color will automatic changing.
 HEATER	HEATER button:Turn heater on and off. NOTE: To prevent overheating, the heater fan will blow out cool air for 30 seconds after the heater turn off.	1. Press once. Indicator lights up. Low heater turns on and blows warm air. 2.Press again. Indicator lights up. High heaters turns on and blows hot air. 3. Press again. Heaters turn off . The display show "00". The fan blows cool air for 30 seconds to allow heater to cool down, then turns off.
 TEMP	TEMPERATURE button: Control temperature settings to choose temperature as desired. Setting range from 62°F to 82°F.	1.Press once. Indicator light turn on. Temperature is set to 62°F. 2. Press again until desired setting is reached. LED display show setting.
 TIMER	TIMER button: Control timer settings to turn off fireplace at selected time. Settings range from 30mins, 1hours, to 10 hours.	1. Press once. Indicator light turn on. Temperature is set to hours 2. Press again until desired setting is reached. LED display show setting.

TOUCH PANEL/REMOTE CONTROL OPERATION

NOTICE

When the heater is first turned on, a slight odor may be odor may be present. This is normal and should not occur again unless the heater is not used for a long period of time.

NOTICE

To improve operation, aim the remote control at the front of the fireplace. DO NOT press the buttons too quickly. Give the unit time to respond to each command.

Temperature Limiting Control

This heater is equipped with a Temperature Limiting Control. Should the heater reach an unsafe temperature, the heater will automatically turn OFF. To reset:

1. Unplug the power cord from the outlet.
2. Turn the ON/OFF switch on the CONTROL PANEL to OFF. Wait 5 minutes.
3. Inspect the fireplace to make sure no vents are blocked, or clogged with dust or lint. If they are, use a vacuum to clean the vent areas.
4. With the POWER switch in the OFF position, plug the power cord back into the outlet.
5. If the problem continues, have your outlet and wiring inspected by a professional.

Remote Control Battery Information

- With 2x AAA batteries.



NEVER dispose of batteries in fire. Failure to observe this precaution may result in an explosion.
Dispose of batteries at your local hazardous material processing center.

CARE AND MAINTENANCE

Cleaning



ALWAYS turn the heater OFF and unplug the power cord from the outlet before cleaning, performing maintenance, or moving this fireplace. Failure to do so could result in electric shock, fire, or personal injury.



NEVER immerse in water or spray with water. Doing so could result in electric shock, fire, or personal injury.

Metal

- Buff using a soft cloth, slightly dampened with a citrus oil-based product.
- DO NOT use brass polish or household cleaners as these products will damage the metal trim.

Glass

- Use a good quality glass cleaner and dry thoroughly with a paper towel or lint-free cloth.
- NEVER use abrasive cleansers, liquid sprays, or any cleaner that could scratch the surface.

Vents

- Use a vacuum or duster to remove dust and dirt from the heater and vent areas.
- Clean the exterior of the fireplace with a slightly damp cloth or duster.

Maintenance



Risk of electric shock! DO NOT OPEN! No user-serviceable parts inside!



ALWAYS turn the heater OFF and unplug the power cord from the outlet before cleaning, performing maintenance, or moving this fireplace. Failure to do so could result in electric shock, fire, or personal injury.

CARE AND MAINTENANCE

Electrical and Moving Parts

- The fan motors are lubricated at the factory and will not require lubrication.
- Electrical components are integrated in the fireplace and are not serviceable by the consumer.

Storage

- Store heater in a clean dry place when not in use.



WARNING! No other servicing should be performed by the consumer.
Do not attempt to service the unit yourself.

TROUBLESHOOTING



WARNING

DISCONNECTED THE APPLIANCE COMPLETELY AND LET COOL PRIOR TO ANY SERVICE. ONLY A QUALIFIED SERVICE PERSON SHOULD SERVICE AND REPAIR THIS ELECTRIC APPLIANCE.

Problem	Possible Cause	Solution
1. Fireplace turns off and will not turn on.	1. Fireplace has overheated and safety device has caused thermal switch to disconnect or home circuit breaker has opened.	1. Reset switch by turning main power off and waiting turning it back on or breaker circuit breaker.
2. Flame is not moving.	1. Loose wiring. 2. Flame motor defective. 3. Flame rod out of place.	1. Inspect wiring for loose connections. 2. Call a qualified service technician to replace flame motor. 3. "Flame Rod" out of place due to transit/handling of the product. This issue can be corrected as simple as removing the glass, flipping the fireplace upside and down, removing a set of screws that are holding the bottom frame plate and placing the flame rod back into place.
3. Flame is not visible.	1. Wiring is loose.	1. Disconnect from power source and inspect wiring for loose connections and repair or replace if necessary. 2. Push the flame button to high.
4. Log set and/or is not glowing.	1. Wiring is loose. 2. Ember is off mode.	1. Disconnect from power source and inspect wiring for loose connections and repair or replace if necessary.
5. Remote control does not work.	1. Low batteries. 2. Not aiming control correctly. 3. Defective remote control and /or sensor.	1. Replace batteries in remote control. 2. Aim control at sensor located directly behind glass screen in center of unit just above logs. 3. Replace remote control and/or sensor.

