


Assembly Guide


XZOT104

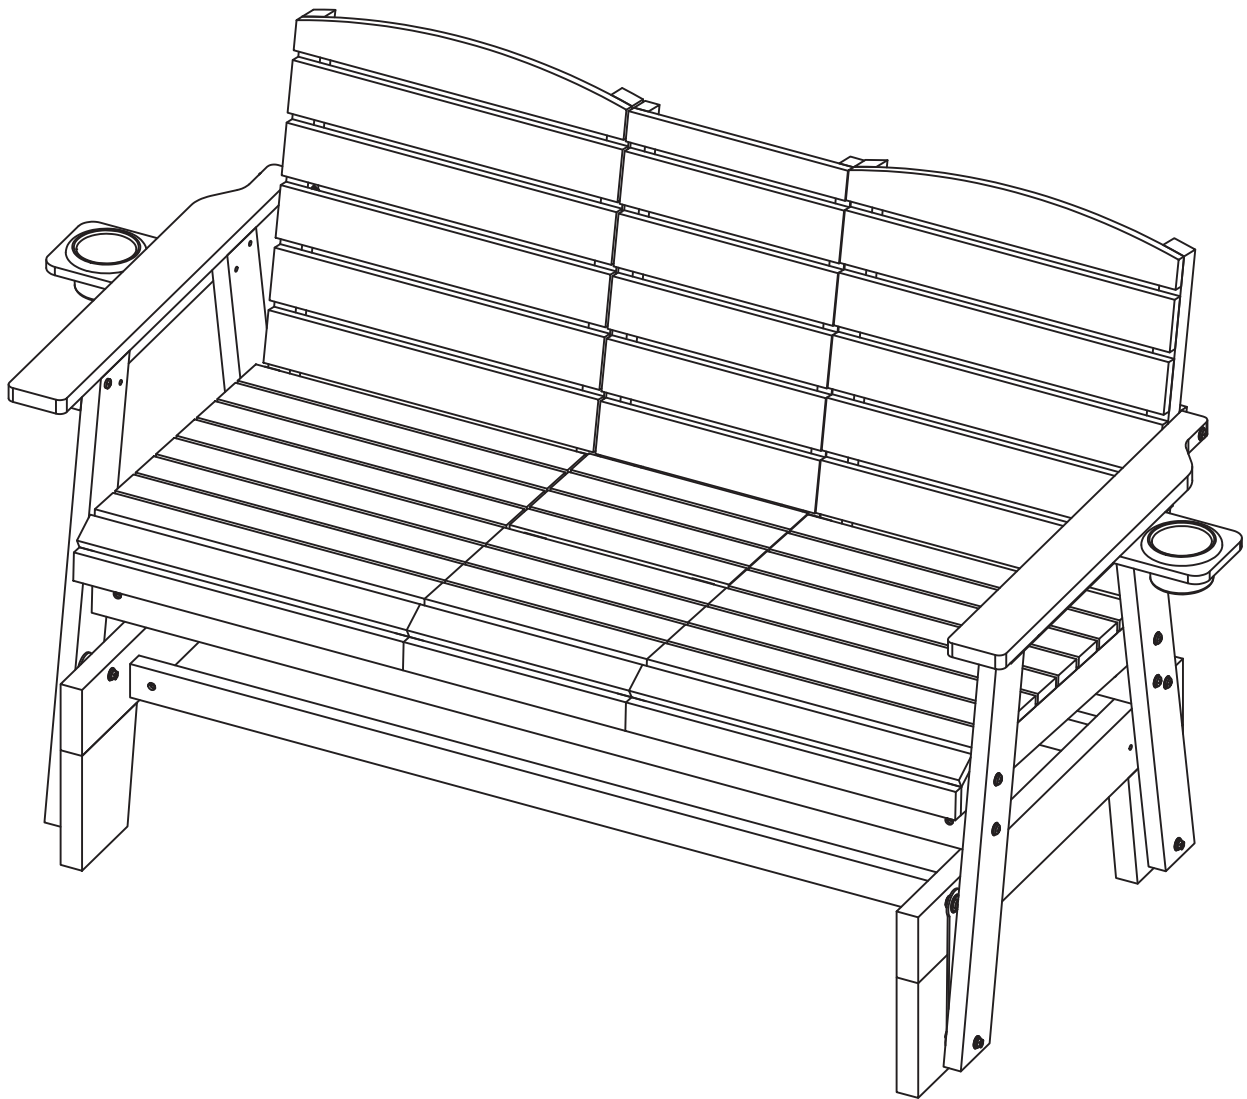


READ AND SAVE THIS INSTRUCTIONS FOR FUTURE USE

ASSEMBLY & INSTRUCTION MANUAL


Ax1

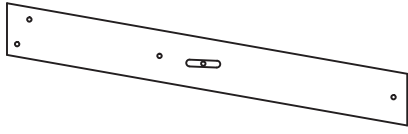


Bx1

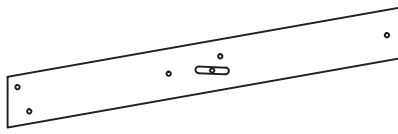


Cx1

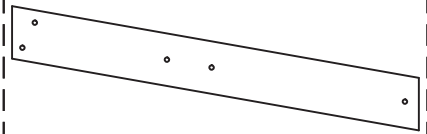

Dx1

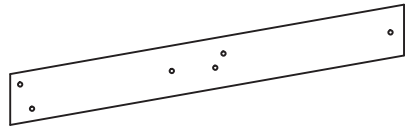


Ex1




Fx1




Gx2

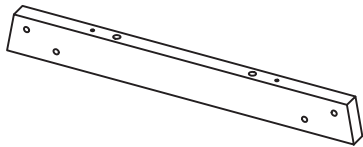


Hx2

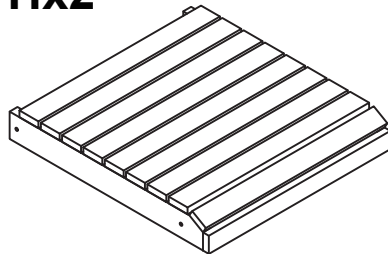


Ix1

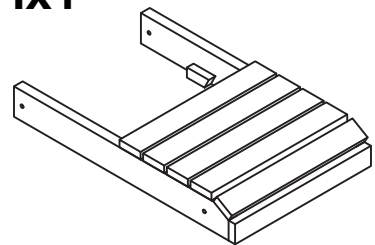


Jx1

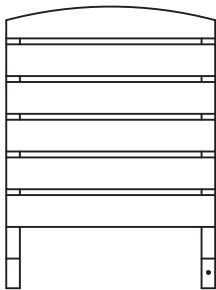


Kx1

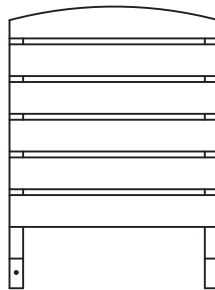


Lx1

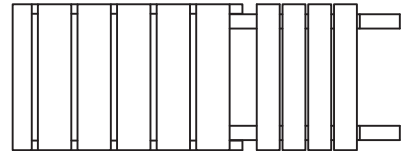


Mx2

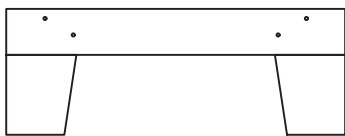


Nx2

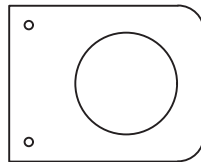


Ox2




Px1

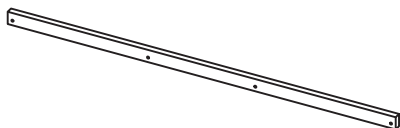

Qx1

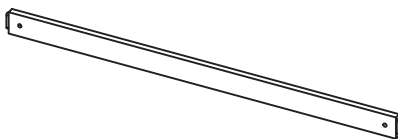

Rx1

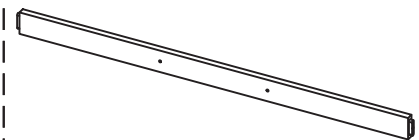


①x4




M3.5*60mm

②x4

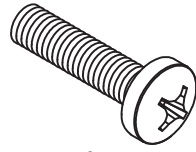


M6.0*25mm

③x6+1

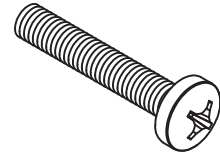


M6.0*35mm

④x4

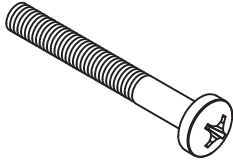


M6.0*45mm

⑤x14+1

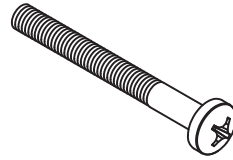


M6.0*50mm

⑥x4

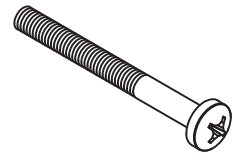


M6.0*55mm

⑦x2

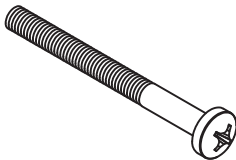


M6.0*60mm

⑧x8+1

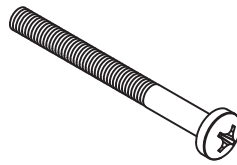

M6.0*65mm

⑨x2

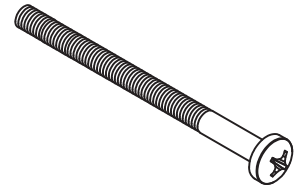

M6.0*80mm


⑩x4



wood stick


φ8*20mm

⑪x4

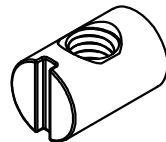


M6.0*10mm

⑫x4

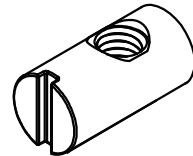


M6.0*15mm


⑬x26+2

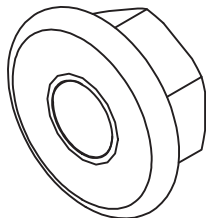


⑭x56+2

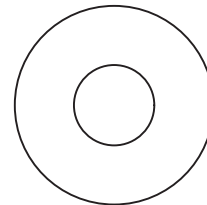

⑮x4

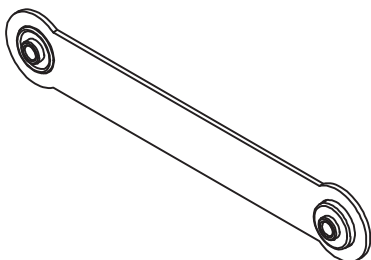


⑯x2

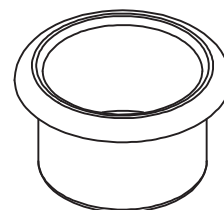

Ex1 ①x4

Fx1 ⑩x4

Gx2

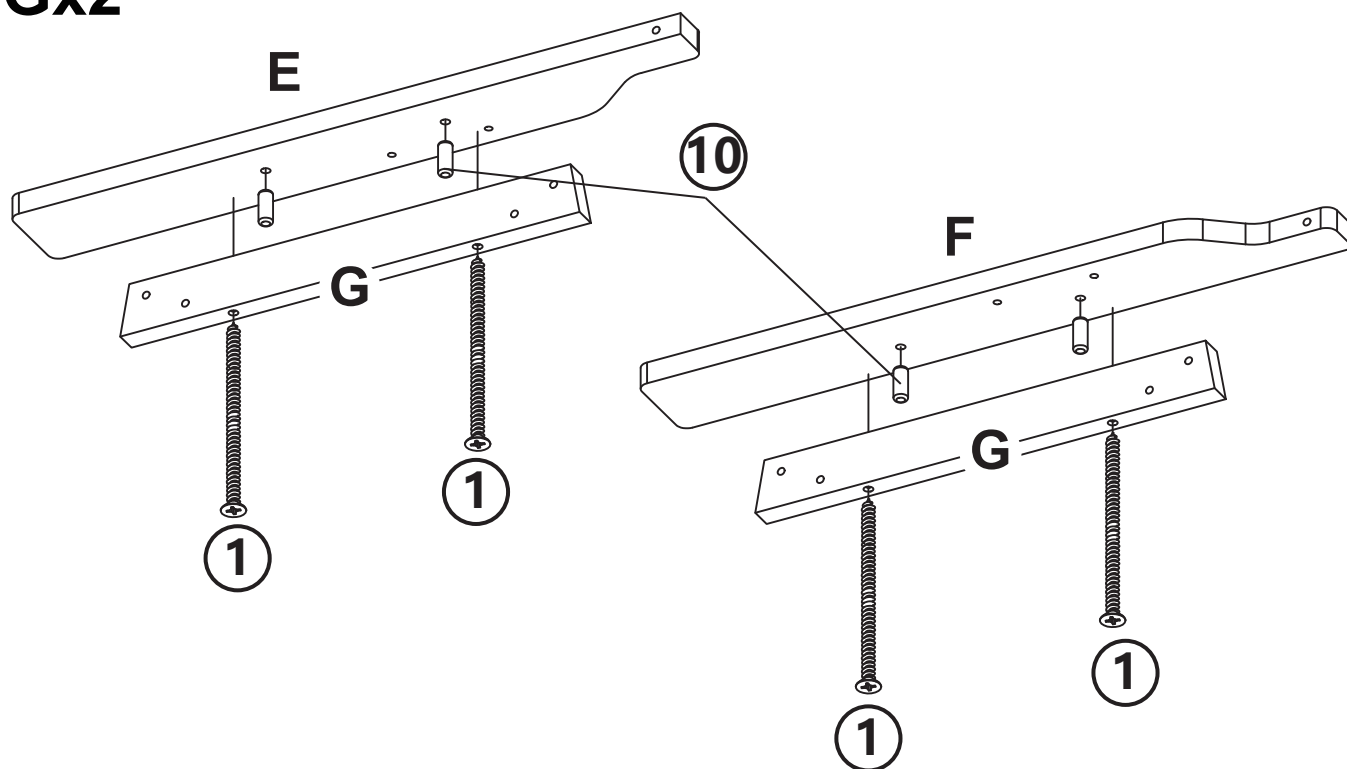


Ax1 ⑤x8

Bx1 ⑬x8

Cx1 ⑭x8

Dx1

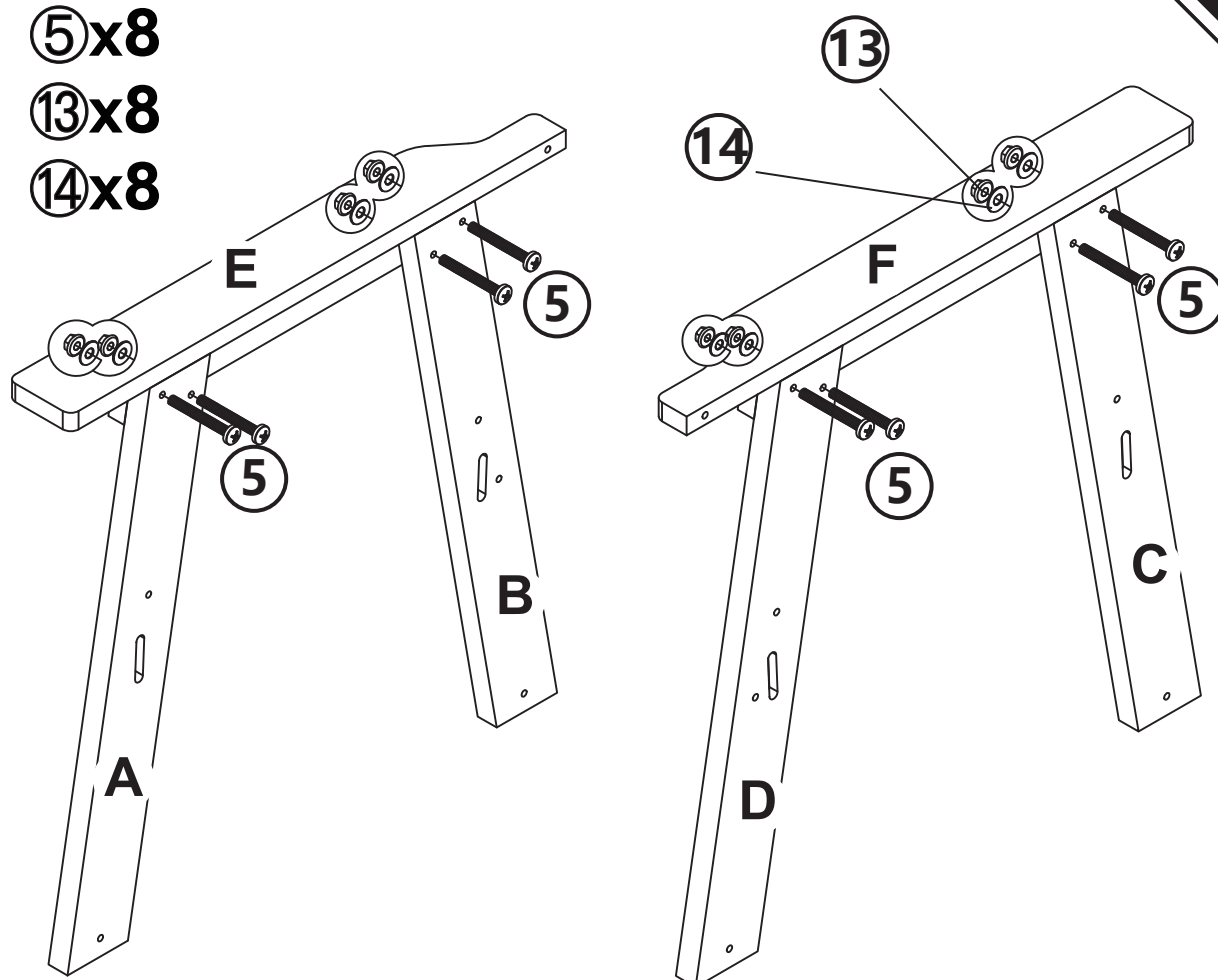


Qx1

Rx1

⑧x4

⑪x4

⑭x4

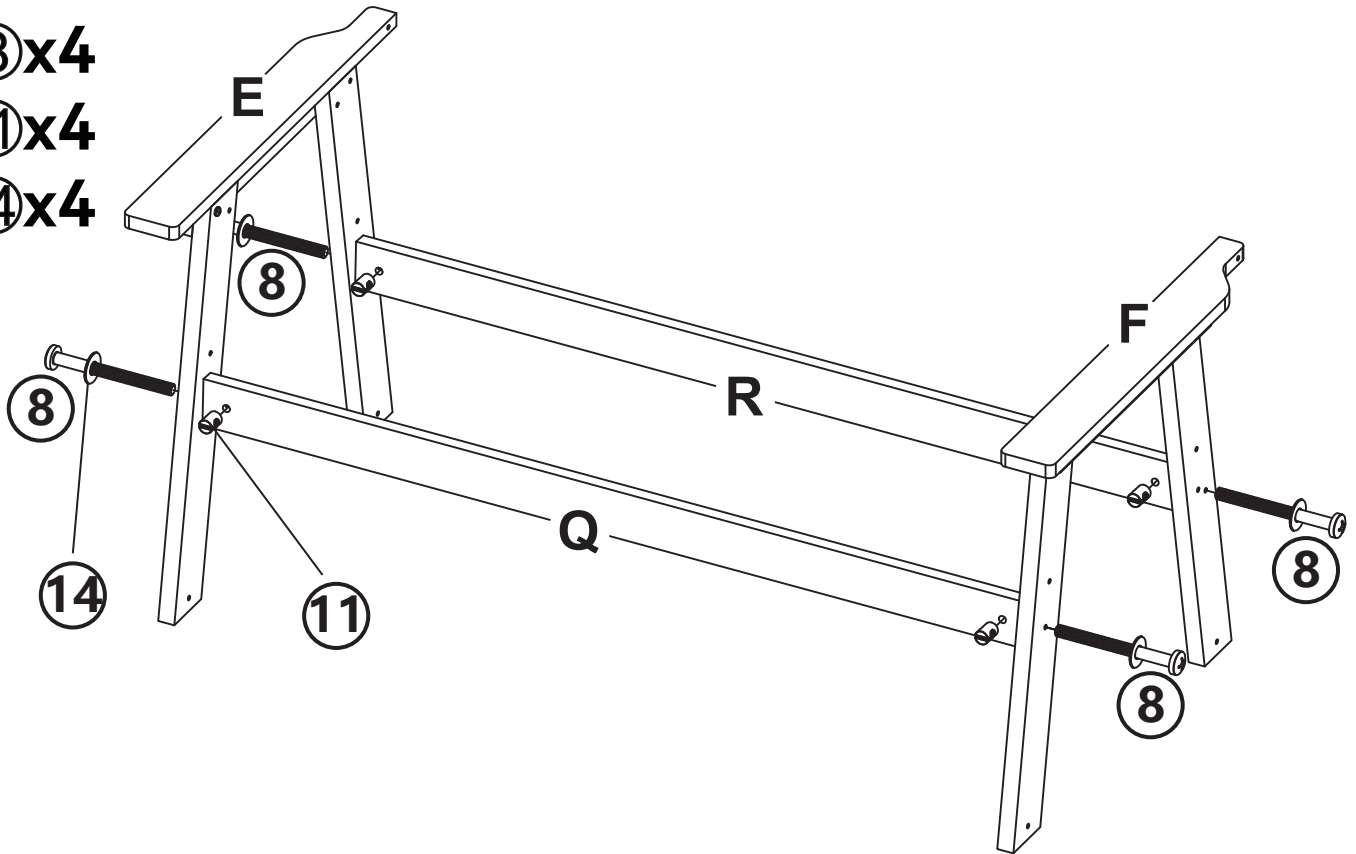


Hx2

Ix1

⑤x2

⑬x2


⑭x2

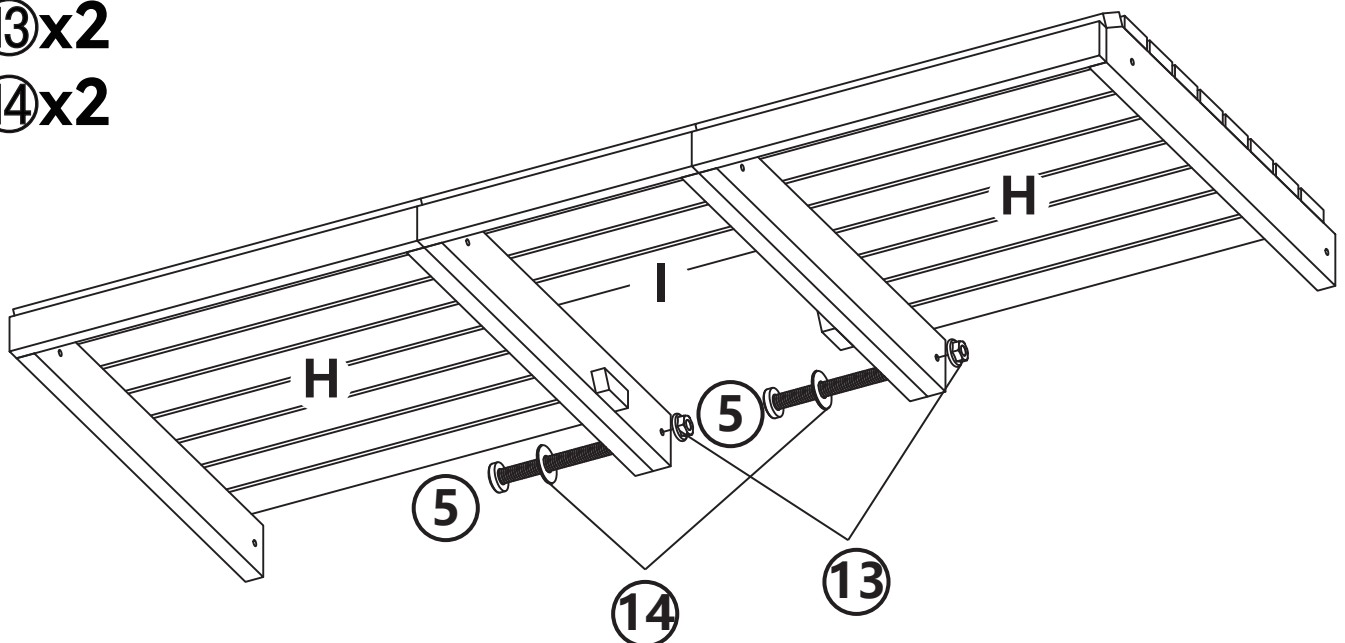

⑥x4


⑬x4

⑭x8

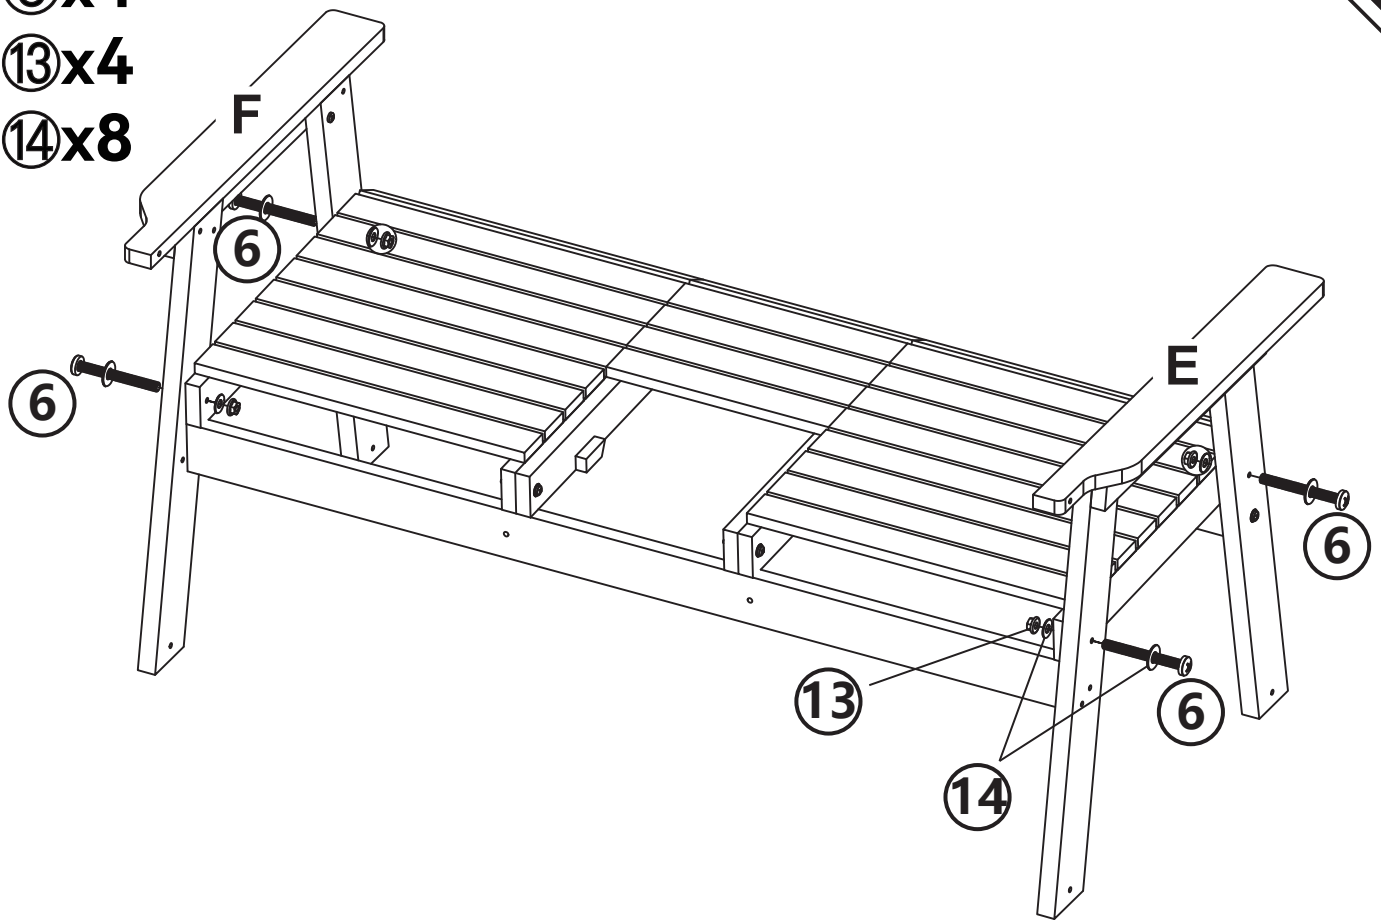

Jx1 ③x2 ⑨x2 ⑭x10


Kx1 ⑦x2 ⑬x4

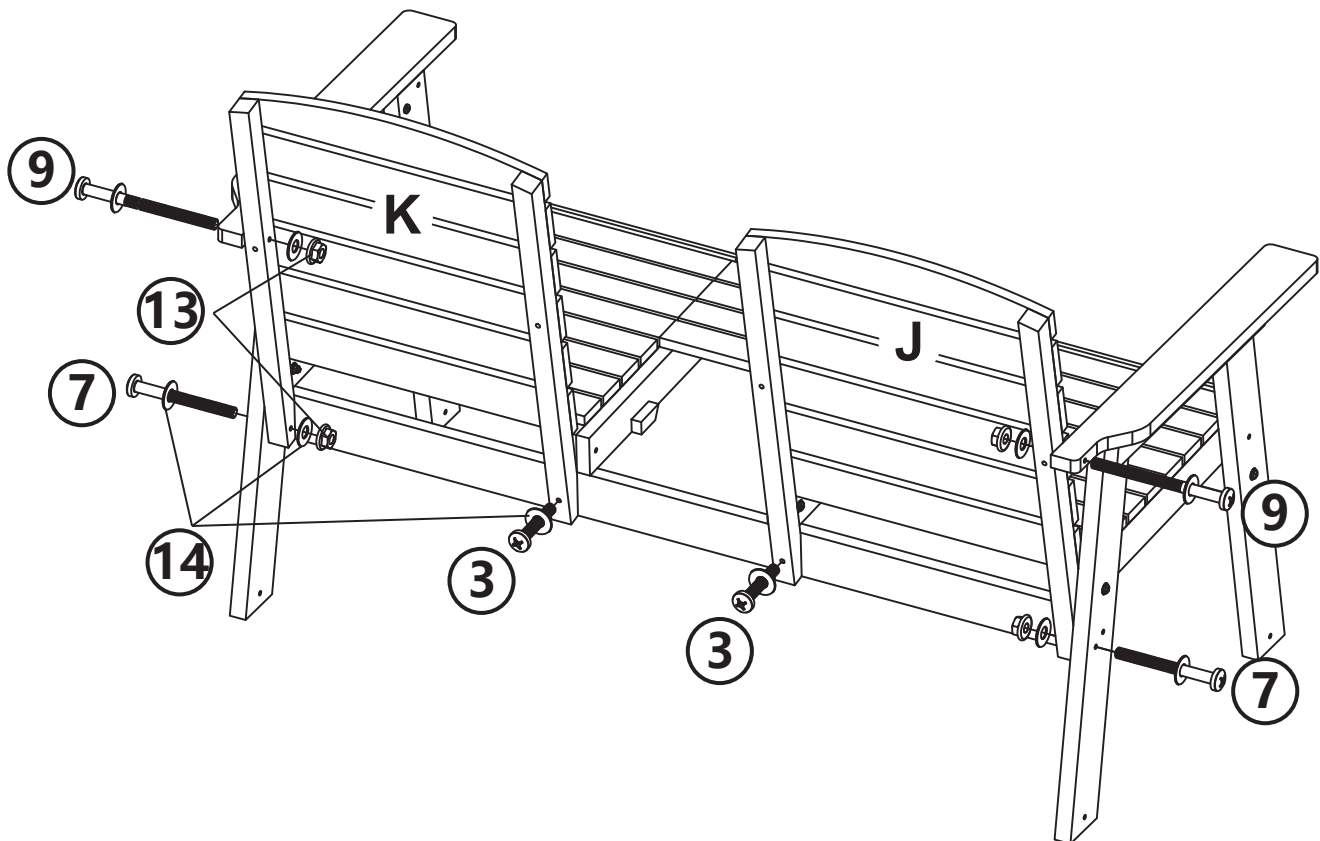

Px1

③x4


⑭x4


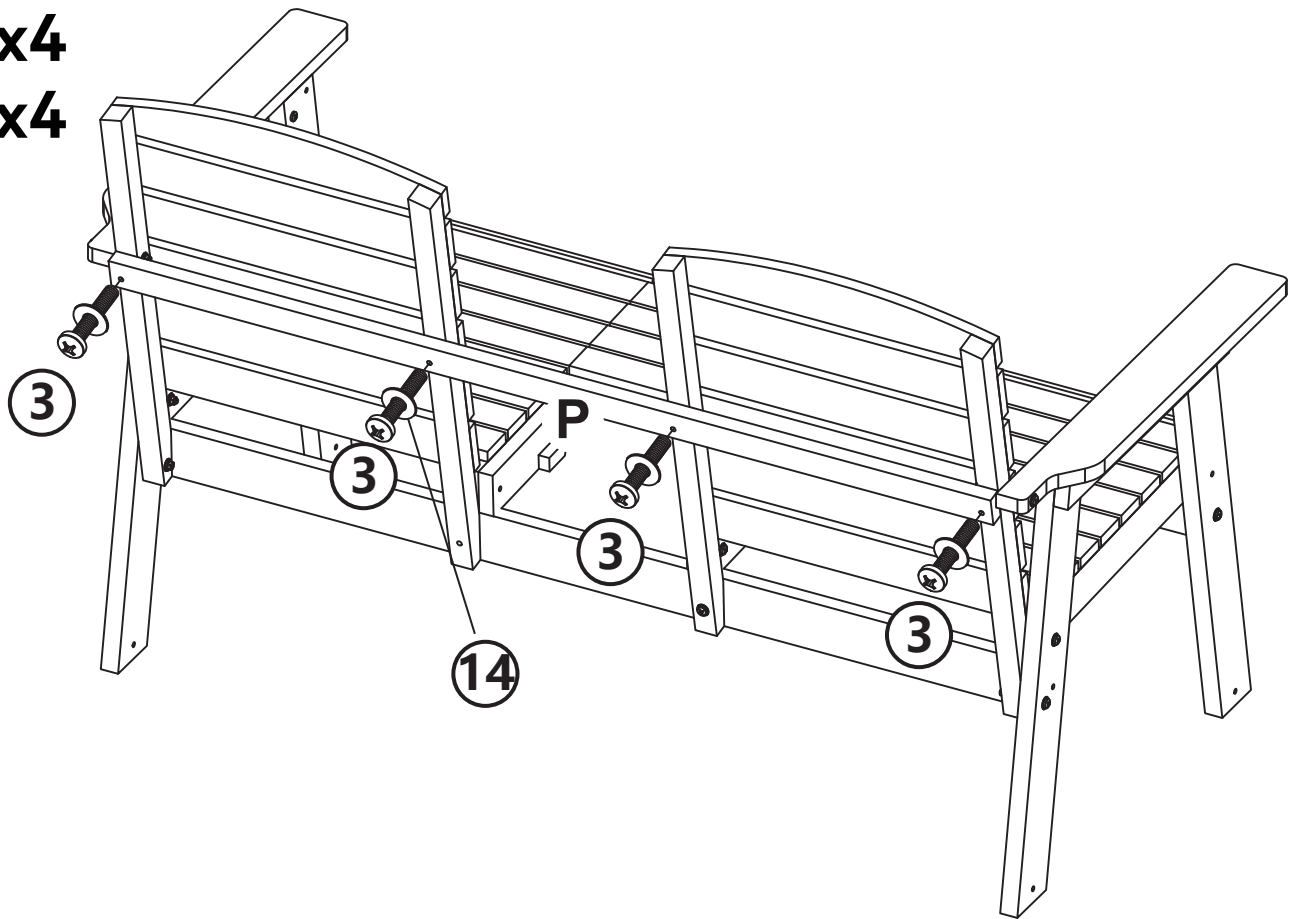


Nx2

②x4

⑭x4

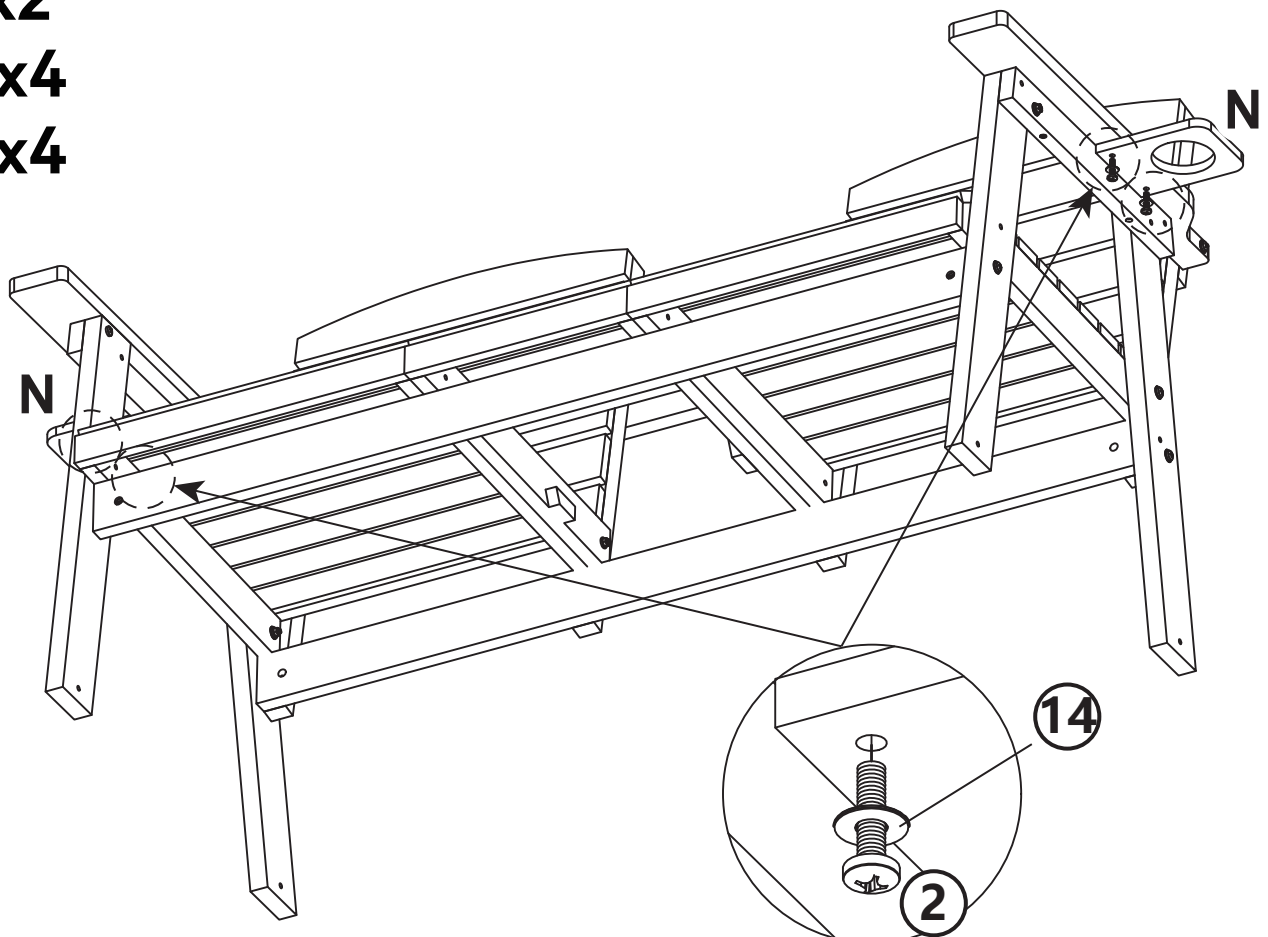

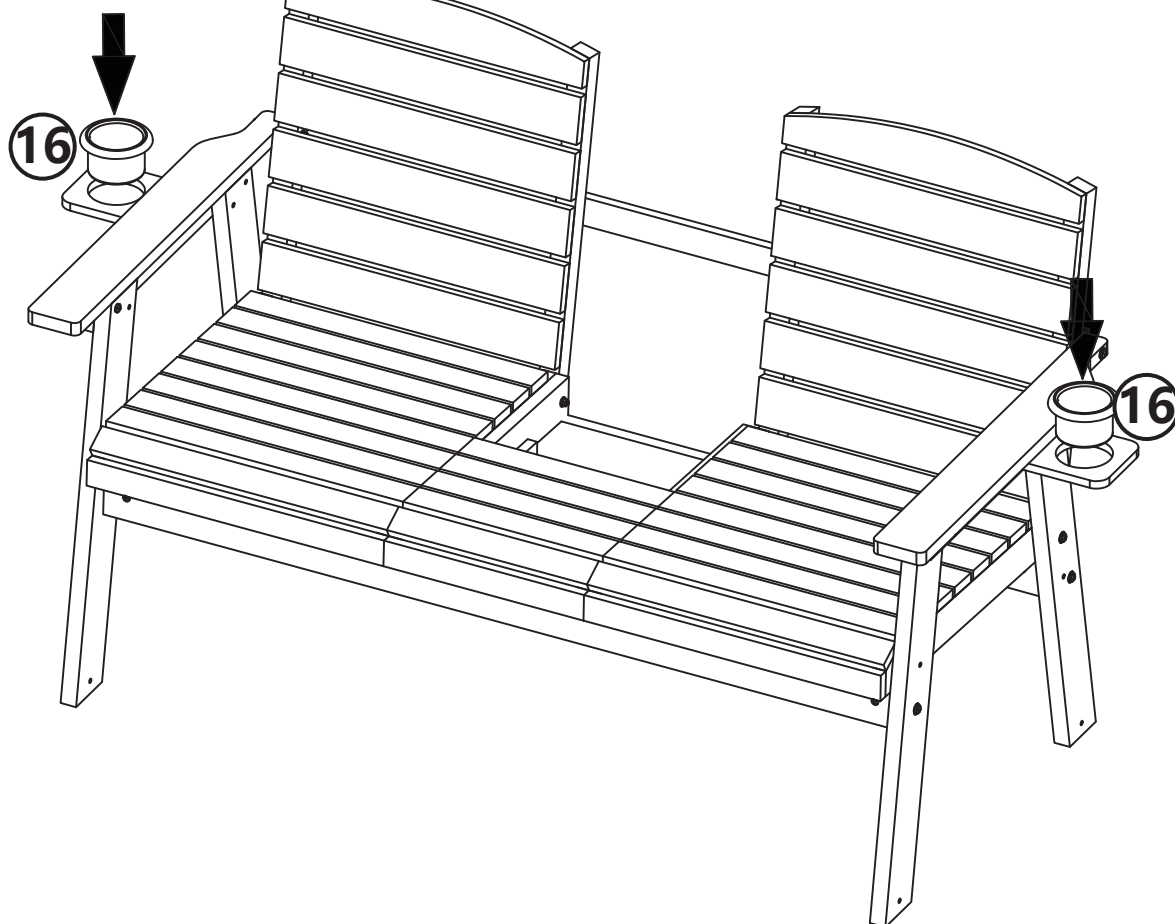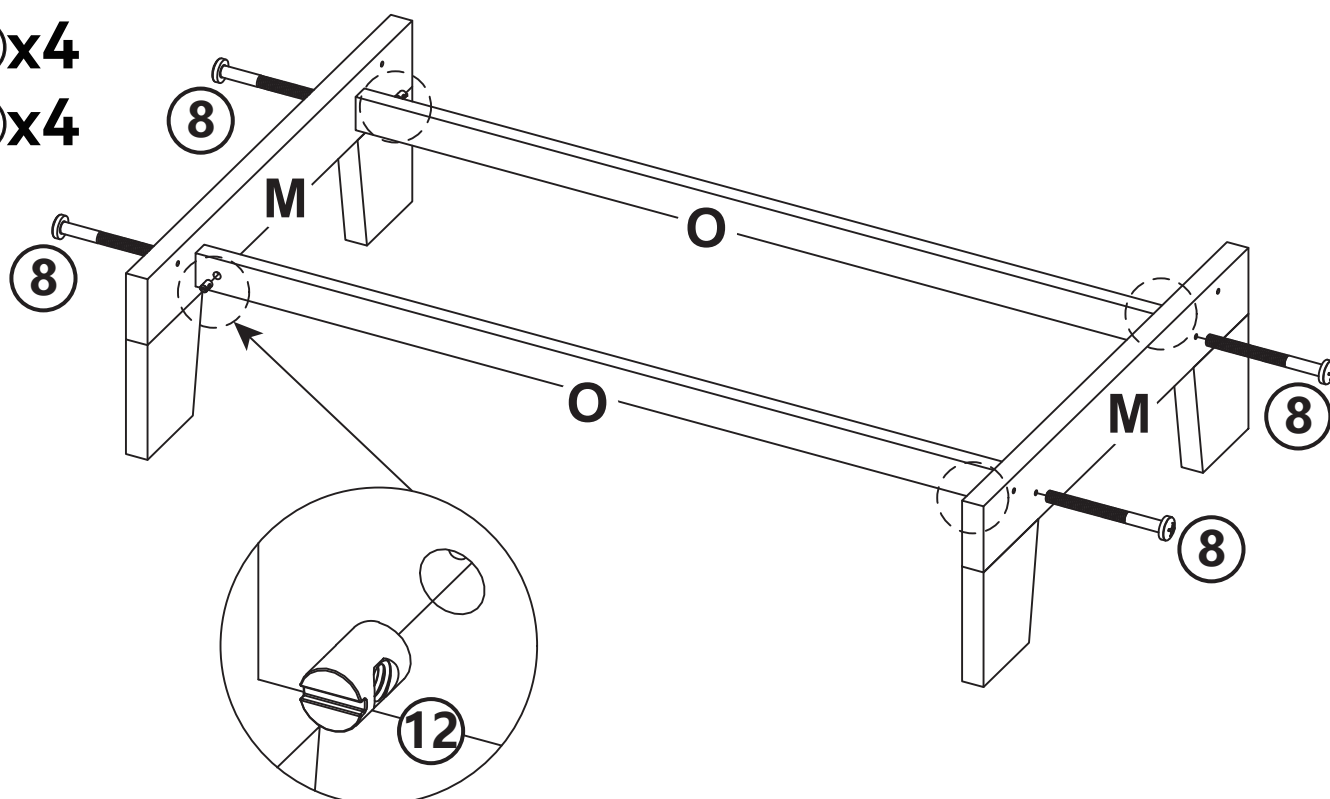
16x2**Mx2****Ox2****8x4****12x4**

11

④x4 ⑭x16


⑤x4 ⑮x4

⑬x8

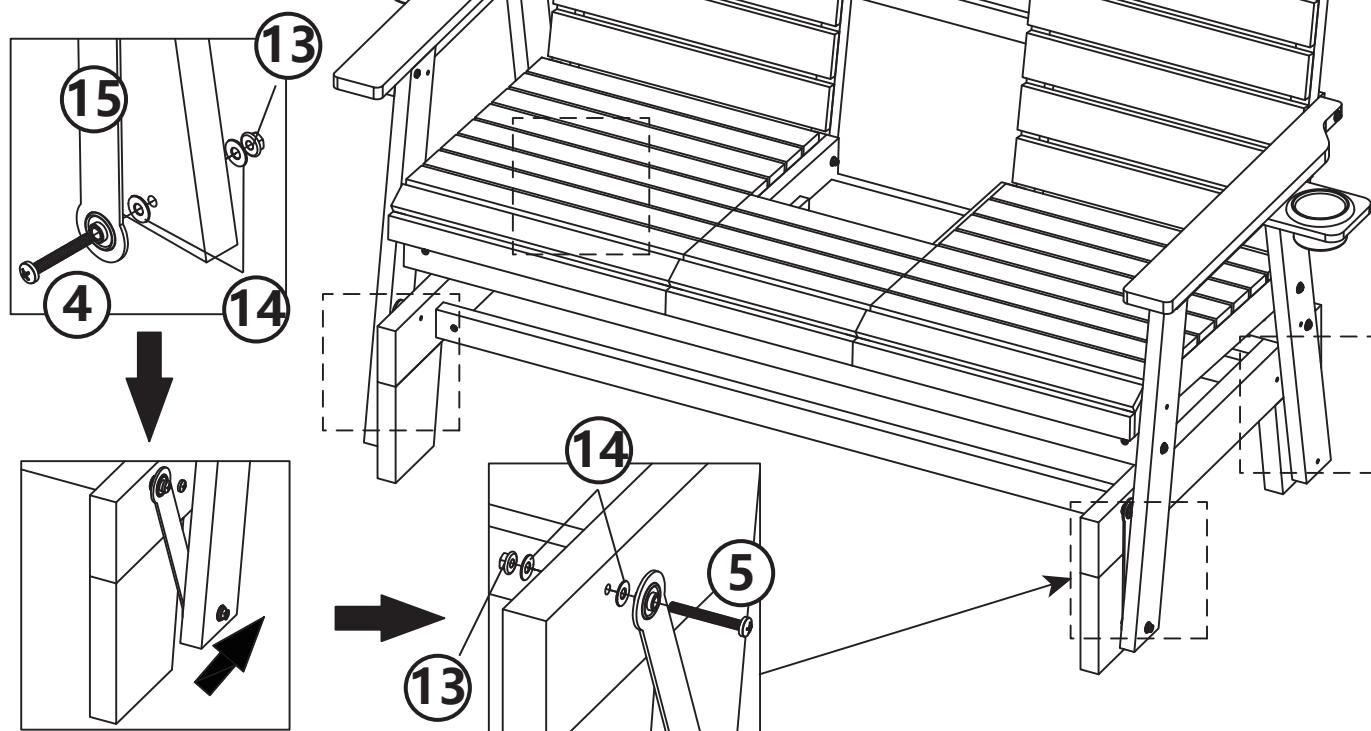

12

Lx1

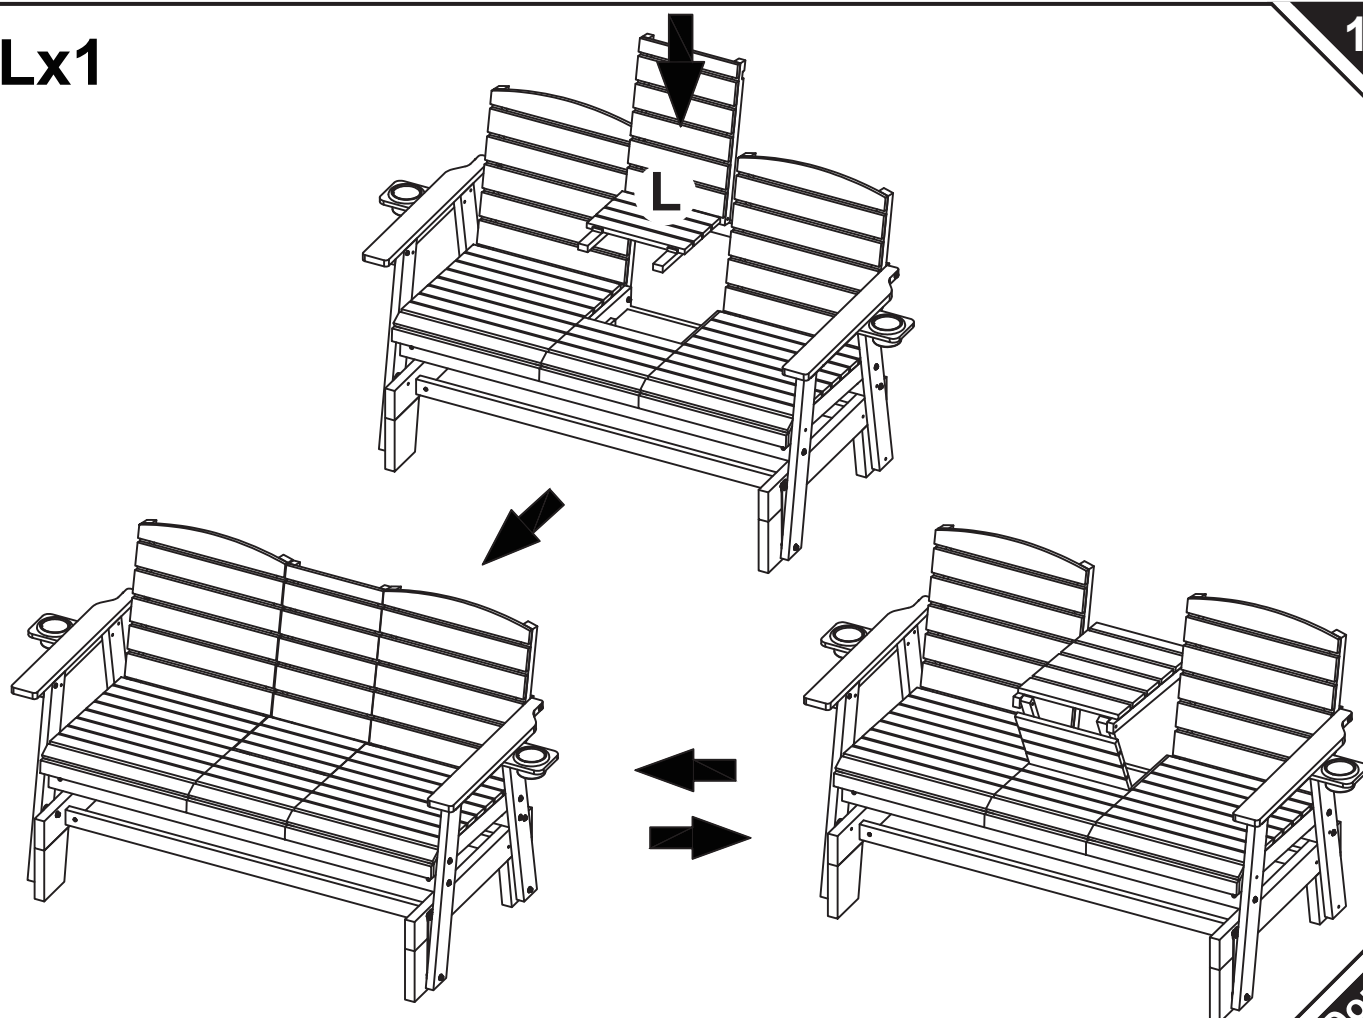

Done