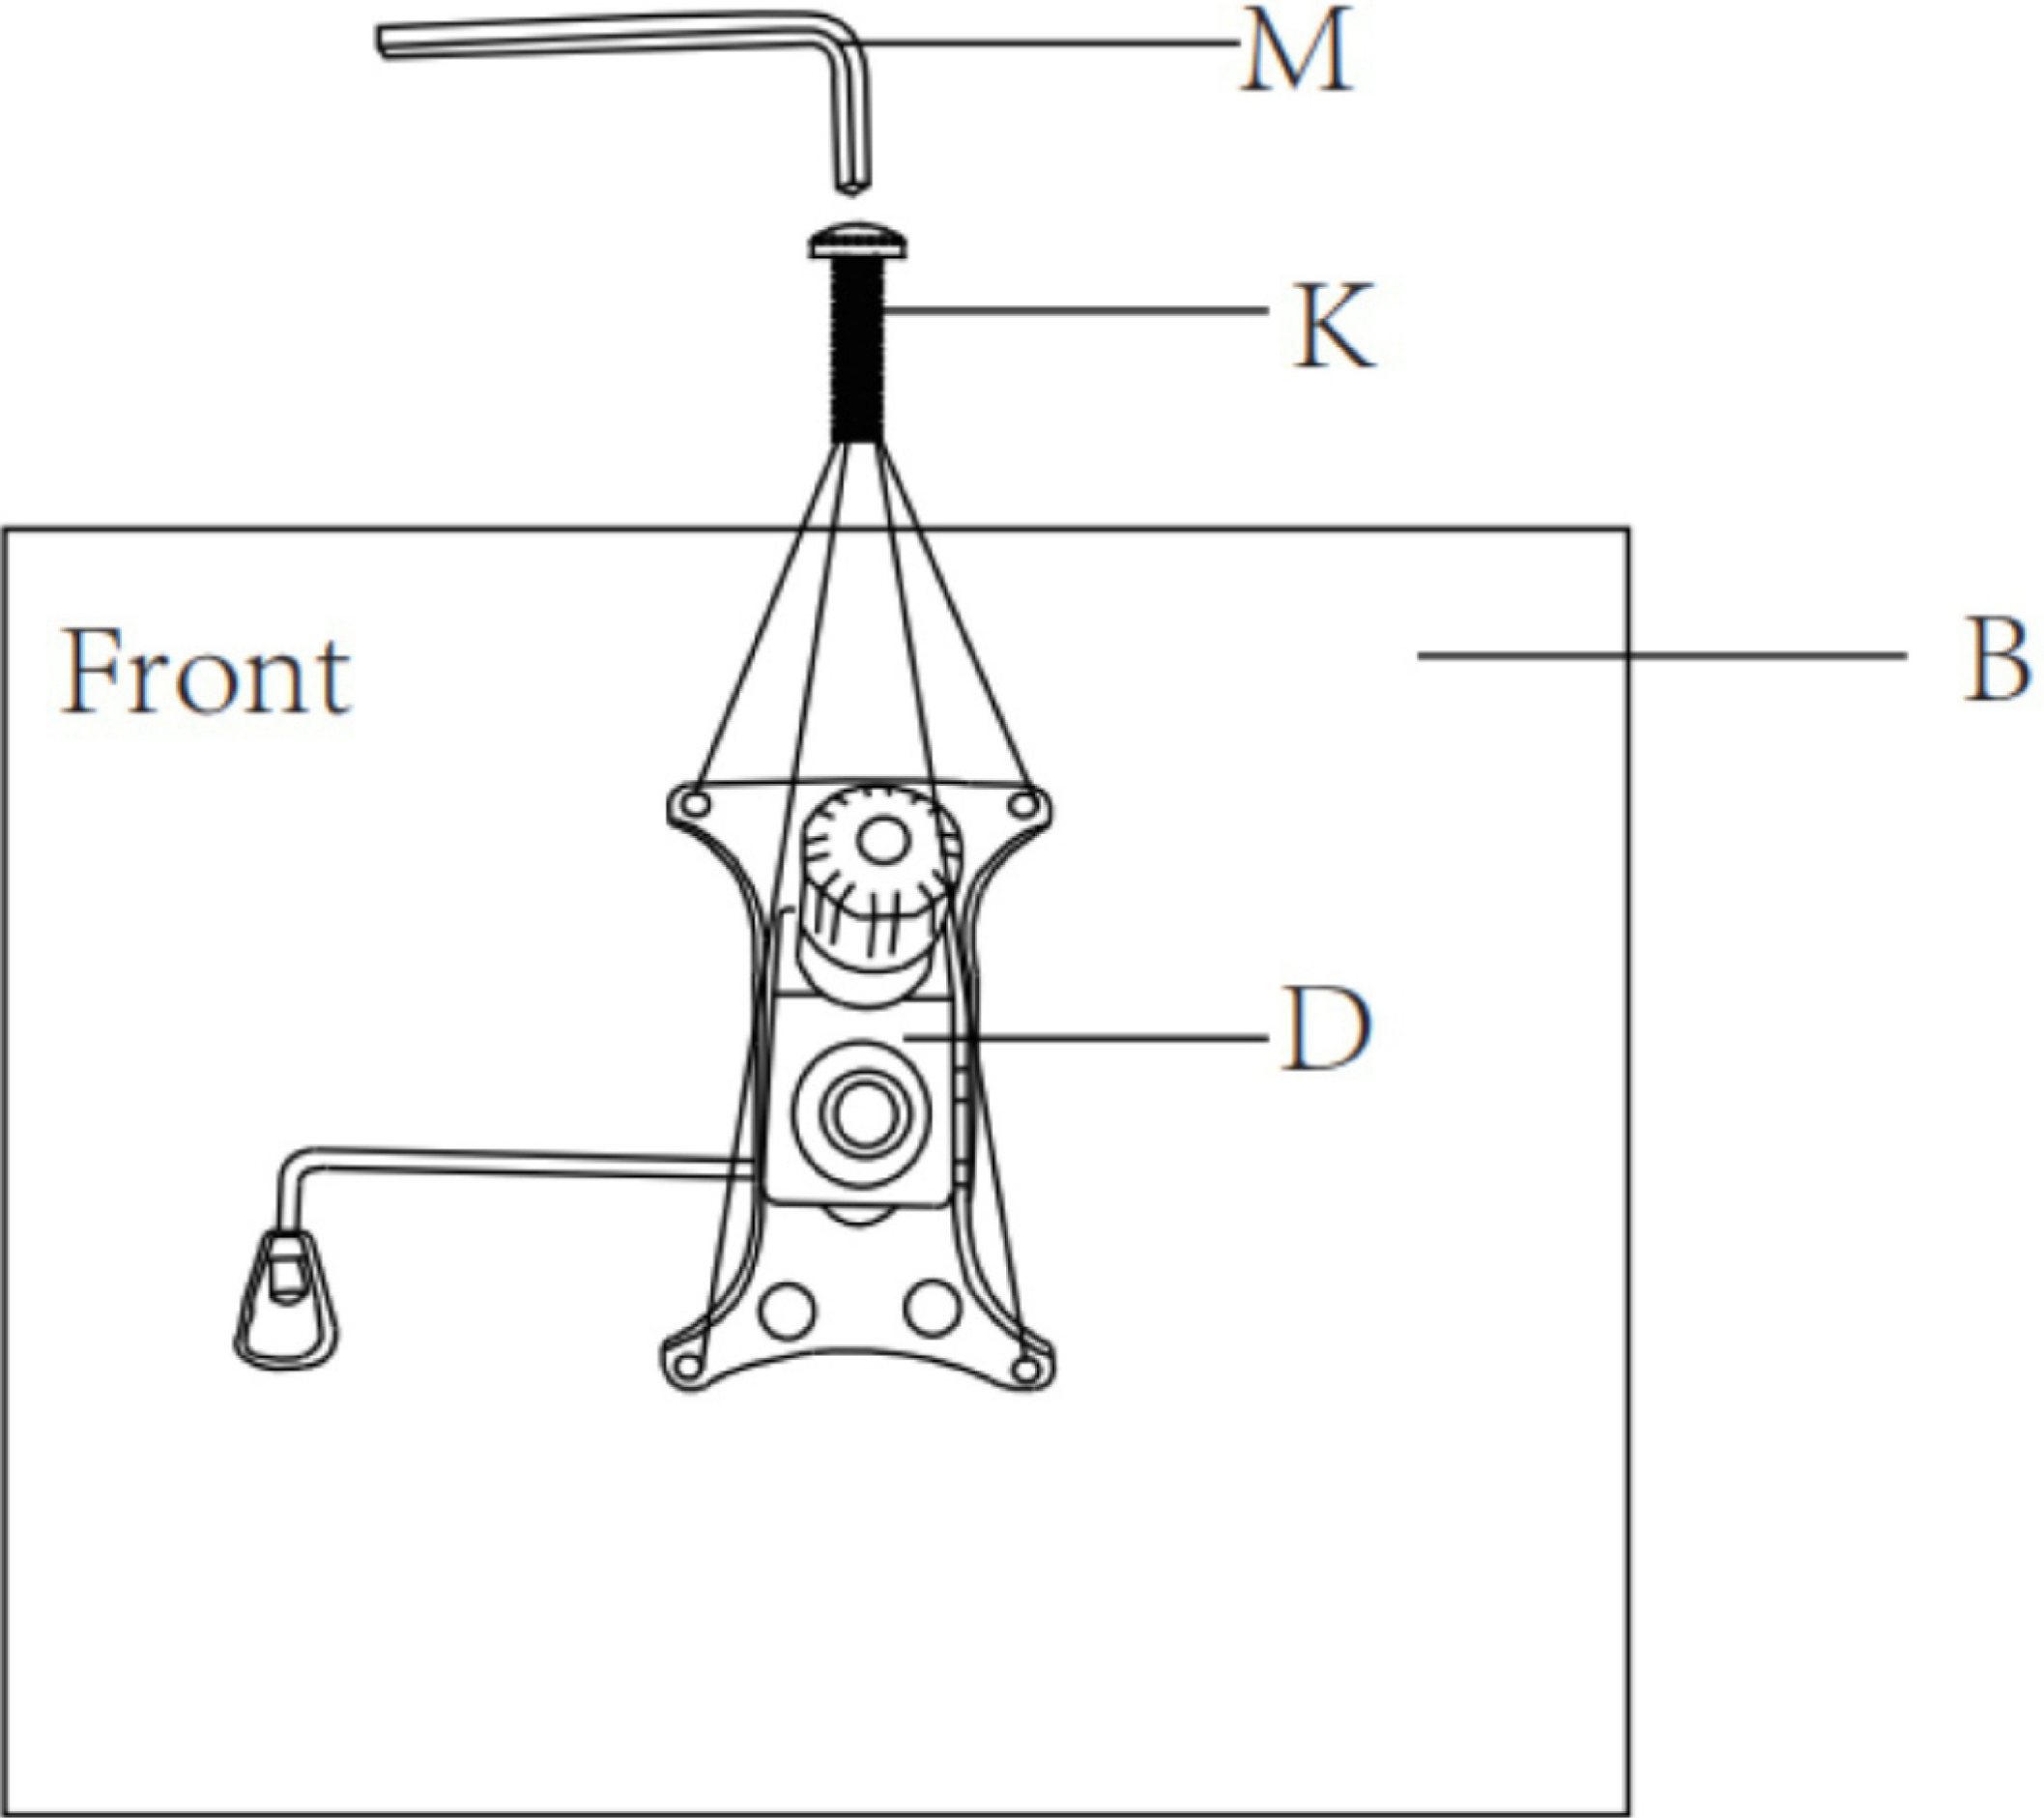
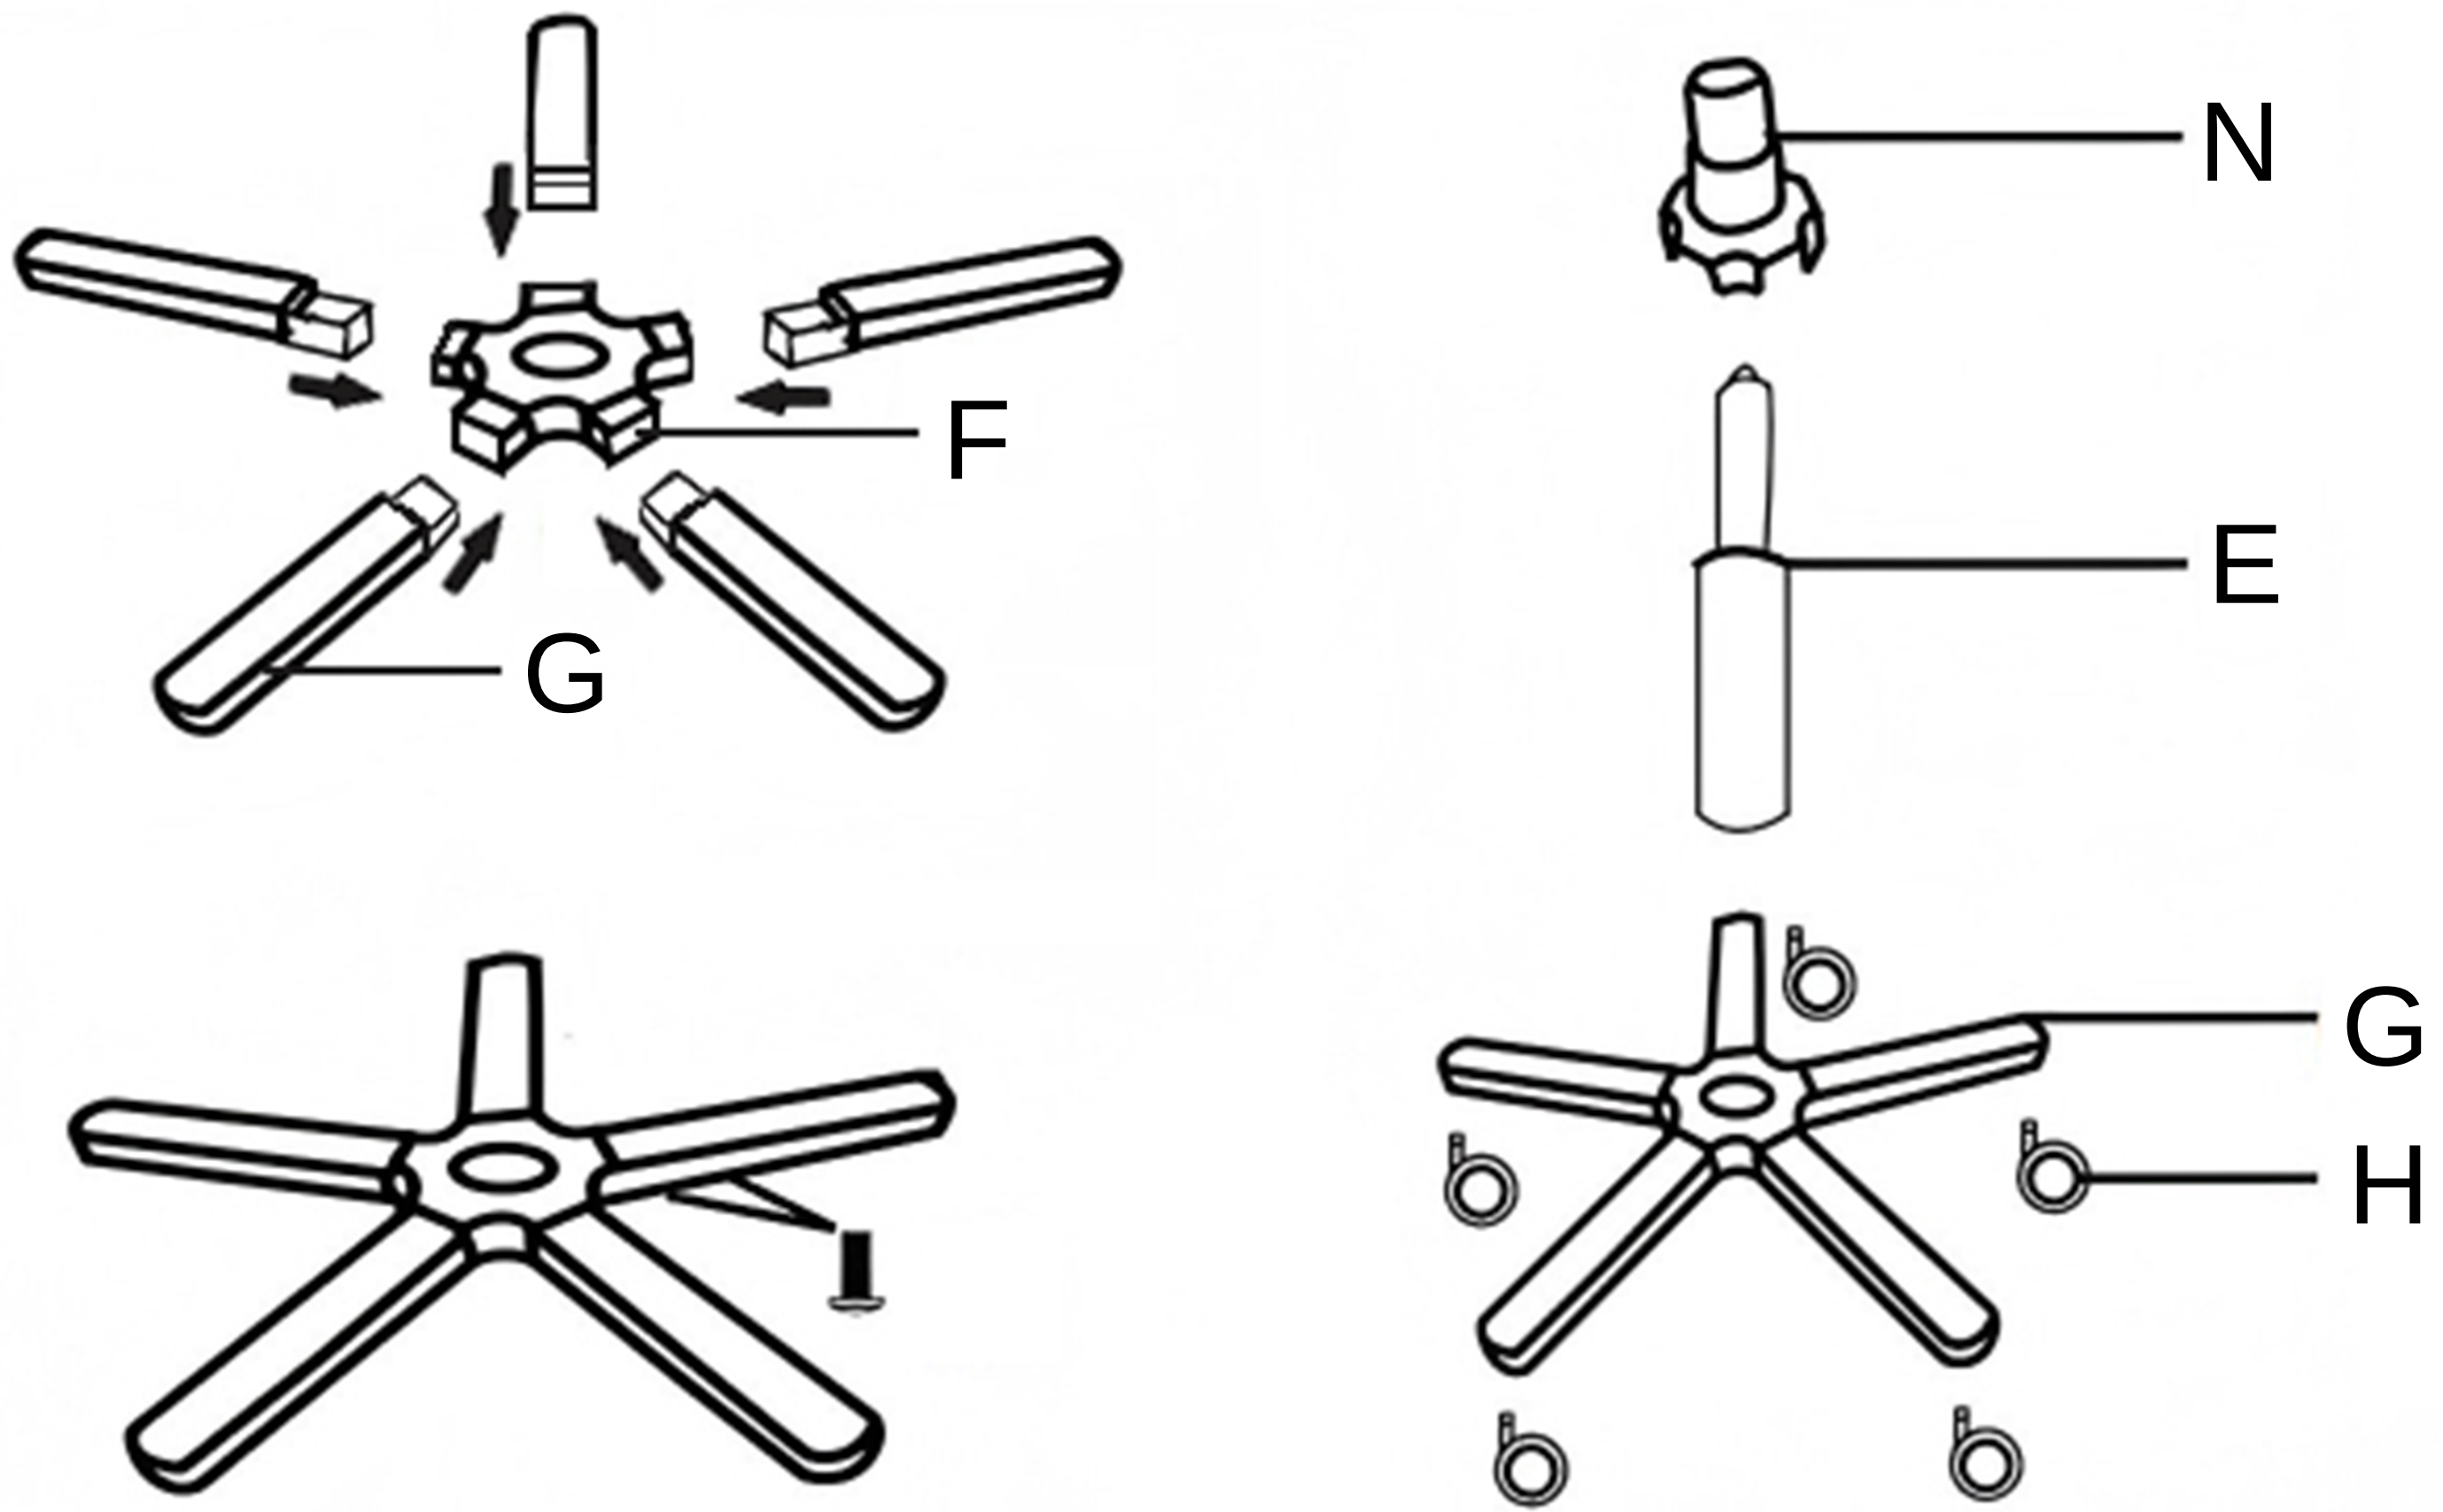
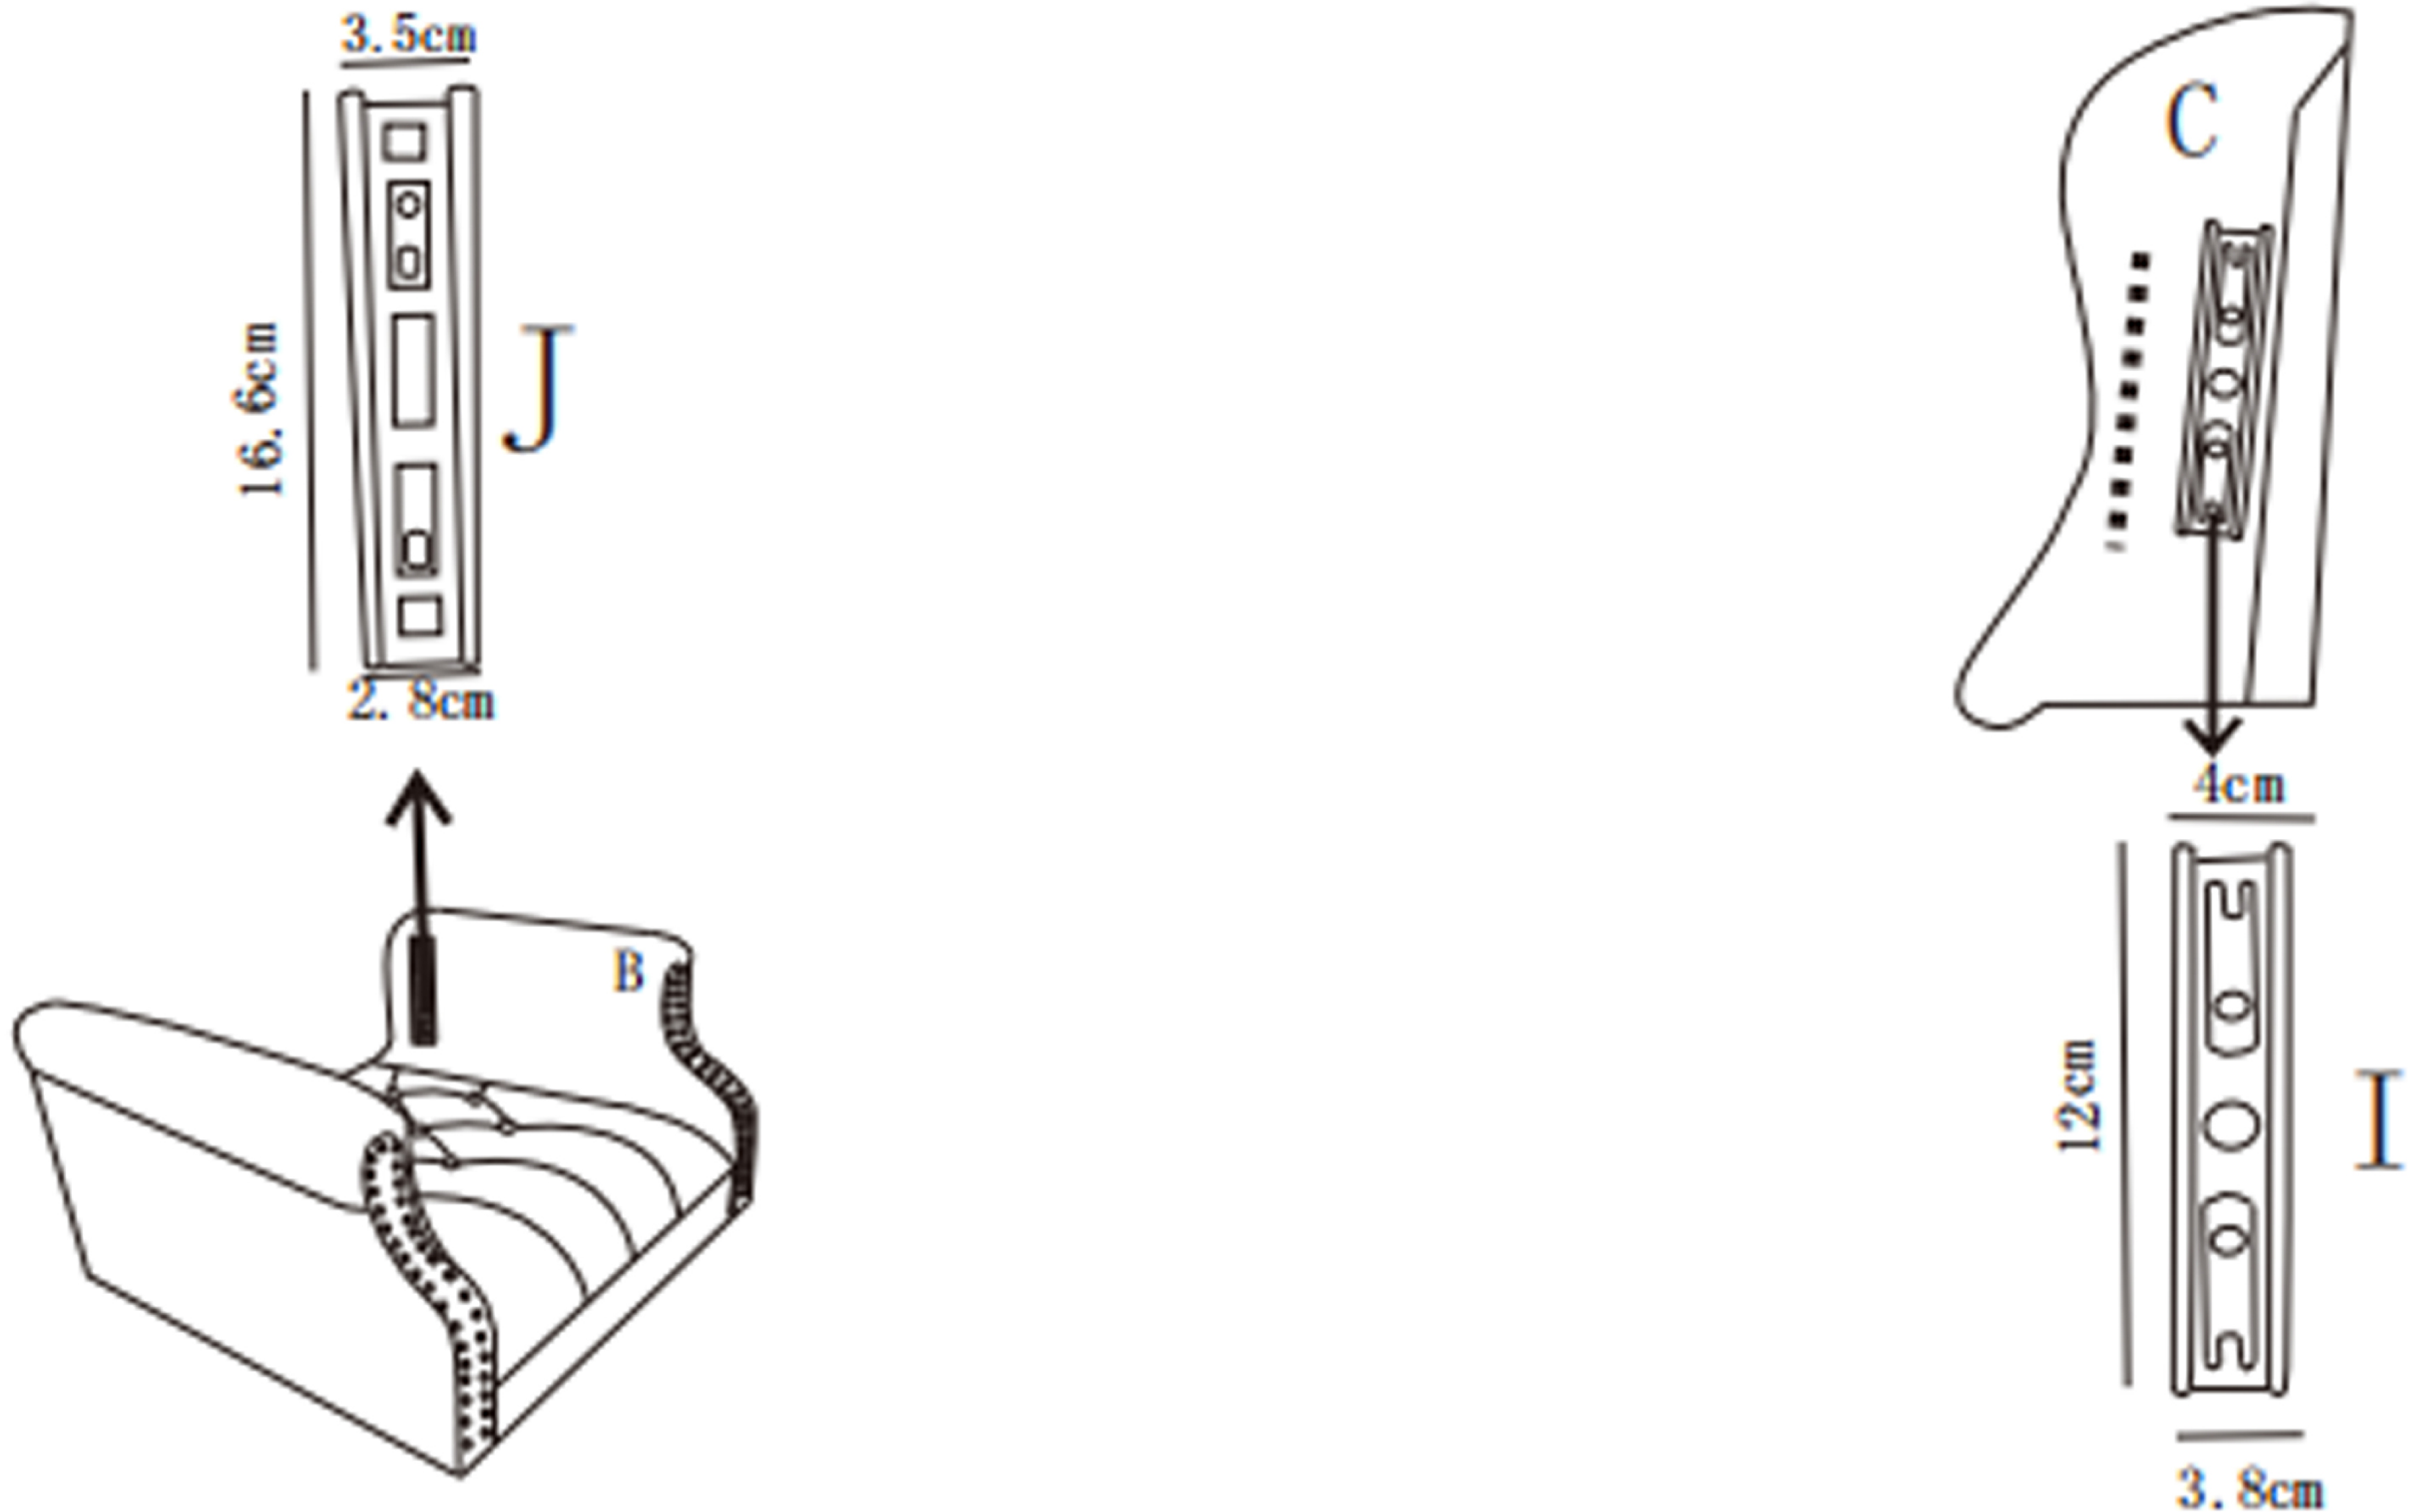
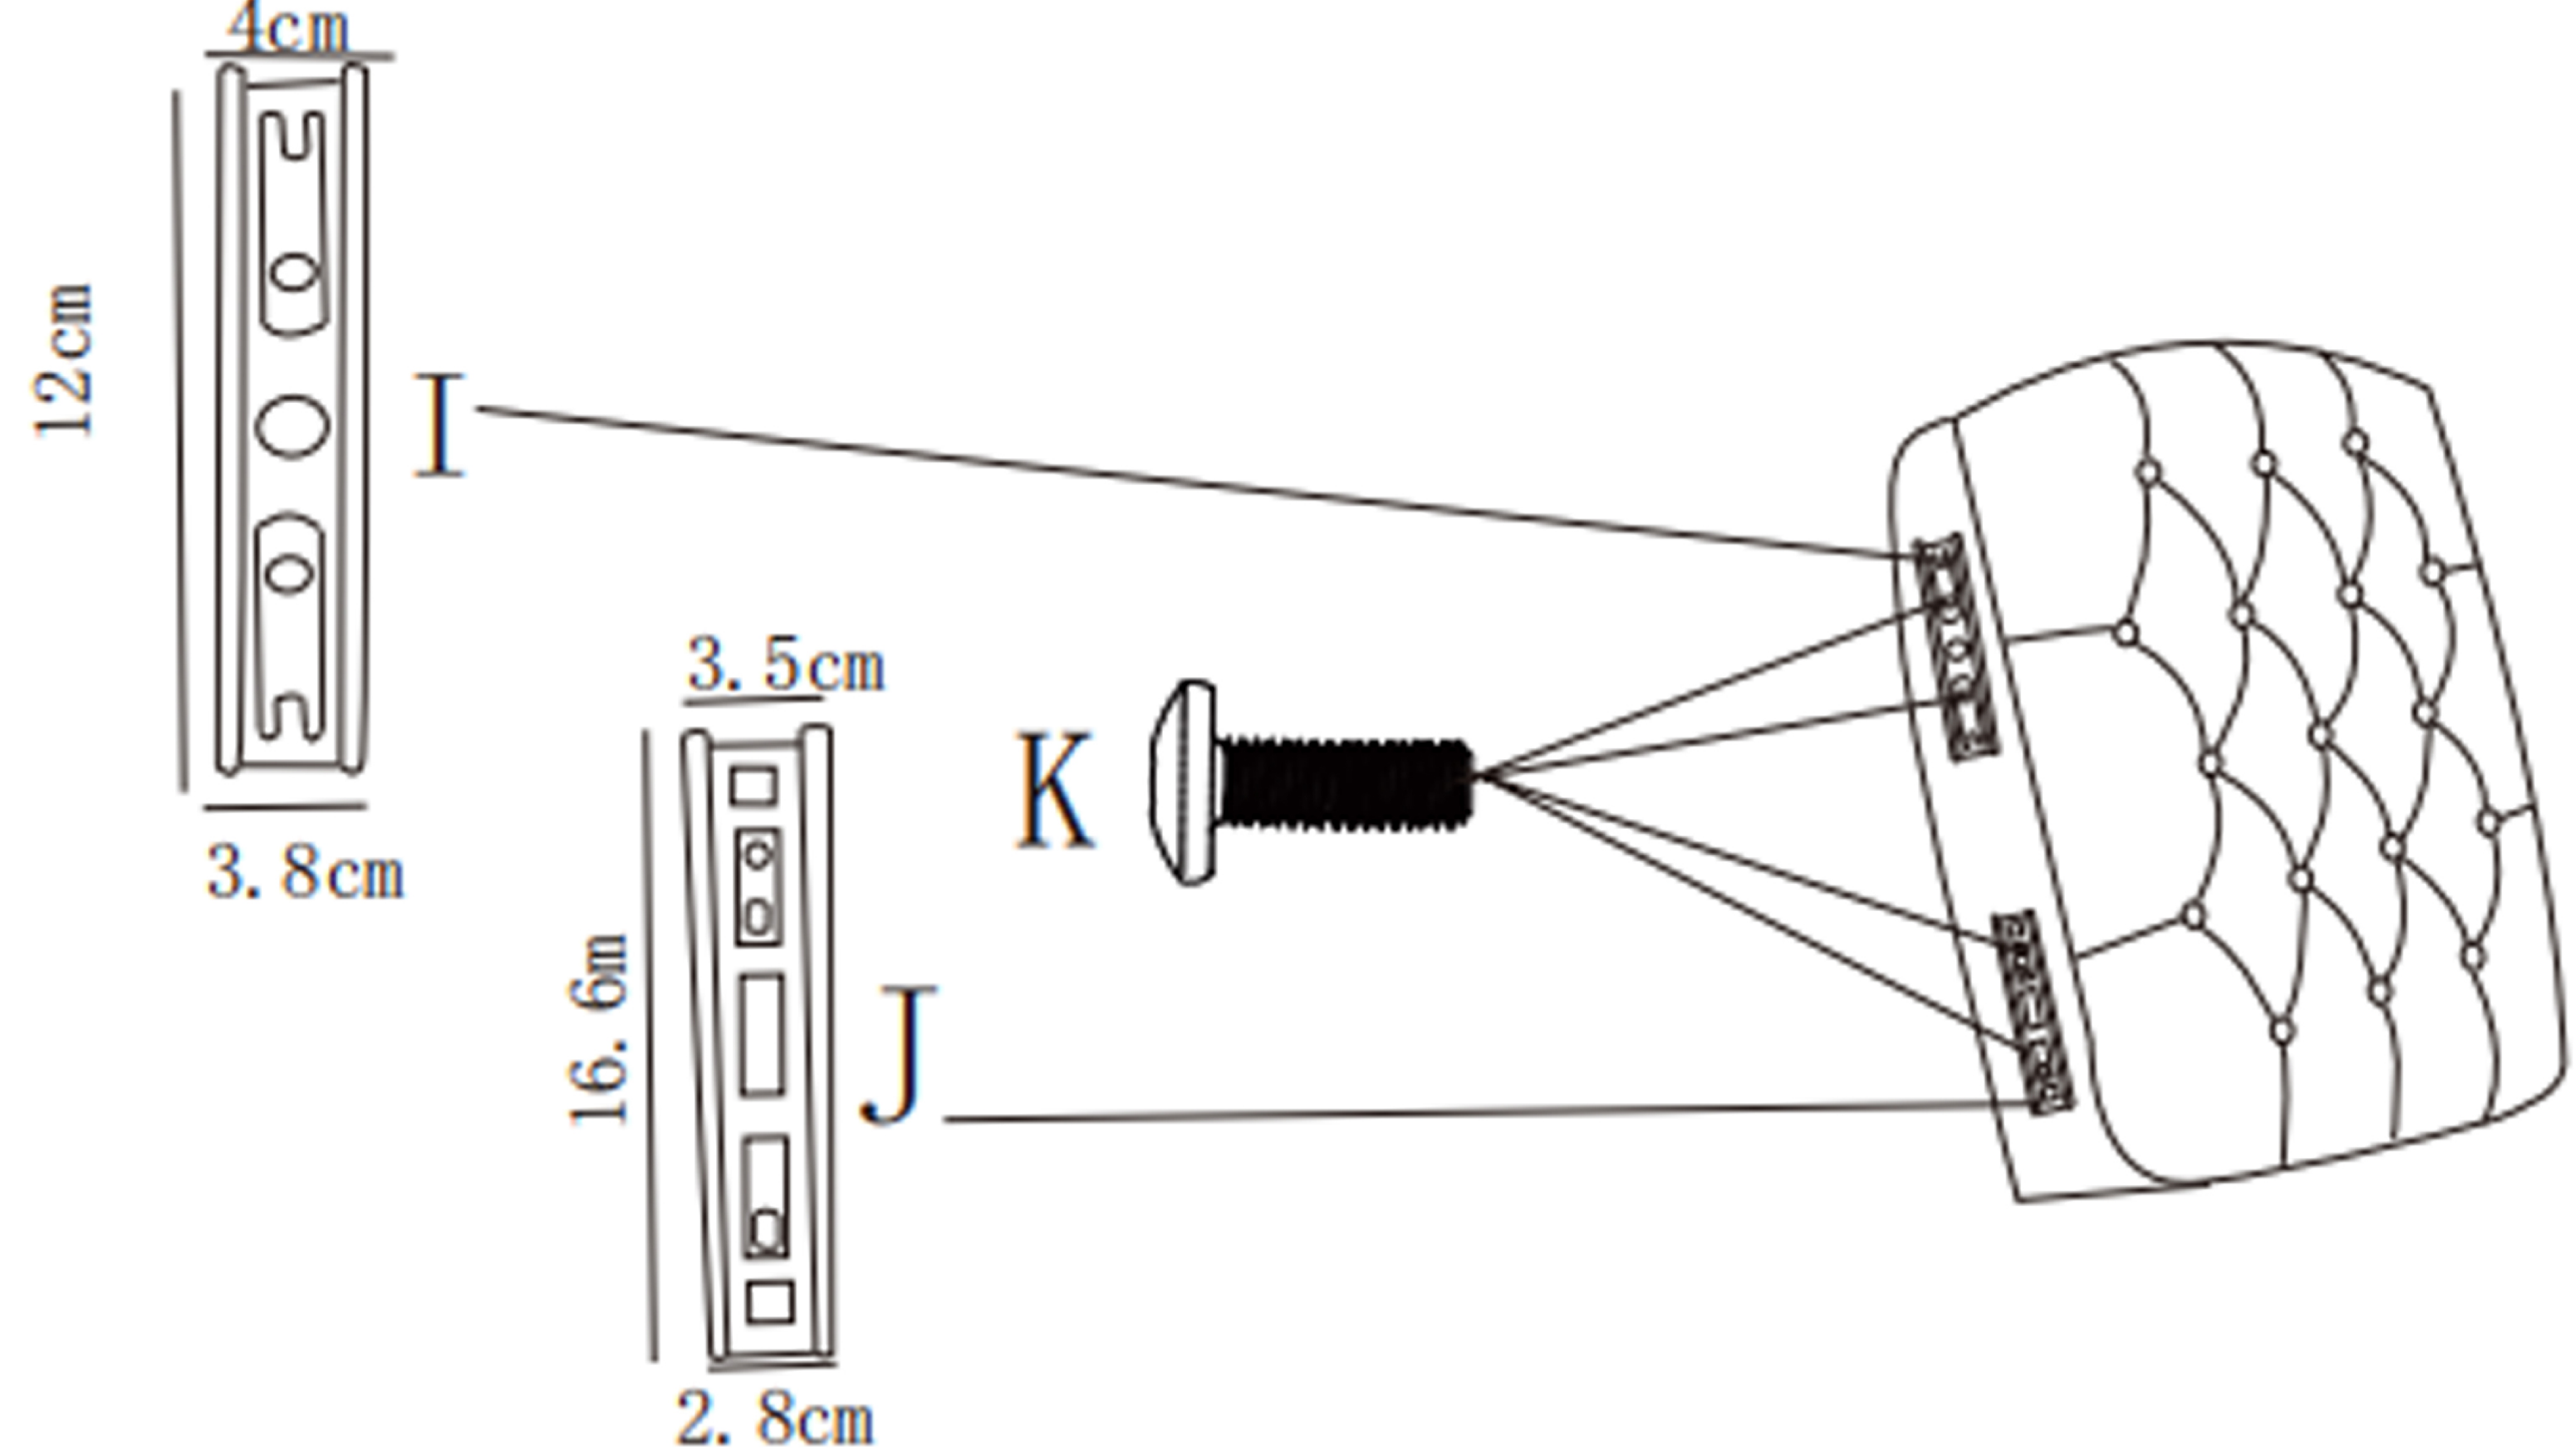
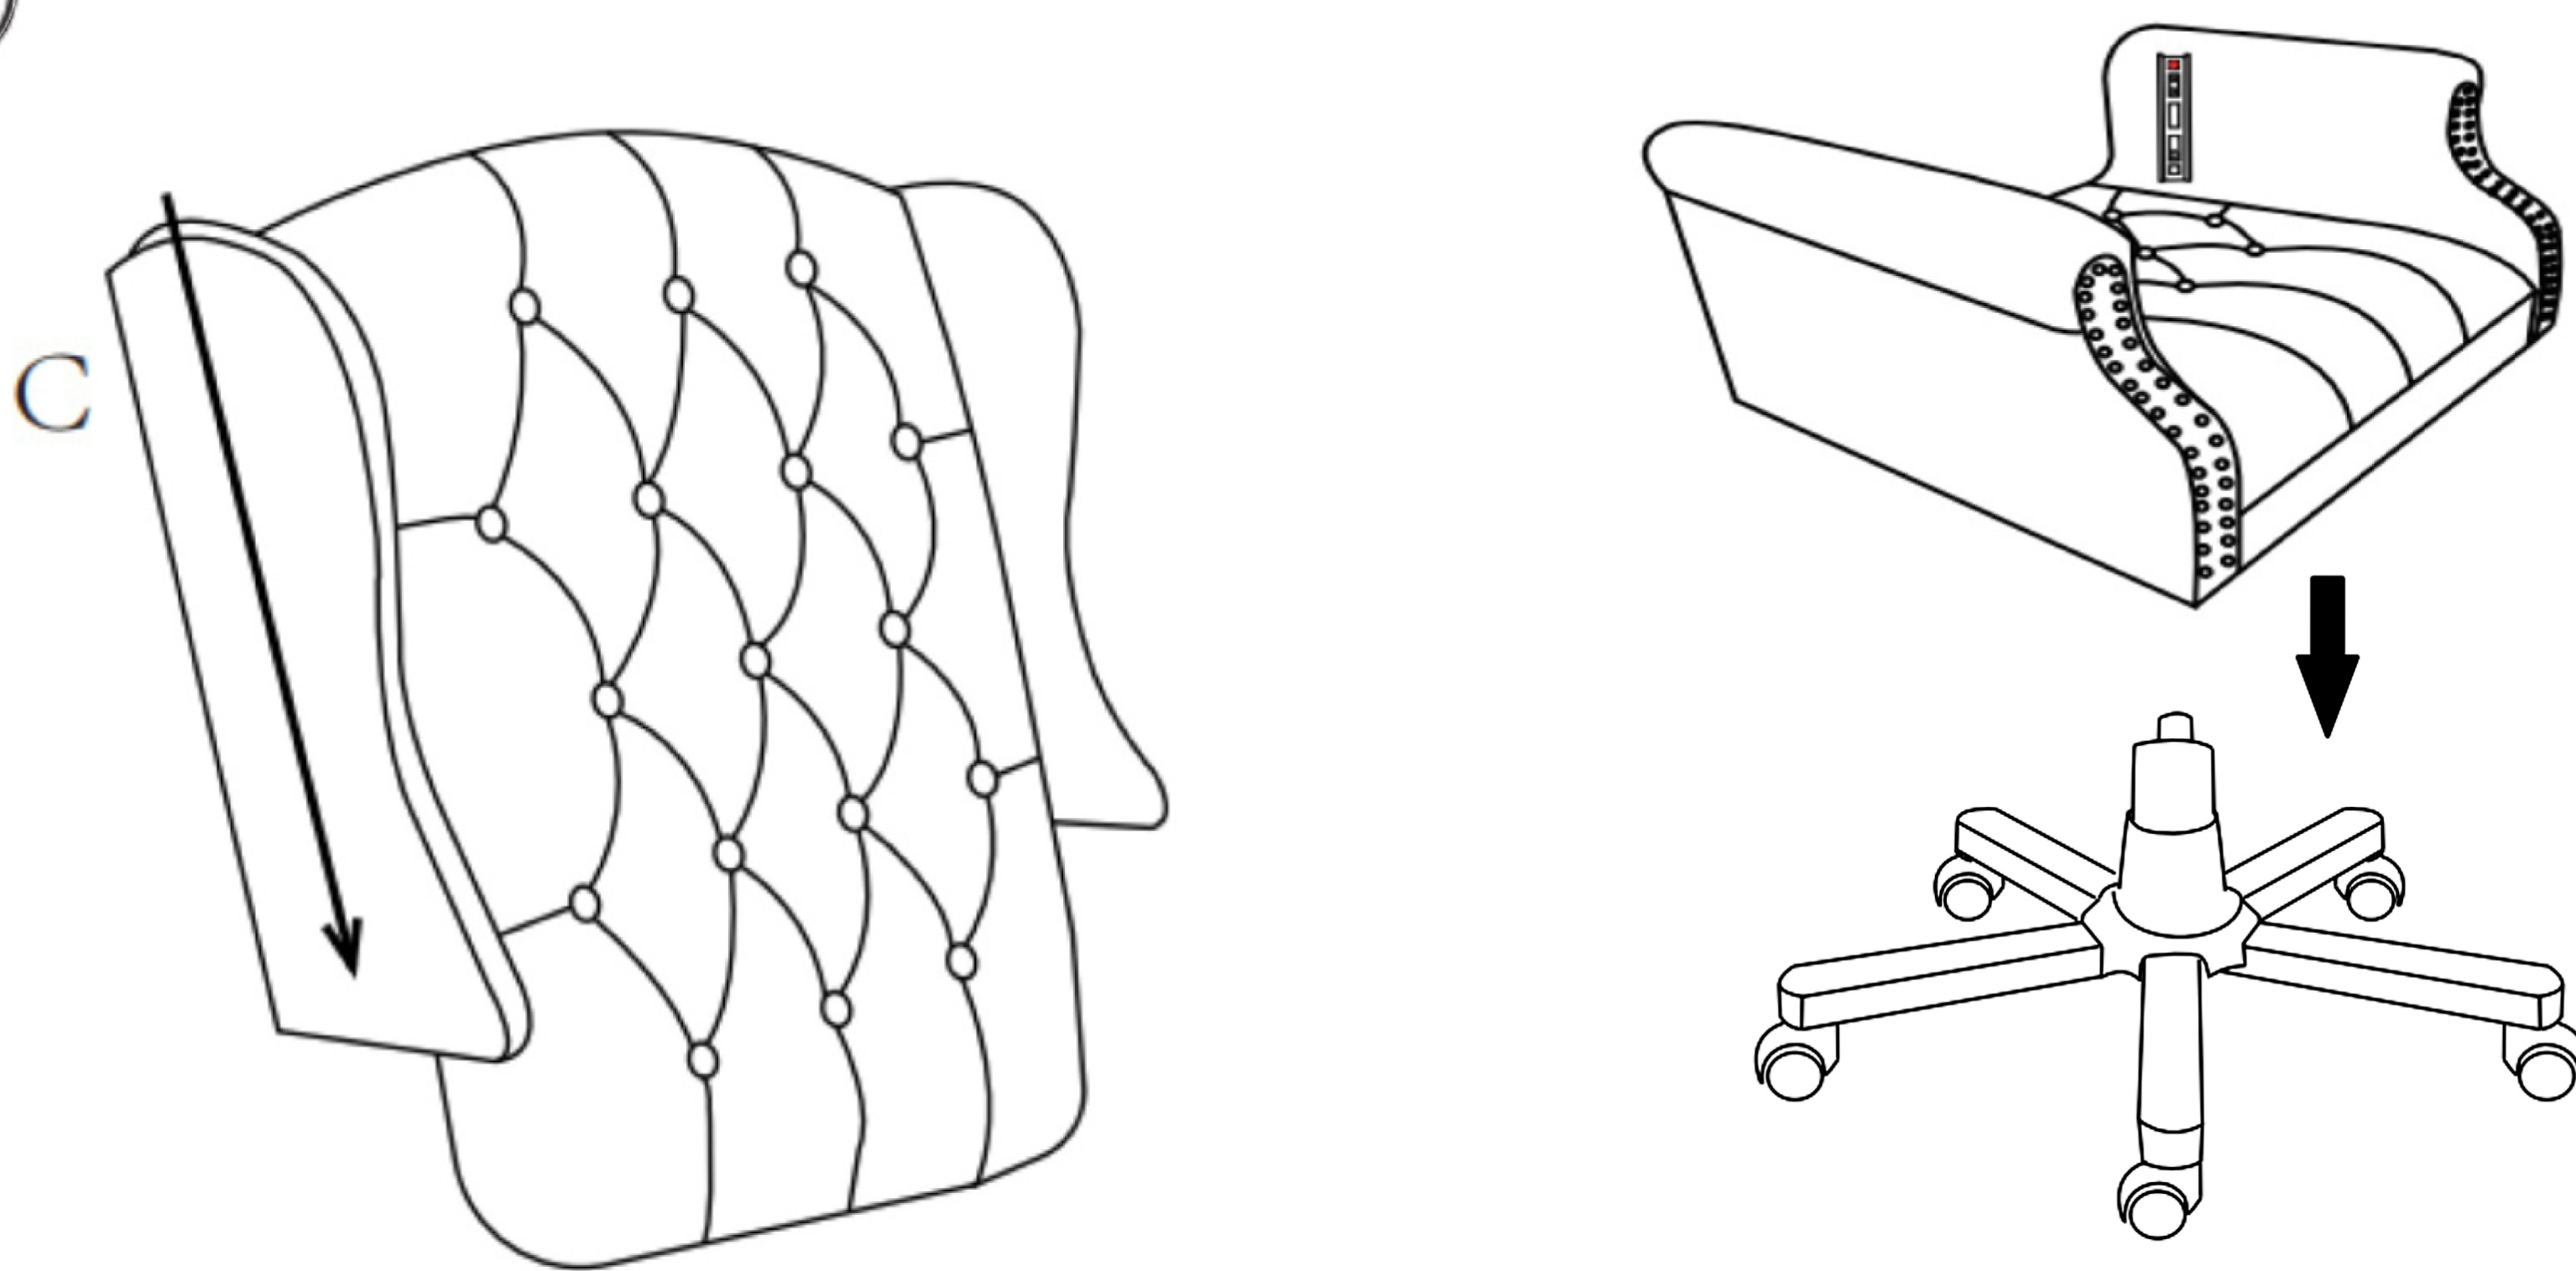


INSTRUCTION

(A)x1	(H)x5	① 	②  Fitting F loads the screw from the groove side of the screw hole.
(B)x1	(I)x2		
(C)x2	(J)x2		
(D)x1	(K)x13	③  Take out fitting J from fitting B. Take out fitting I from fitting C.	④  Install the pulled connection plugin on the backrest.
(E)x1	(L)x11		
(F)x1	(M)x1		
(G)x5	(N)x1	⑤ 	⑥ 