



ASSEMBLY INSTRUCTION

STEP 1

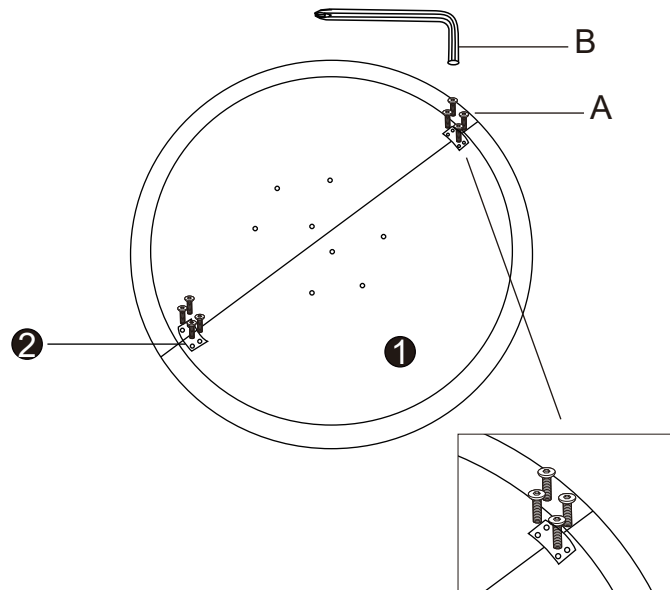


STEP 2

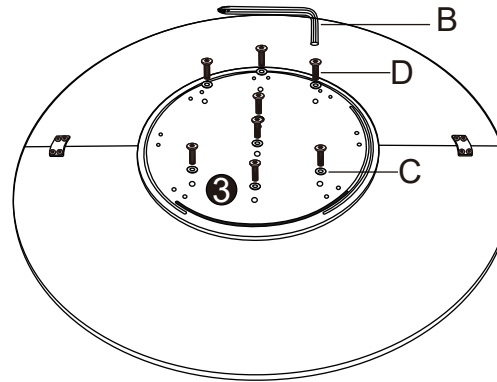


STEP 3


The direction of the hole is too inward

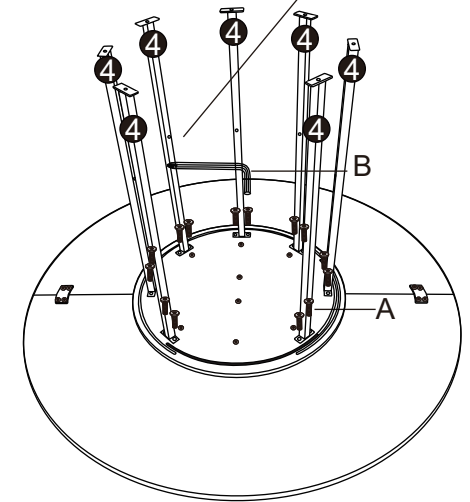


STEP 4

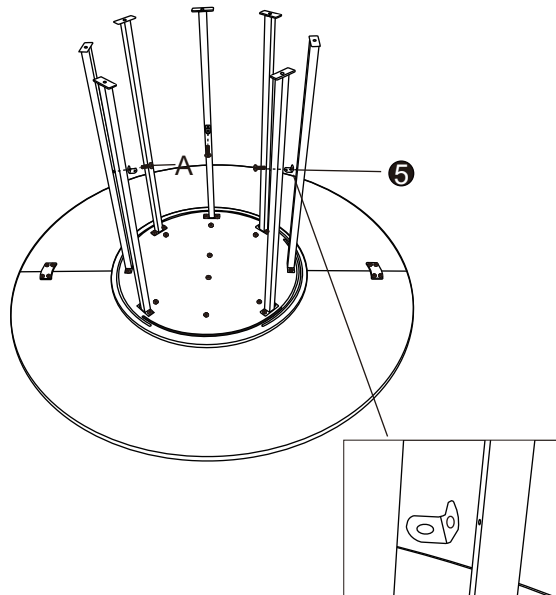

STEP 5


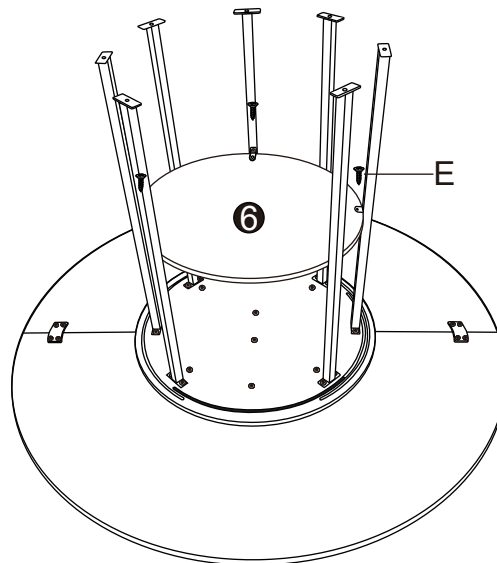


STEP 6

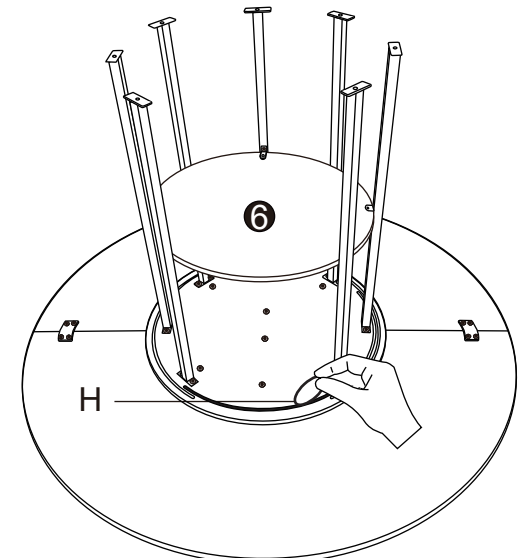


Apply a circle of wax block H in the groove of the track


STEP 7

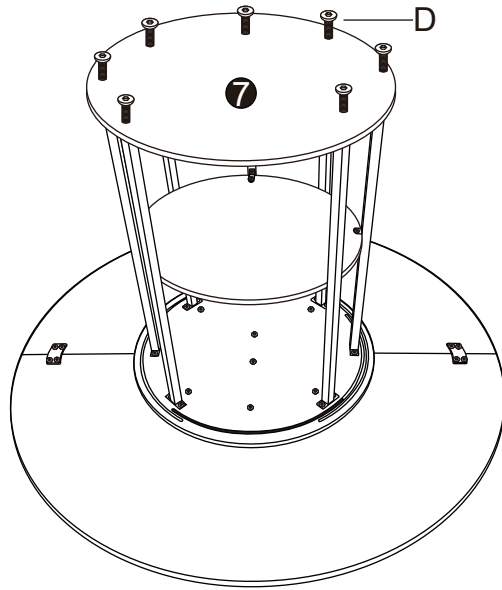


STEP 8

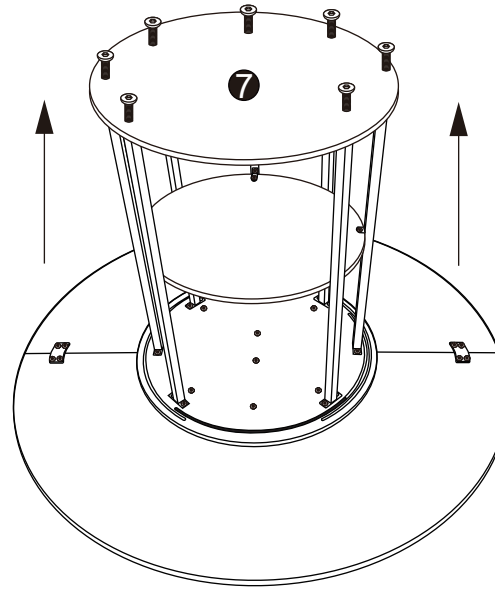



STEP 9







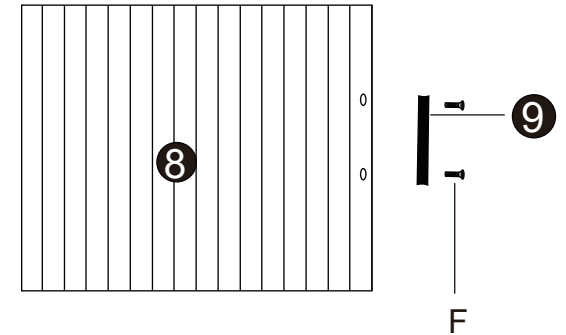


STEP 10

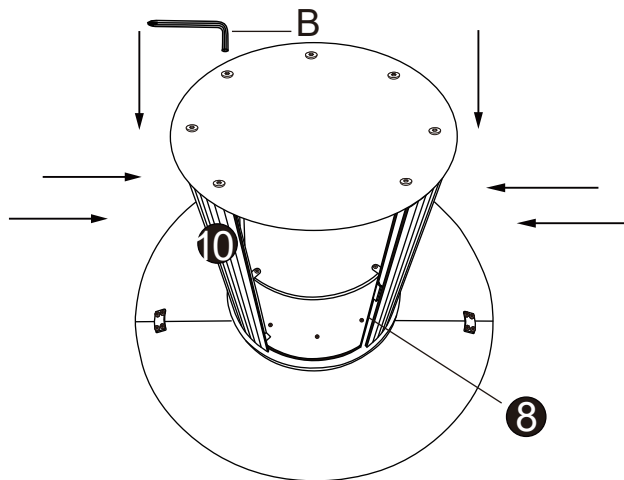

STEP 11

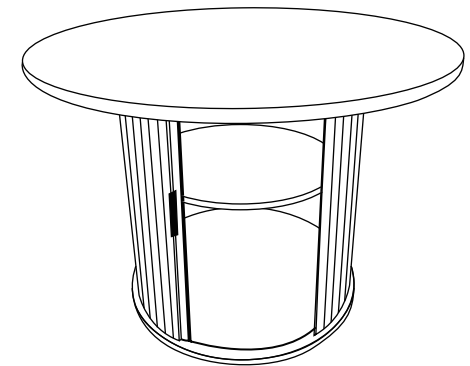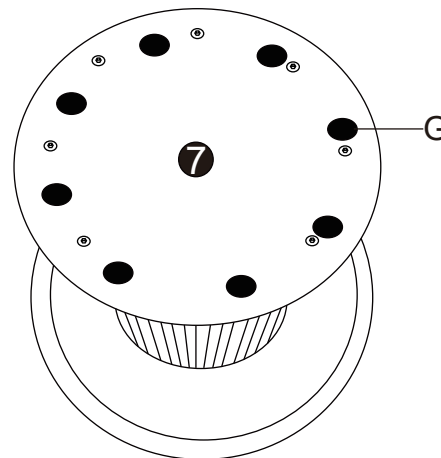

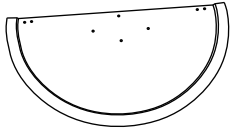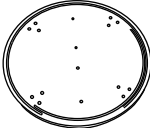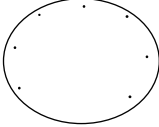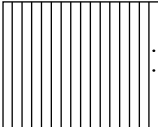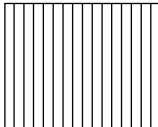1  x2	2  x2	3  x1	4  x7	5  x3
6  x1	7  x1	8  x1	9  x1	10  x3
A  M6x16mm x25	B  x1	C  M6x16x1.5mm x8	D  M6x30mm x15	E  M3x13mm x3
F  M4x8mm x2	G  x8	H  wax block x1		