



Adirondack Chair

[ADJUSTABLE BACK]




Customer support email address
MdeamService01@outlook.com

ATTENTION:


- 1.Please check the manual carefully and make sure you have received all the parts.
- 2.If there is anything missing, please let us know the letter of the needed part (see parts & hardware list below).
- 3.If there are any damaged pieces, please send us clear photos. We will respond promptly and offer our best support.
- 4.#9 tool is used for adjusting #7(gasket) and #8(anti-skid nut)
#10 tool is used for adjusting all kinds bolts



Parts List

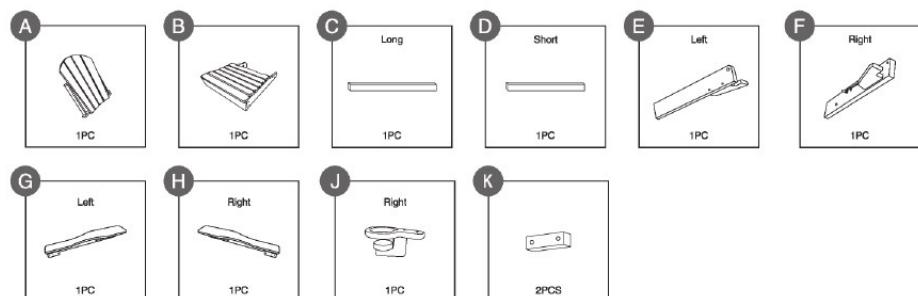

HARDWARE LIST

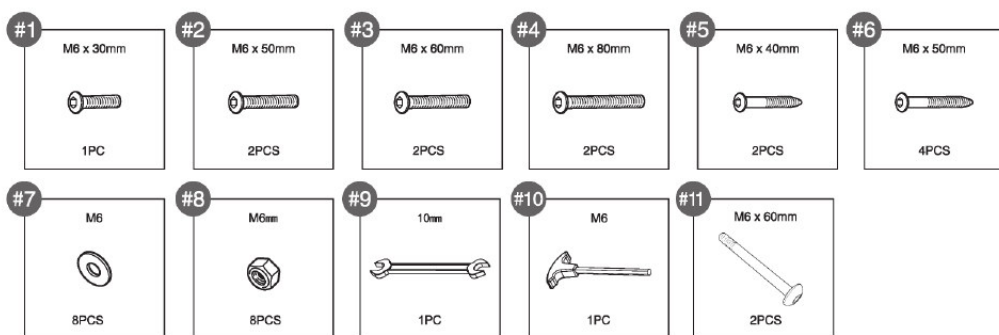


Assembly

STEP1



- C X1
- E X1
- F X1
- #6 X2

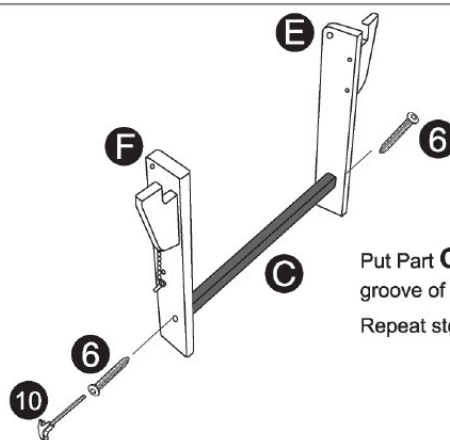


Put Part **C** into the clamping groove of Part **F** and lock it with **#6**
Repeat step to connect components **C** and **E**

STEP2



- B X1
- E X1
- F X1
- #3 X2
- #7 X2
- #8 X2

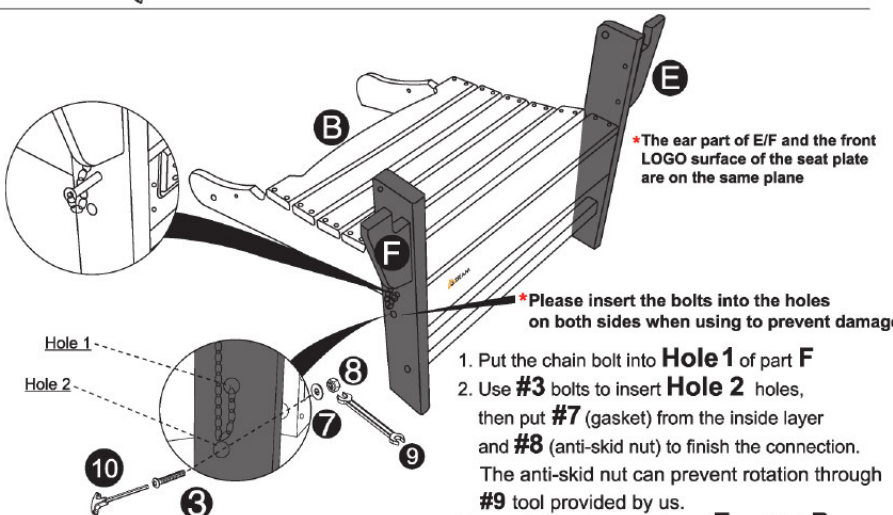


Please insert the bolts into the holes on both sides when using to prevent damage
1. Put the chain bolt into **Hole 1** of part **F**
2. Use **#3** bolts to insert **Hole 2** holes, then put **#7** (gasket) from the inside layer and **#8** (anti-skid nut) to finish the connection. The anti-skid nut can prevent rotation through **#9** tool provided by us.
3. repeat steps to connect part **E** and Part **B**.

STEP3



- D X1
- #5 X2

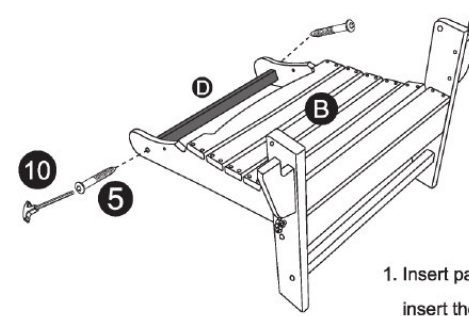


1. Insert part **D** into the groove of Part **B**, and then insert the lock from the outside of Part **B** with **#5** bolt.

STEP4



- J X1
- H X1
- #1 X1

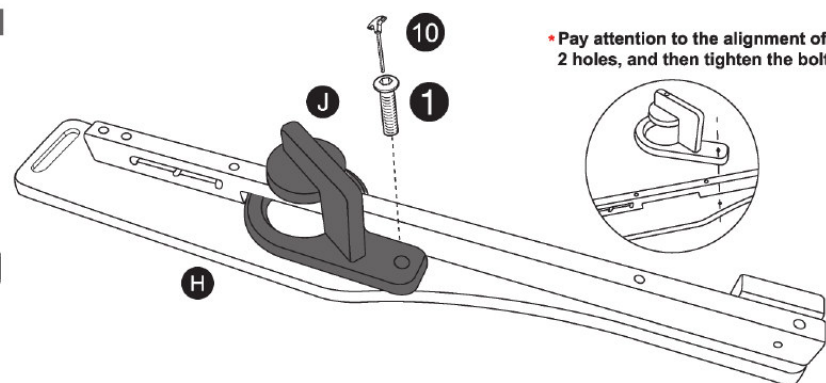


Use **#1** to connect **J** and **H** components

STEP5



- G X1
- H X1
- #11 X2
- #7 X2
- #8 X2

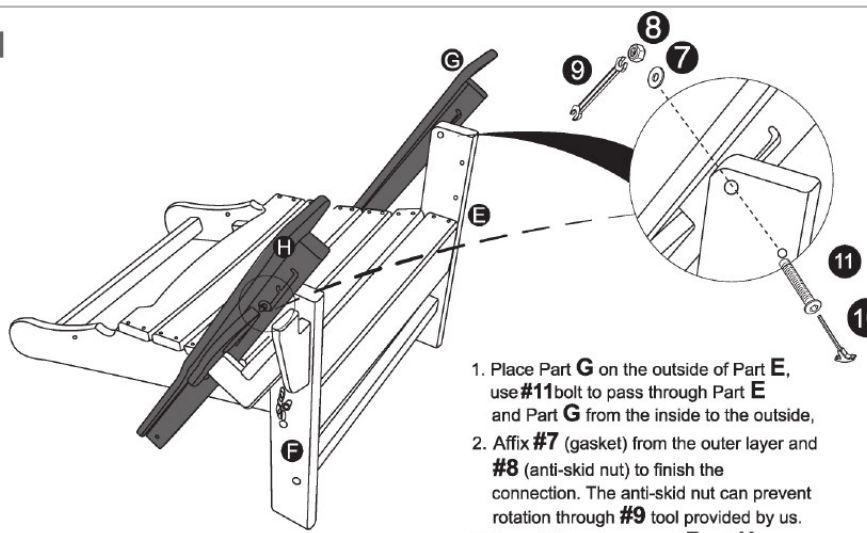


1. Place Part **G** on the outside of Part **E**, use **#11** bolt to pass through Part **E** and Part **G** from the inside to the outside,
2. Affix **#7** (gasket) from the outer layer and **#8** (anti-skid nut) to finish the connection. The anti-skid nut can prevent rotation through **#9** tool provided by us.
3. Repeat steps to connect **F** and **H**.

STEP6



- A X1
- #4 X2
- #7 X2
- #8 X2

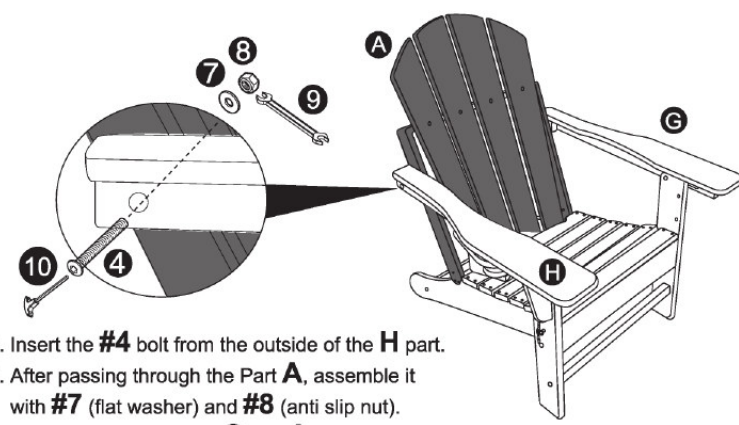


1. Insert the **#4** bolt from the outside of the **H** part.
2. After passing through the Part **A**, assemble it with **#7** (flat washer) and **#8** (anti slip nut).
3. Repeat step to connect **G** and **A**.

STEP7




- K X2
- #2 X2
- #6 X2
- #7 X2
- #8 X2

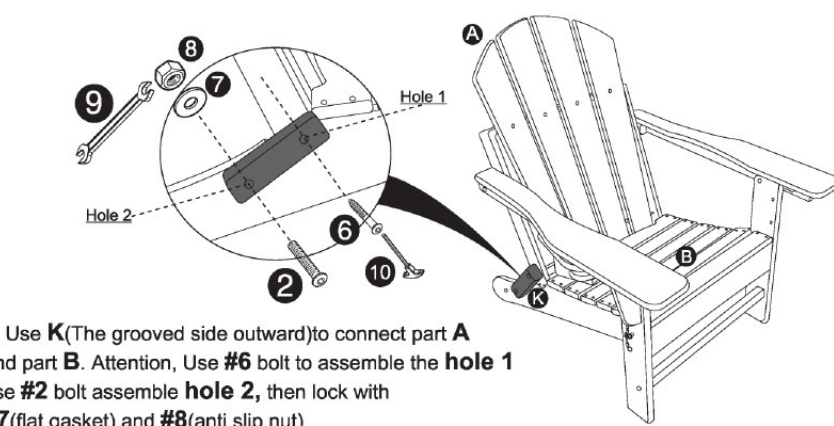

1. Use **K**(The grooved side outward)to connect part **A** and part **B**. Attention, Use **#6** bolt to assemble the **hole 1** use **#2** bolt assemble **hole 2**, then lock with **#7**(flat gasket) and **#8**(anti slip nut)

STEP8

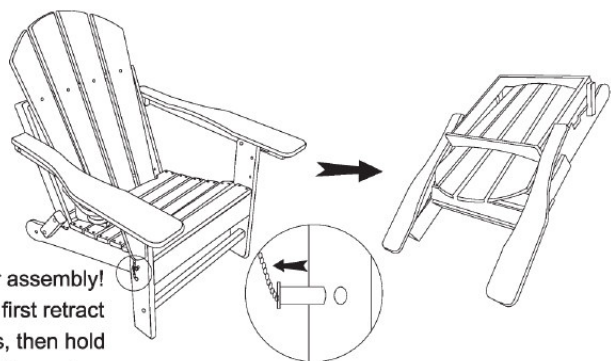


Congratulations on completing your assembly!
If you need to fold the chair, please first retract the ottoman, remove the chain bolts, then hold the top of the chair and gently push forwards.

HOW TO ADJUST THE INCLINATION OF CHAIR BACK


STEP9

(1)

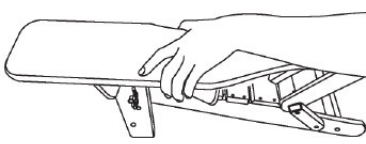


1. Grab the left and right armrests with your hands as shown

(2)

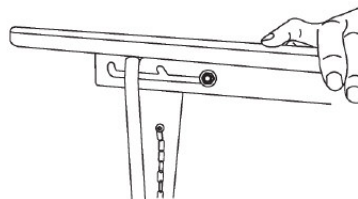


2. Raise the armrest with both hands

(3)

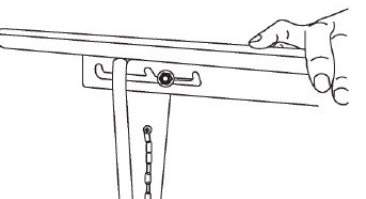

3. Move the armrests forward and backward to adjust the back angle

(4)

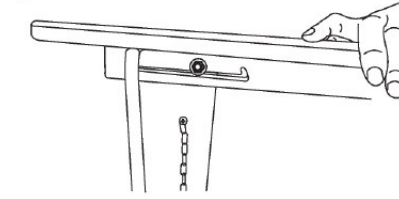

4. Snap into the groove to complete the adjustment

Attention

We will provide our best customer support.
If you have any questions or issues during installation, please send an email (see below) with your telephone number and address. We will provide installation support, guided videos and offer reissues for any defective parts.
All queries will be addressed within 24 hours.
Customer satisfaction is of the utmost importance to us!

Customer support email address

MdeamService01@outlook.com