

Buffet Cabinet

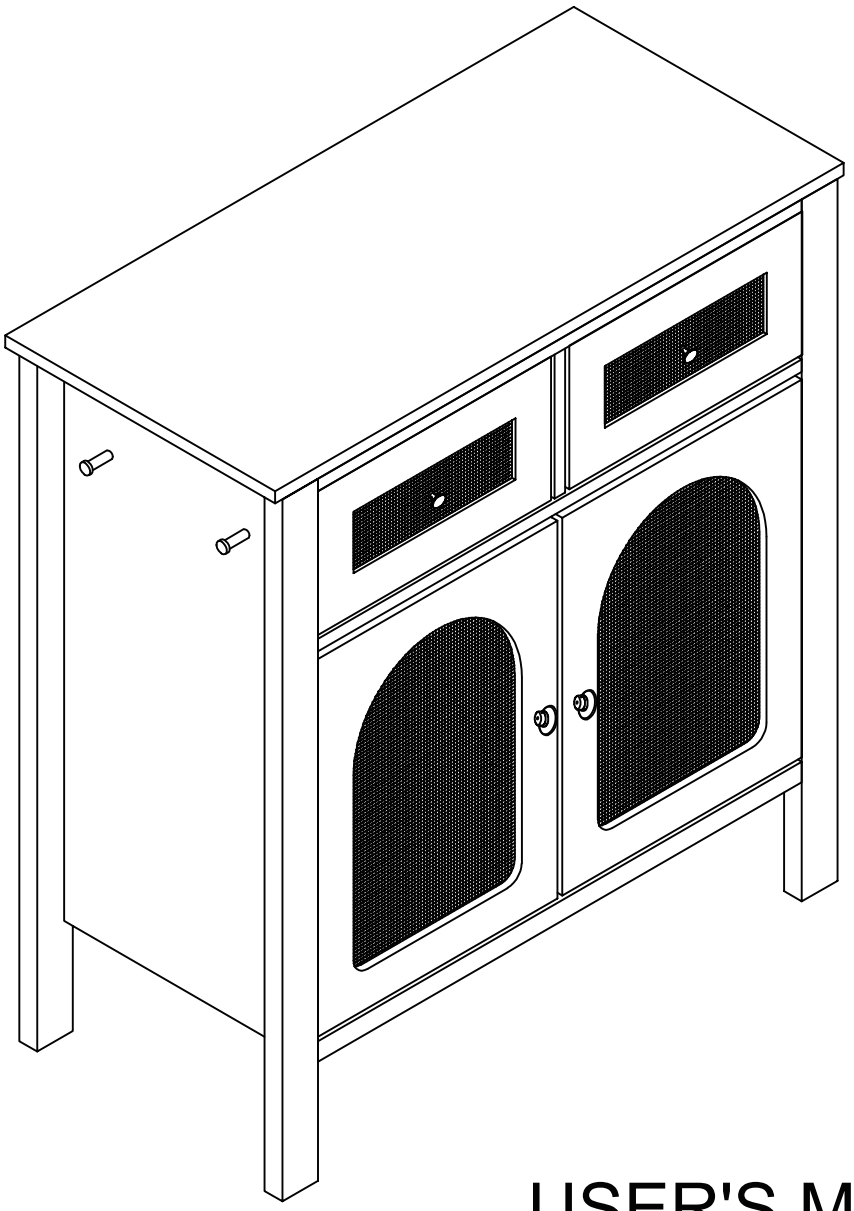


USER'S MANUAL

PXHYHM223FG,PXHHYHM223BK

Before You Start

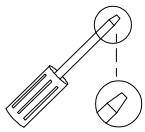

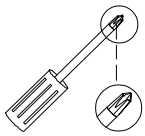



1. Read each step carefully and follow the correct order.

2. Separate and count all parts and hardware.


3. Leave enough space for the assembly process.

4. Prepare the following tools: Flat Head Screwdriver, Cross Head Screwdriver and Hammer.


5. Note: If you use an electric drill or electric screwdriver to tighten the screws, please be careful to slow down and stop when tightening the screws. Otherwise, the screws may fall off.
(Using an electric screwdriver can increase assembly speed).

Useful Tips

Assembly Personnel Required: 1-2 People



- Unpack the item in the area where you plan to store it to avoid excessive lifting.



- Identify, sort, and count the parts before attempting assembly.



- Use a hammer to gently tap in the compression pins.



- The sliders are marked with R (right) and L (left) for proper placement.

- Make sure to always point the tip of the top of the cam lock toward the outer edge.



- If there is a back panel in the package, install it to ensure your unit is complete and sturdy.




- Tighten all the screws provided for the back panel, which can enhance the stability of the product. If it is difficult to tighten, you can use a hammer to secure it and then tighten it.

- Do not use harsh chemicals or abrasive cleaners on this item.


- Never push, pull, or drag your furniture.

Board Identification

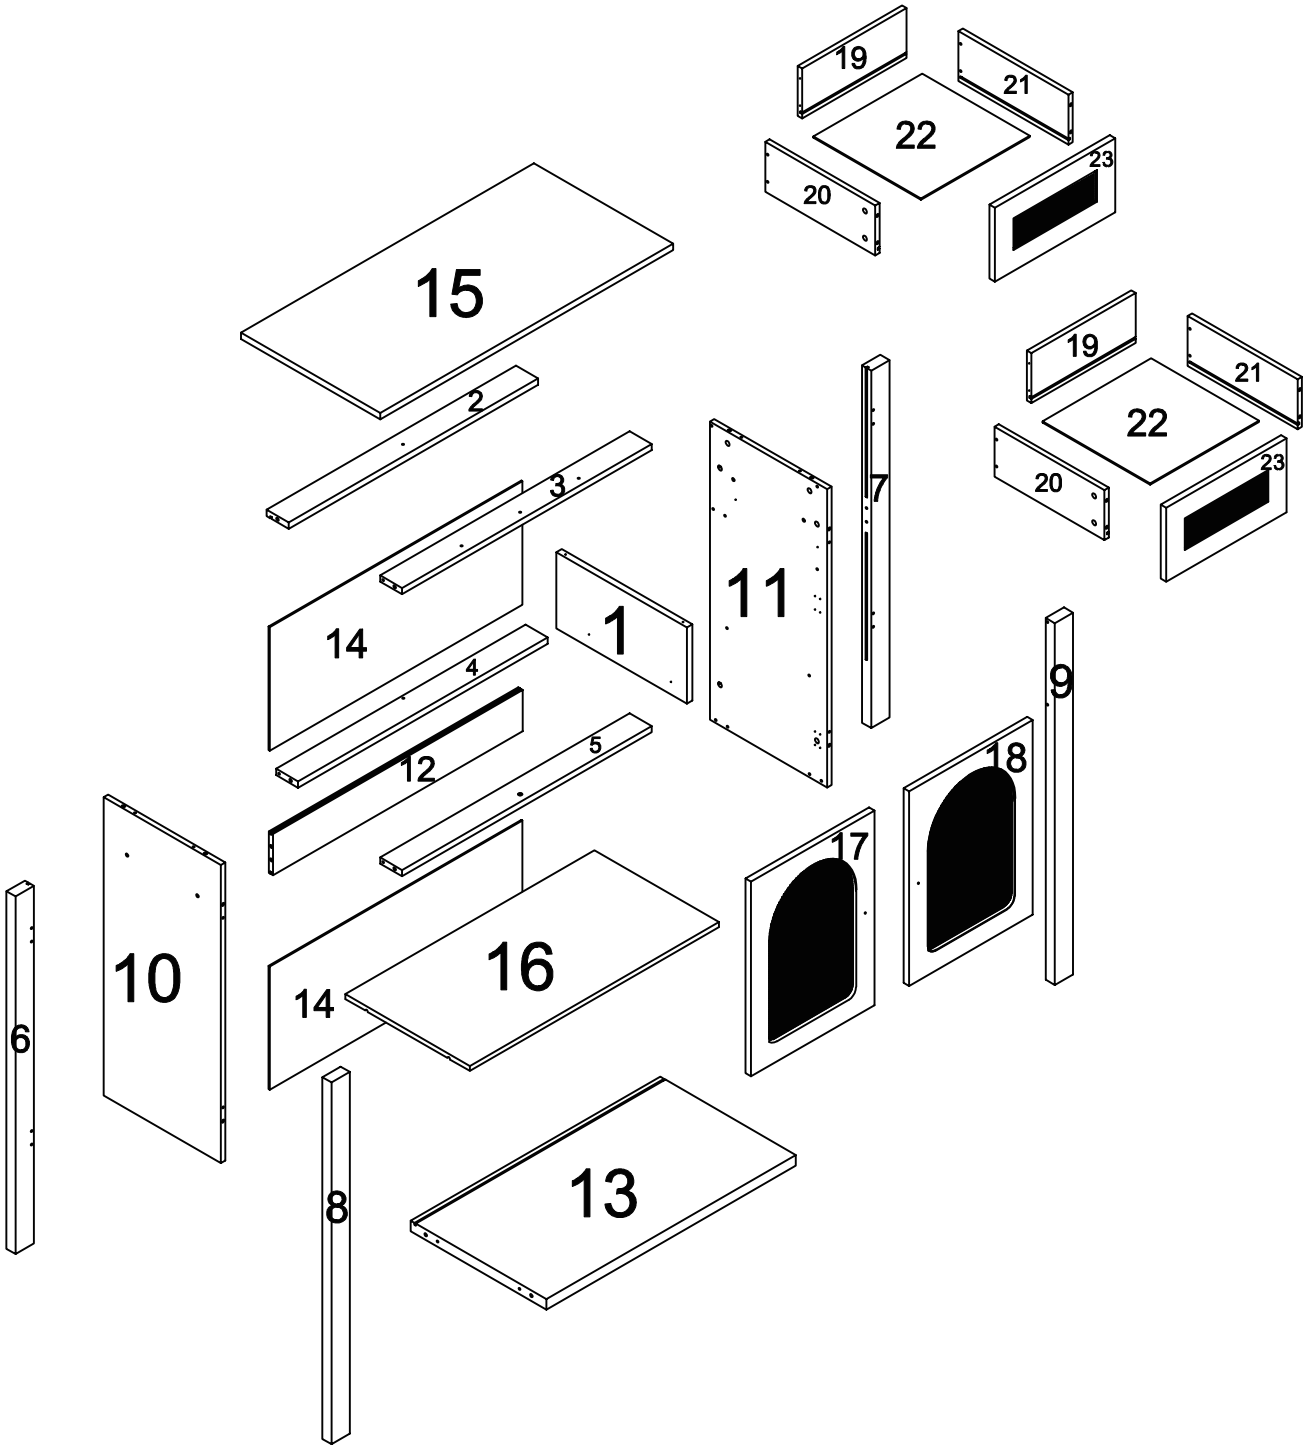


Board Identification

1

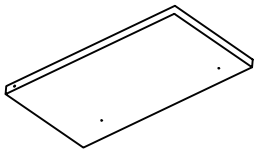


×1

2

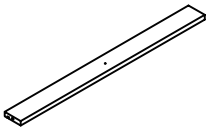


×1

3

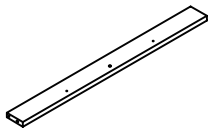


×1

4

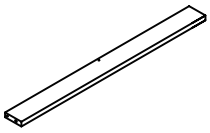


×1

5

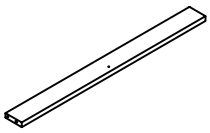


×1

6

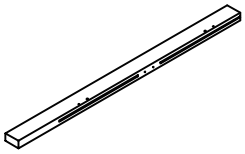


×1

7

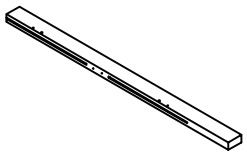


×1

8

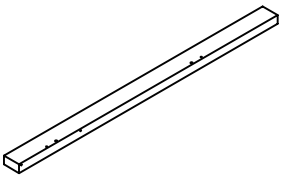

×1


9

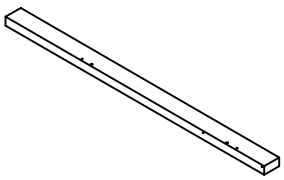

×1


Board Identification

10

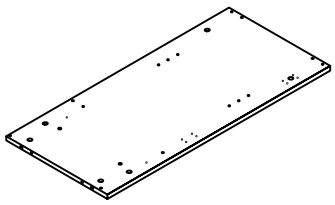


×1

11

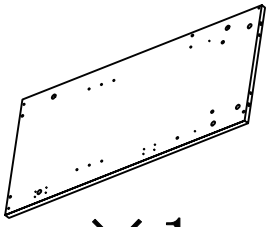


×1

12

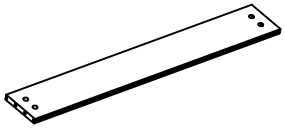


×1

13

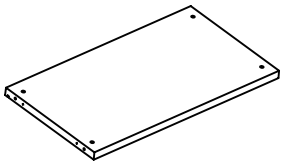


×1

14

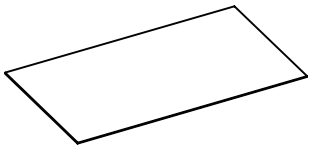


×2

15

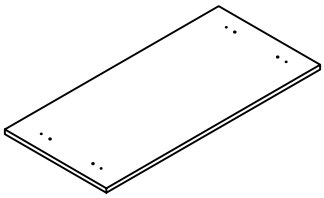


×1

16

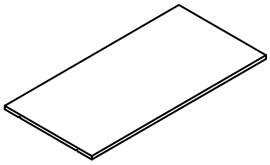


×1

17



×1


18



×1


Board Identification

19

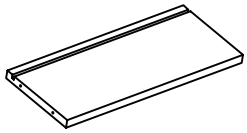


×2

20

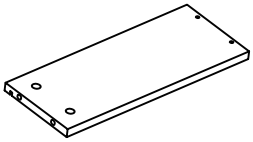


×2

21

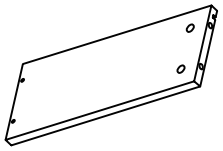


×2

22

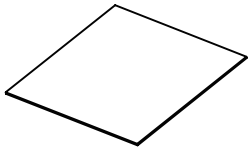

×2


23

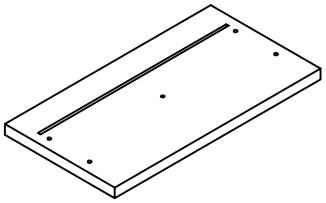

×2


Part List

A

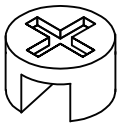


×36

B

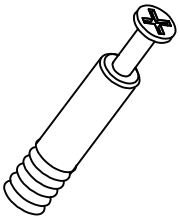


×36

C

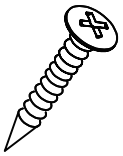


Ø4×30MM ×12

D

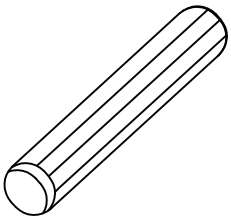

×22


E

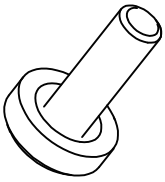

M6×20mm

×4

F

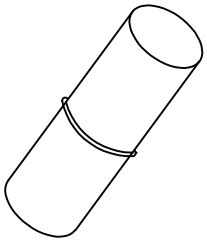

×4

G





Ø4×8mm


×2

H



Ø4×20mm ×2

I






Ø4×16mm

×2


Part List

J

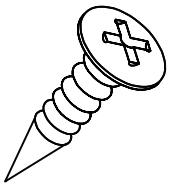


Ø4×12mm ×48

K

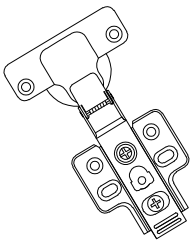


×4

L



×2

M

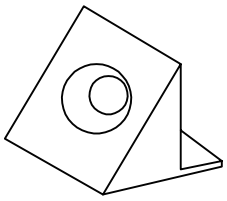


×8


Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.


1

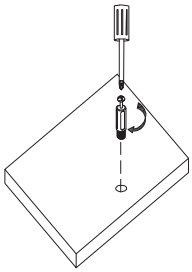

2

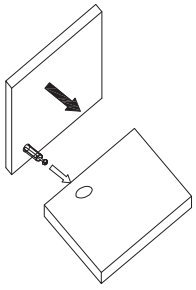


3

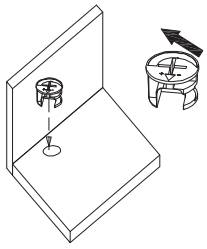



The opening must point toward the edge of the board


4

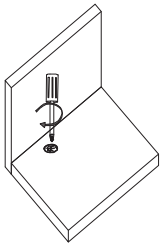


Step 1

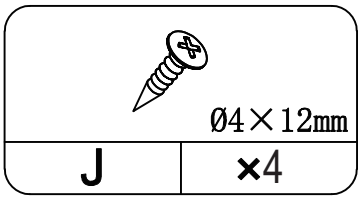

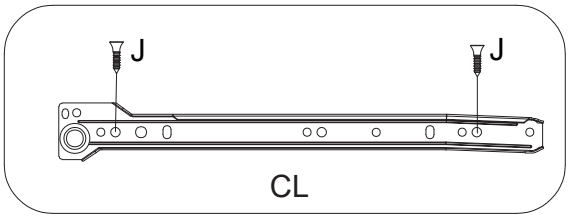

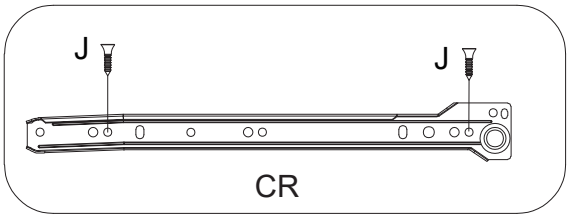

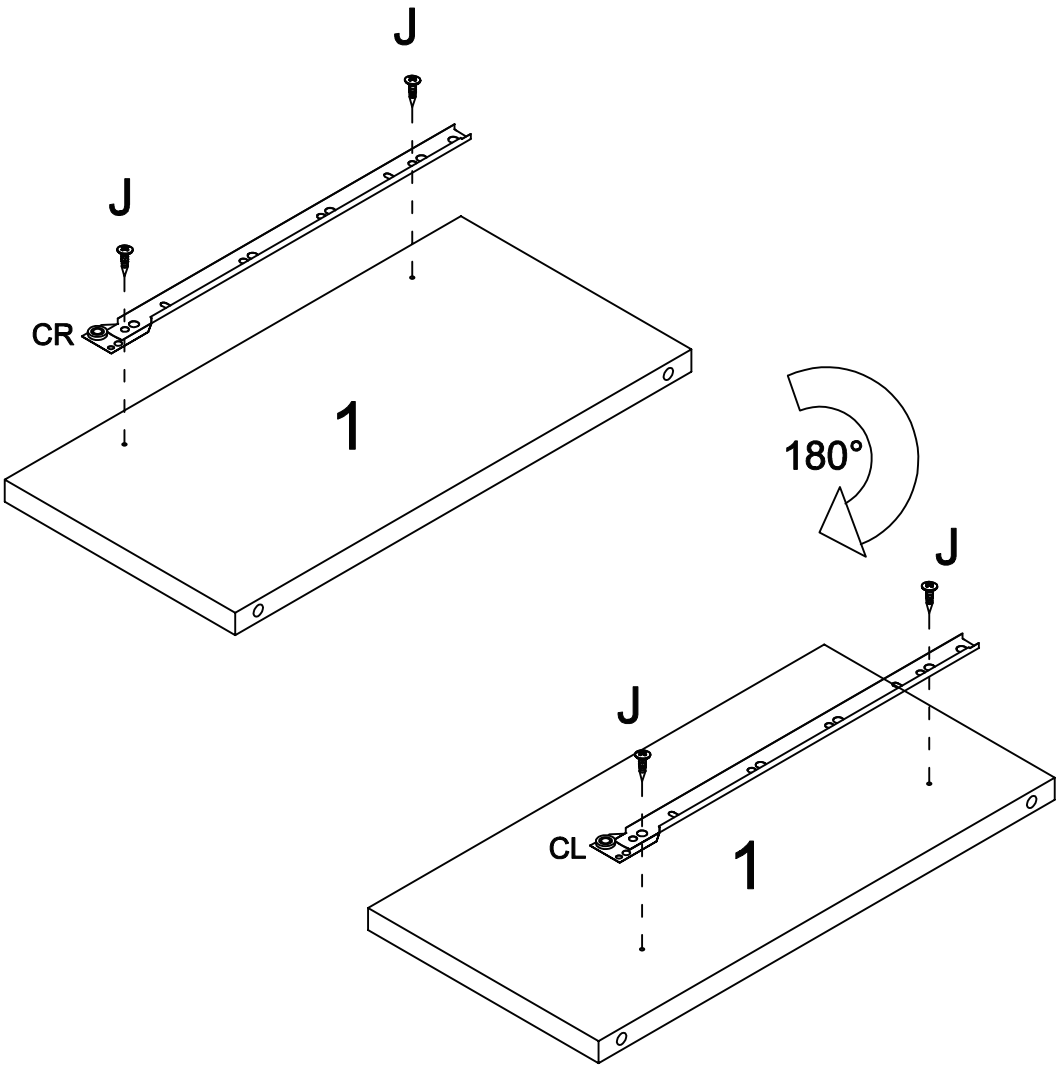


Step 2



Ø4×30MM

C	×4

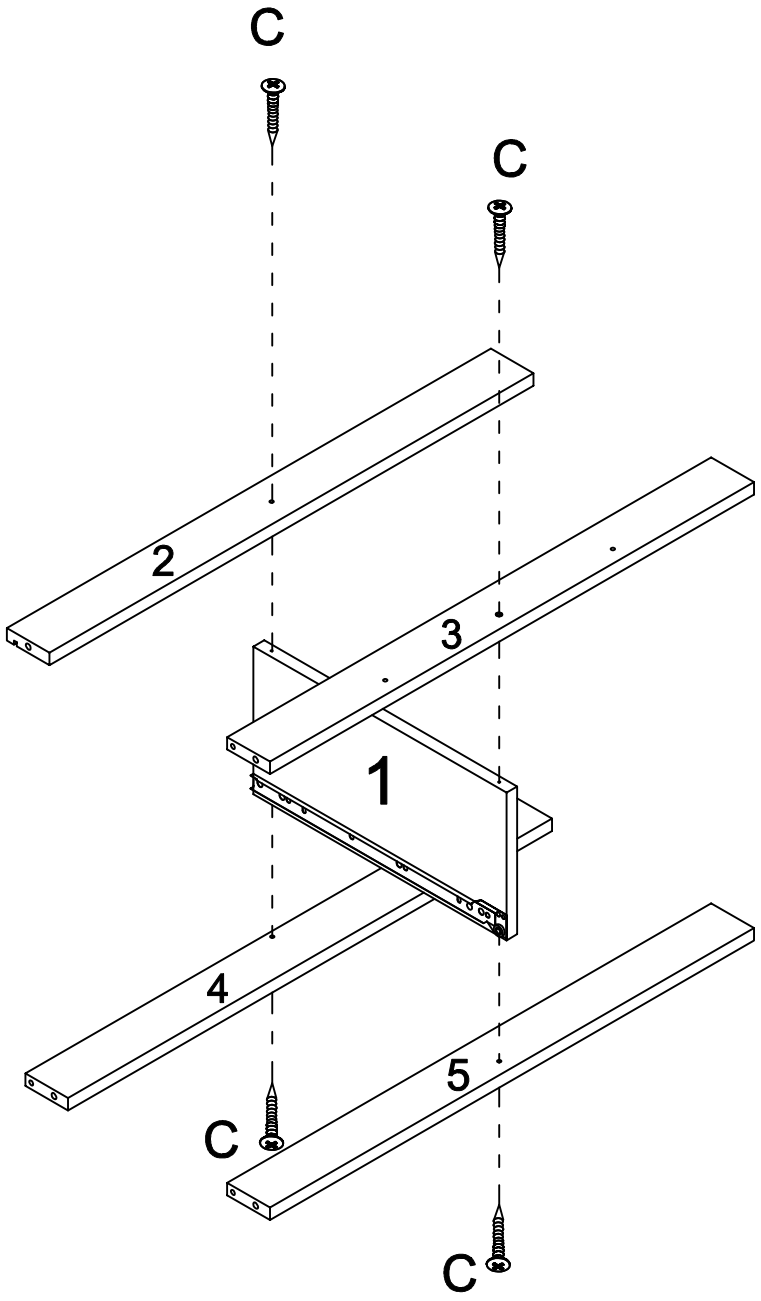



Step 3


A	×8


B	×8

D	×8

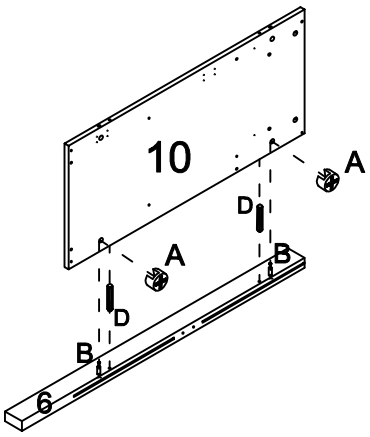


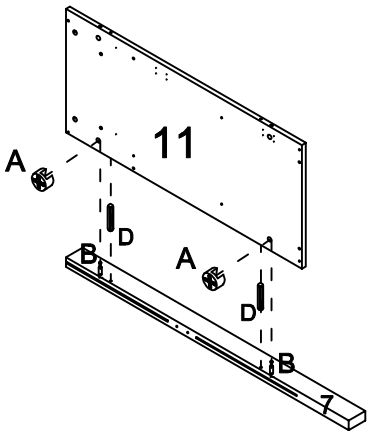


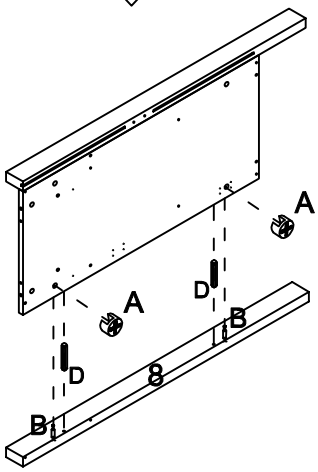


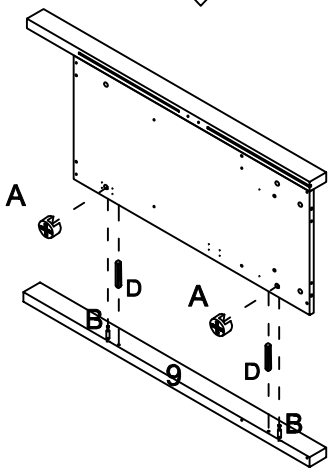



Step 4

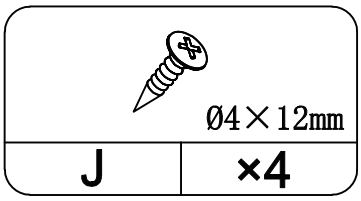

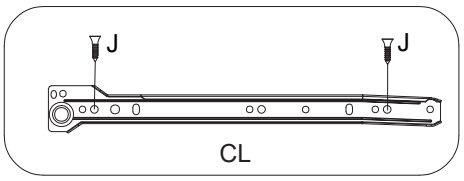


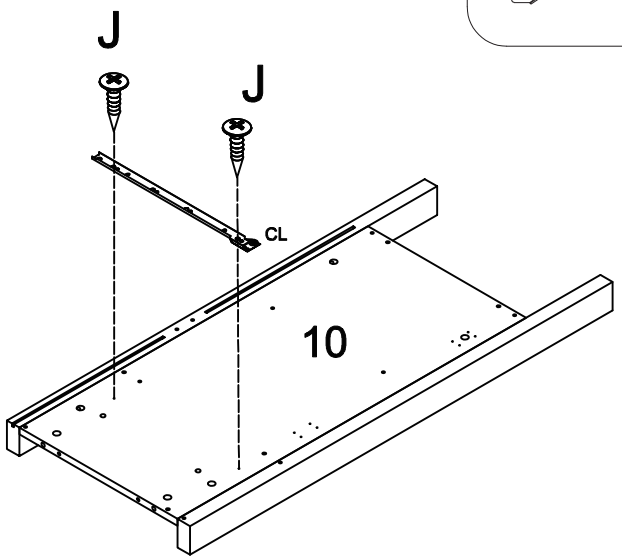

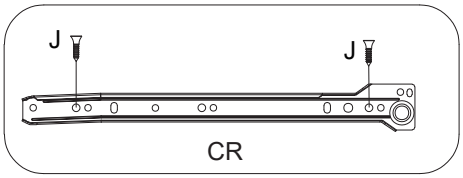


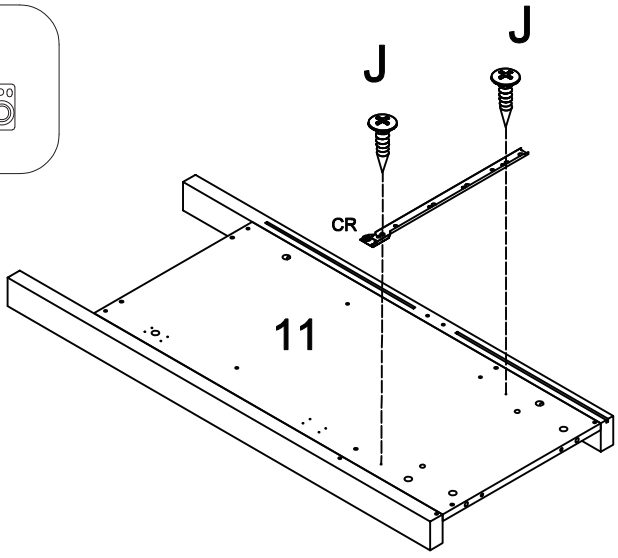


Step 5

	
A	×4

	
B	×4


	
D	×3

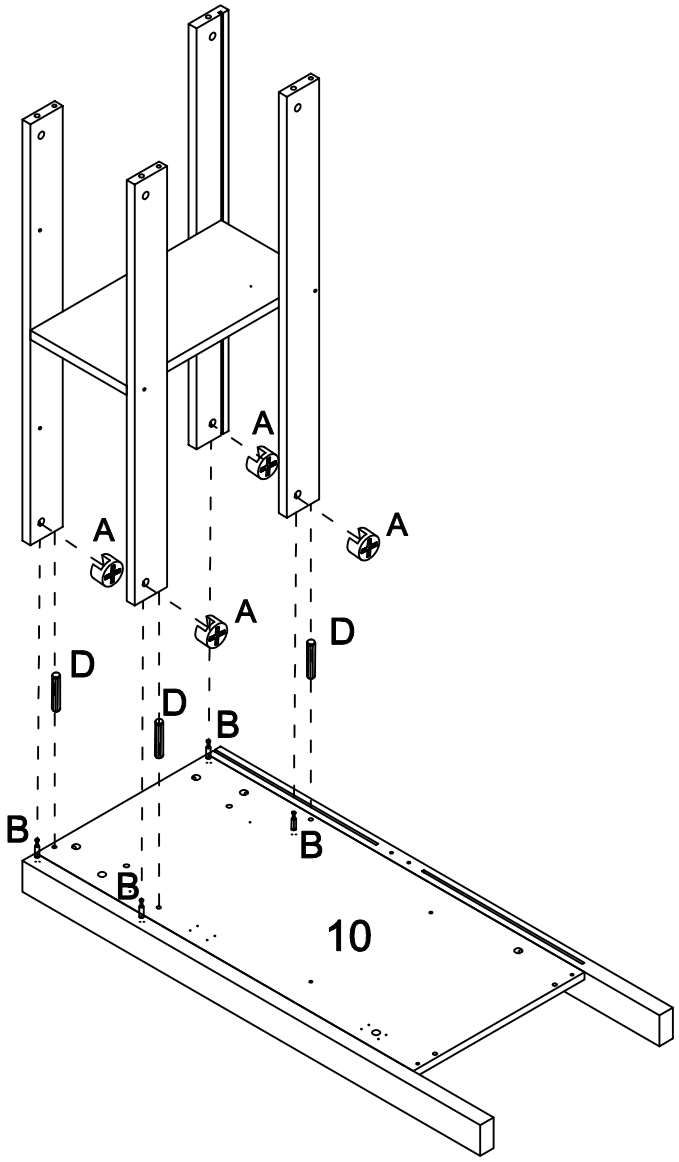


Step 6


A	×2


B	×2

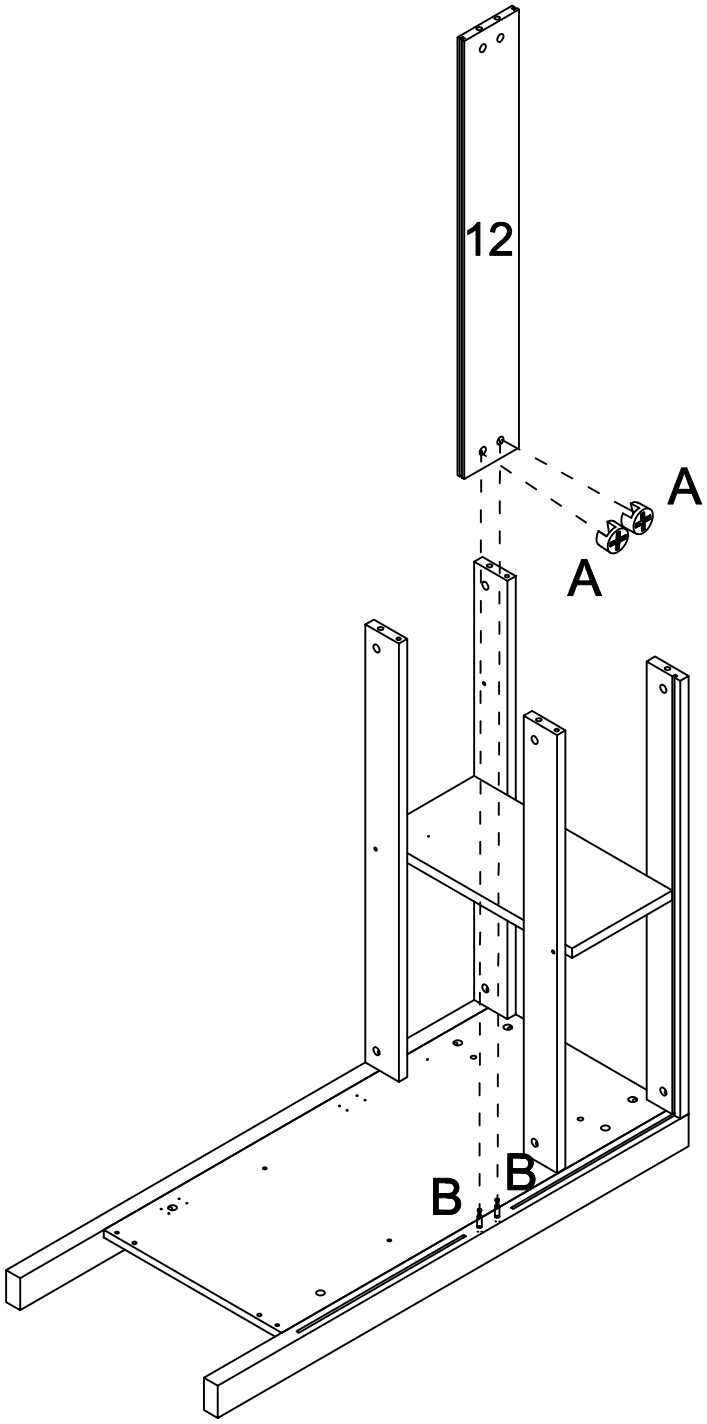


Step 7

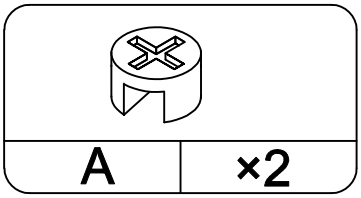


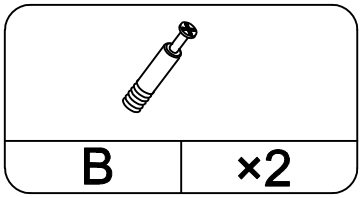

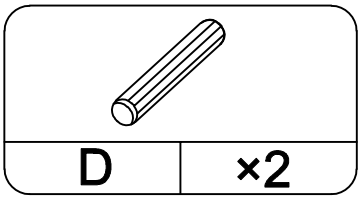


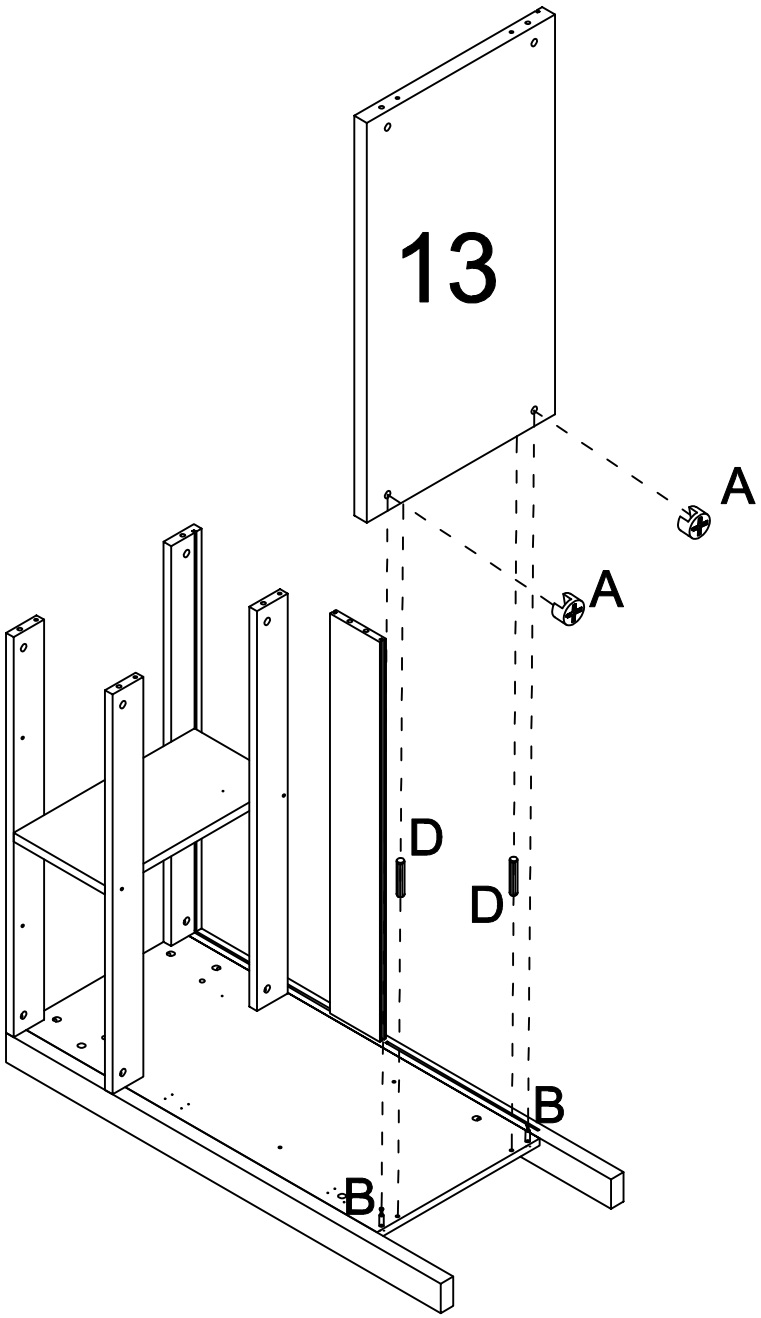



Step 8

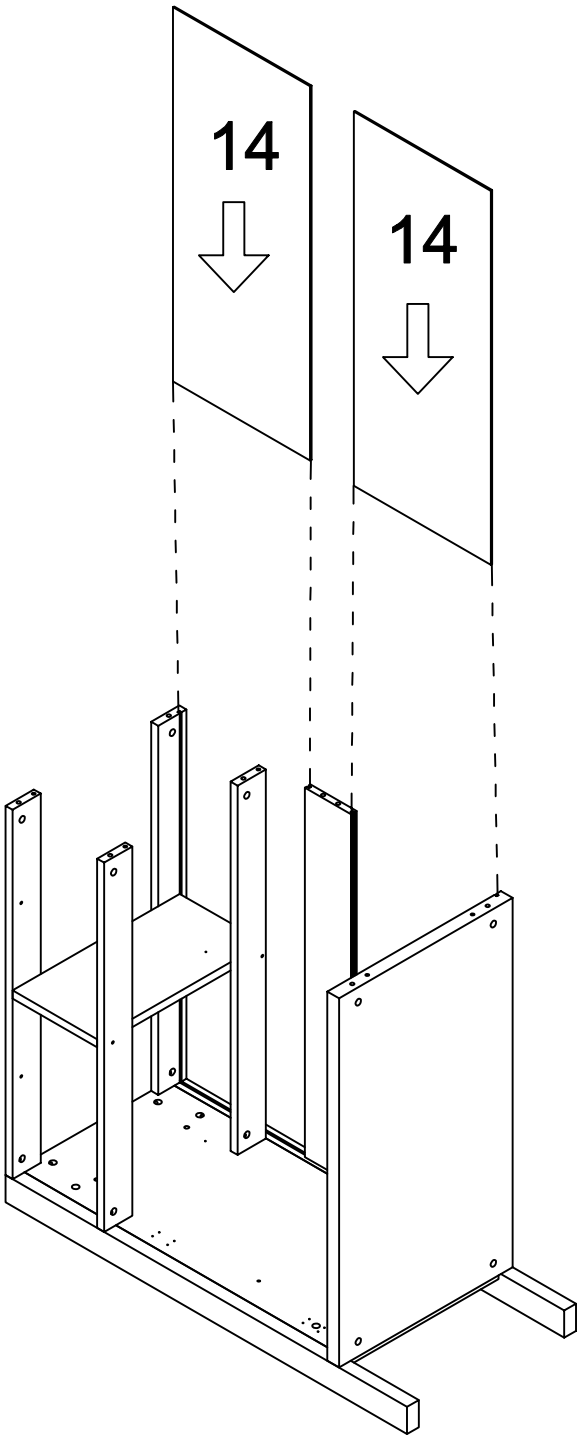



Step 9

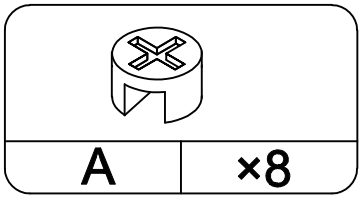

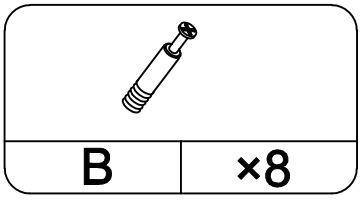

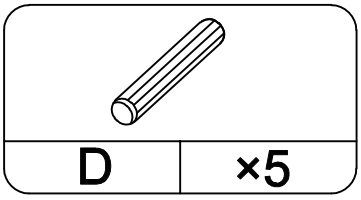

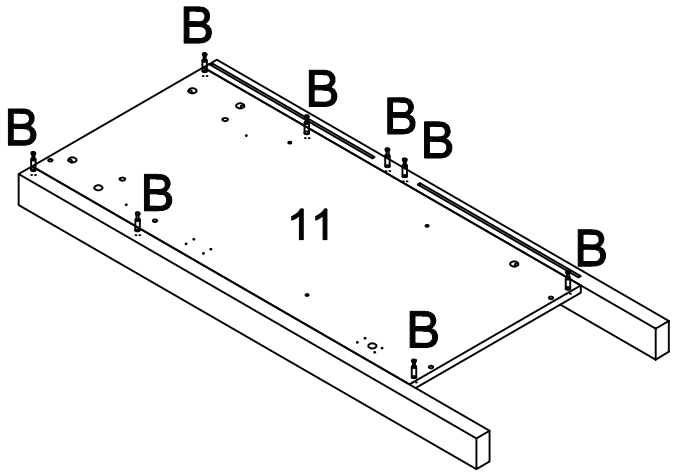

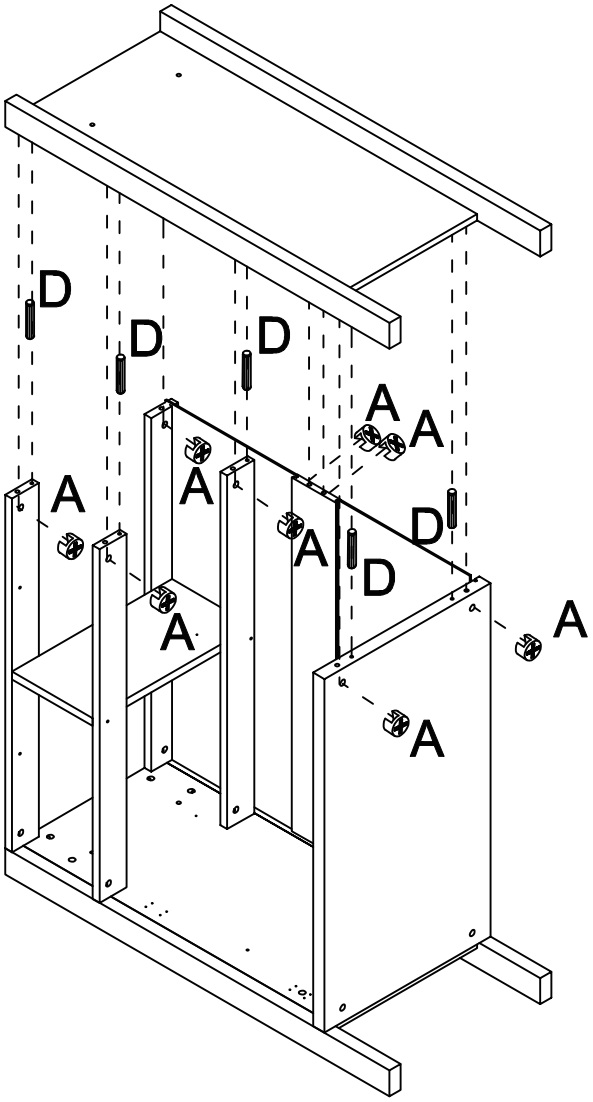

Step 10


A	×4

B	×4


D	×4


H	×2

Ø4×20mm

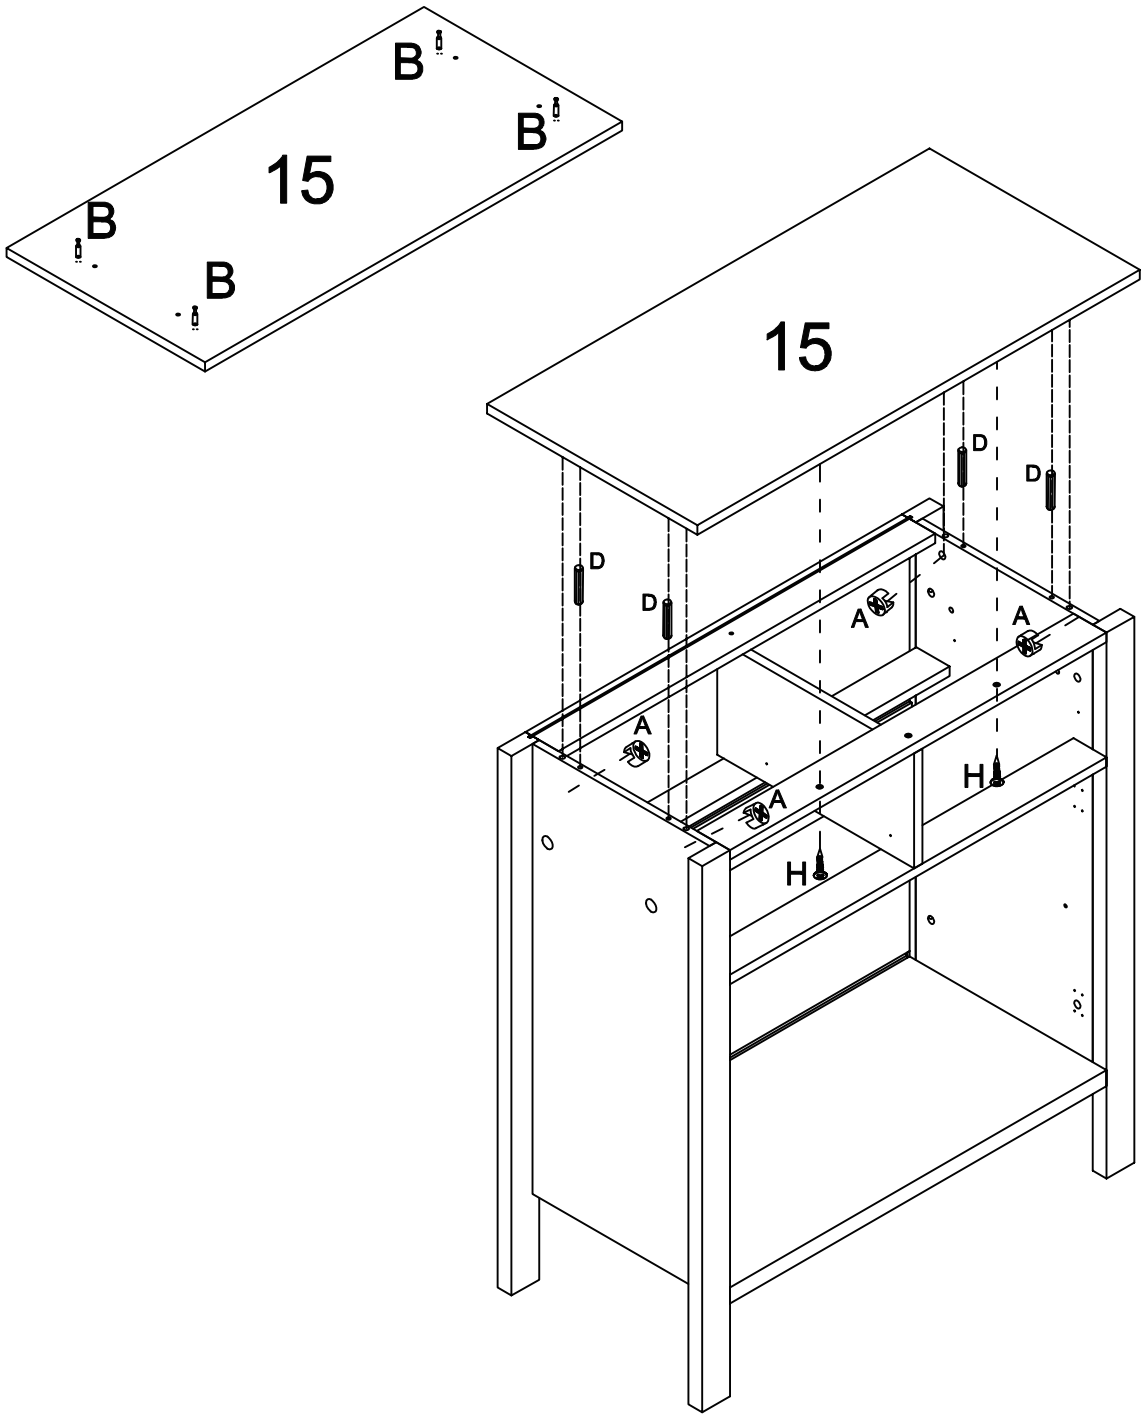


Step 11

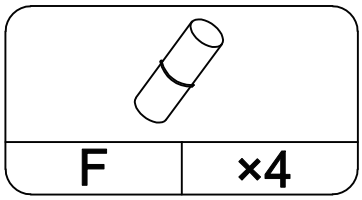

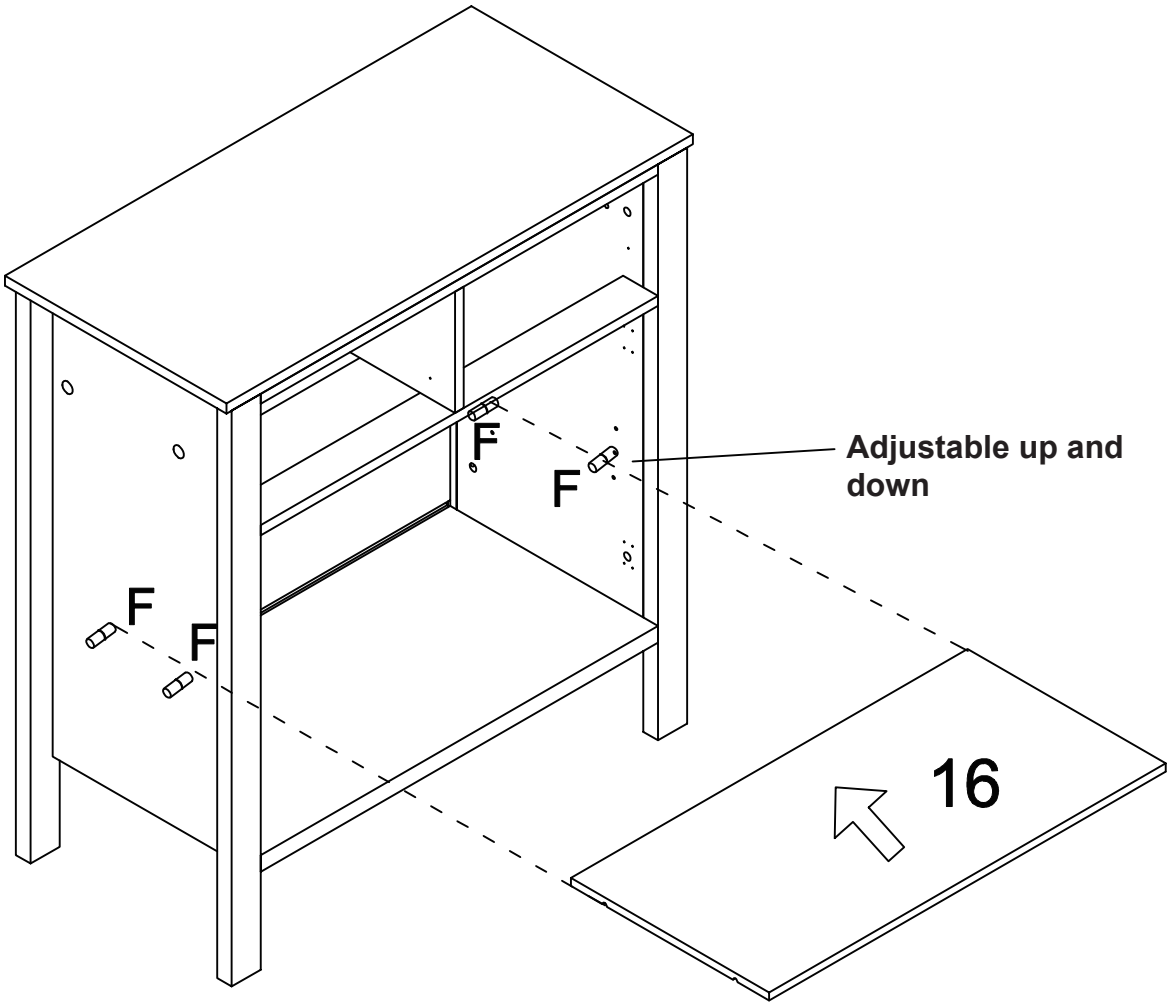


Step 12

Ø4×30MM	
C	×8

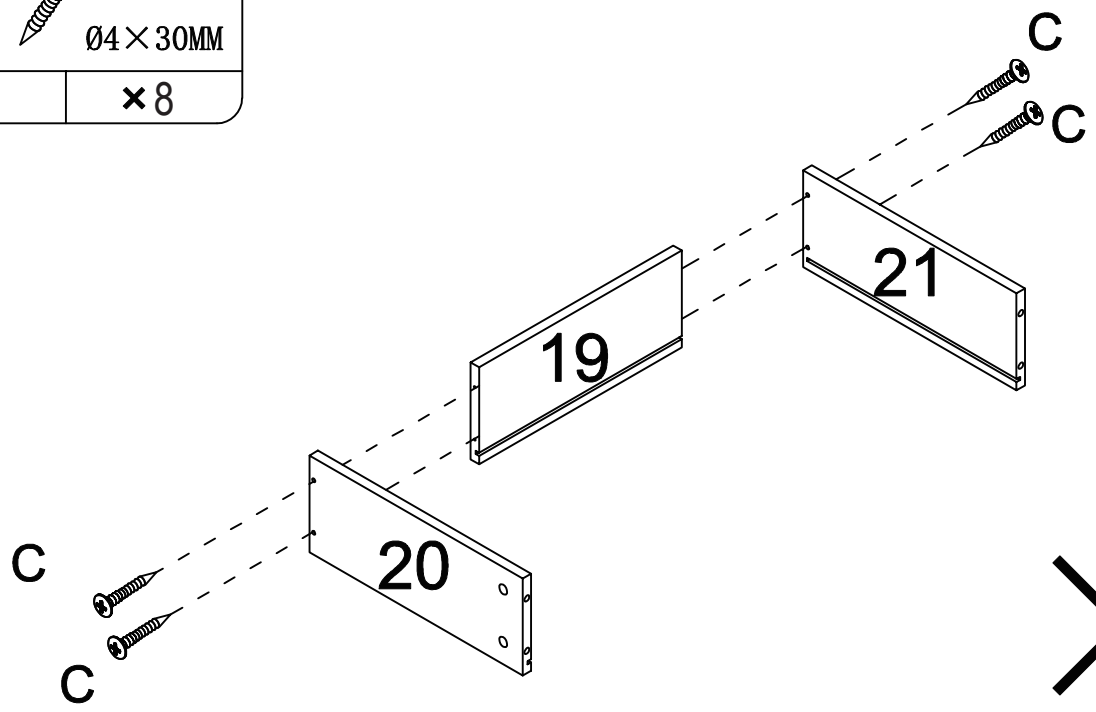

×2

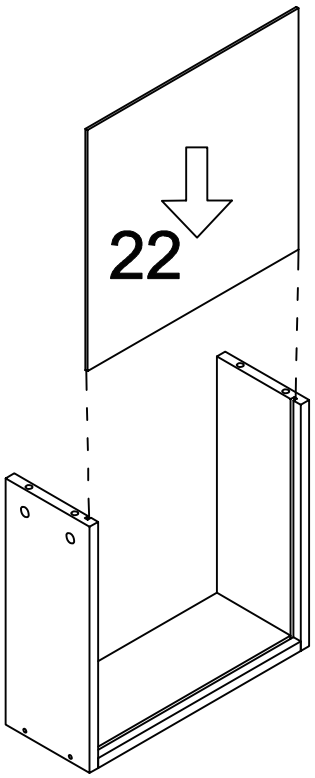

×2


Step 13

A	×8

B	×8


G	×2


Ø4×8mm

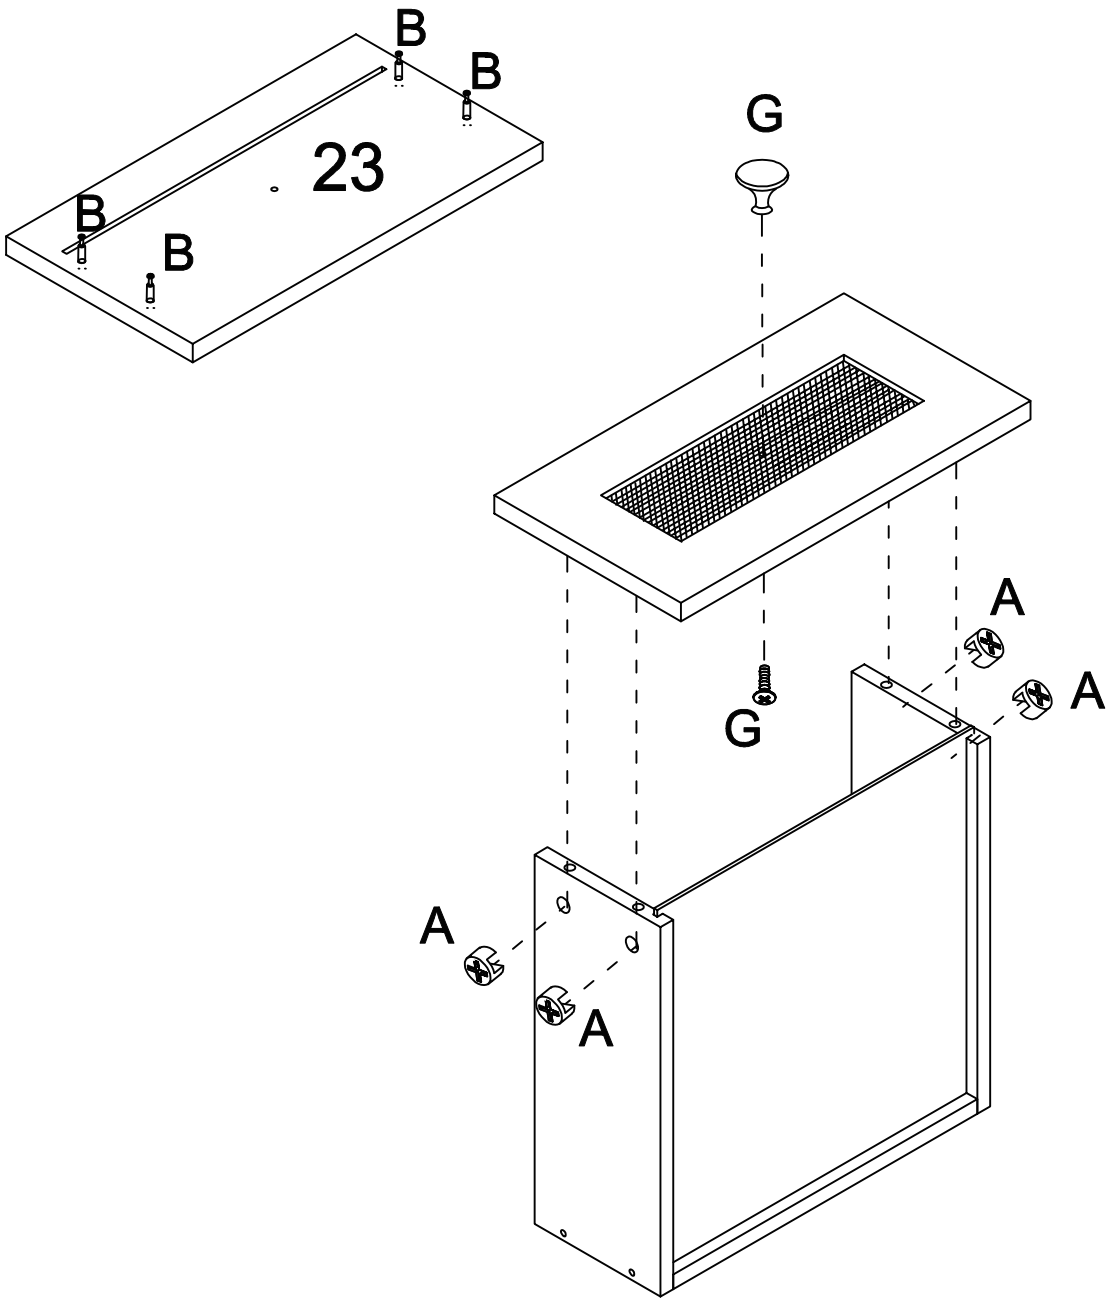



×2


Step 14

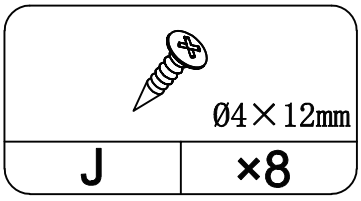

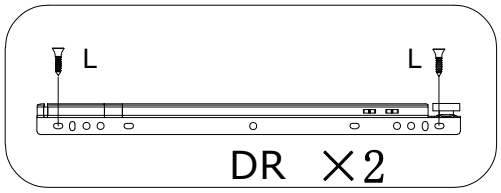


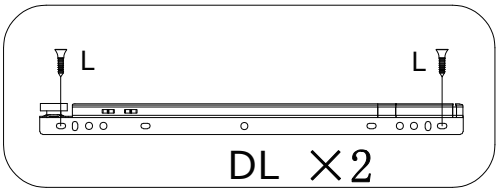


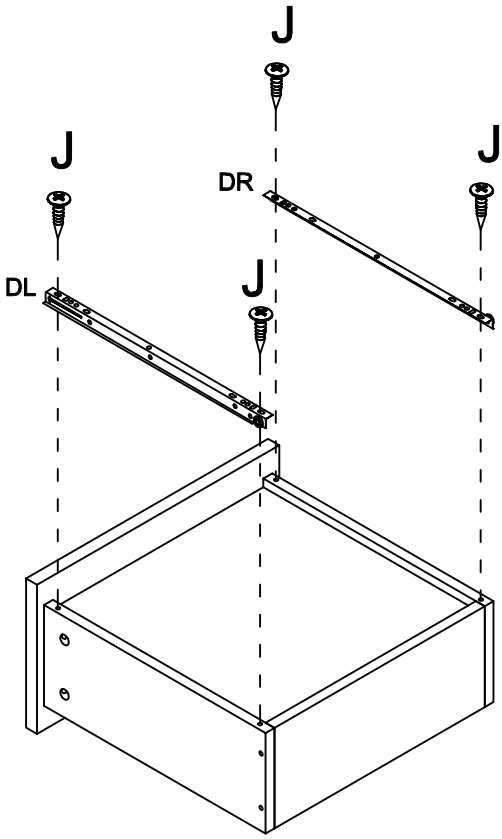


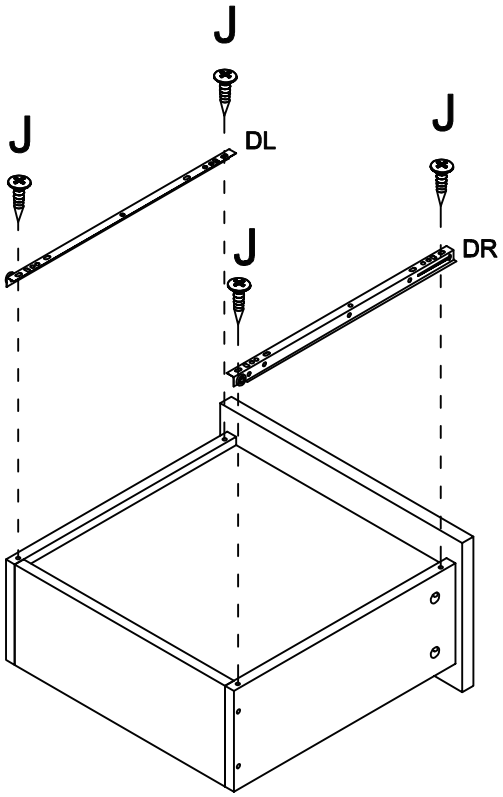

Step 15


 Ø4×12mm	 Ø4×16mm	
J ×8	I ×2	K ×4

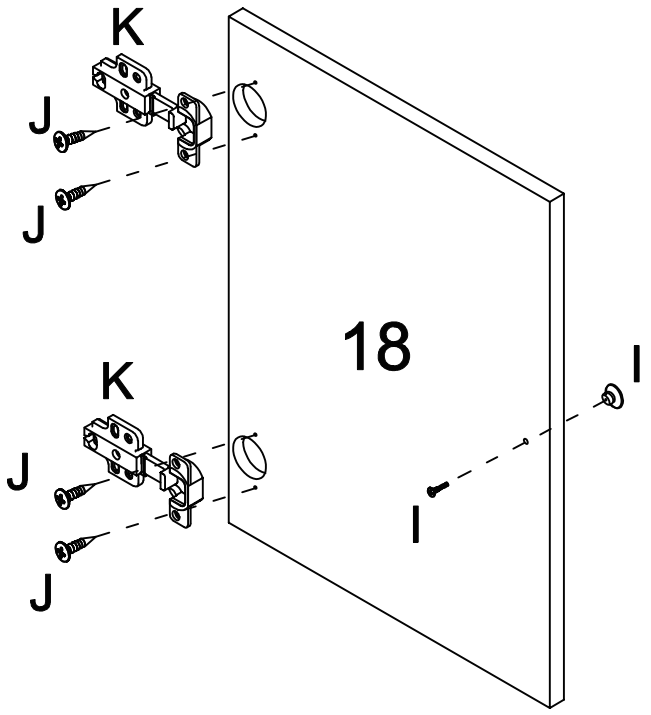


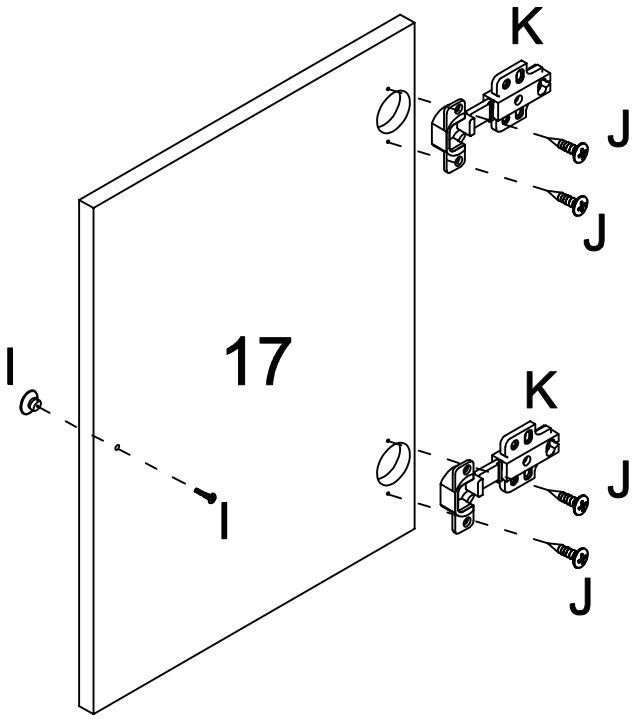


Step 16

Ø4×12mm	
J	×16

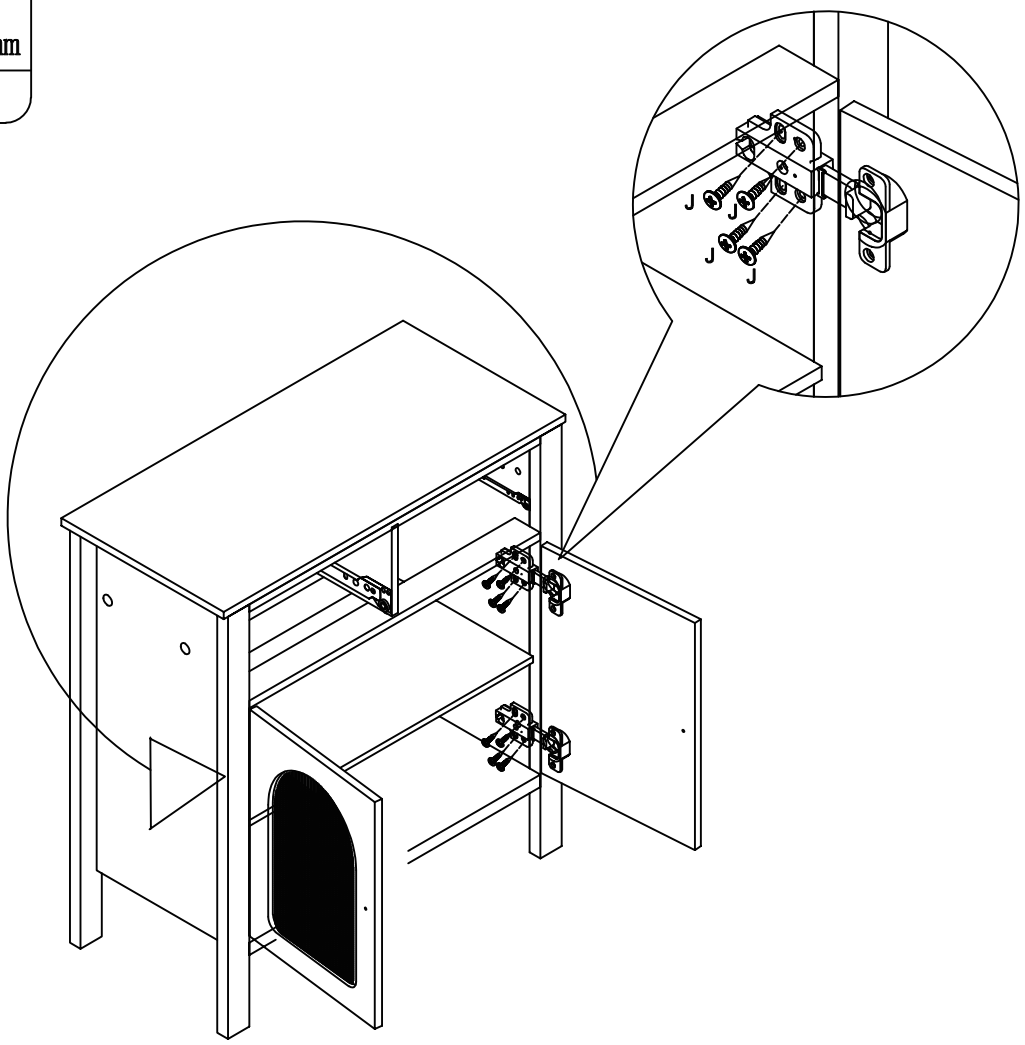


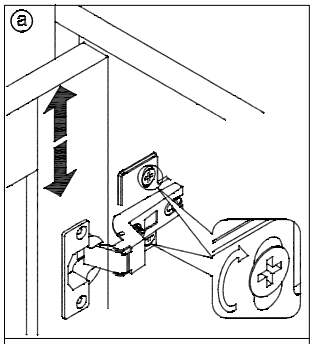


To adjust the door vertically loosen the screw as shown and move up and down as need.

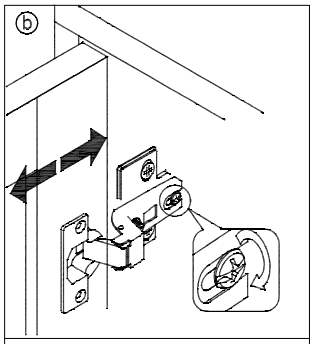

To adjust the gap from the door to the main frame turn the screw clockwise or anti-clockwise as needed.

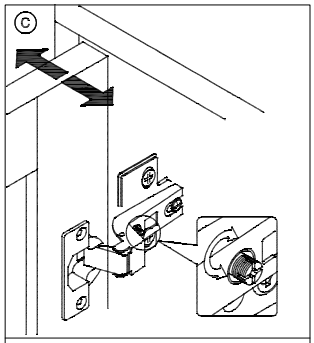



To adjust the door laterally adjust the screw as shown by turning clockwise or anti-clockwise .

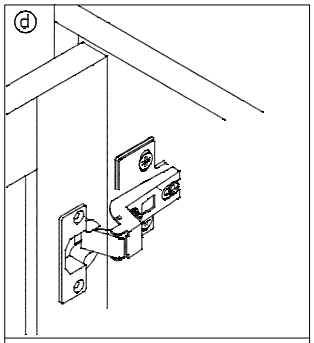

Please fix other screws.


Step 17

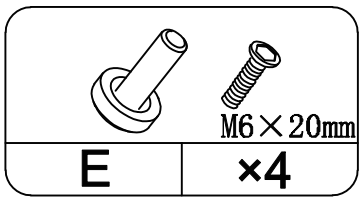

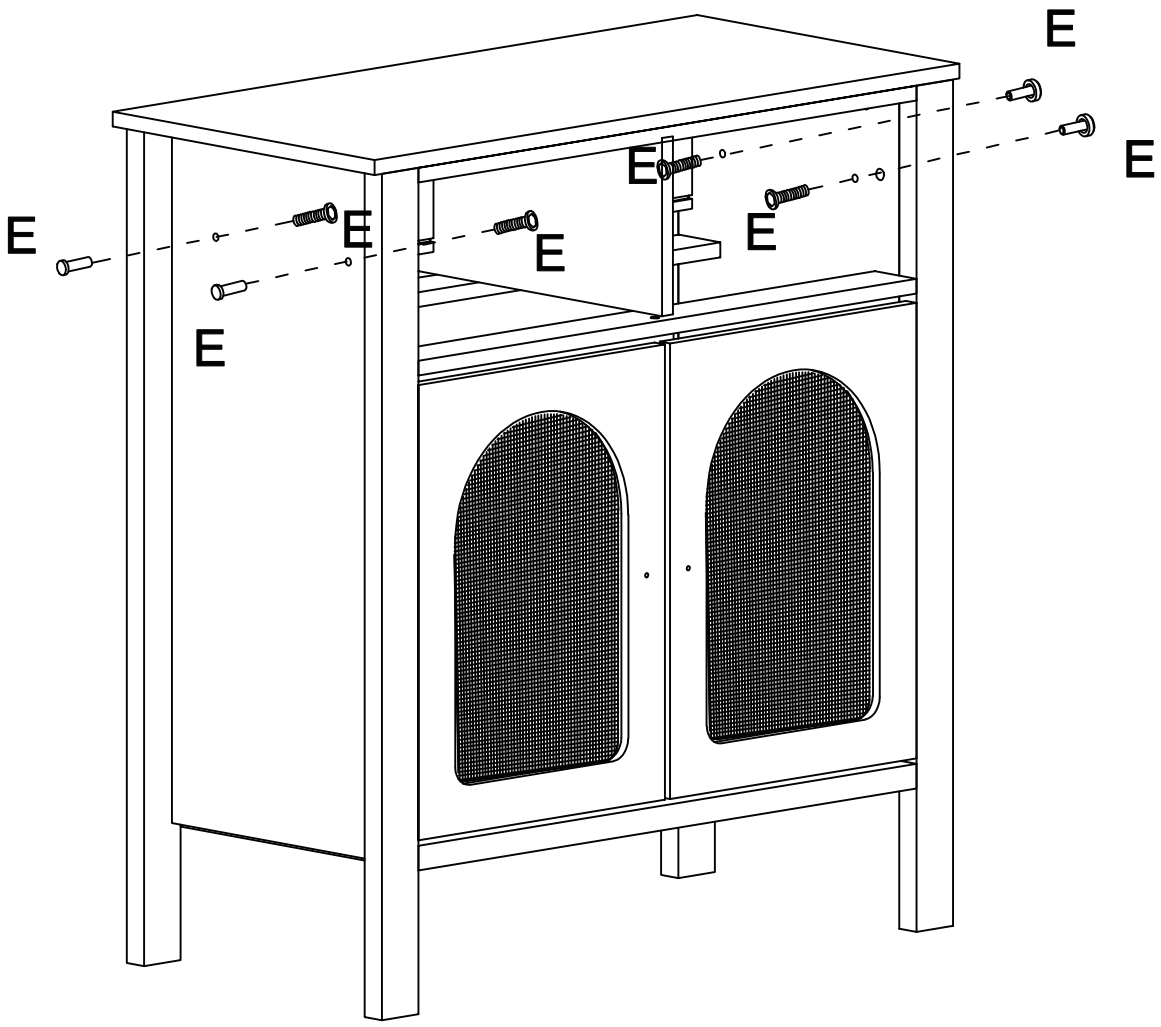



It can be installed on the left or right side according to actual needs.


Step 18

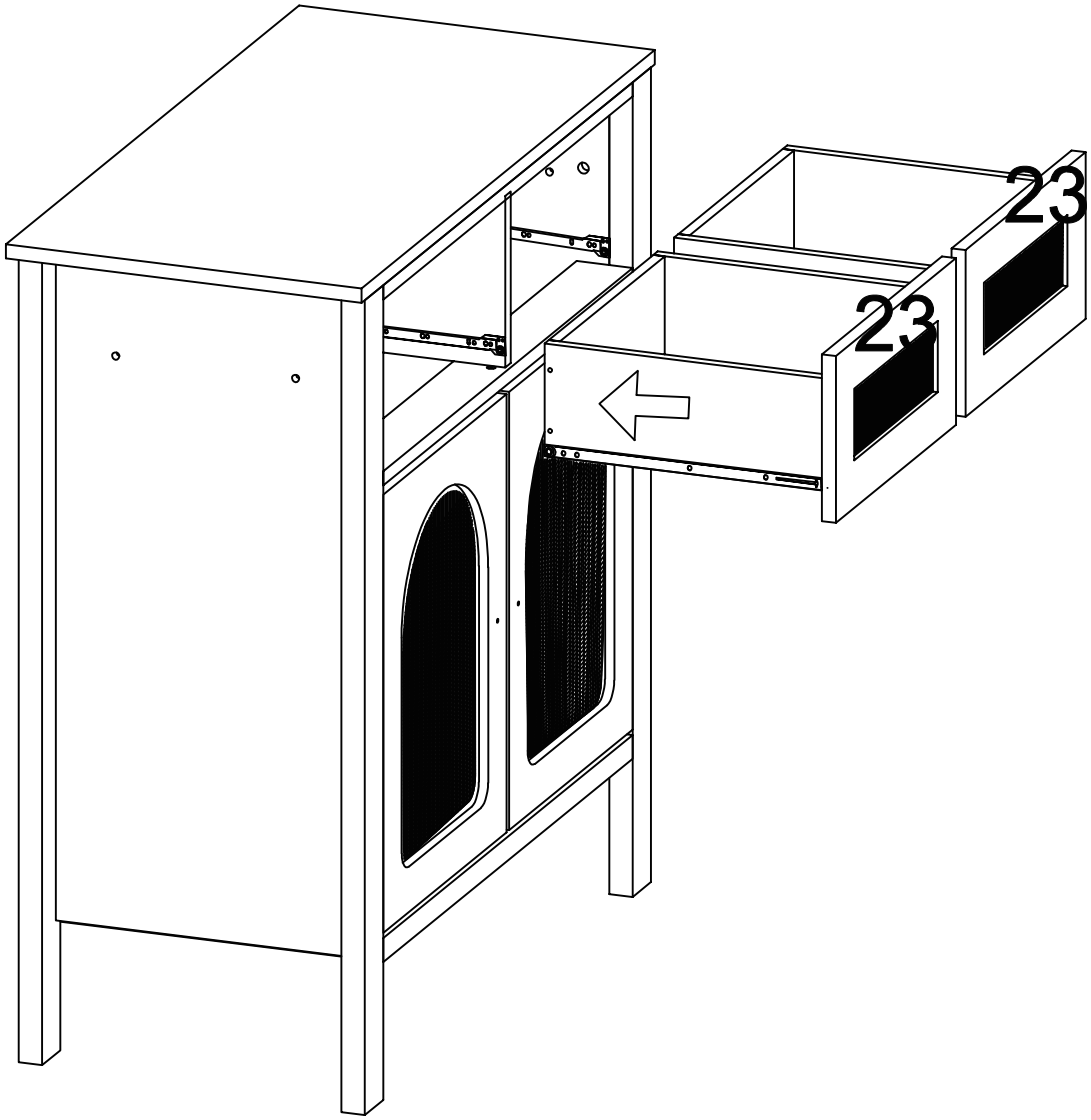


Step 19

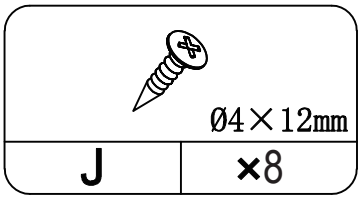

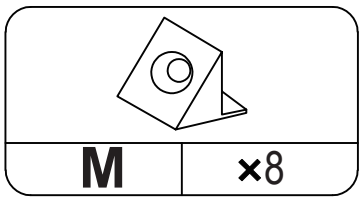

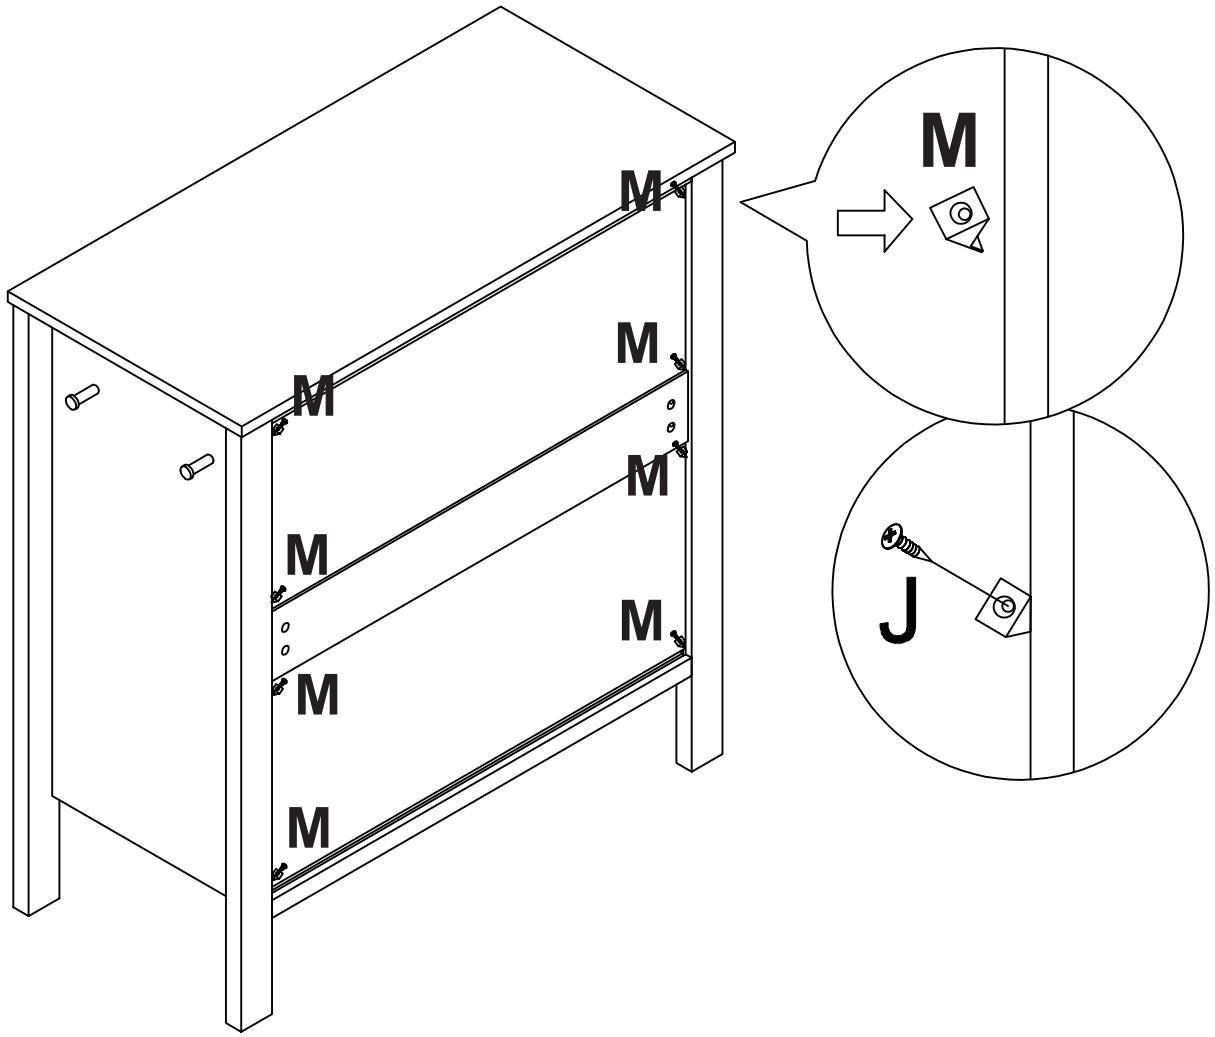

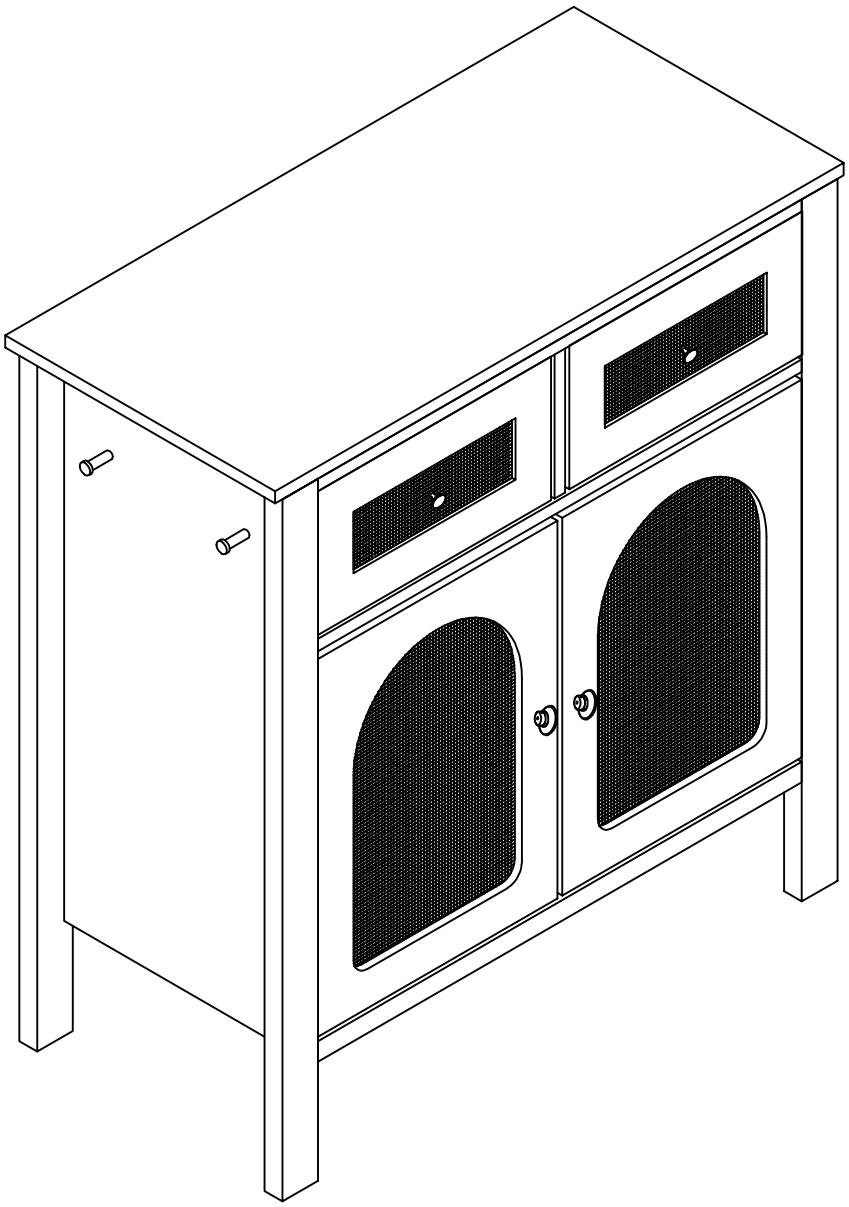

Assembly is complete!