


USER'S MANUAL

PXJLHM017WH/PXJLHM017QG/PXJLHM017CO


DSNAPE Service01@outlook.com

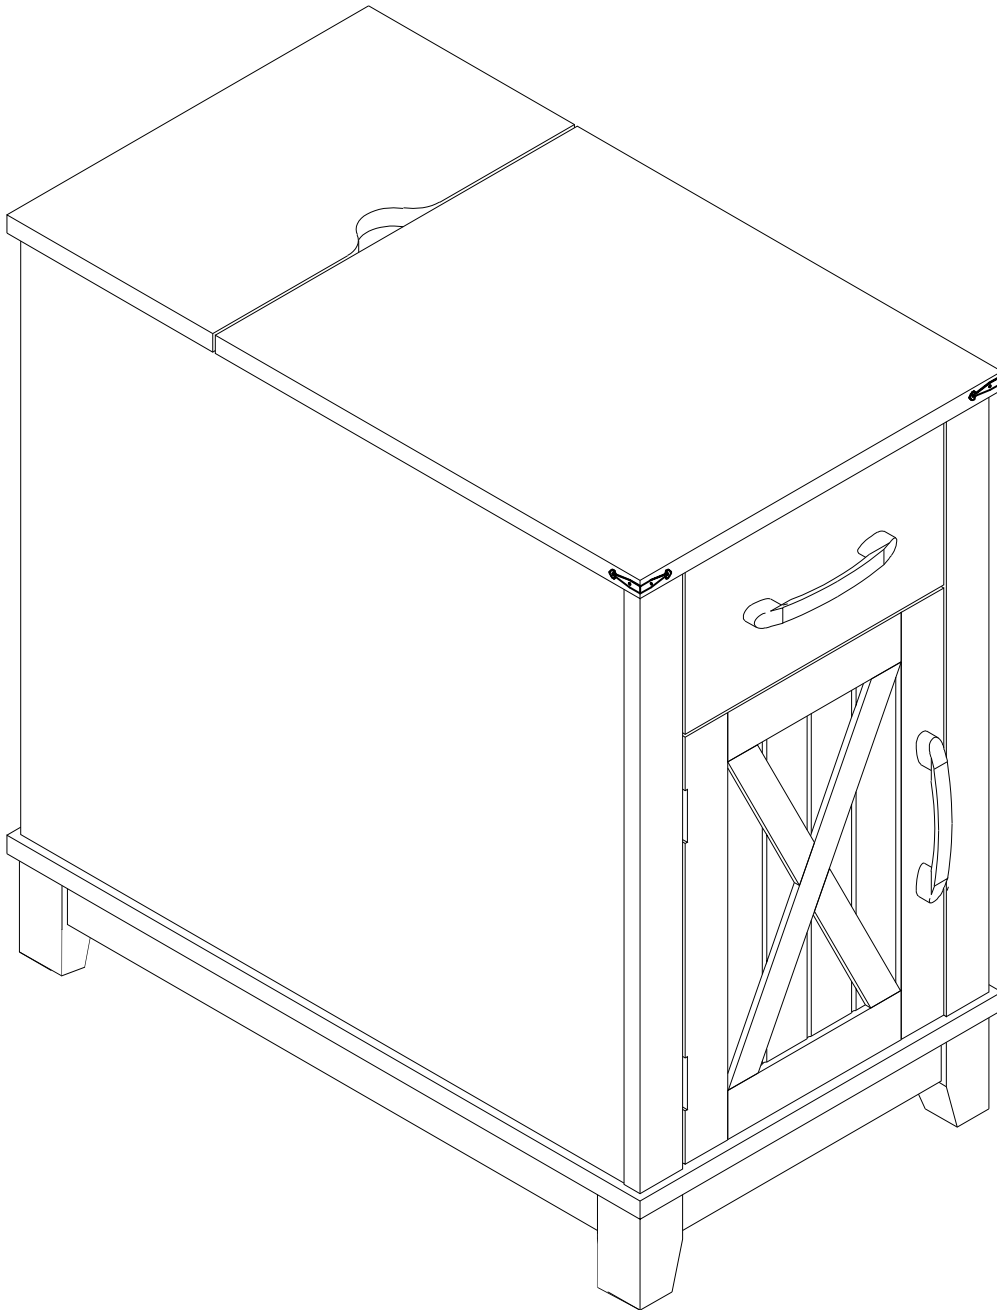

ATTENTION:

1. Please check the manual carefully and make sure you have received all the parts.
2. If there is any missing, please let us know the letter of the parts you need.
3. If there is any damage, please send clear photos to us we will check and offer you best solution soon.

Before You Start

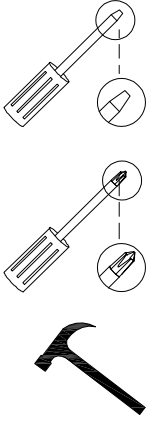


1. Read each step carefully and follow the correct order.
2. Separate and count all parts and hardware.
3. Leave enough space for the assembly process.
4. Prepare the following tools: Flat Head Screwdriver, Cross Head Screwdriver and Hammer.
5. Note: If you use an electric drill or electric screwdriver to tighten the screws, please be careful to slow down and stop when tightening the screws. Otherwise, the screws may fall off.
(Using an electric screwdriver can increase assembly speed).

Useful Tips


Assembly Personnel Required: 1-2 People

- Unpack the item in the area where you plan to store it to avoid excessive lifting.
- Identify, sort, and count the parts before attempting assembly.
- Use a hammer to gently tap in the compression pins.
- The sliders are marked with R (right) and L (left) for proper placement.
- Make sure to always point the tip of the top of the cam lock toward the outer edge.
- If there is a back panel in the package, install it to ensure your unit is complete and sturdy.
- Tighten all the screws provided for the back panel, which can enhance the stability of the product. If it is difficult to tighten, you can use a hammer to secure it and then tighten it.
- Do not use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.

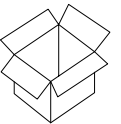


Board Identification


Not actual size

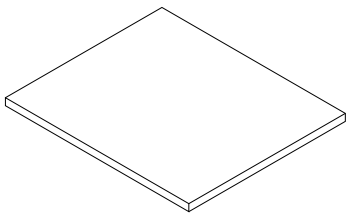


1
Large Top Panel
Qty: 1

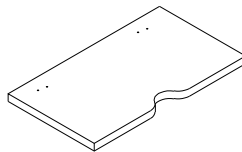


2
Small Top Panel
Qty: 1

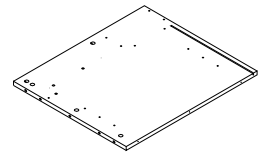


3
Left Panel
Qty: 1

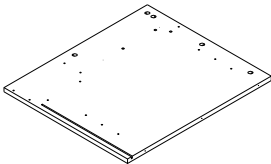


4
Right Panel
Qty: 1

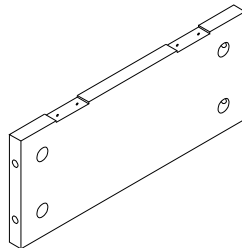


5
Rear Panel
Qty: 1

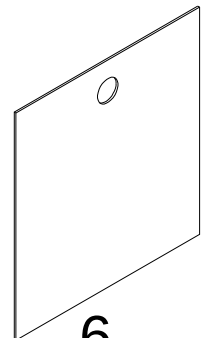


6
Back Panel
Qty: 1

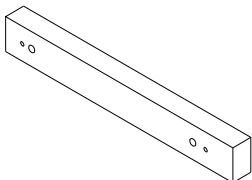

7
Slider Pad Wood
Qty: 2

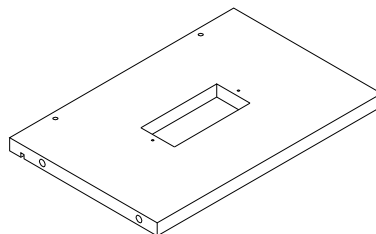


8
Small Bottom Panel
Qty: 1

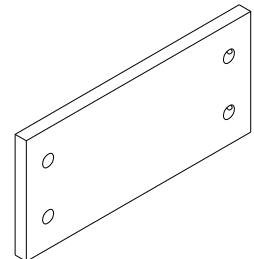

9
Partition
Qty: 1


Board Identification

Not actual size

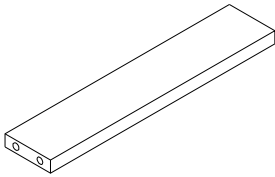


10

Front Crossbar
Qty: 1

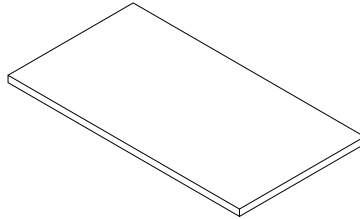


11

Shelf
Qty: 1

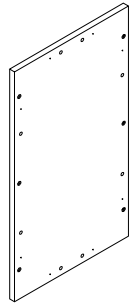


12

Bottom Panel
Qty: 1

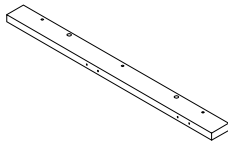


13

Left Front Post
Qty: 1

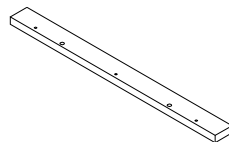


14

Right Front Post
Qty: 1

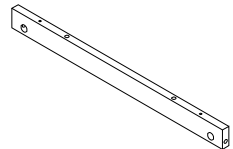


15

Side Apron
Qty: 2

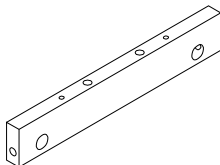


16

Front/Rear Apron
Qty: 2

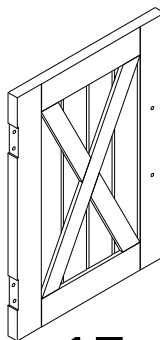

17

Door
Qty: 1

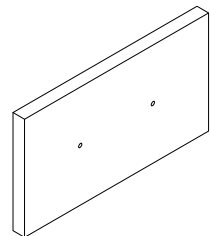


18

Drawer Front Panel
Qty: 1


Board Identification

Not actual size

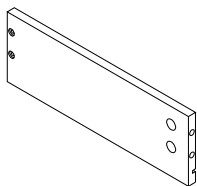


19

Drawer Left Panel
Qty: 1

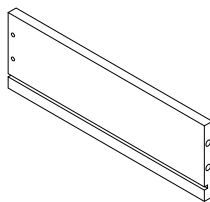


20

Drawer Right Panel
Qty: 1

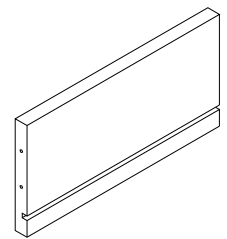


21

Drawer Back Panel
Qty: 1

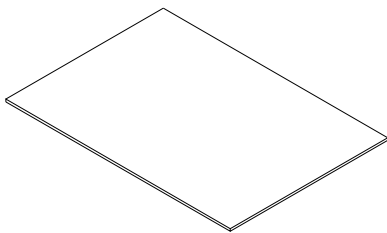


22

Drawer Bottom Panel
Qty: 1



23

Leg
Qty: 2




24


Leg
Qty: 2

Board Identification


Not actual size

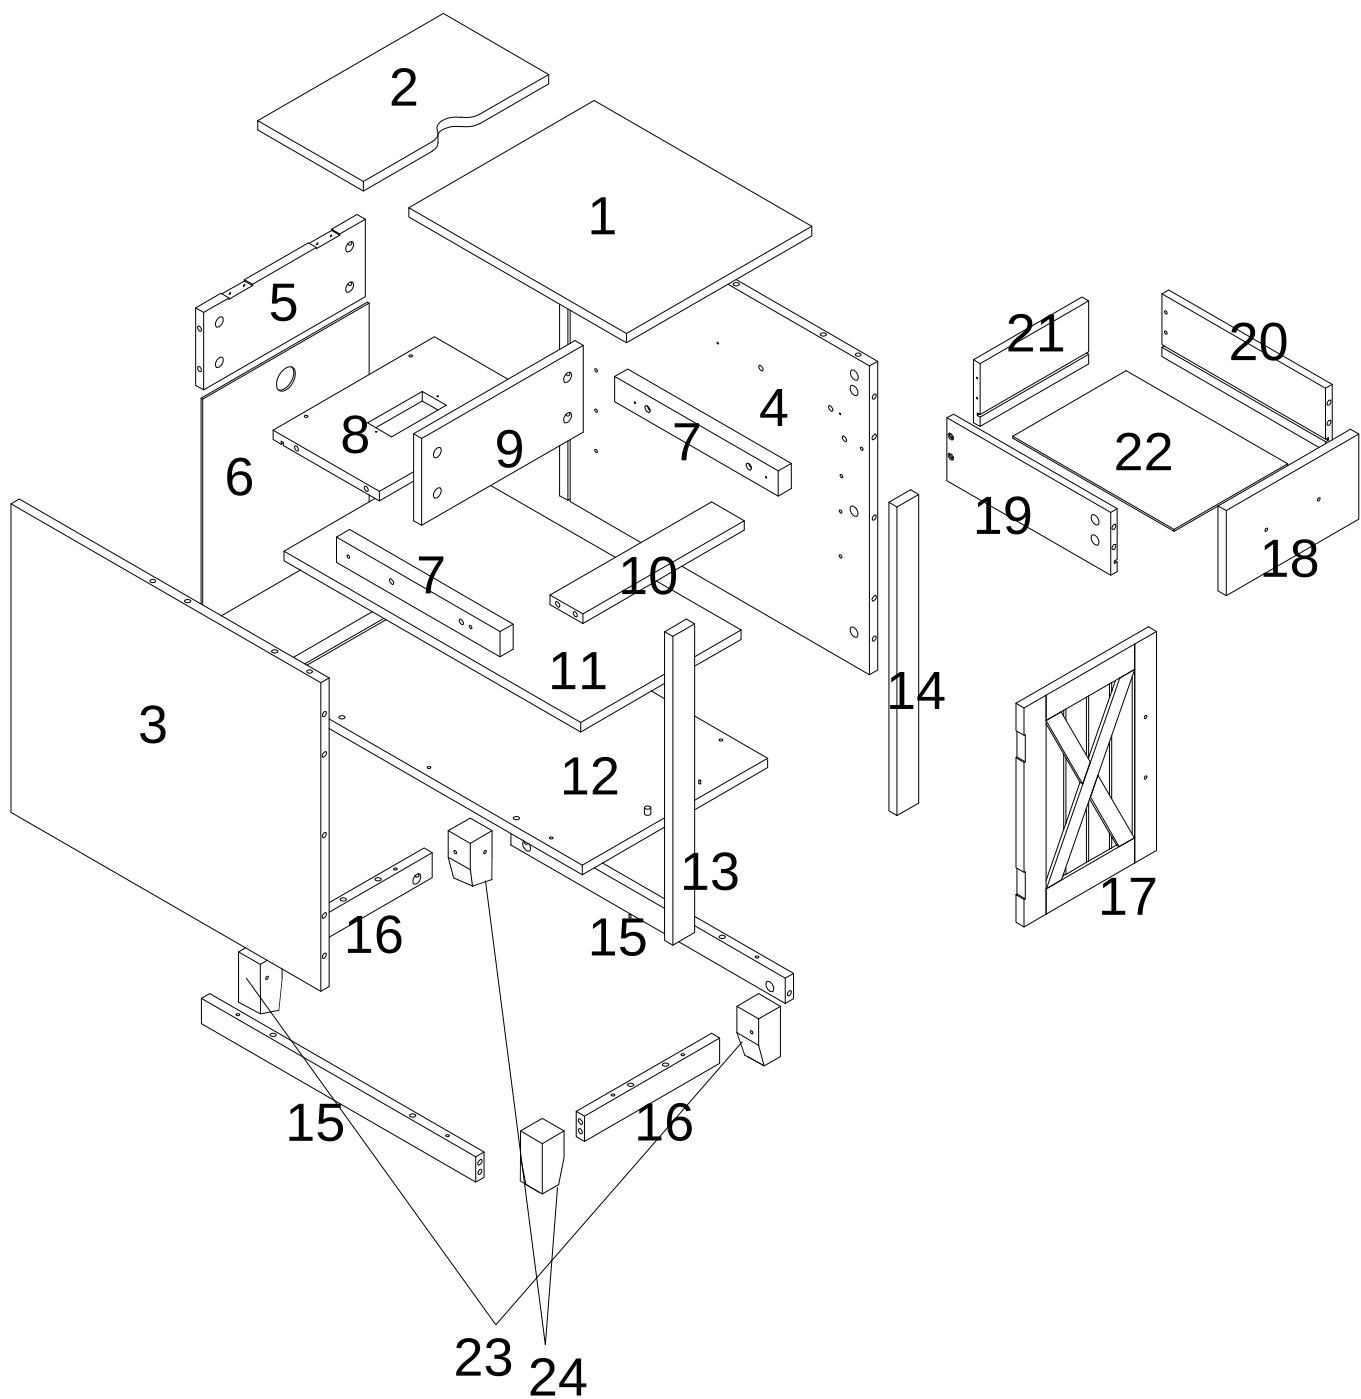


Part List

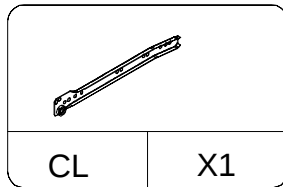


LEFT CABINET MEMBER

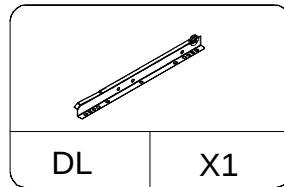


LEFT DRAWER RUNNER

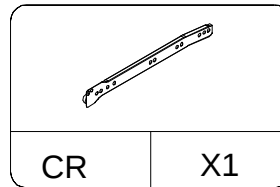


RIGHT CABINET MEMBER

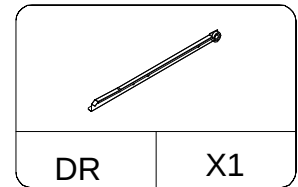


RIGHT DRAWER RUNNER

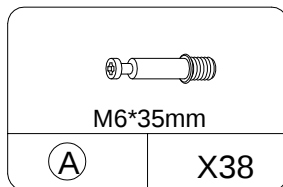


CAM BOLT
spare: 2

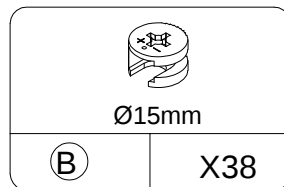


CAM LOCK
spare: 2

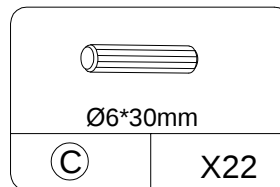


DOWEL
spare: 2

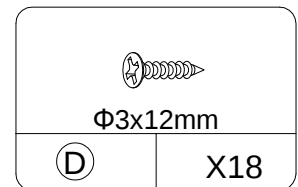


SCREW
spare: 2

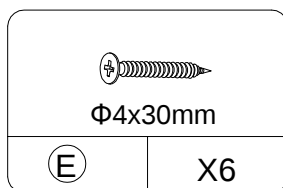


SCREW
spare: 1

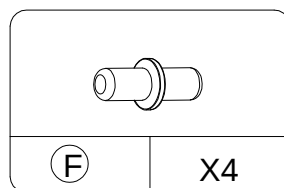


SHELF HOLDER

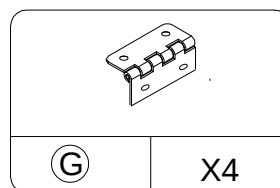


HINGE

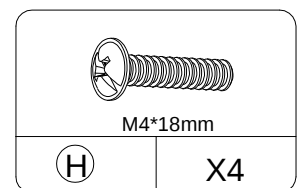


BOLT

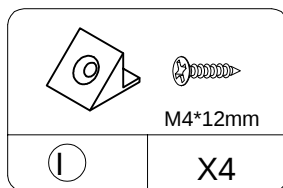


WEDGE
spare: 1

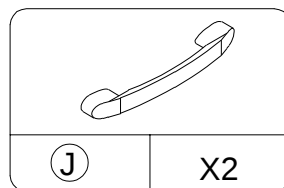


HINGE

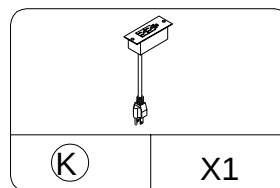


SOCKET

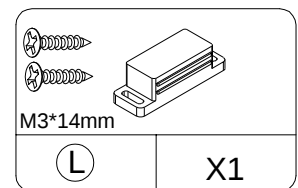


MAGNET

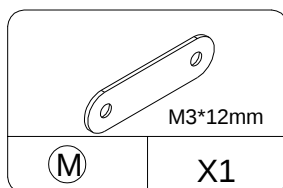


METAL PLATE

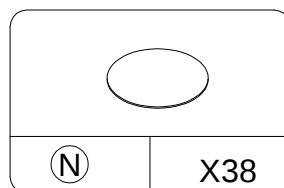

PAPER COVER
spare: 2

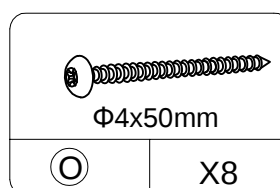


SCREW
spare: 1


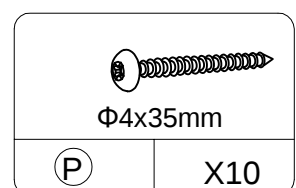


SCREW
spare: 1

Part List

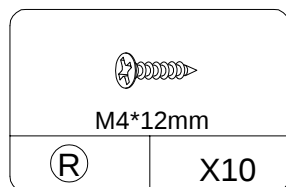






SCREW

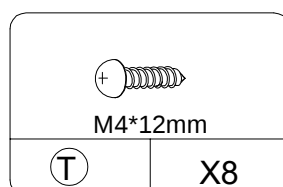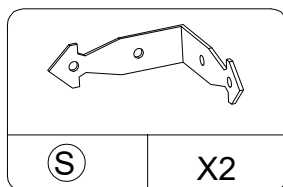


Cam Lock Fastening System

insert the cam bolt into the hole first, then insert the cam lock and lock it.


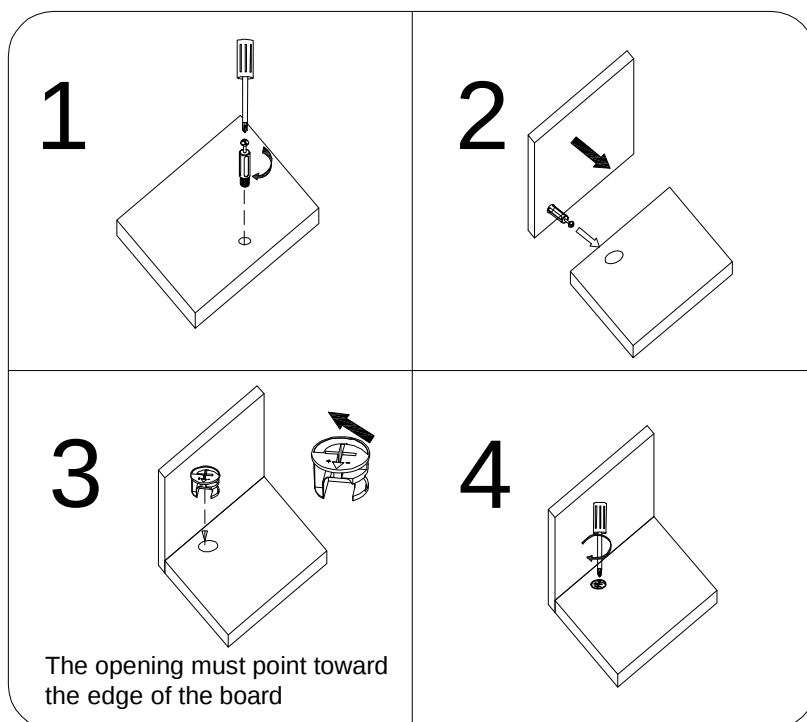


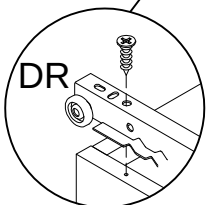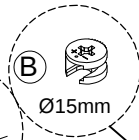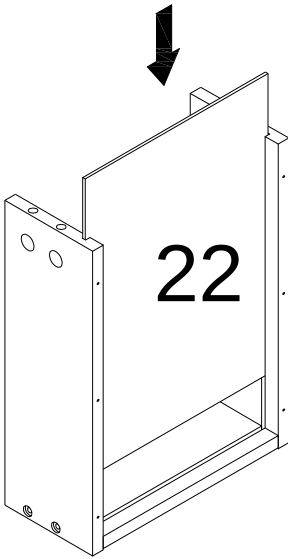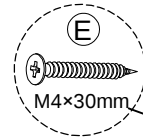





Step 2

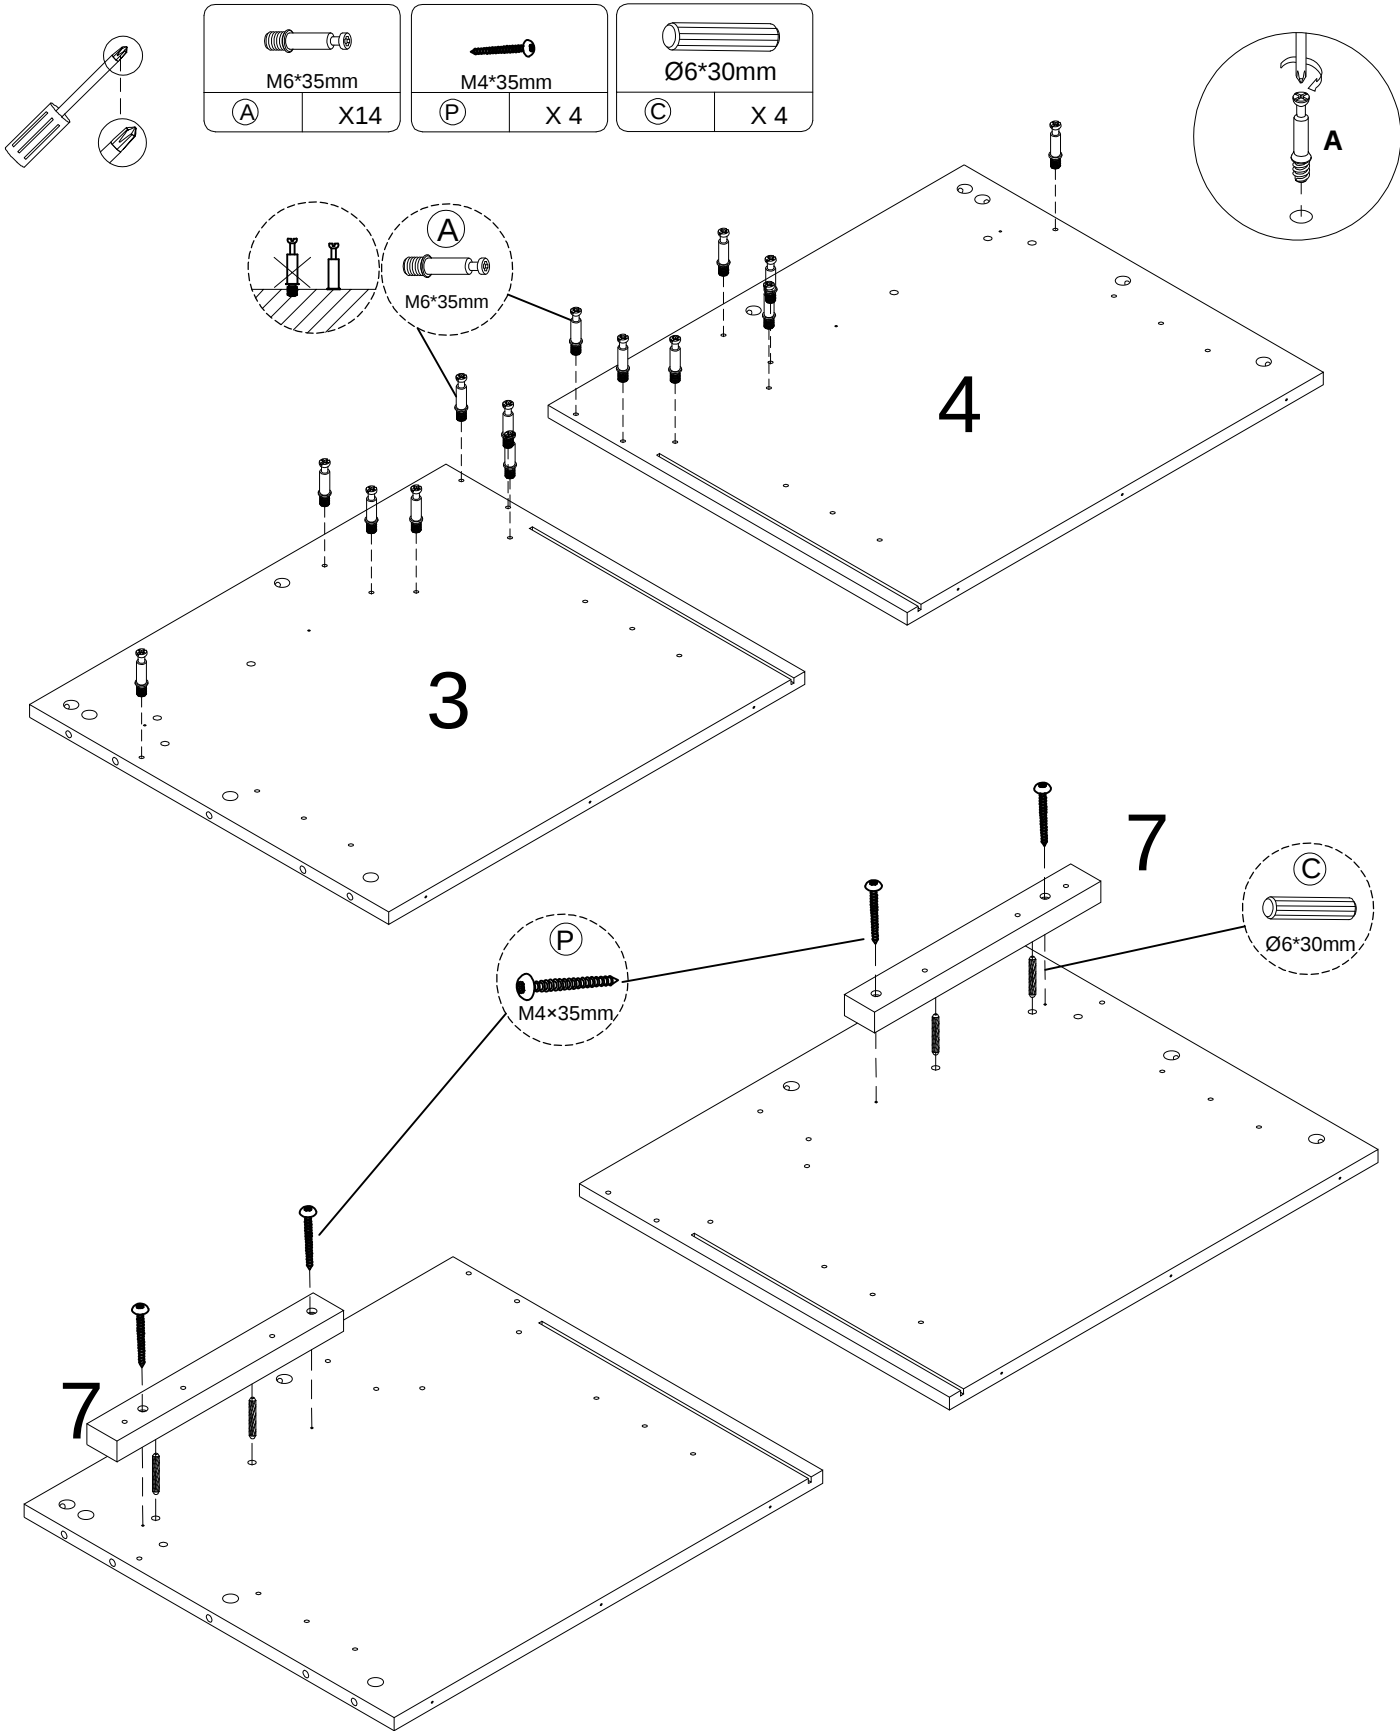


Step 3

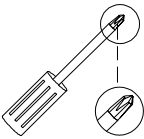

 Ø4*12mm					
(R)	X4	CL	X1	CR	X1

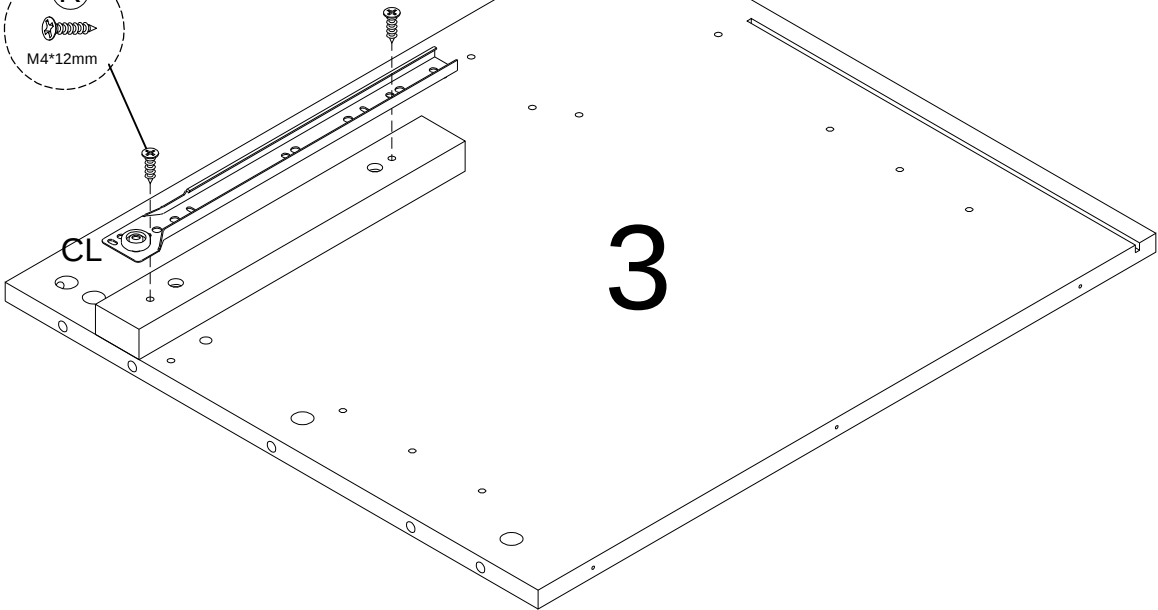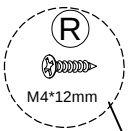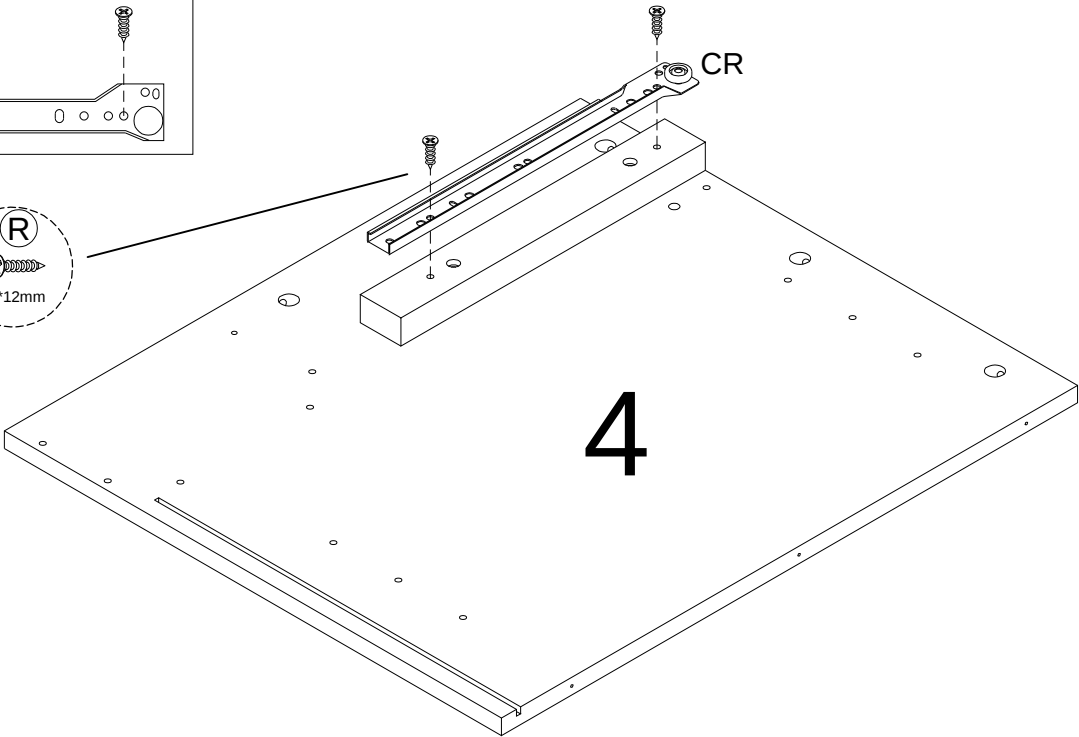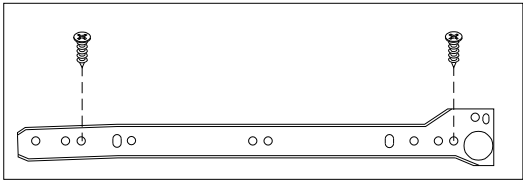


Step 4

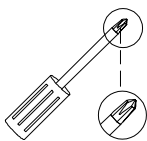


 M6*35mm	
(A)	X6

 Ø15mm	
(B)	X6


 Ø6*30mm	
(C)	X4

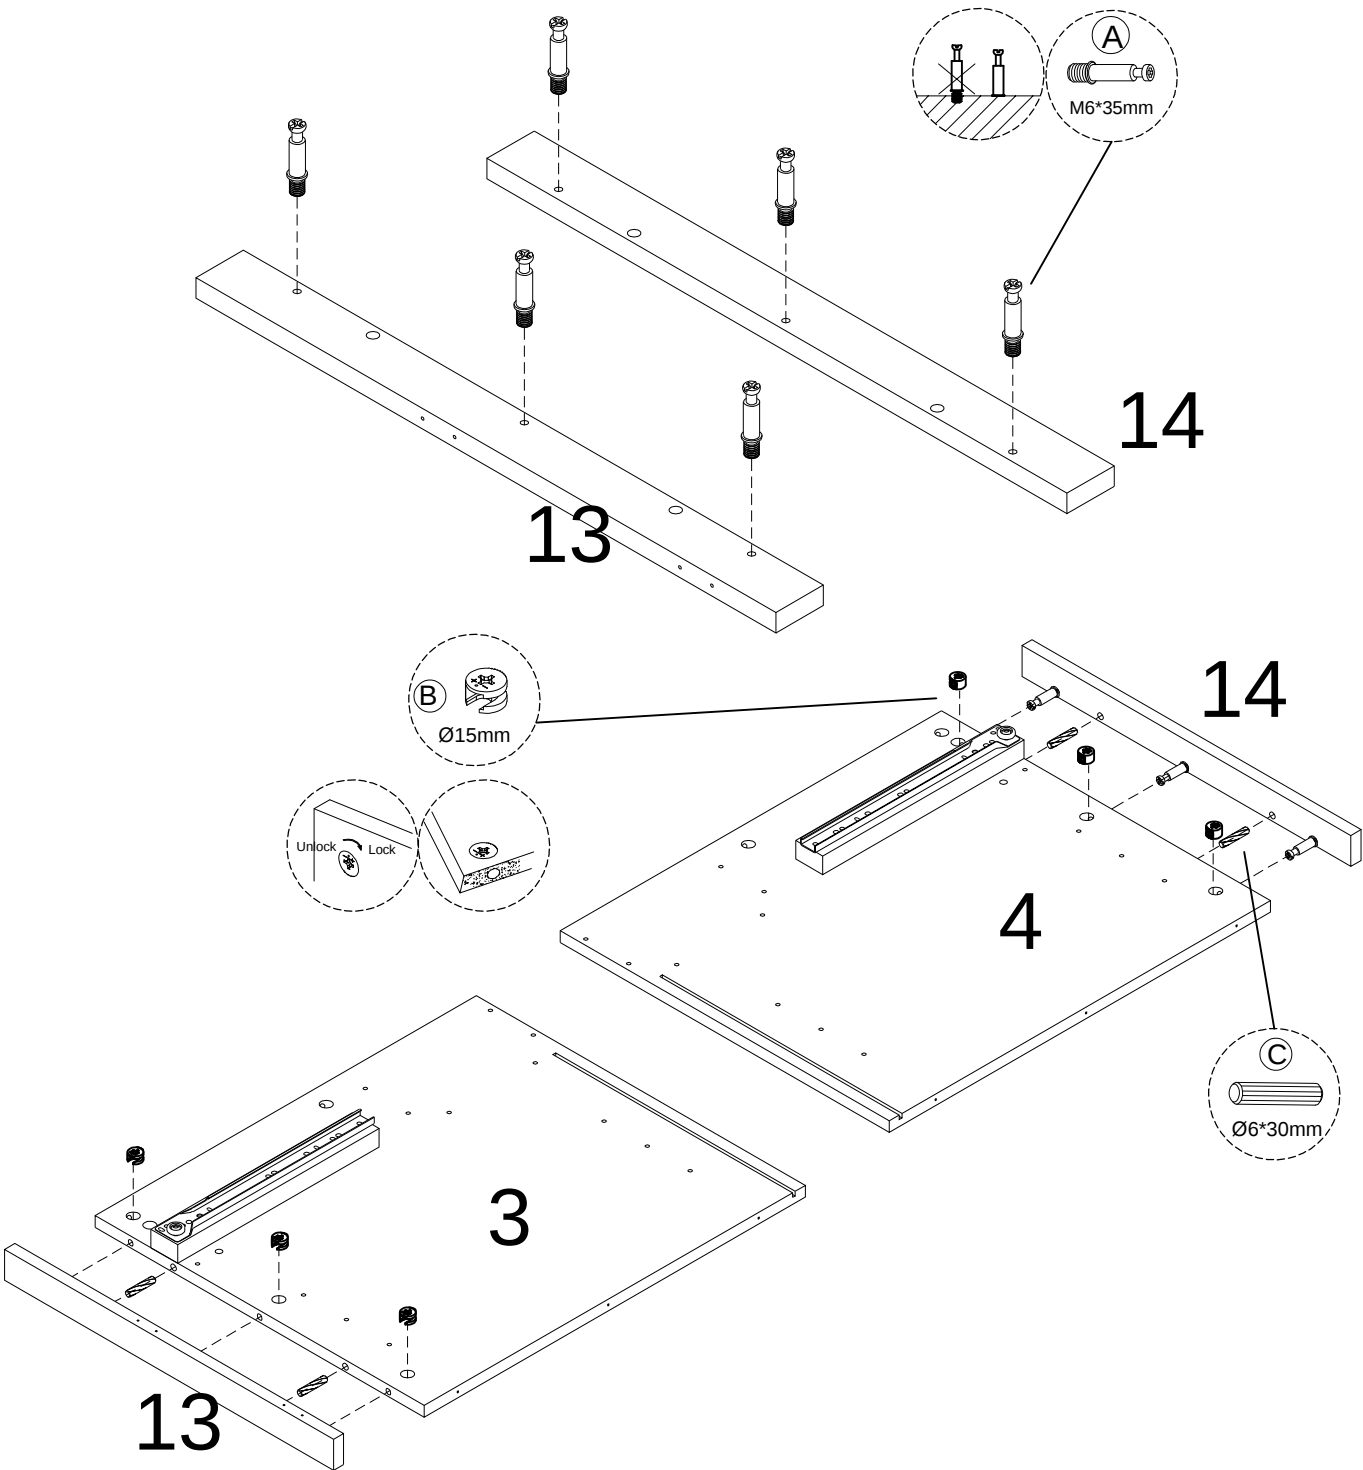


Step 5

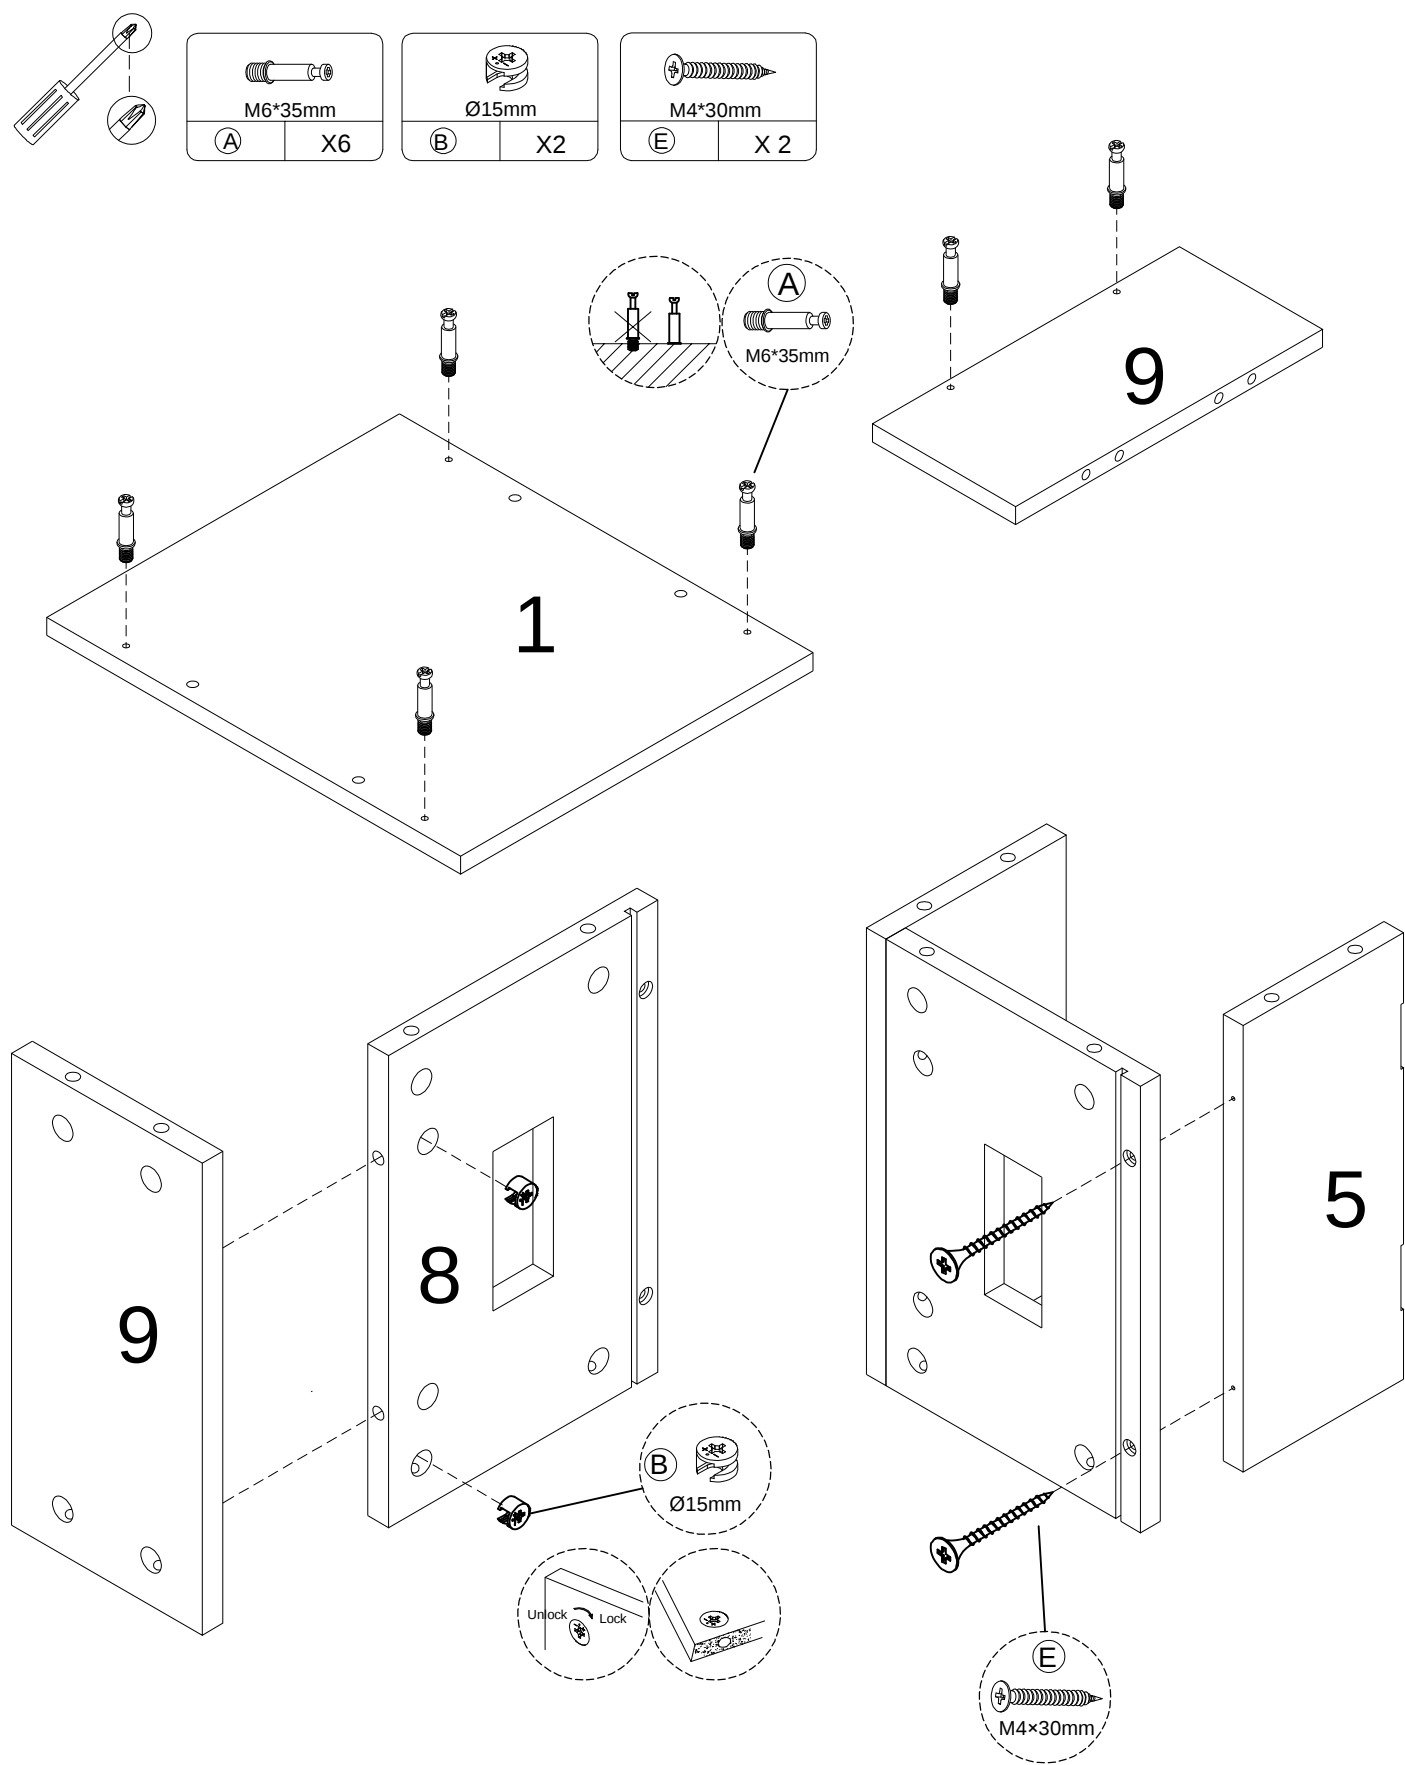

Step 6

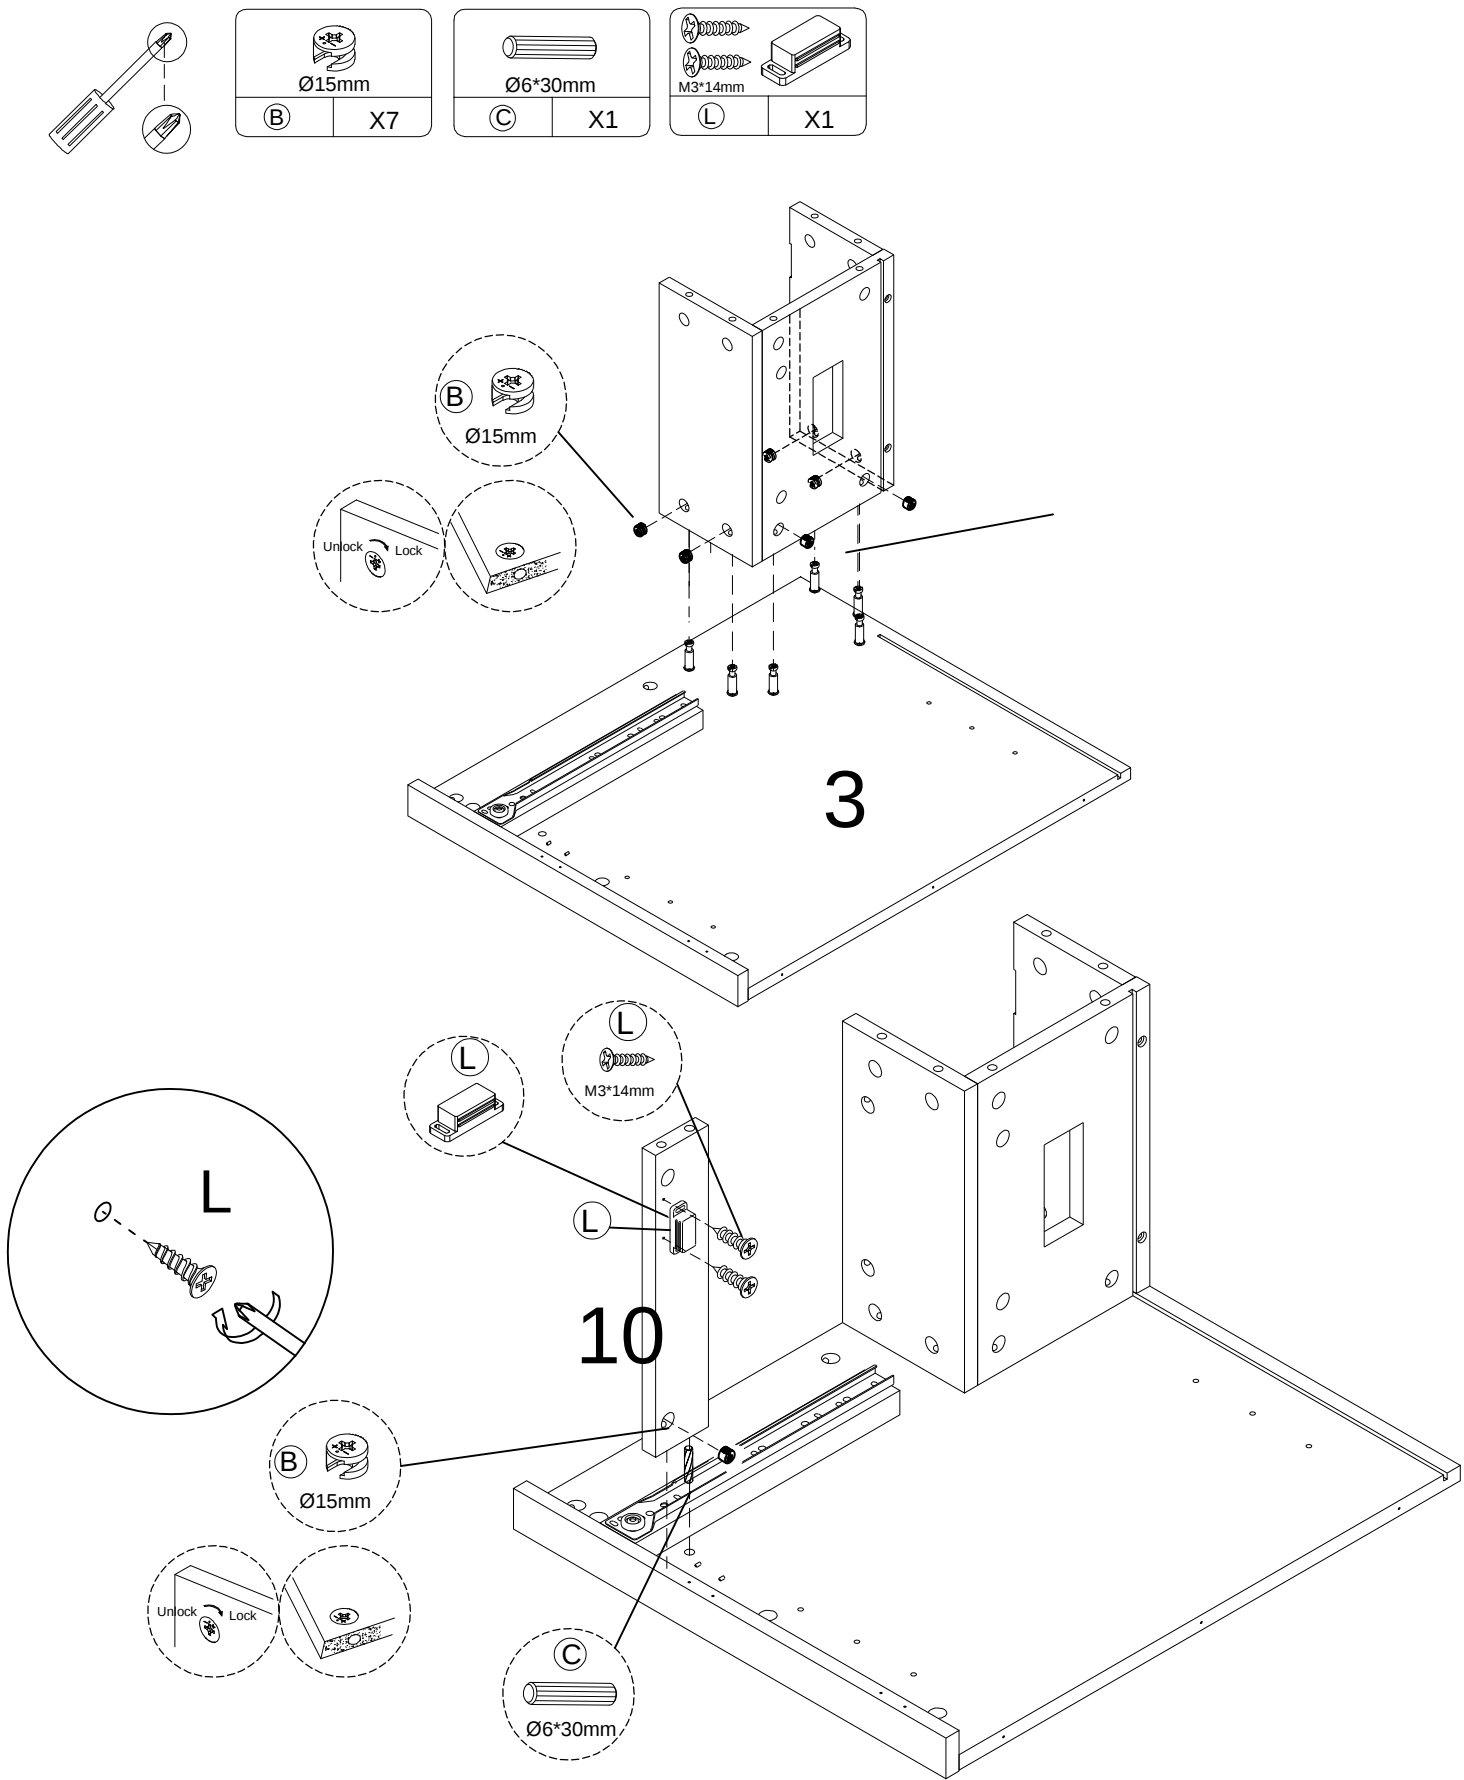


Step 7

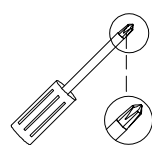


 Ø15mm	
(B)	X7


 Ø6*30mm	
(C)	X1

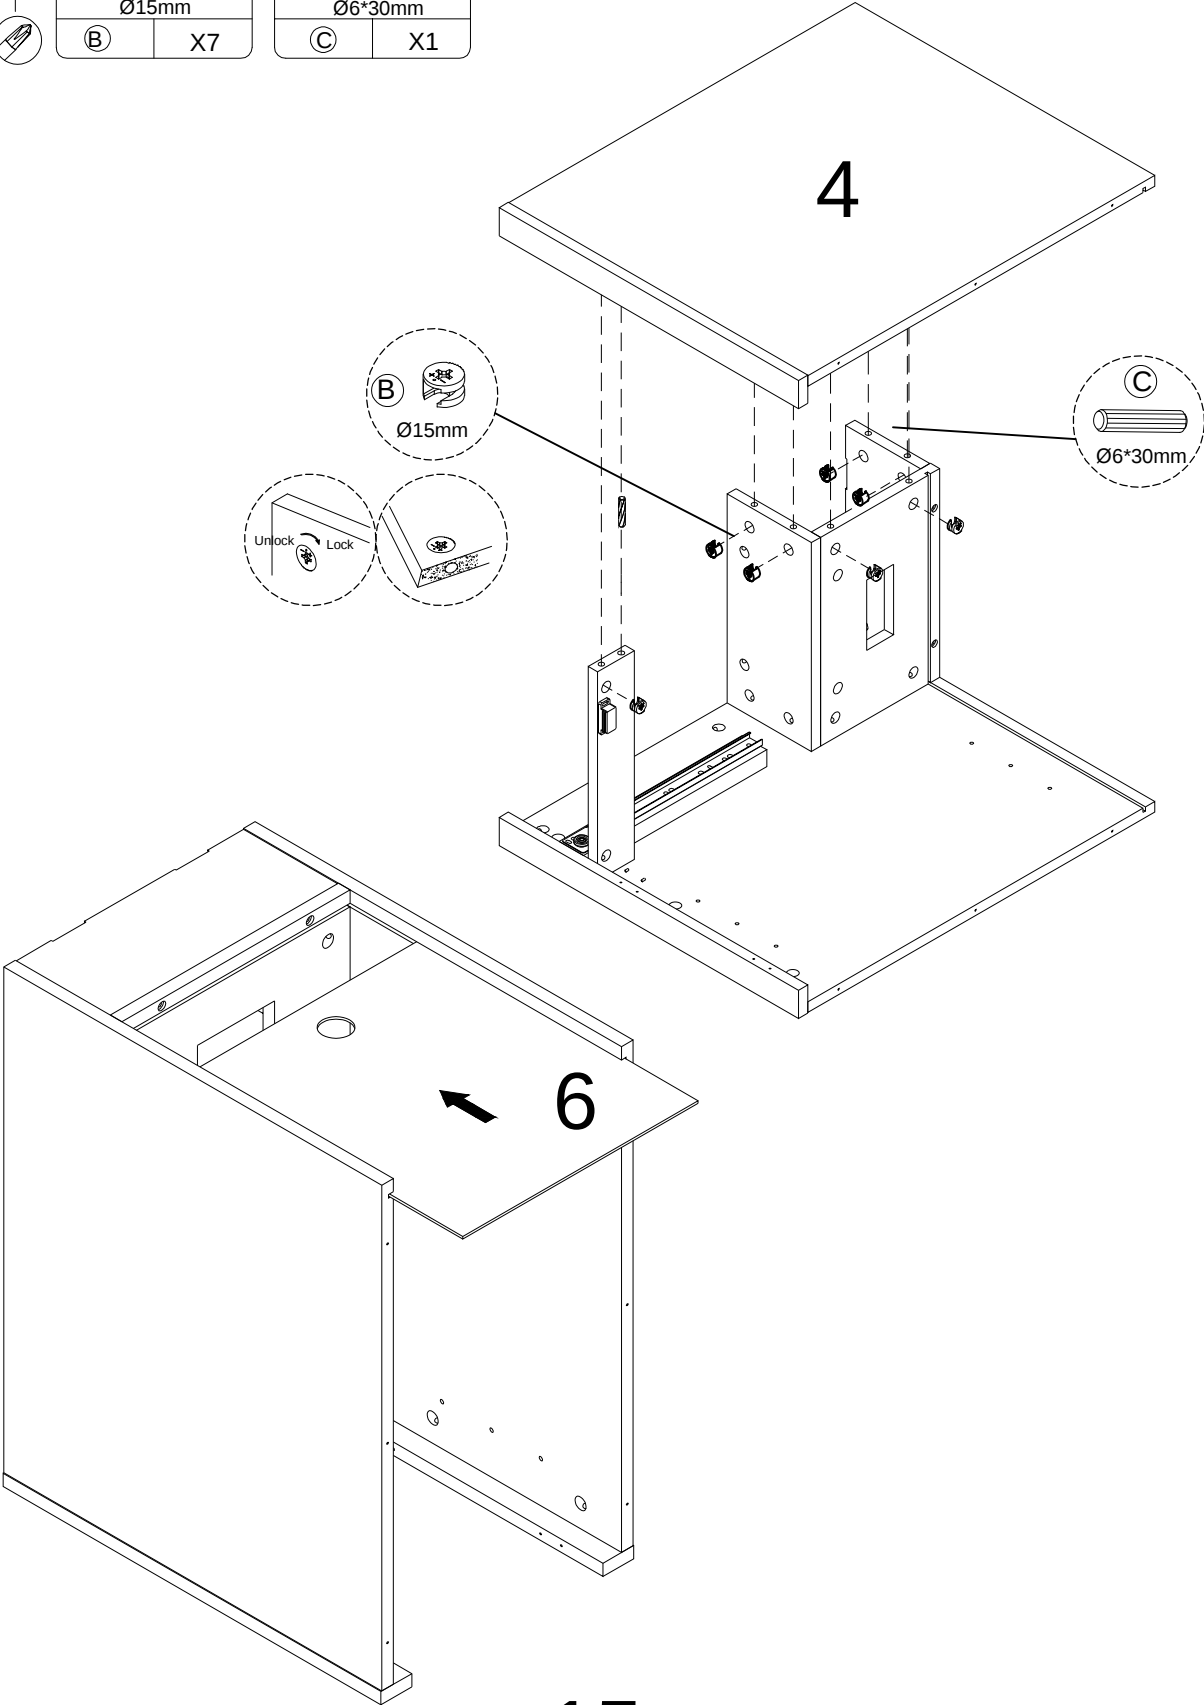


Step 8

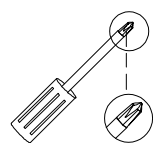

 M4*35mm	
(P)	X 6

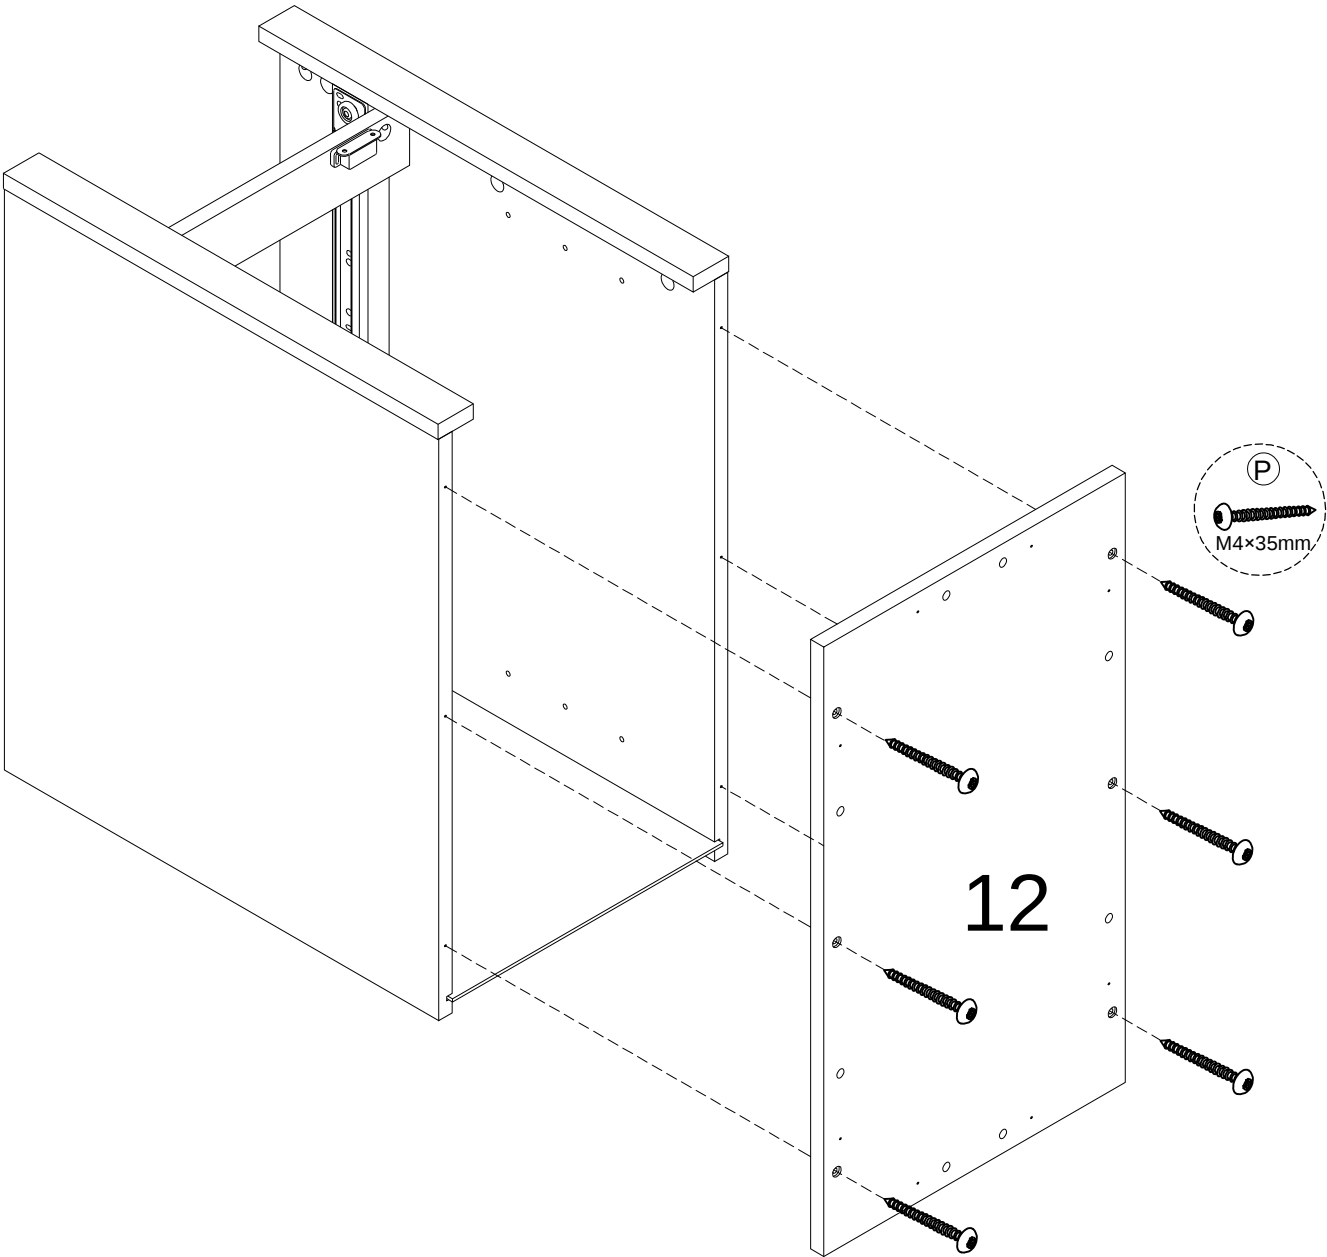


Step 9




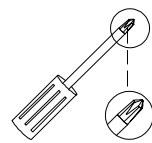


	
M6*35mm	
(A)	X8



	
Ø15mm	
(B)	X8

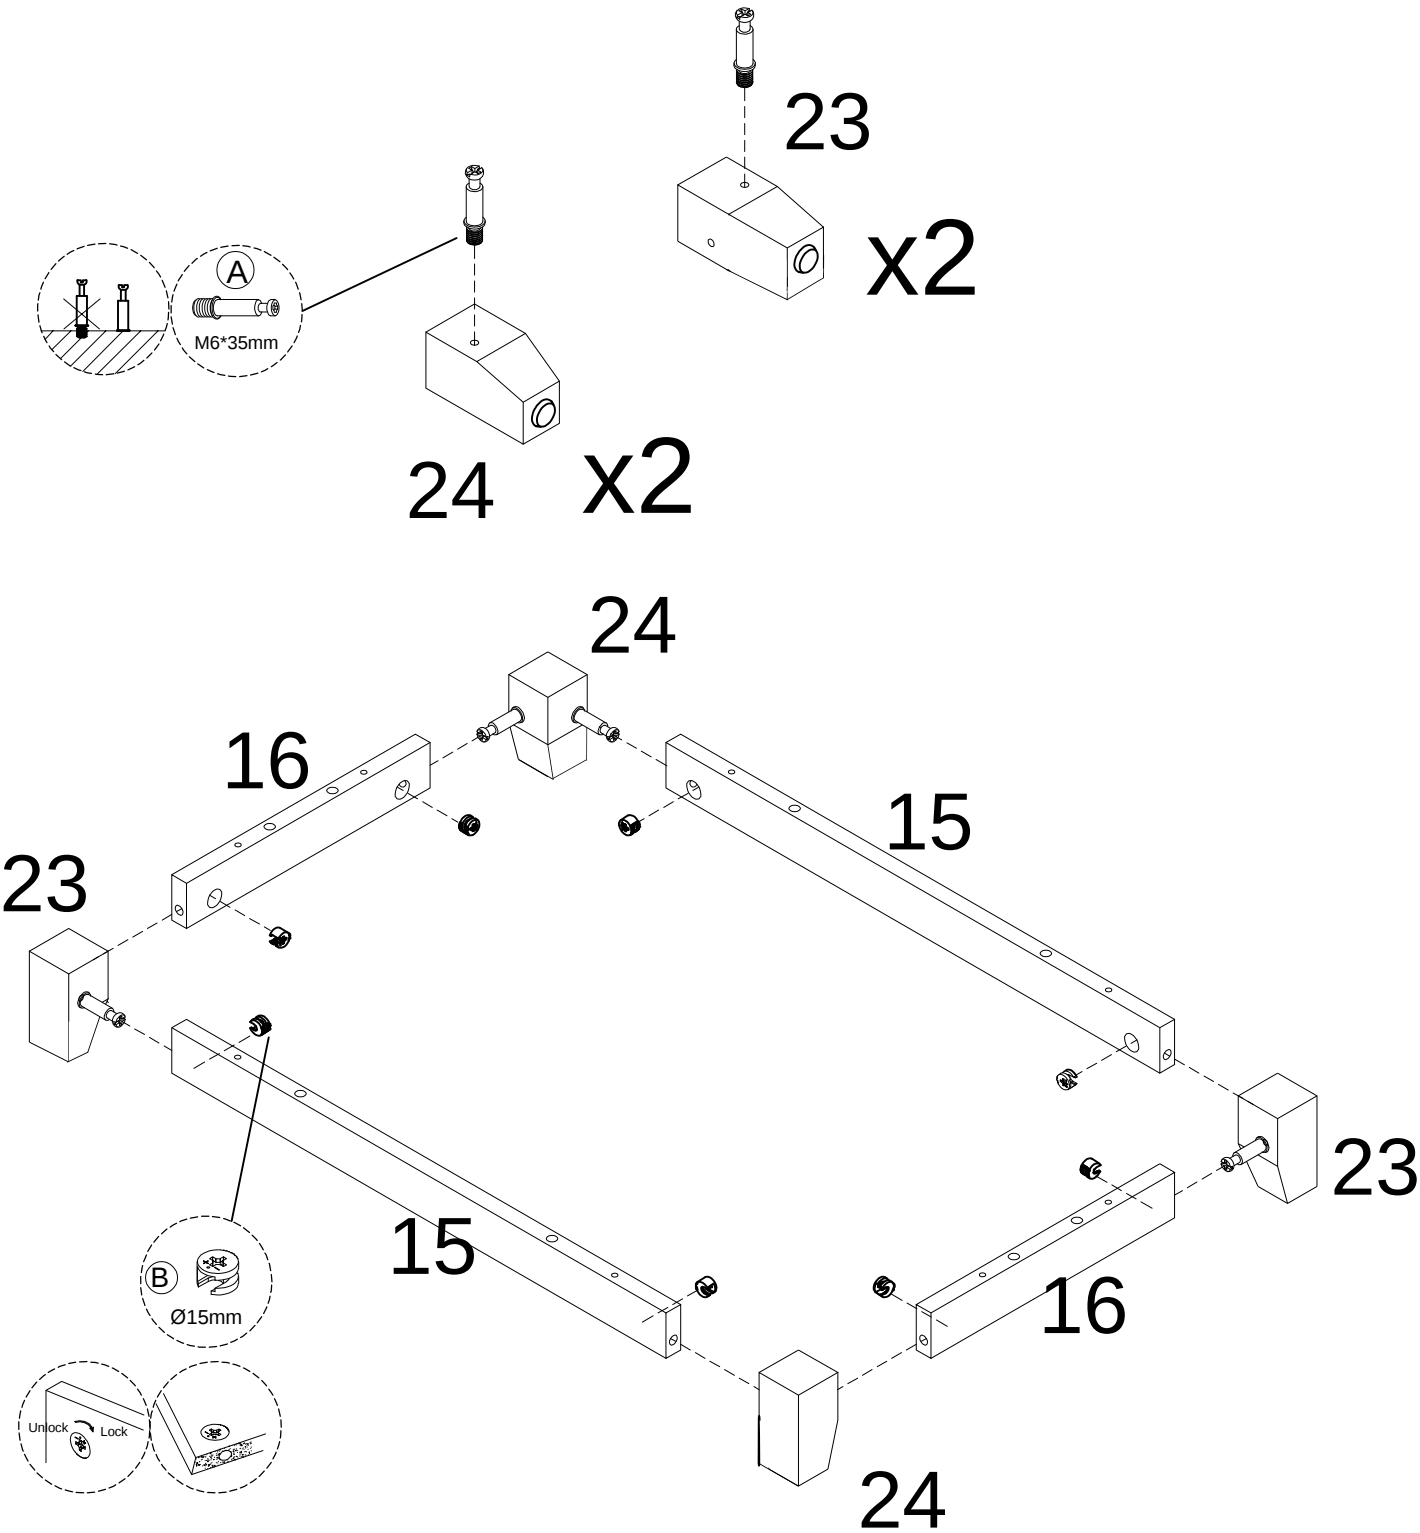


Step 10

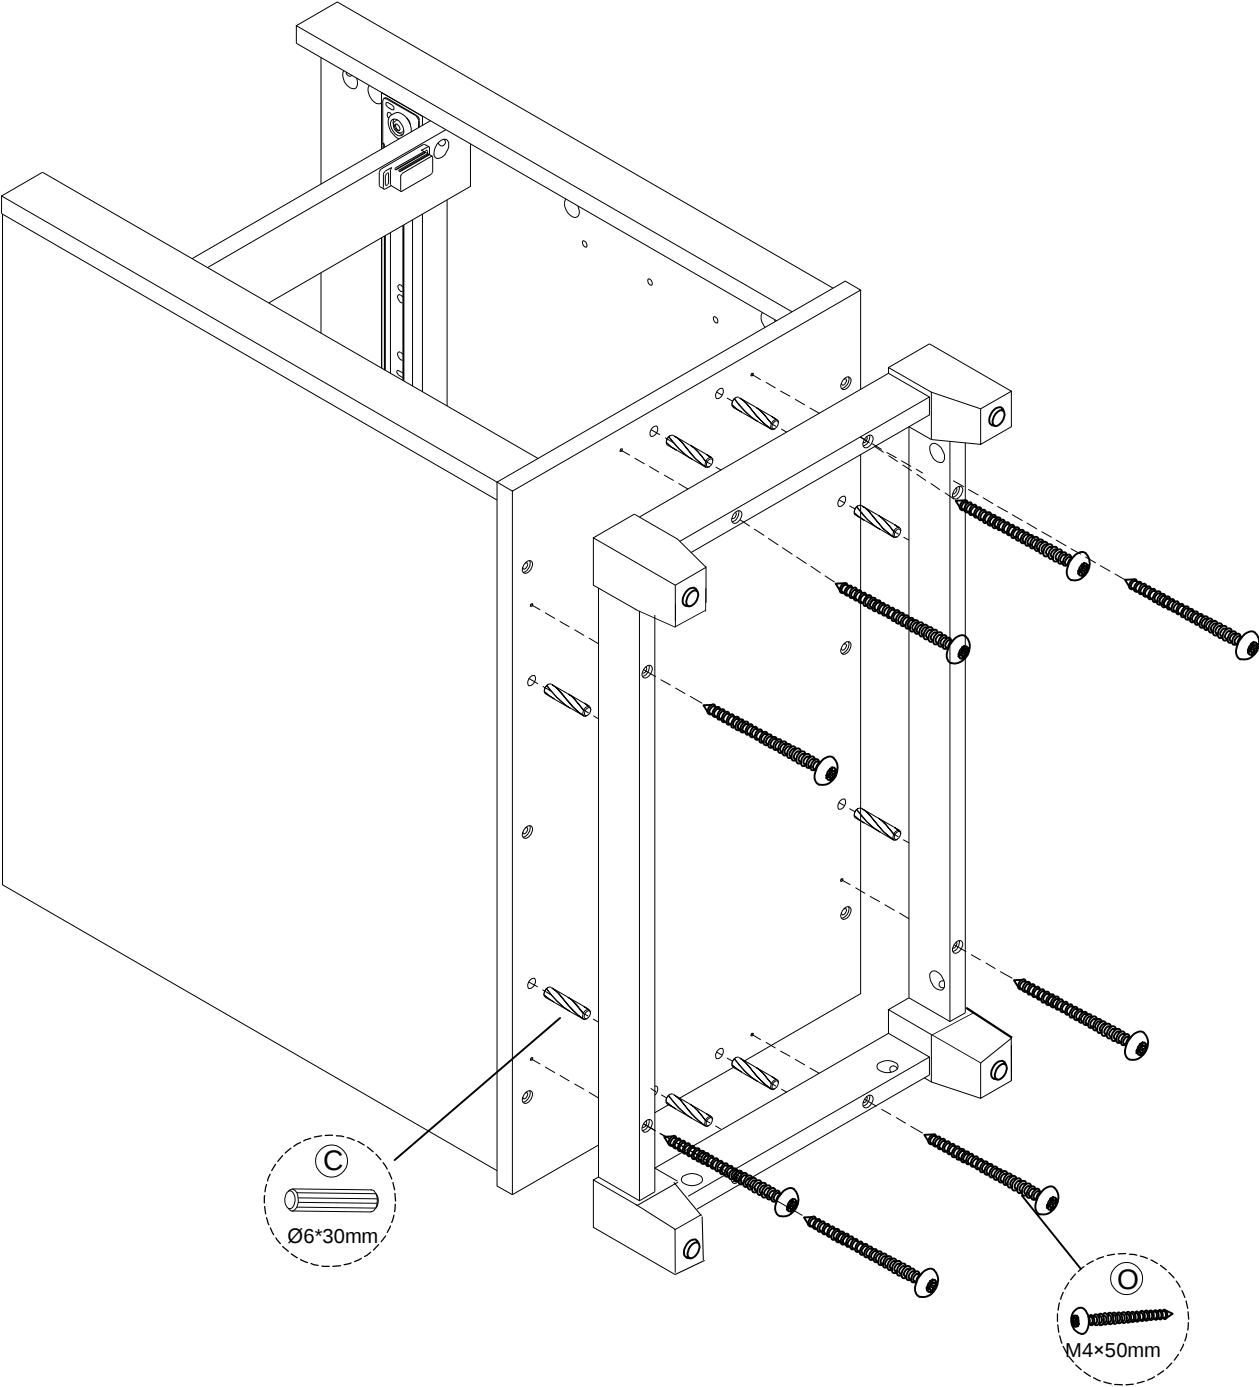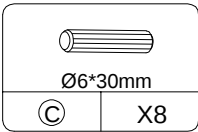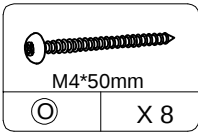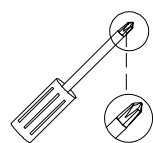


Step 11

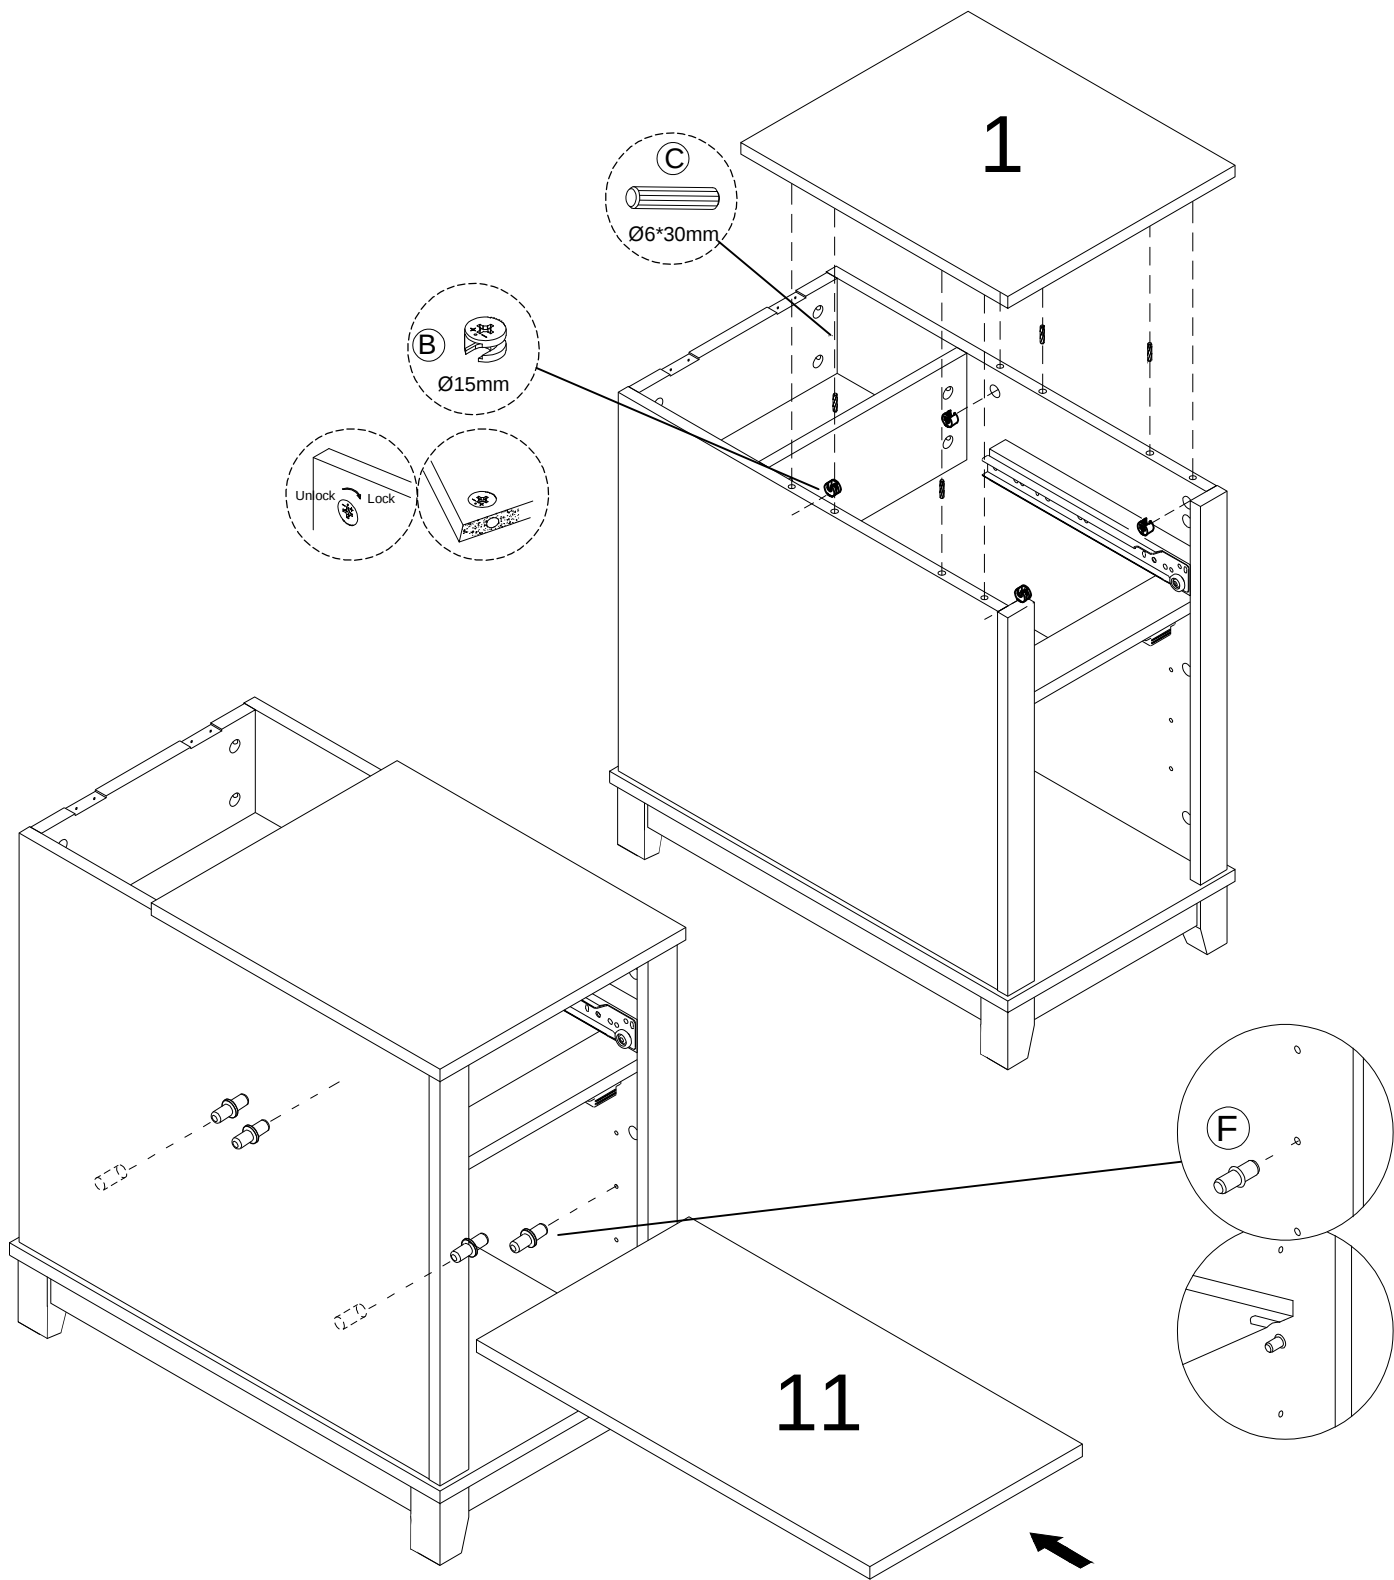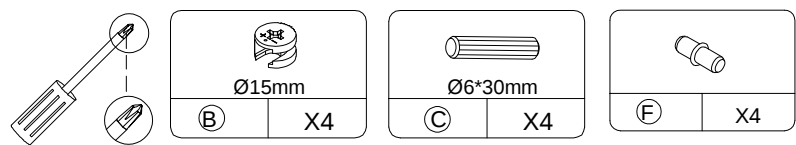

Step 12





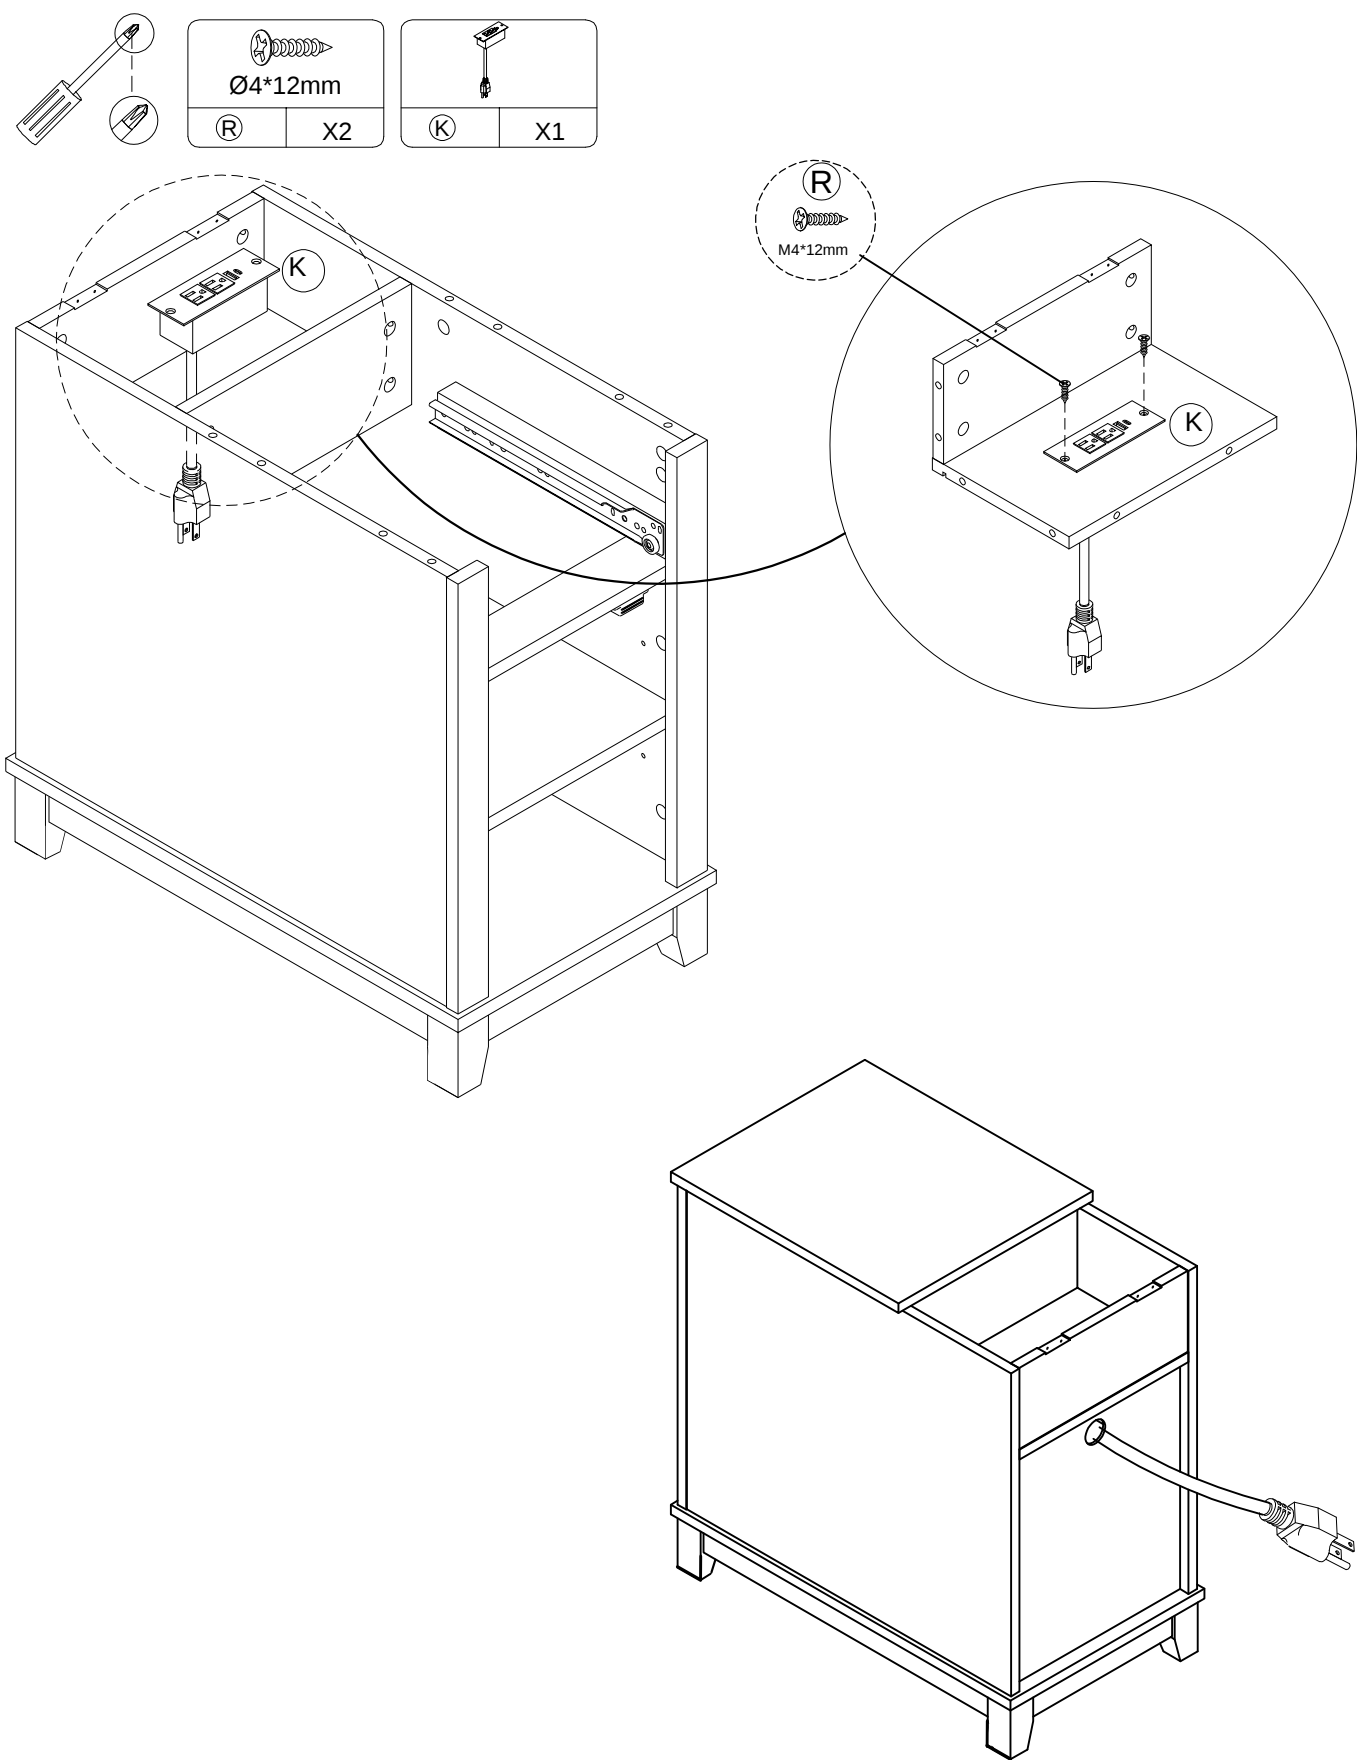


Step 13

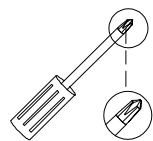


 Ø3*12mm	
(D)	X8

	
(G)	X2

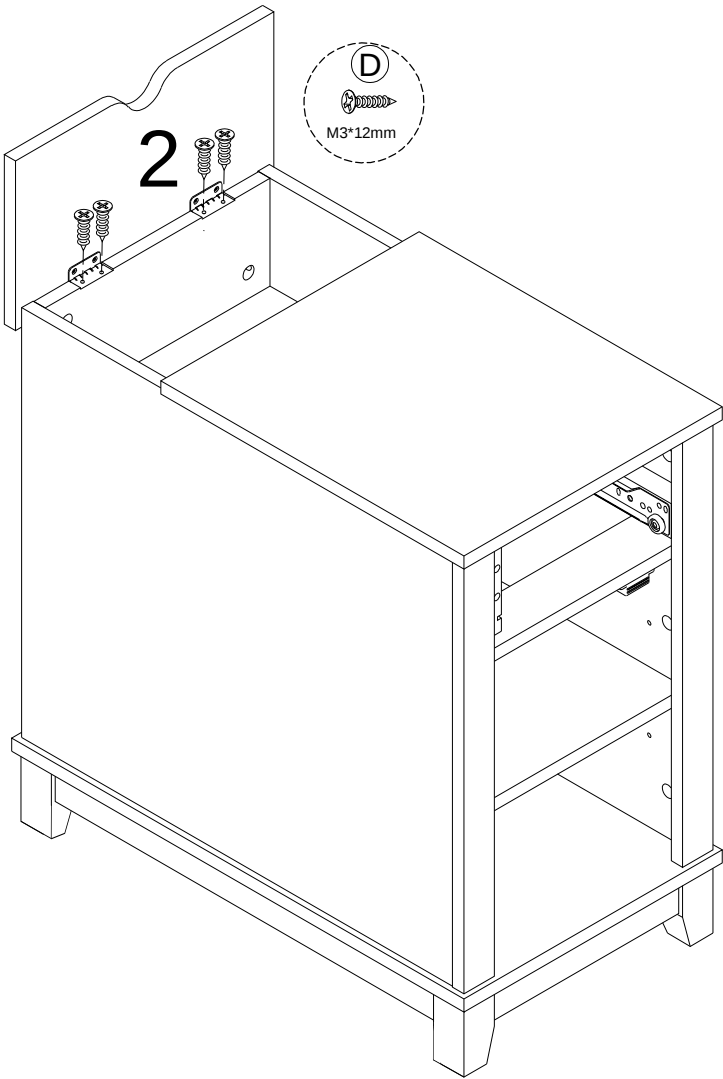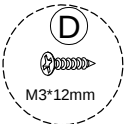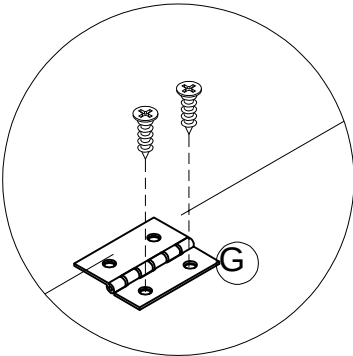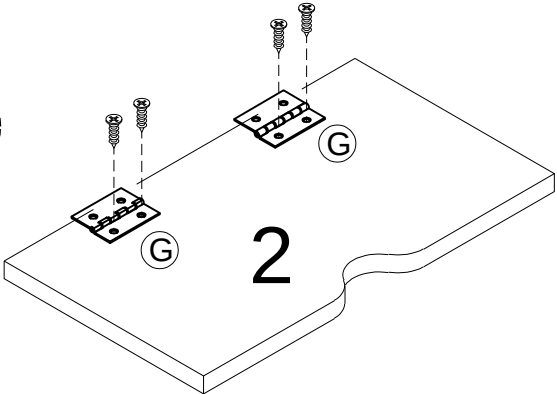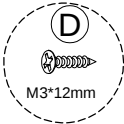

Step 14

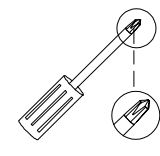



 Ø3*12mm	
D	X6

	
G	X2










	
H	X2

	
J	X1

	
M	X1



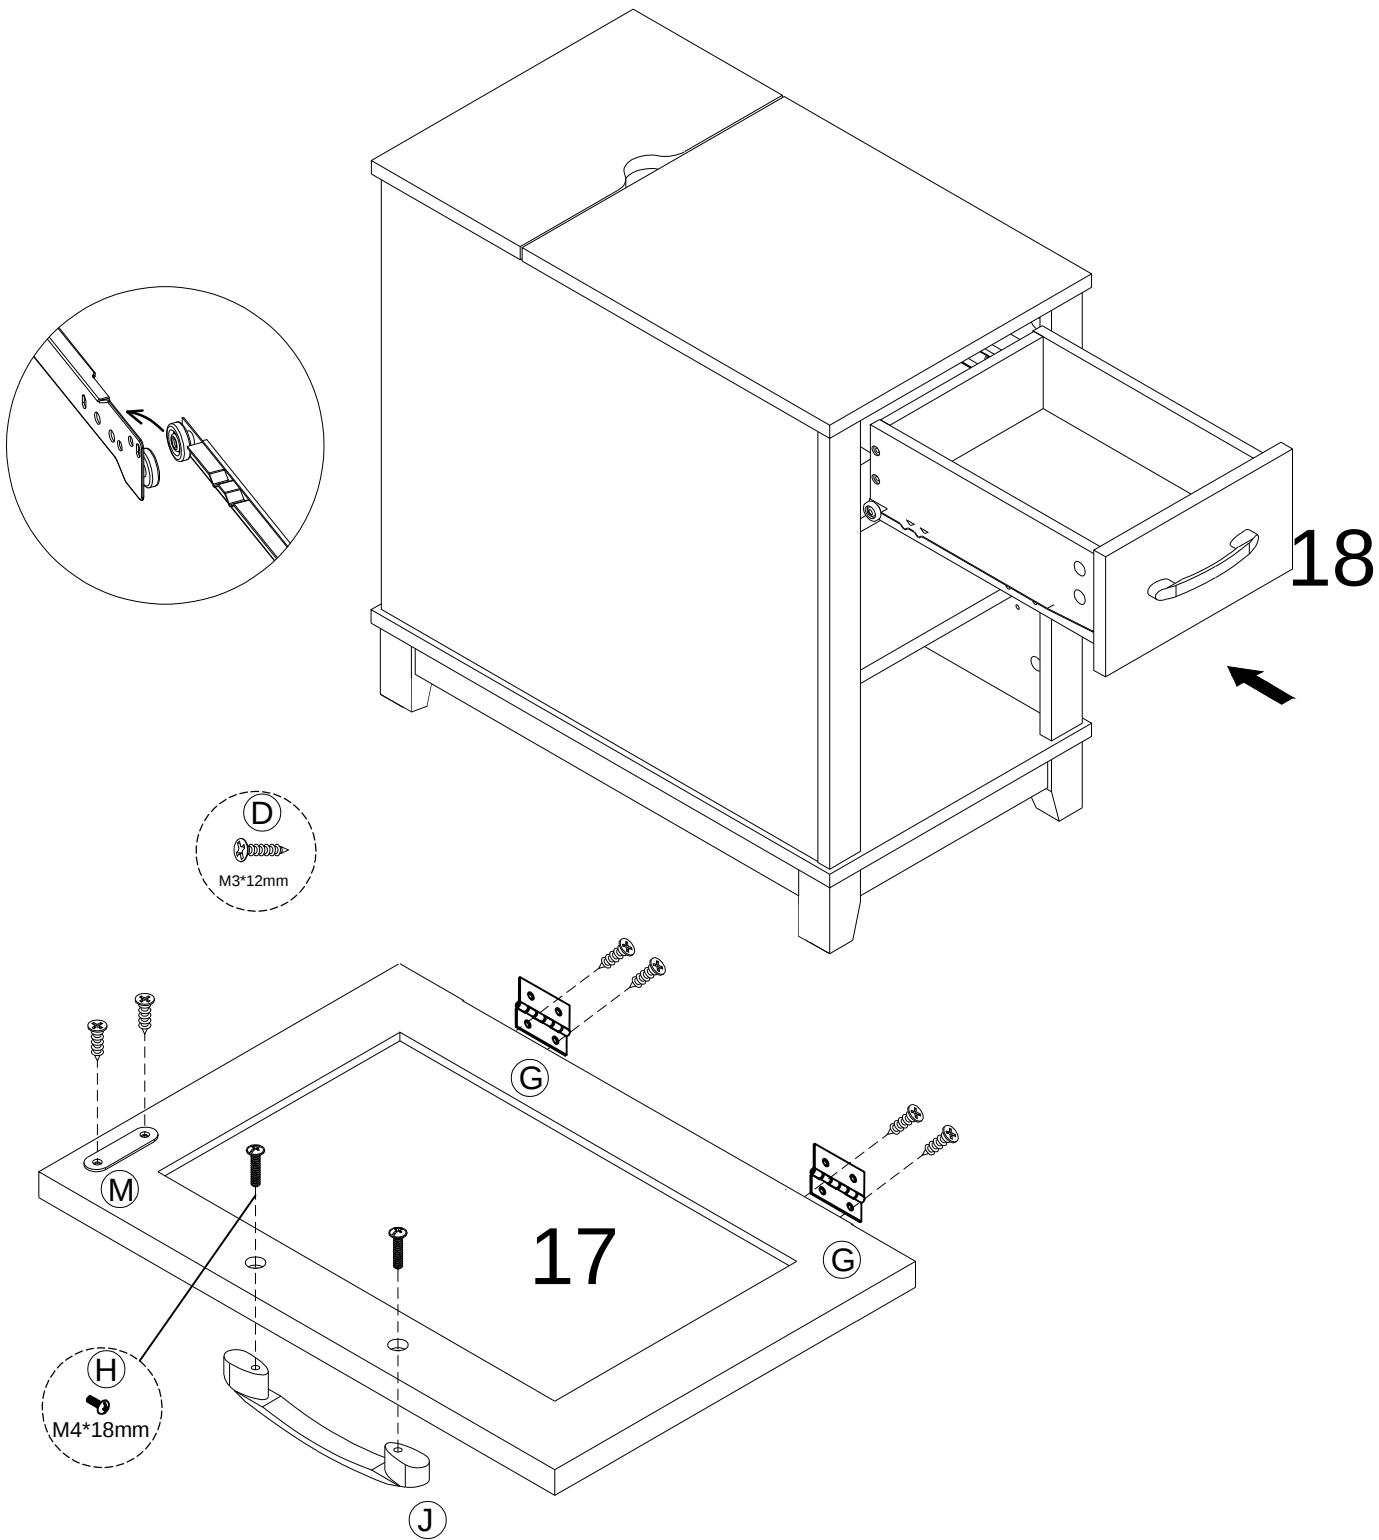


Step 15

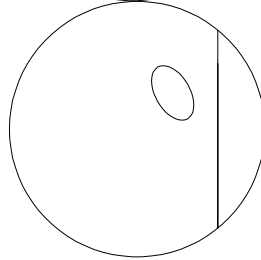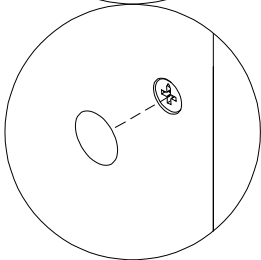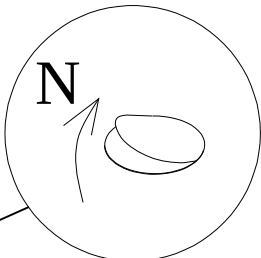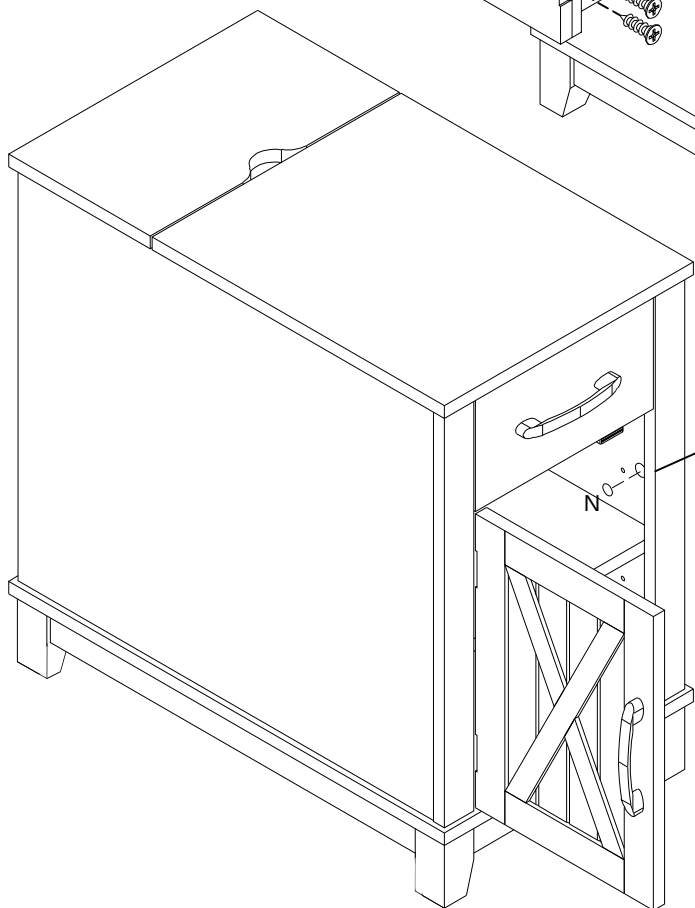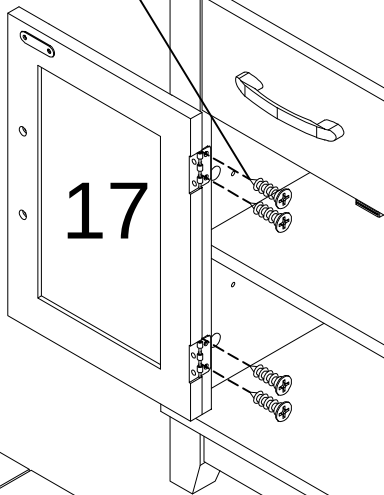
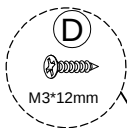
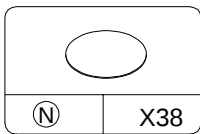
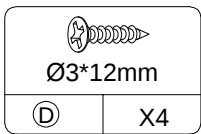
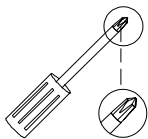


x 38

Step 16

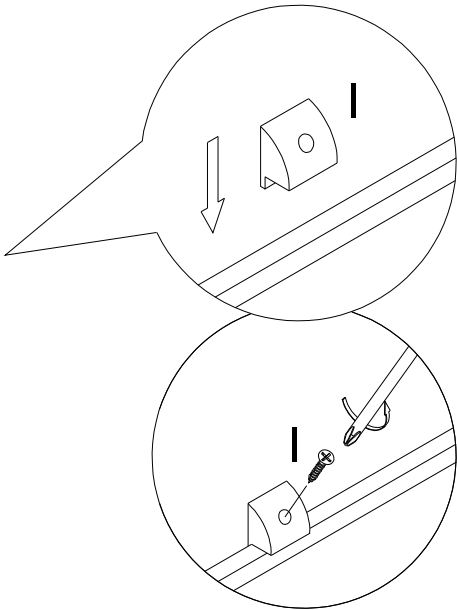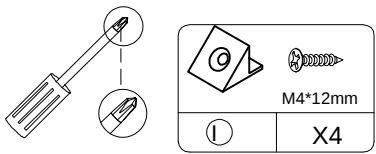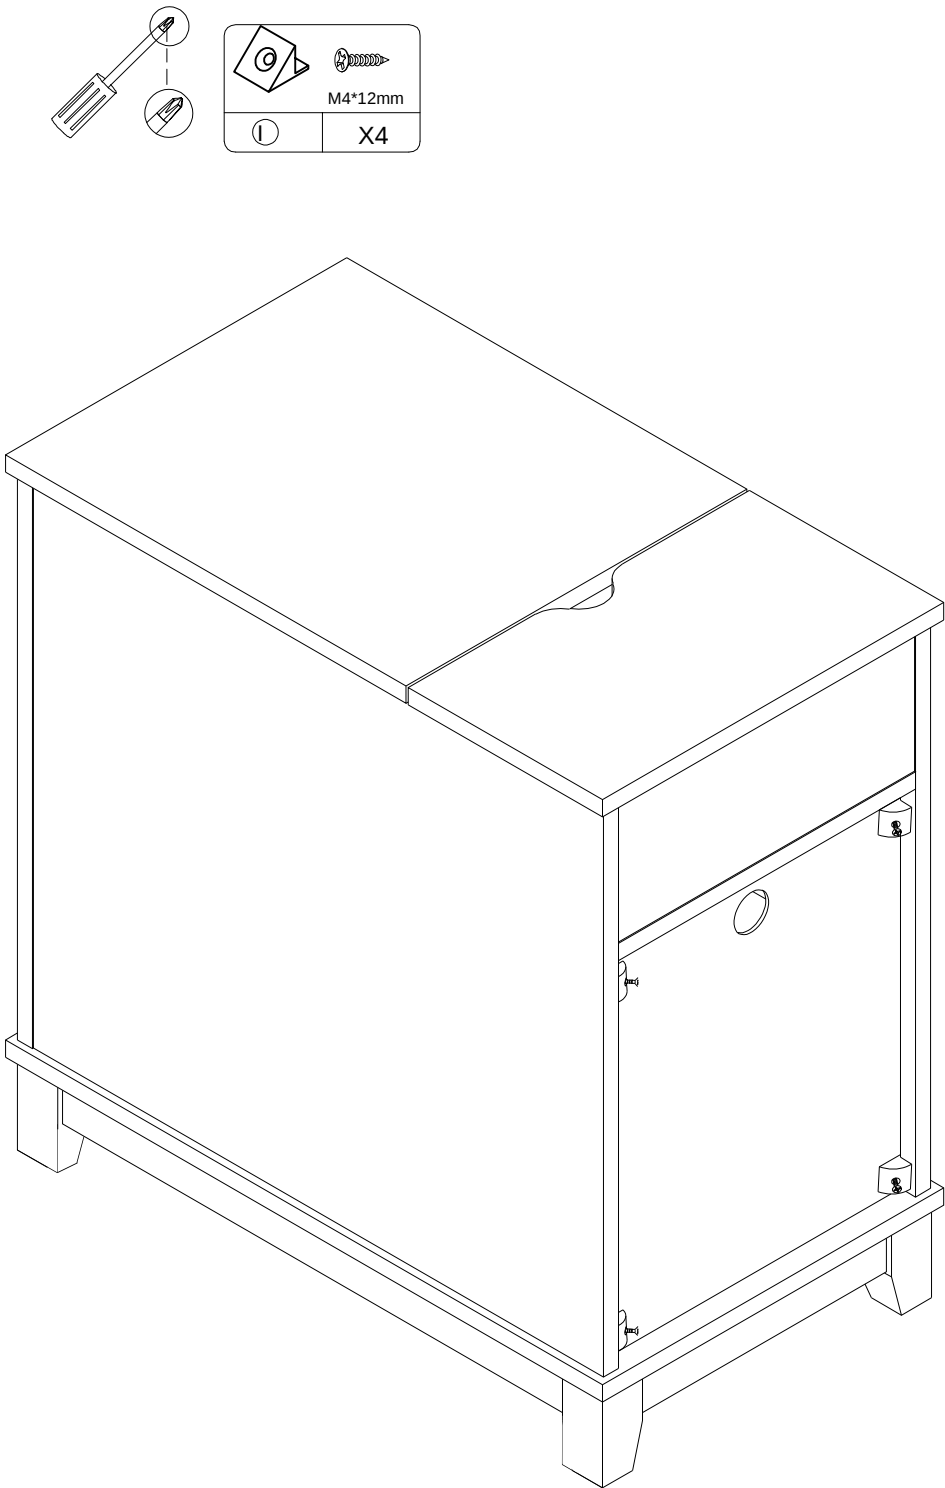

Step 17

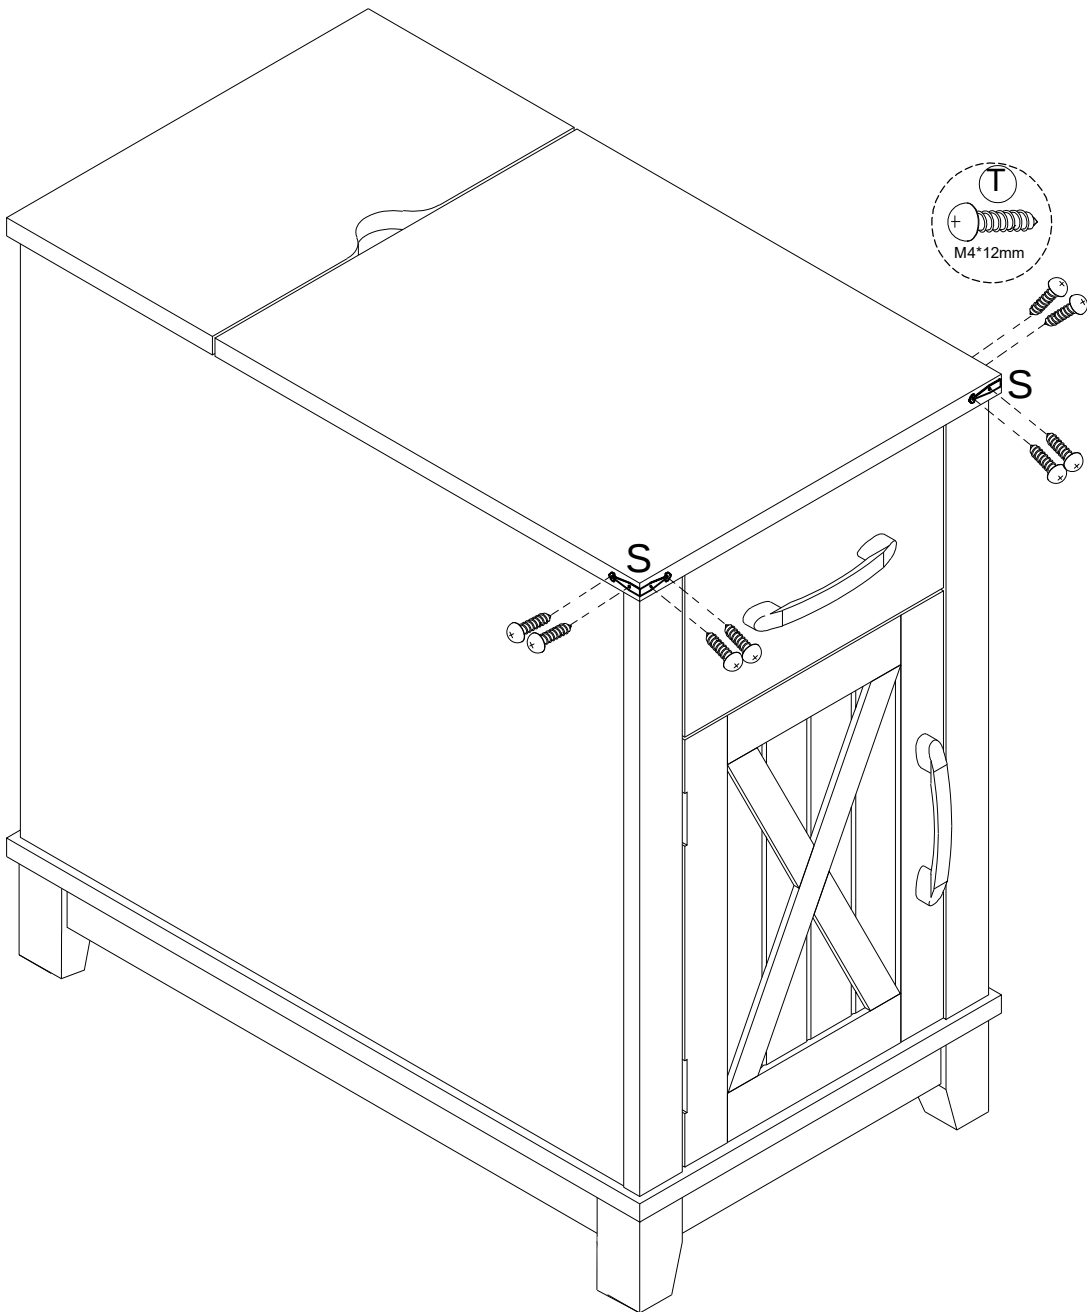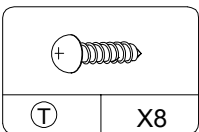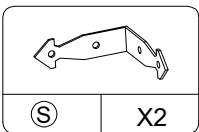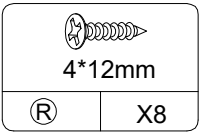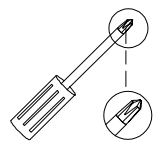

Step 18

