





Swimming pool storage rack - Enlarged version





Box A




Item no.	Reference Image	Qty.
Ⓒ1	U-Channel(86mm) 	48x
Ⓒ4	U-Channel(975mm) 	2x
⒮1	Left Post-A 	1x
⒮2	Left Post-B 	1x
⒮3	Right Post-A 	1x
⒮4	Right Post-B 	1x
ⓤ	Screws 	68x
ⓗ	Hook 	6x
⒯	Post Cap 	6x
Ⓑ	Tube 	8x
Ⓡ1	Rail 	16x
Ⓡ2	Outer Rail(1102mm) 	4x
Ⓡ3	Long Rail(1573mm) 	6x
Ⓒ2	U-Channel(249mm) 	4x
Ⓒ3	U-Channel(325mm) 	2x

Swimming pool storage rack - Enlarged version



PXLFOT133GW

Box B



Item no.	Reference Image	Qty.
C1	U-Channel(86mm) 	36x
S5	Middle Post-A 	1x
S6	Middle Post-B 	1x
R5	Middle Rail 	1x
R4	Bottom Rail 	2x
R1	Rail 	17x

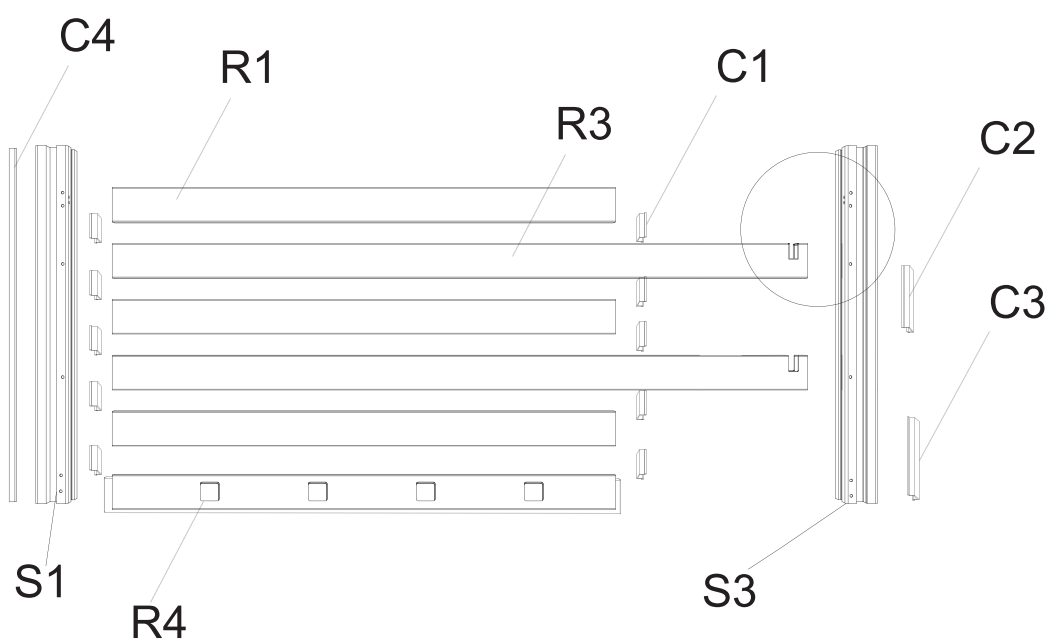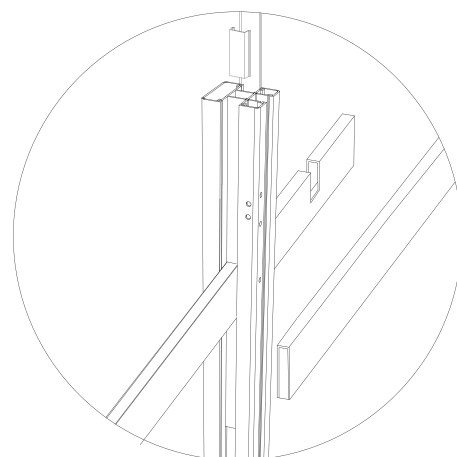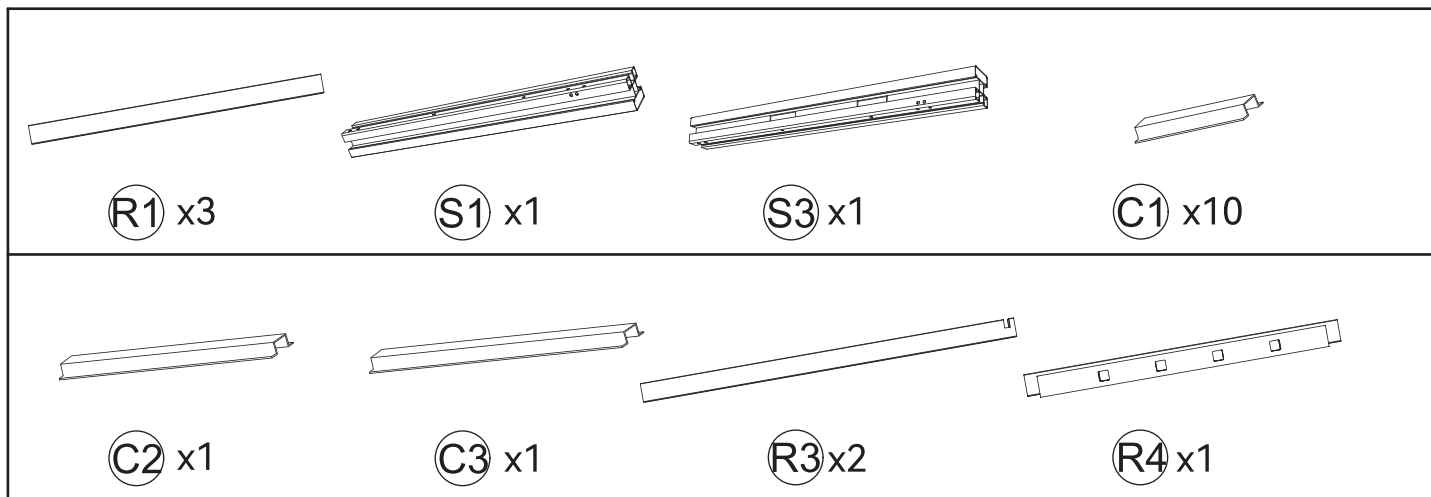




Insert Bottom Rail (R4), Rail (R1), Long Rail (R3), U-Chanel (C1) in sequence between Left Post-A (S1) and Right Post-A (S3). Then insert U-Chanel (C2-C4) into the corresponding position

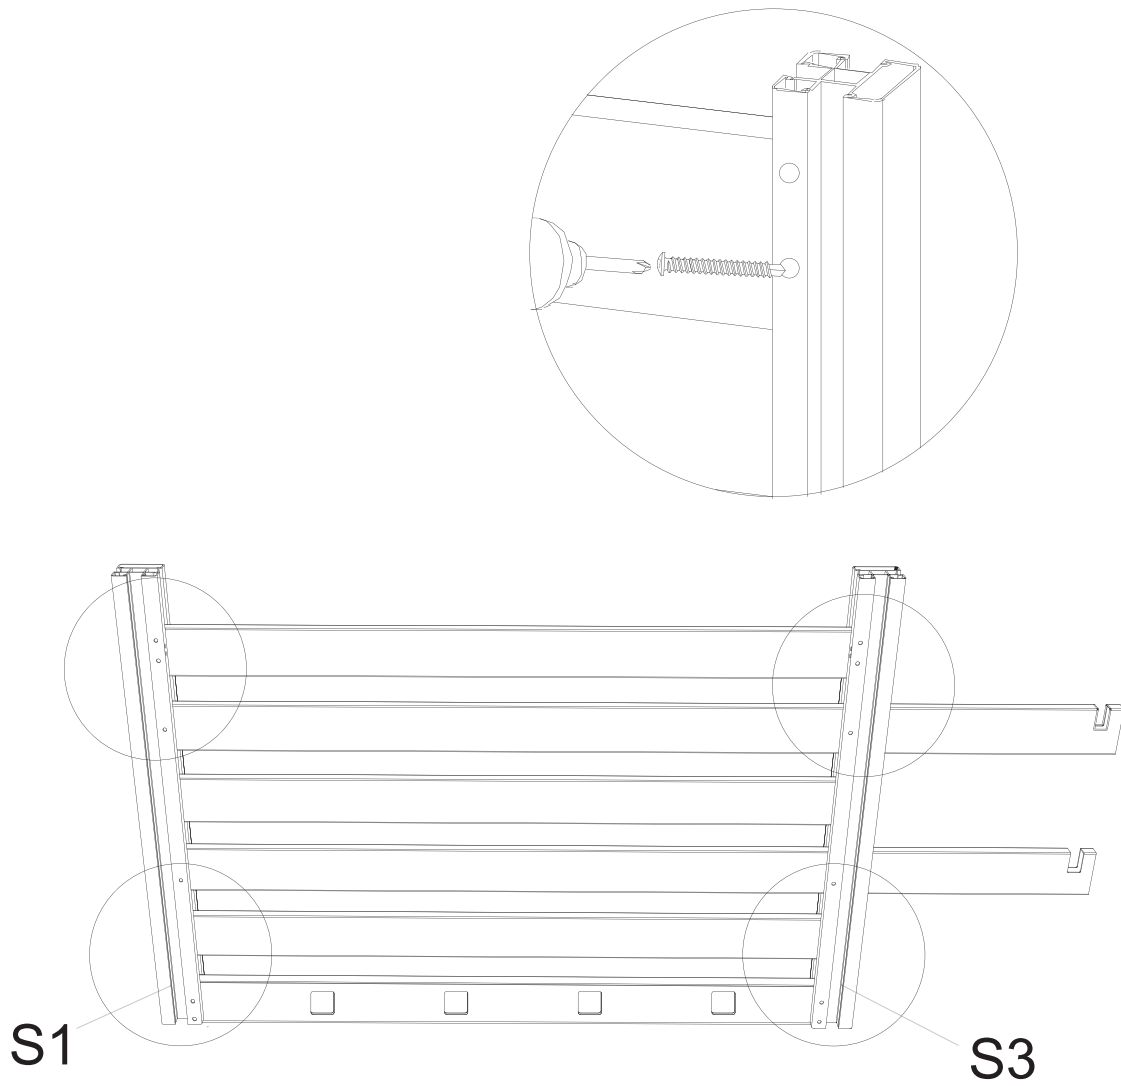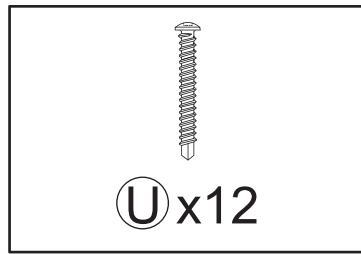




According to the illustration,
install Screw (U) to the corresponding position

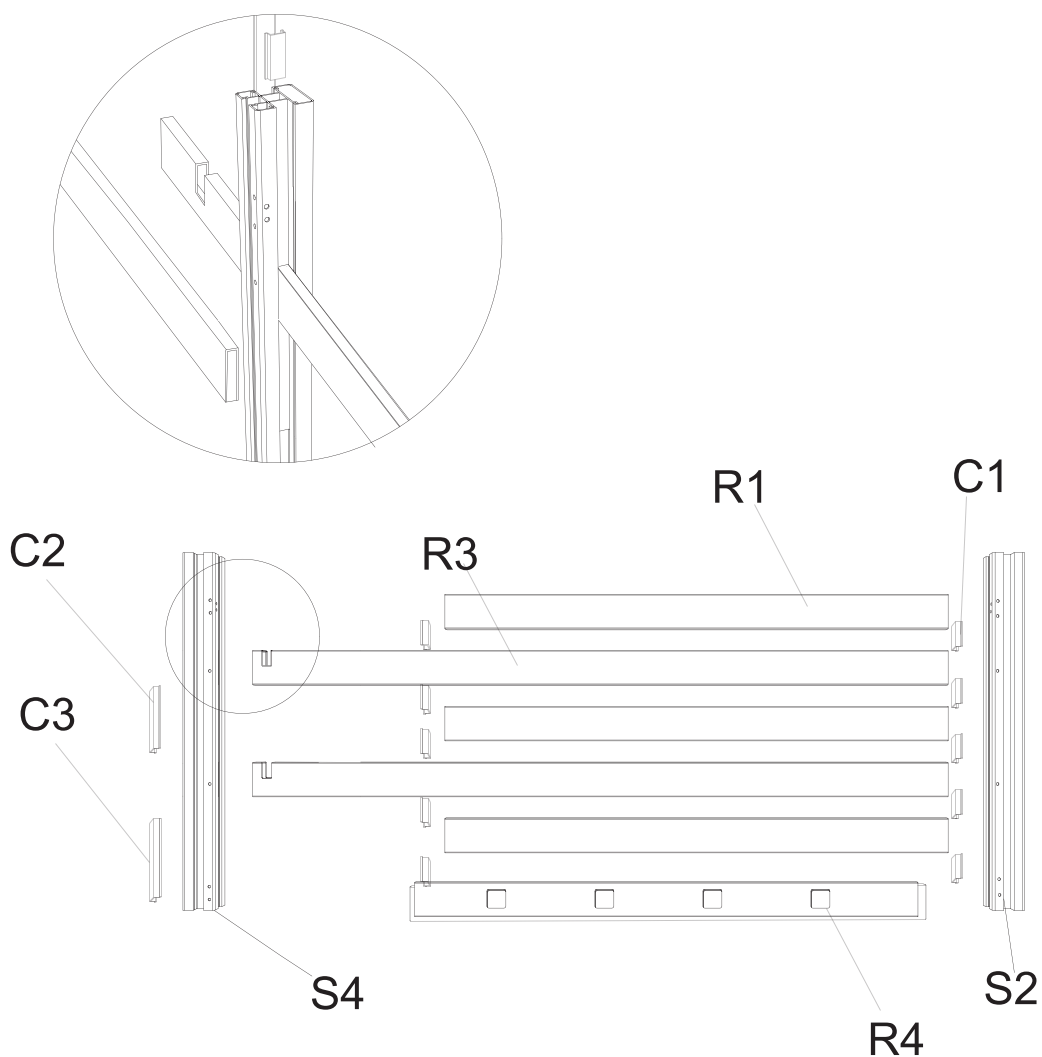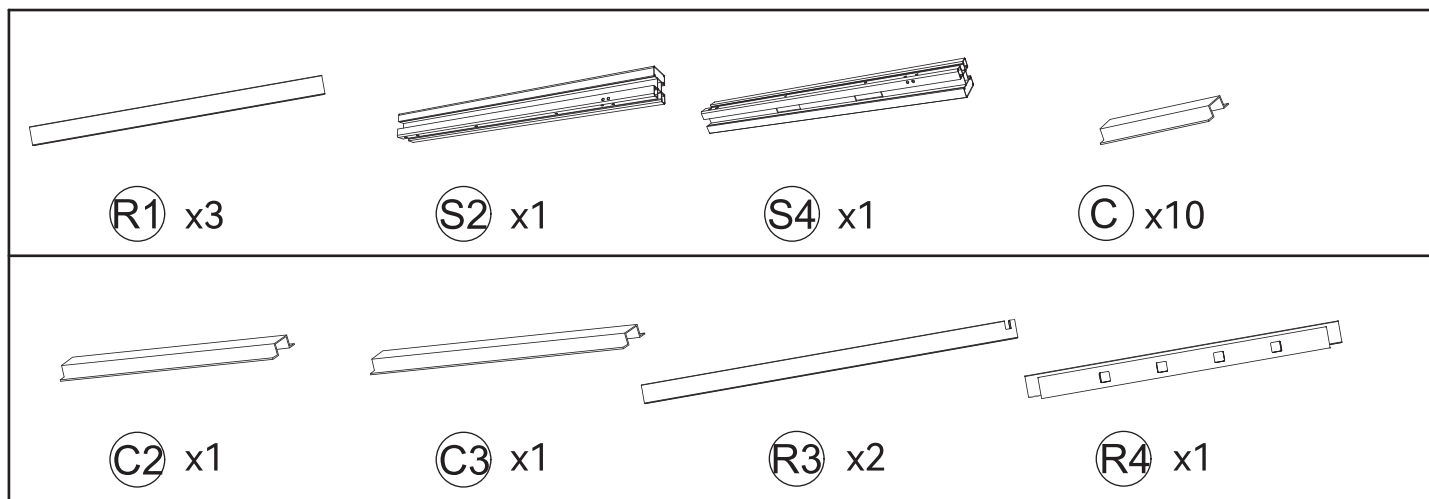




Insert Bottom Rail (R4), Rail (R1), Long Rail (R3), U-Chanel (C1) in sequence between Left Post-B (S2) and Right Post-B (S4). Then insert U-Chanel (C2-C4) into the corresponding position

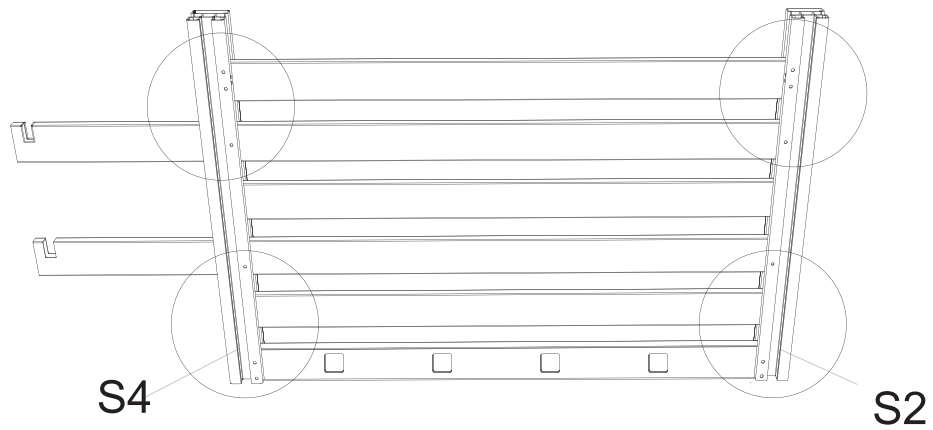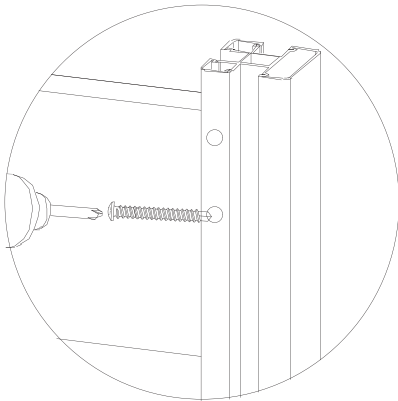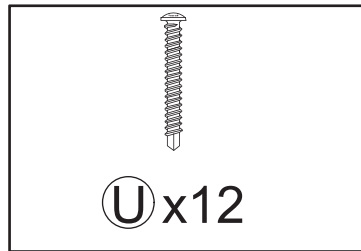



According to the illustration, install Screw (U) to the corresponding position

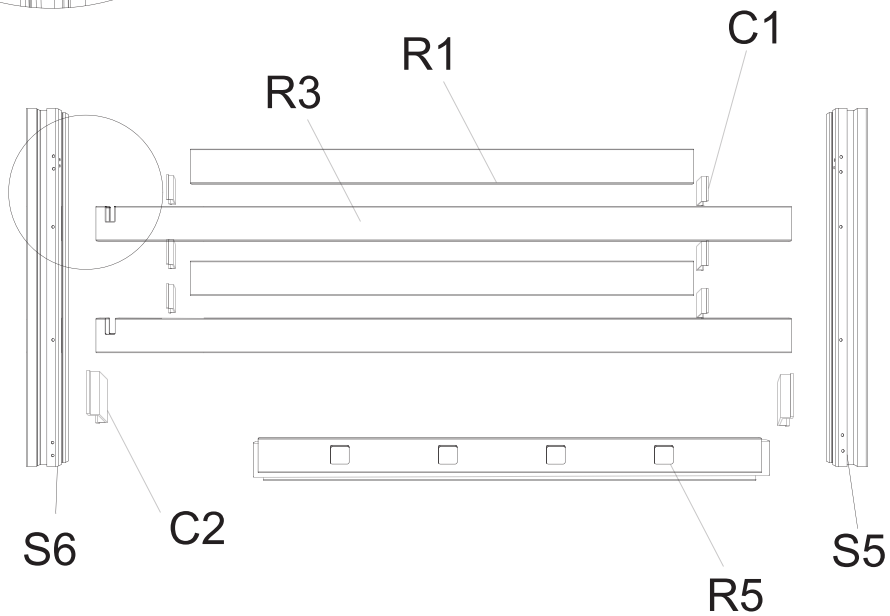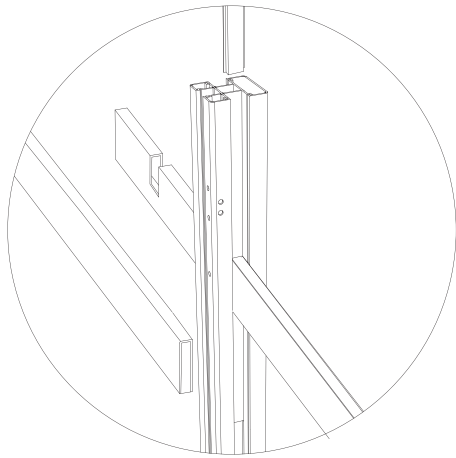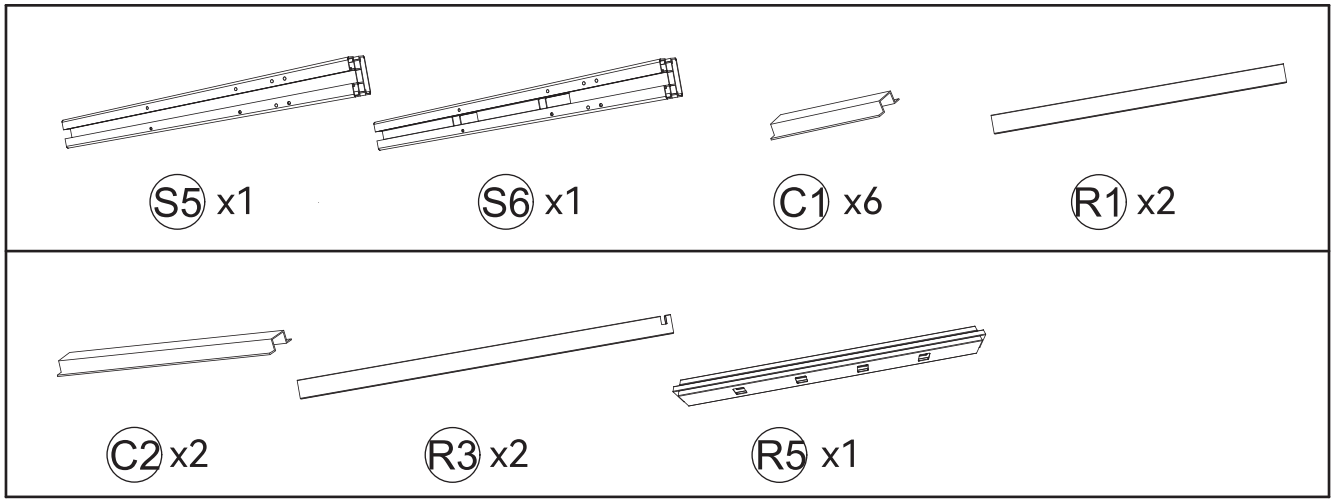



Insert Middle Rail (R5), Rail (R1), Long Rail (R3)
U-Chanel (C1-C2) in sequence between Middle
Post-A (S5) and Middle Post-B (S6).

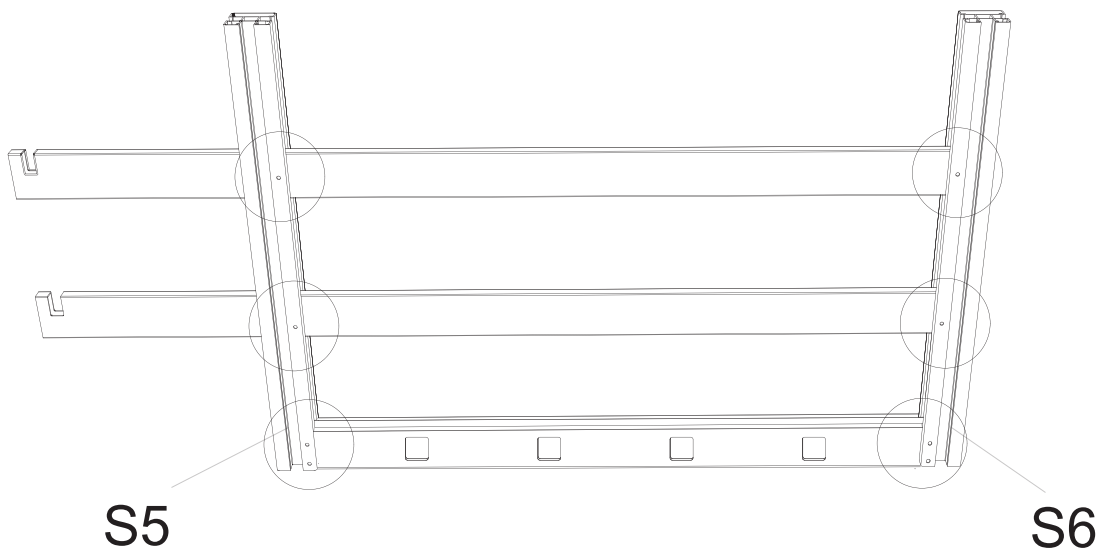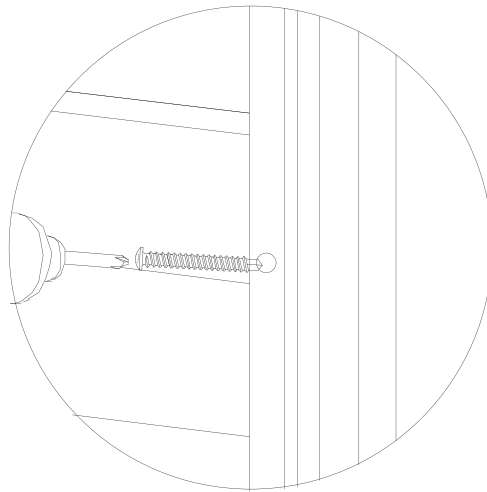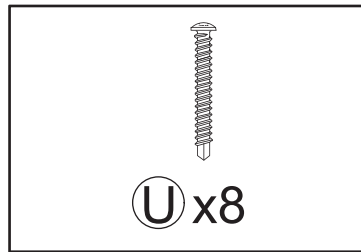



According to the illustration,
install Screw (U) to the corresponding position

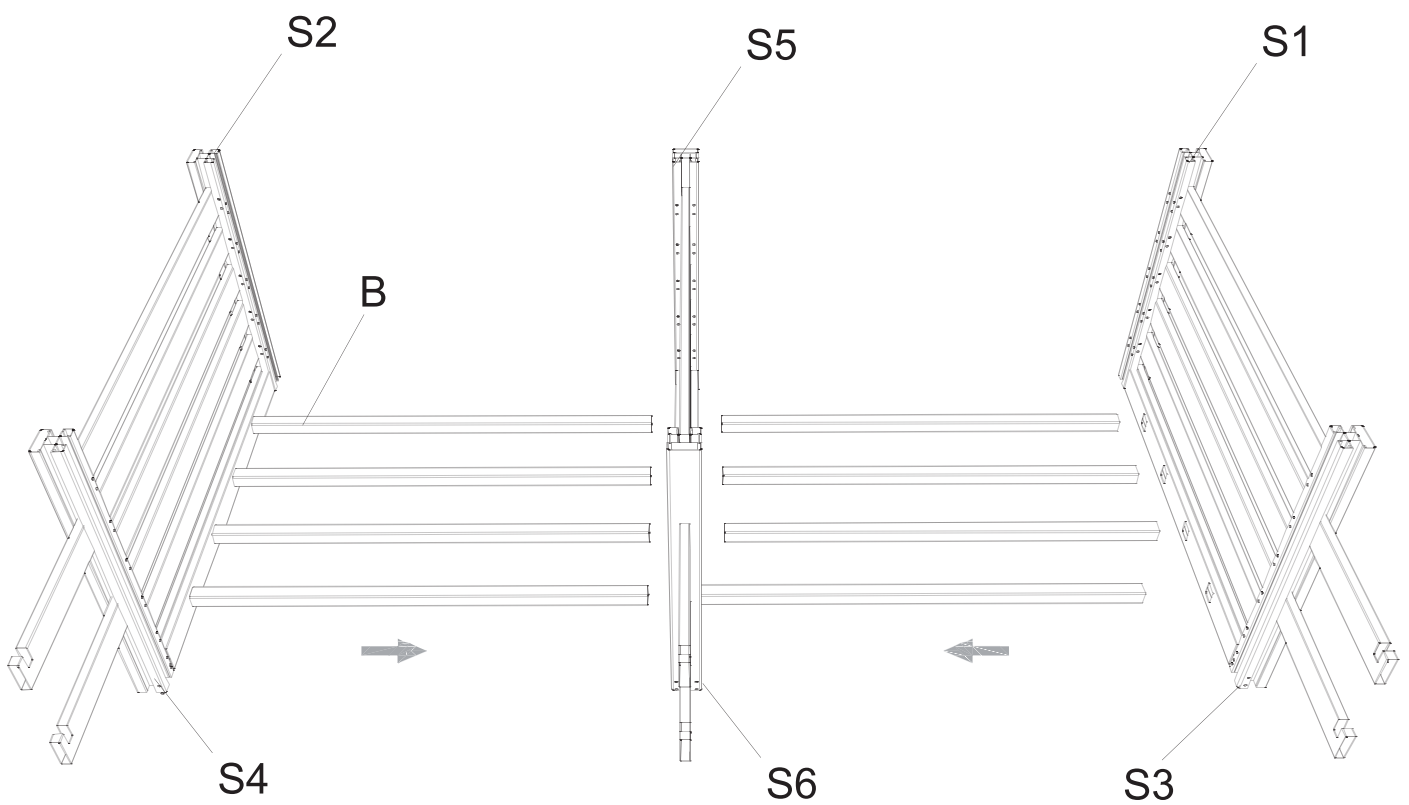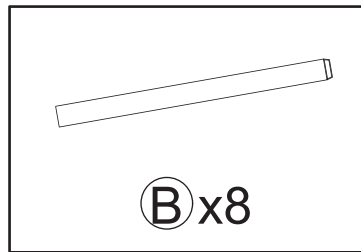

Use Tube (B) to join the three vertical boards together.

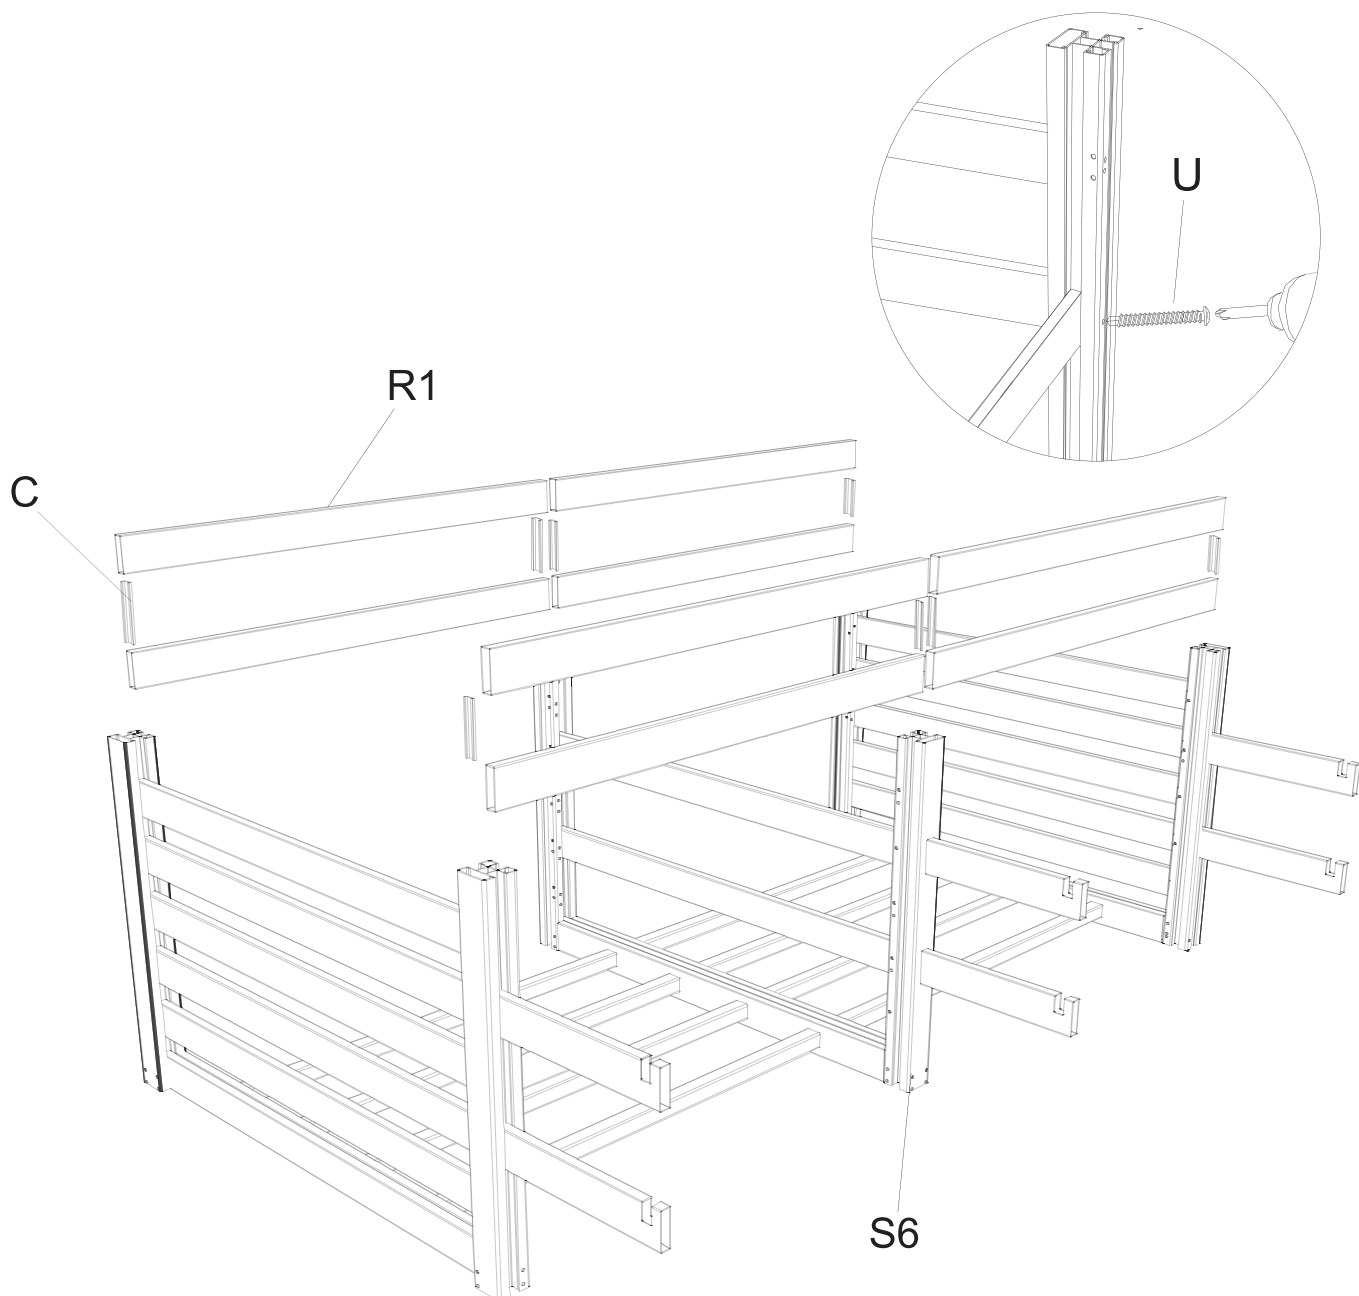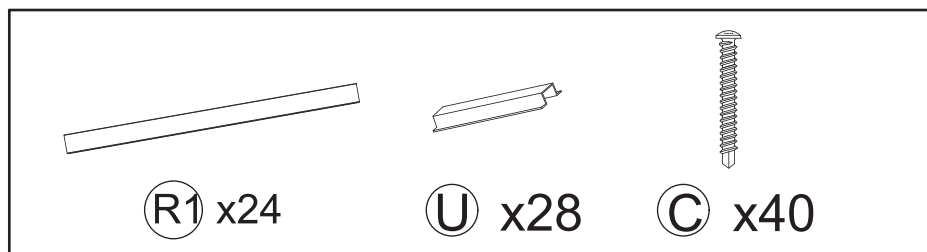

Install Rail (R1) and U-chanel (C1) at the front and back accordingly, and install Screw (U) at the corresponding positions.

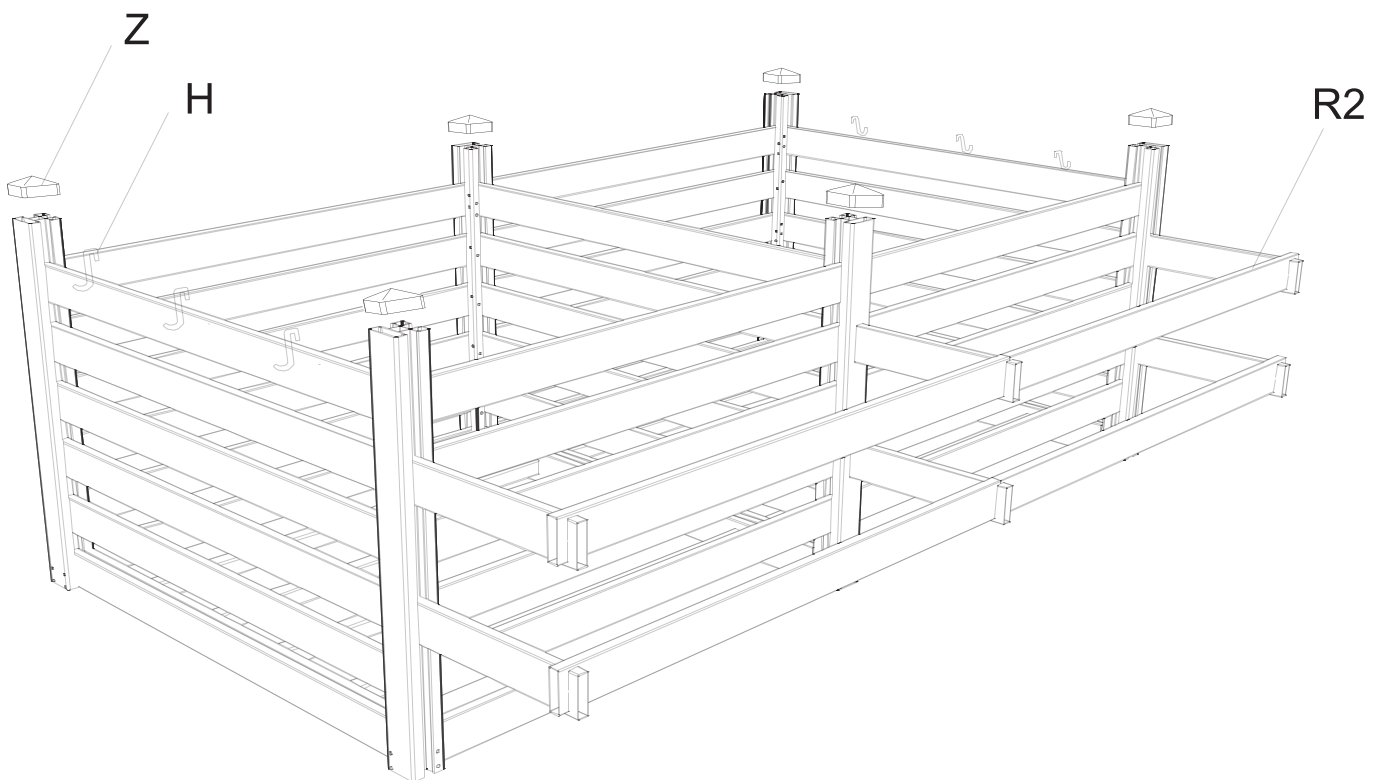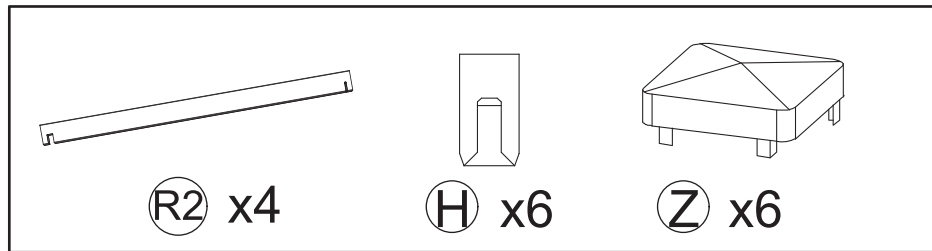

Finally, place Outer Rail (R2), Post Cap (Z), Hook (H), and the installation is complete.

