
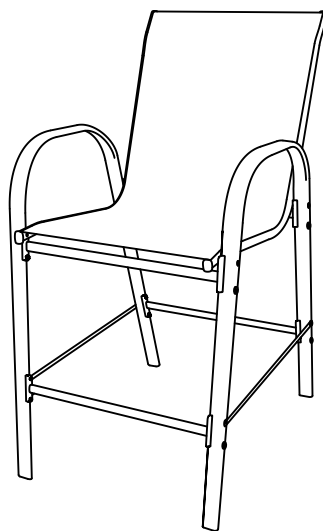
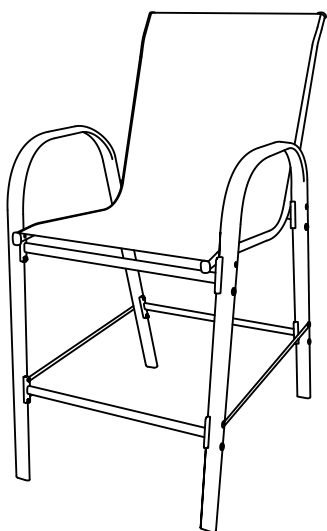
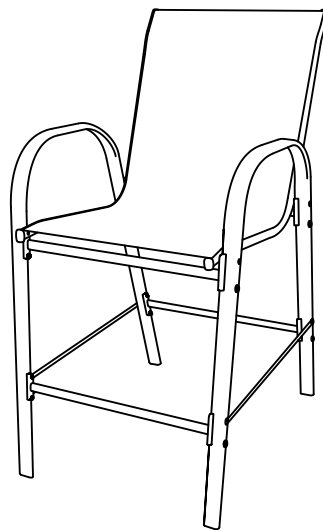
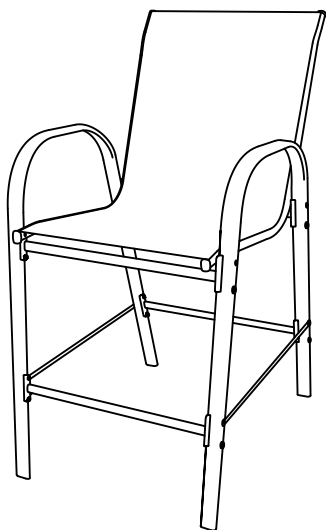
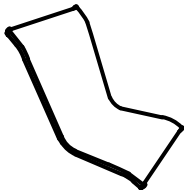


Assembly Instruction

Outdoor Bar Height Stools




A		B		C		D	
4PCS		4PCS		4PCS		16PCS	
E		F		G	 M6x55	H	 M6x70
4PCS		8PCS		48PCS		16PCS	
I		J		K		L	
64PCS		64PCS		1PC		1PC	

Note: (1) If you have any missing parts or installation difficulties, please feel free to contact us and we will provide you with a satisfactory solution within 24 hours.

(2) During the assembly process, each screw should be tightened to 80%, and after assembly is complete, all screws should be tightened again to 100%(Note: When assembling the seat, each screw should be tightened to 50% first.)

B x1
C x1
D x2
G x4
I x4
J x4


STEP1

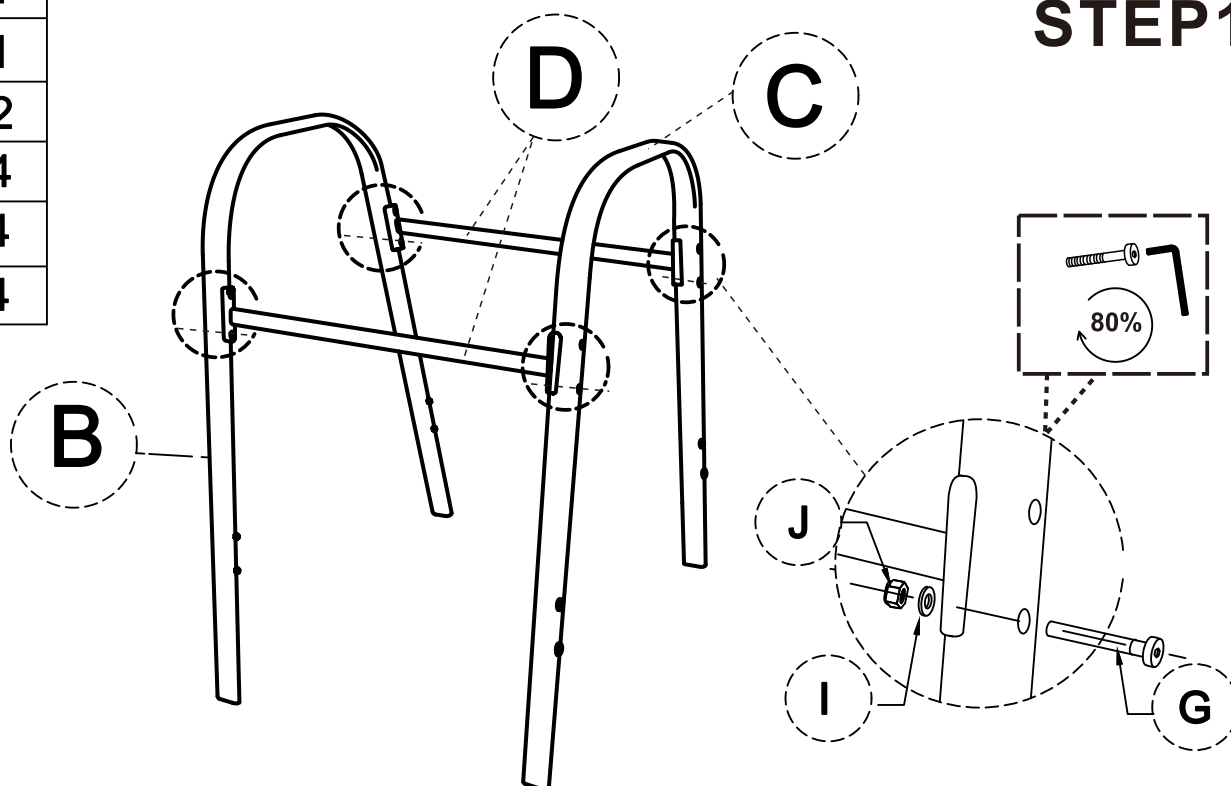

Please align the D rod with the holes above B and C first, assemble part G-I-J in the second hole, and use tools K and L to tighten it to 80%

D x2
G x4
I x4
J x4

STEP2

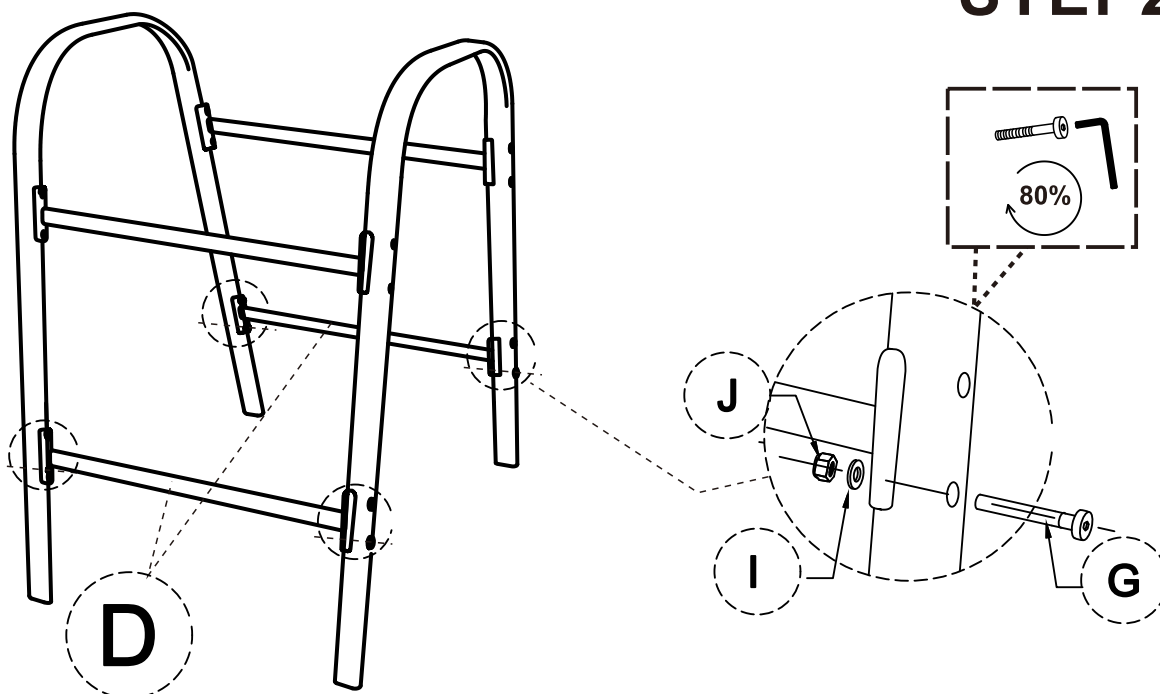

Please align the D rod with the holes below B and C first, assemble part G-I-J into the second hole, and use tools K and L to tighten it to 80%


A x1

H x2

I x2

J x2

STEP3

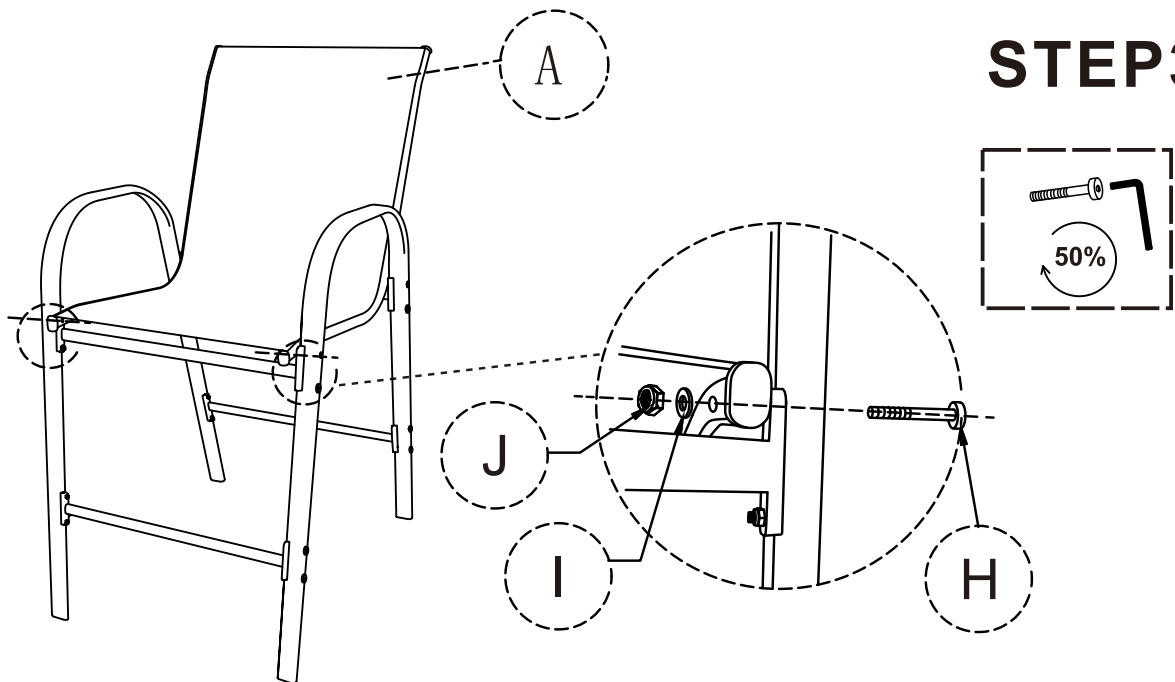


Please align the holes on both sides of the seat with B and C, assemble part H-I-J, and use tools K and L to tighten it to 50% (Note: Try pulling the front and rear legs of the bracket closer for easier installation.)

H x2

I x2

J x2

STEP4

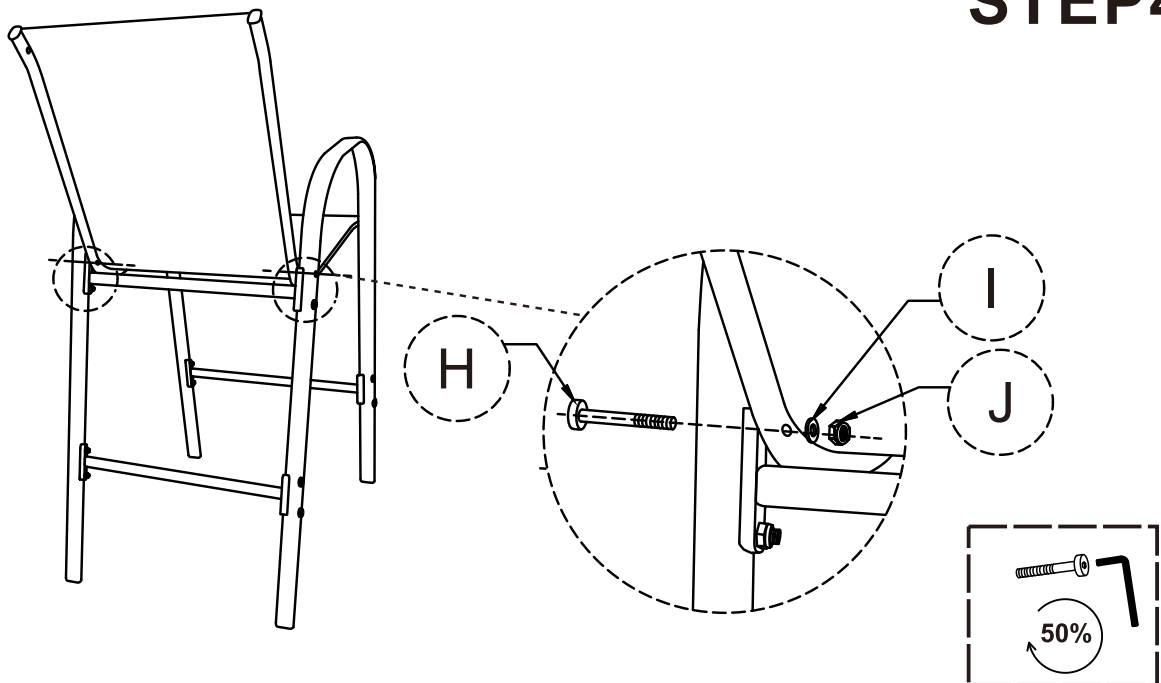

Please align the rear hole of the seat with B and C, assemble part H-I-J, and tighten it to 50% using tools K and L


F x2

G x4

I x4

J x4


STEP5

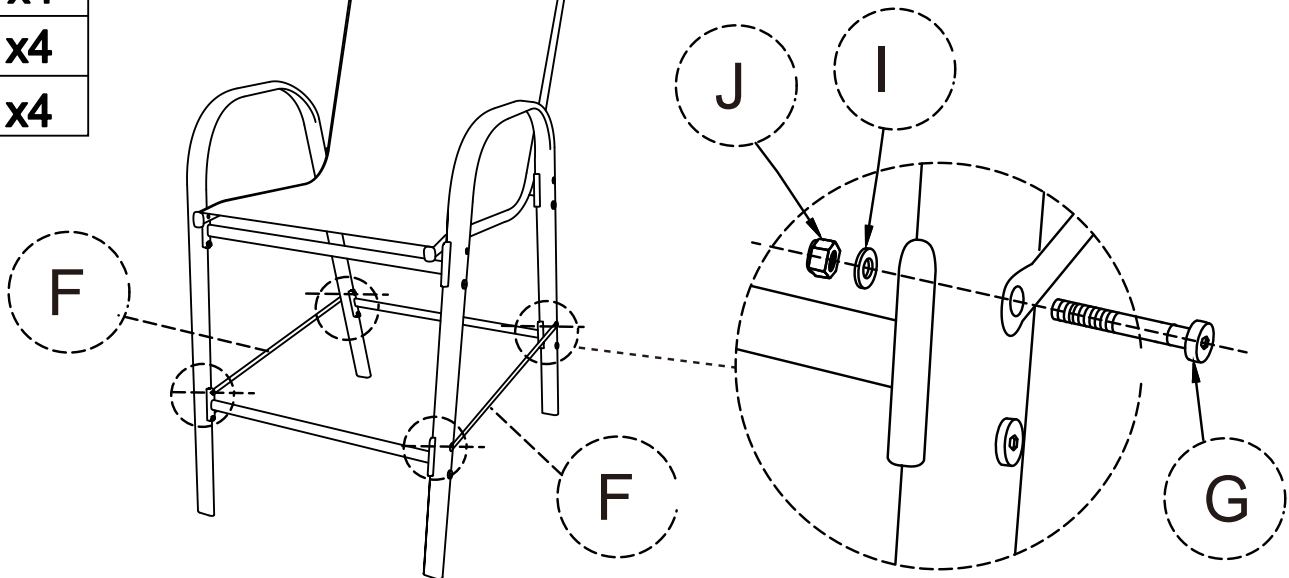


Please align the two F with the holes of B and C respectively, assemble part G-I-J, and tighten it to 80% with tools K and L

E x1

STEP6

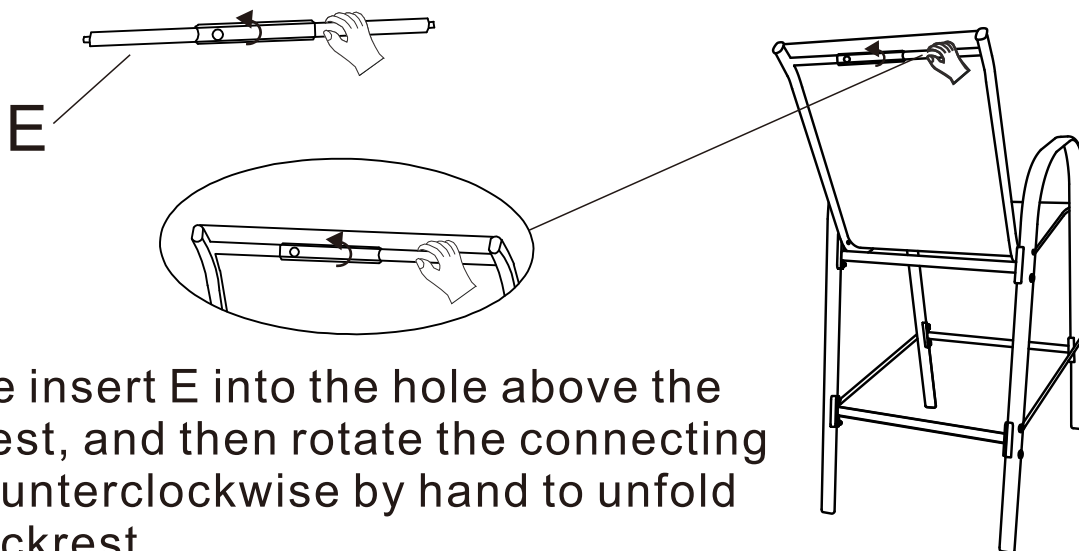

Please insert E into the hole above the backrest, and then rotate the connecting rod counterclockwise by hand to unfold the backrest

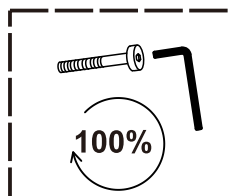

Please tighten all screws to 100% after installation