
12 x 12 FT

WQG-029-4

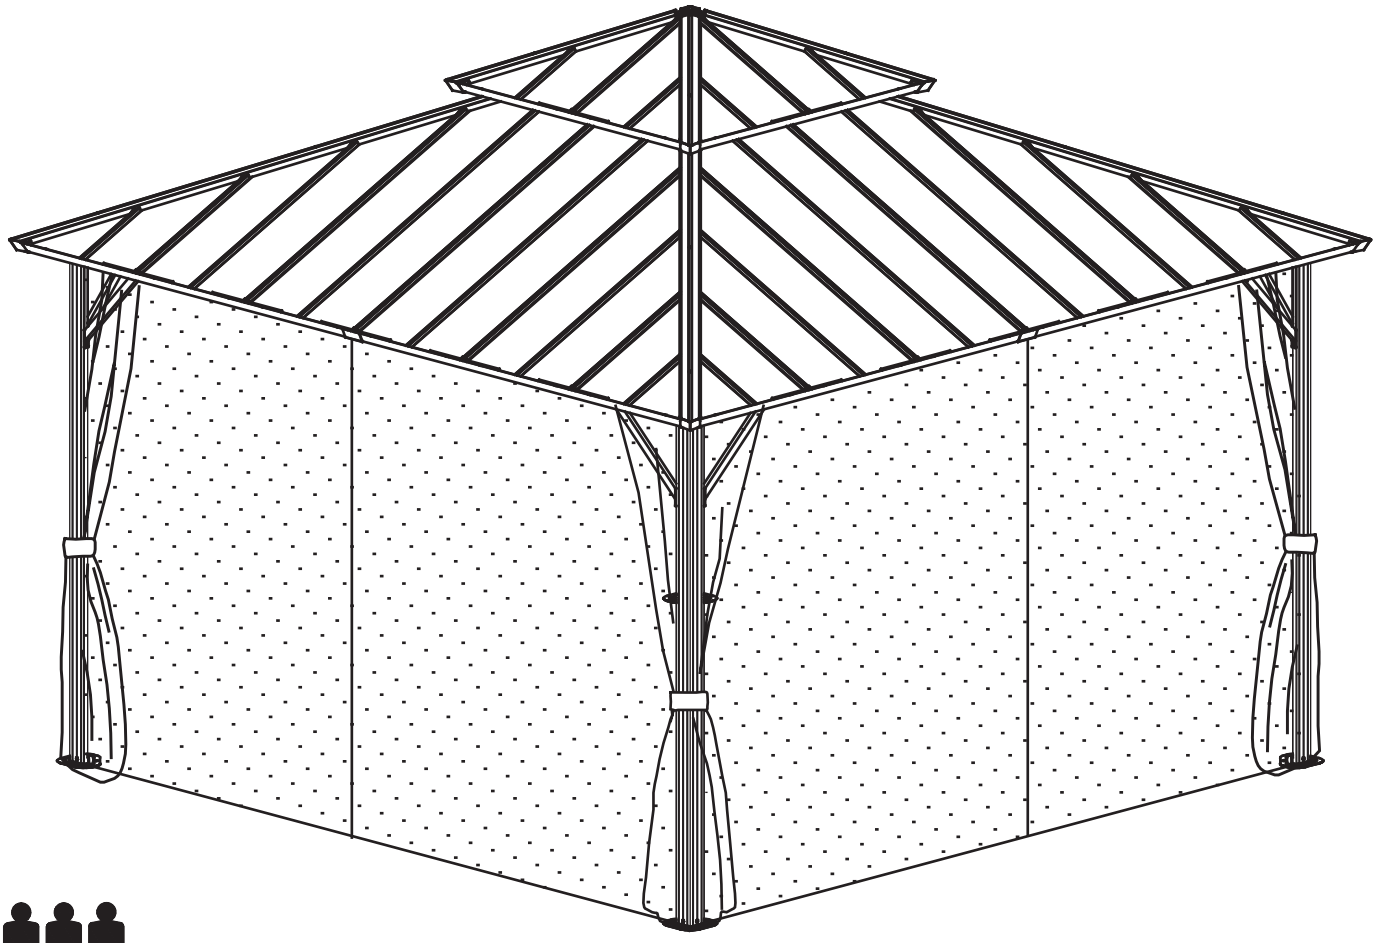

Need at least three people to work together

REQUIRED TOOLS












A2 4x

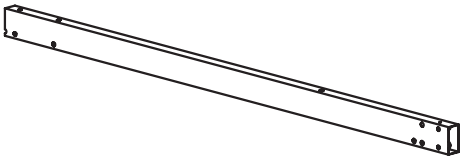


B7 4x

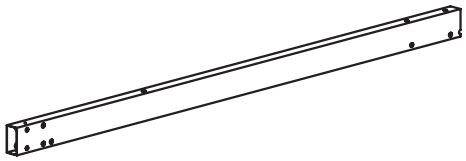


B8 4x

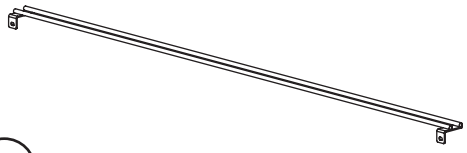


C4 8x

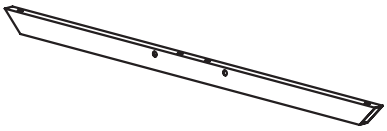


D3 4x

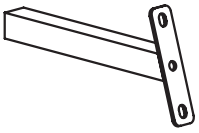


D7 4x

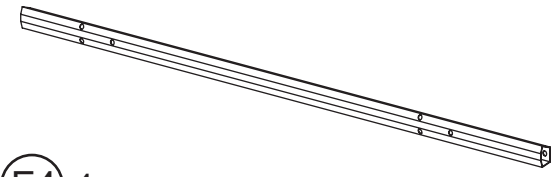


E4 4x

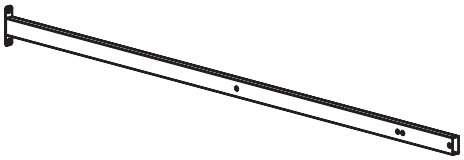


E5 4x

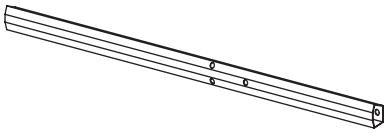


E6 4x

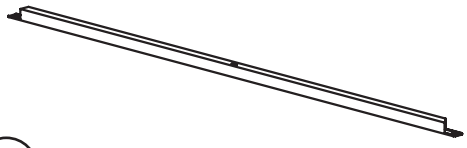

F5 4x

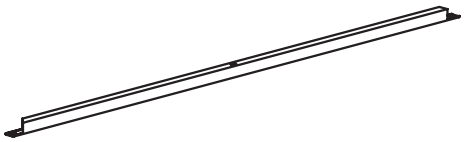


F6 4x

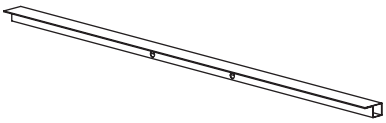


G3 4x




H2 8x

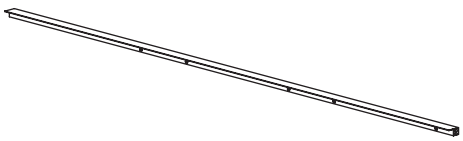

I5 4x

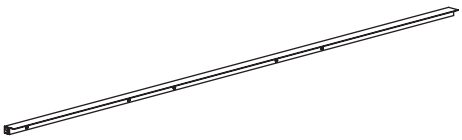

I6 4x

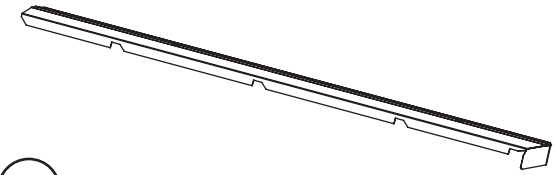

R3 4x




R7 4x



J 4x




K1 4x

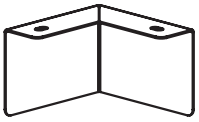

K2 4x




L3 1x

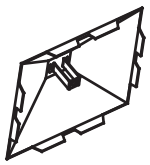


L4 1x




N1 24x

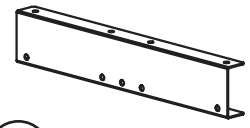

P 4x




Q2 4x



Q3 8x




W2 4x

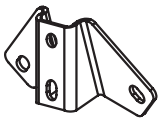


W3 4x



W4 4x



W5 8x




Y 12x




Y1 112x




Y2 72x



M1 4x

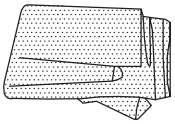

M2 4x

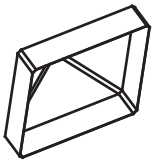

M3 1x



O6 8x



O7 8x



O8 4x



O9 4x



O10 4x



O11 4x



M6x15

1 292x



M5x15

2 16x



M6x12

3 4x



ST4.8x12

4 8x



M6x25

6 4x



7 1x



8 16x



M6x40


9 20x



10 12x



12 8x




4mm

13 1x



4mm

15 1x




16 1x



A2 4x



J 4x



Q3 8x




M6x15

1 12x



M5x15

2 16x

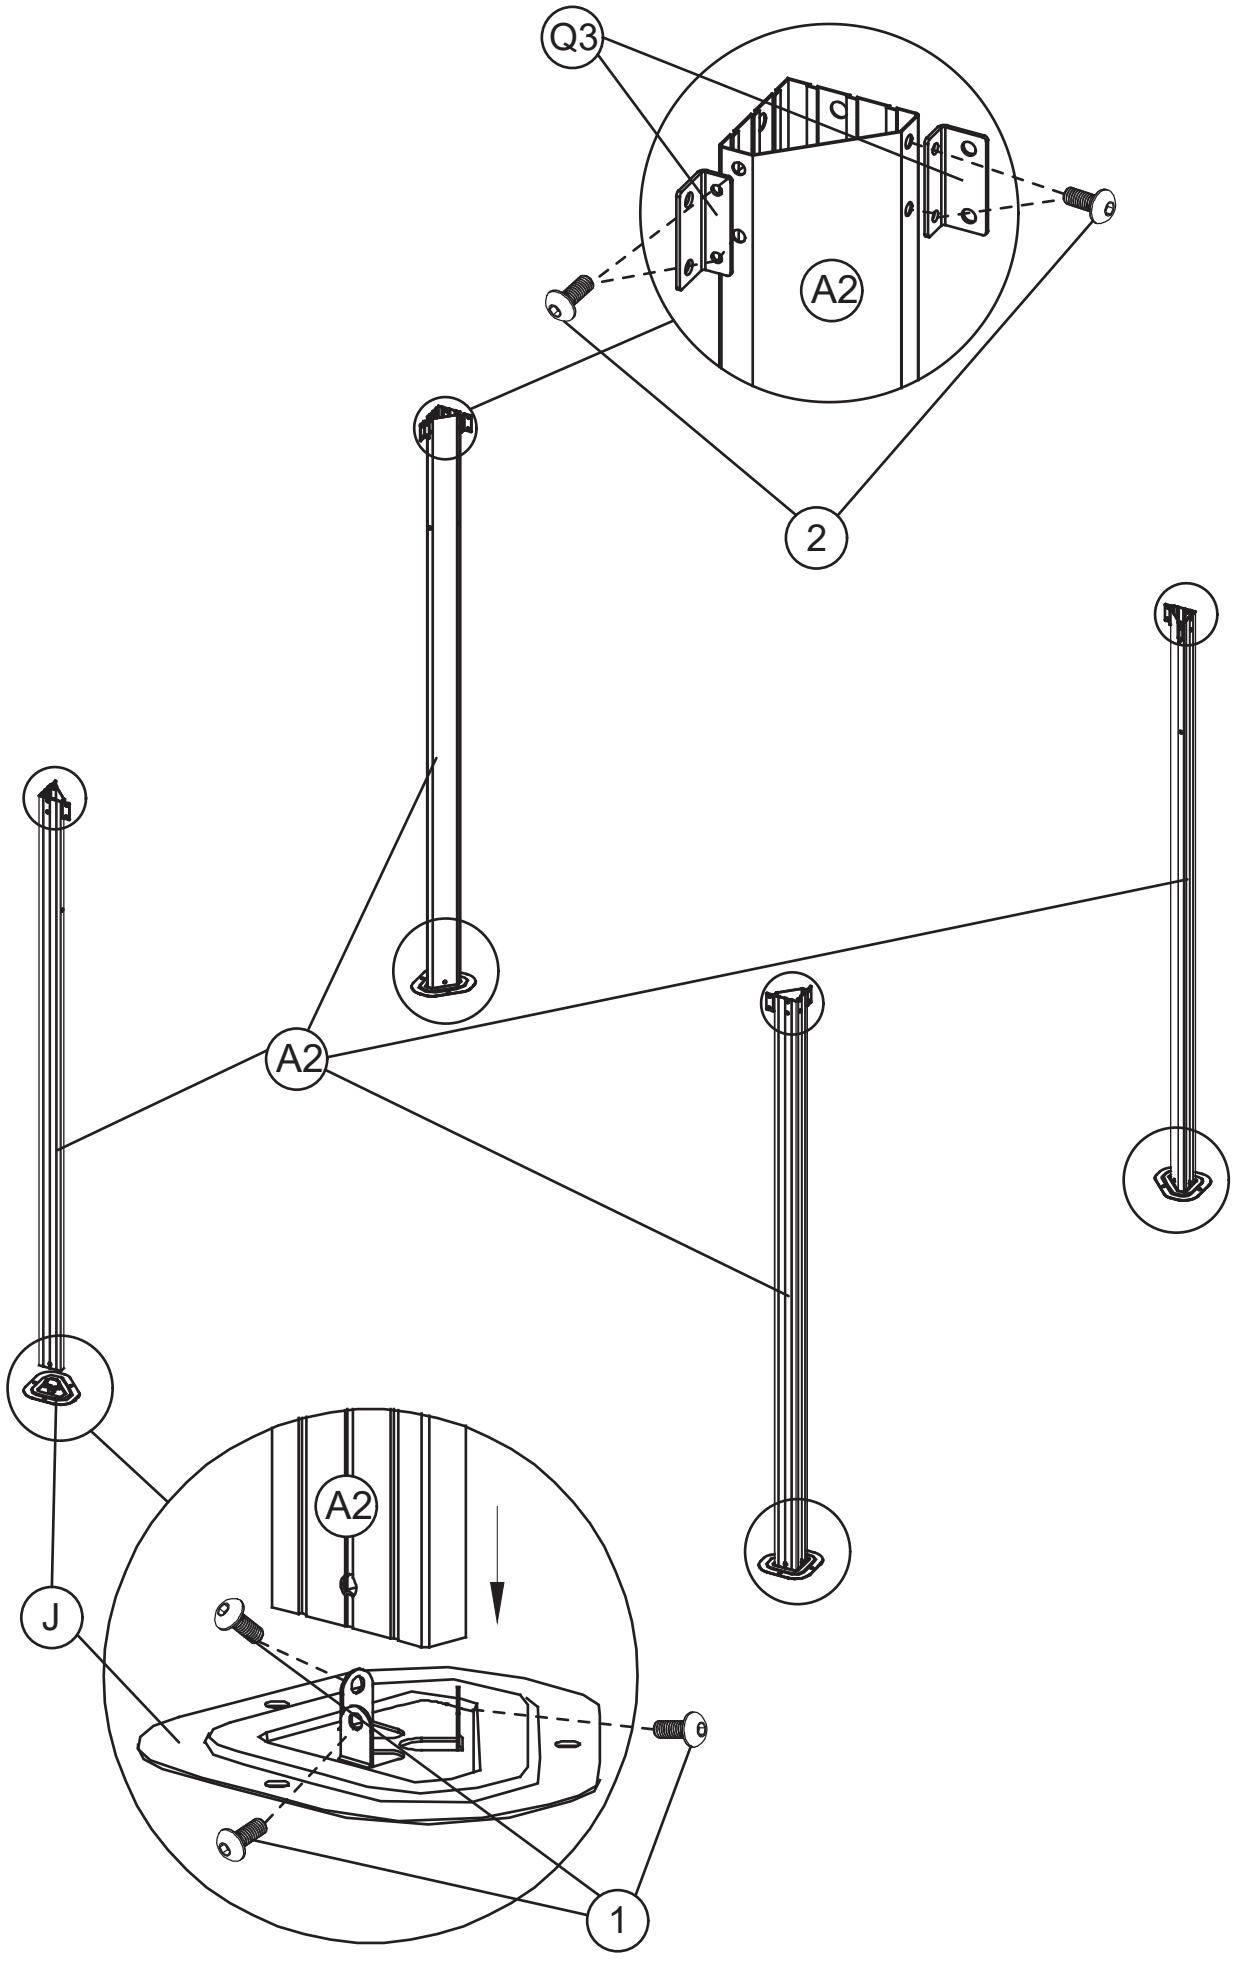




B7 4x



B8 4x




P 4x



M6x15

1 16x

<2>

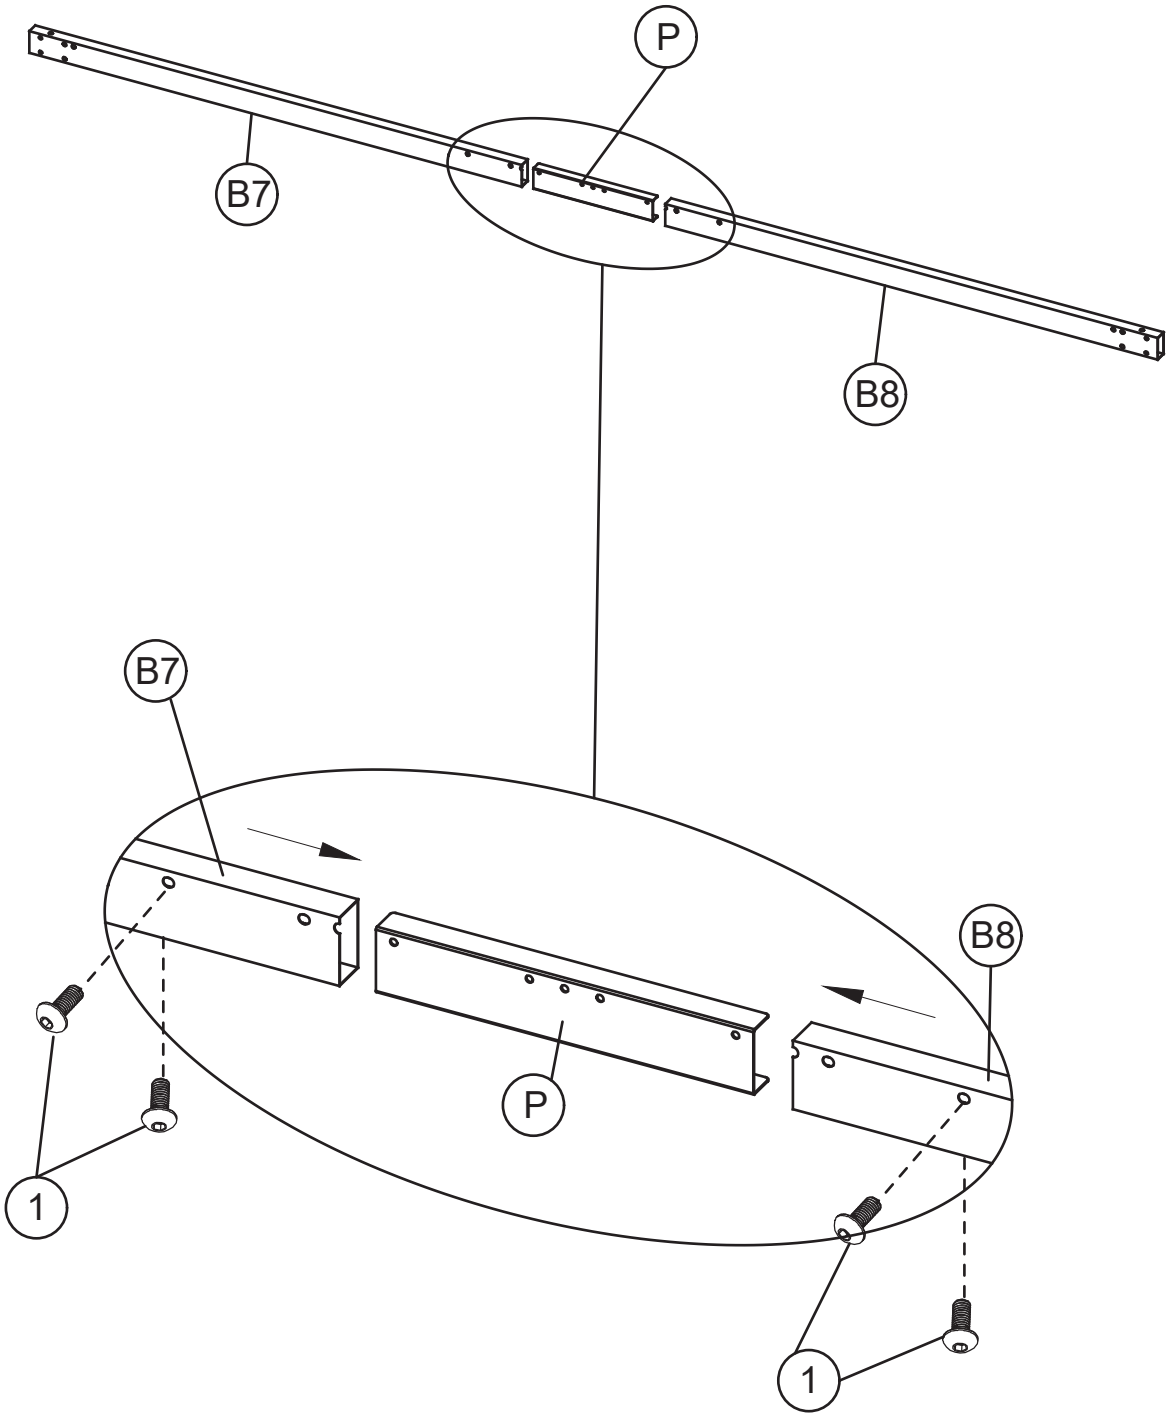




M6x15

1 16x



8 16x

<3>

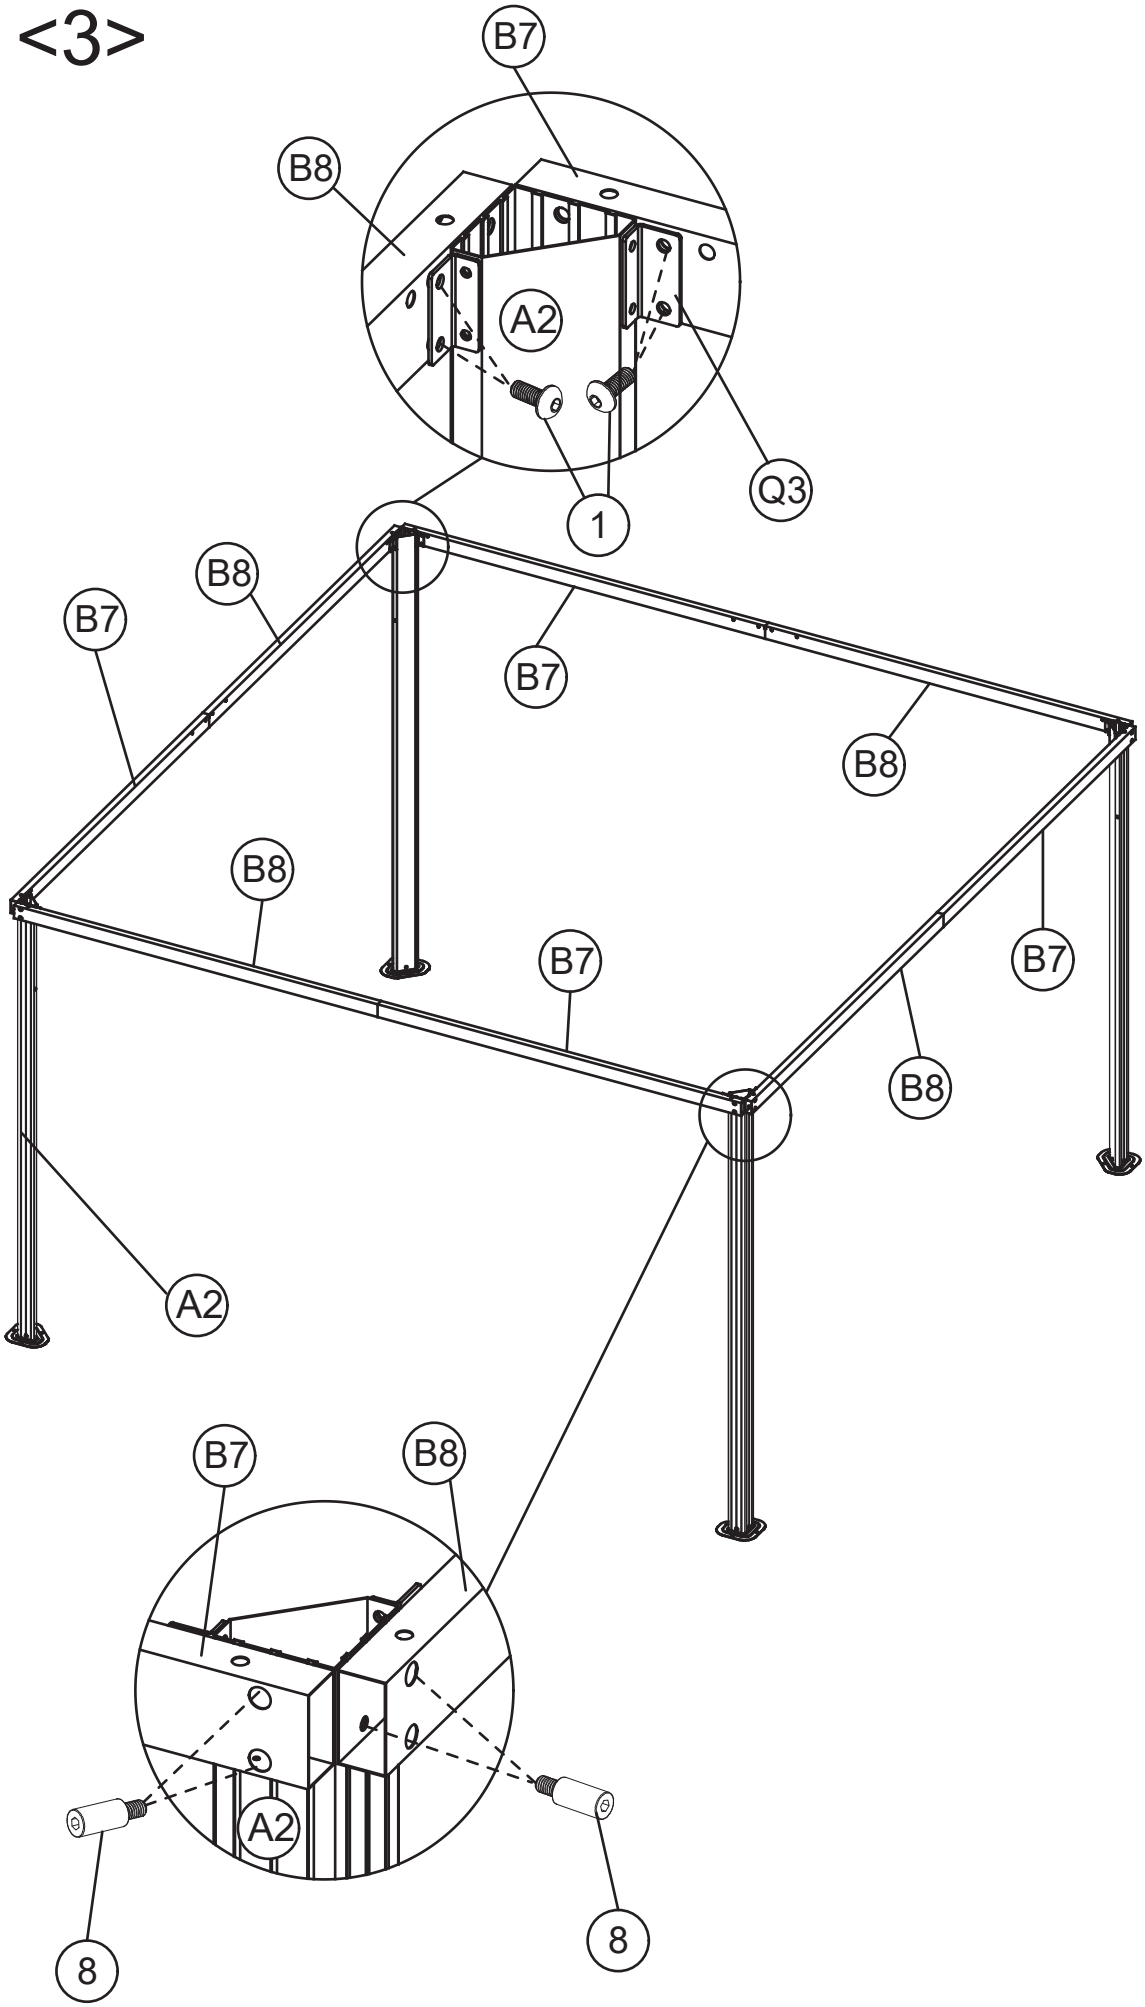



H2 8x



M6x15

1 16x



10 12x

Tip: Before proceeding to the next step, measure to ensure that d1 is equal to d2 to achieve a square frame and the best results.
If they are not equal, loosen the H2 screws and adjust accordingly.
Keep the beam perpendicular to the post, the post perpendicular to the ground, and ensure the beam remains level.



D3 4x




W2 4x



M6x15


1 16x

<5>

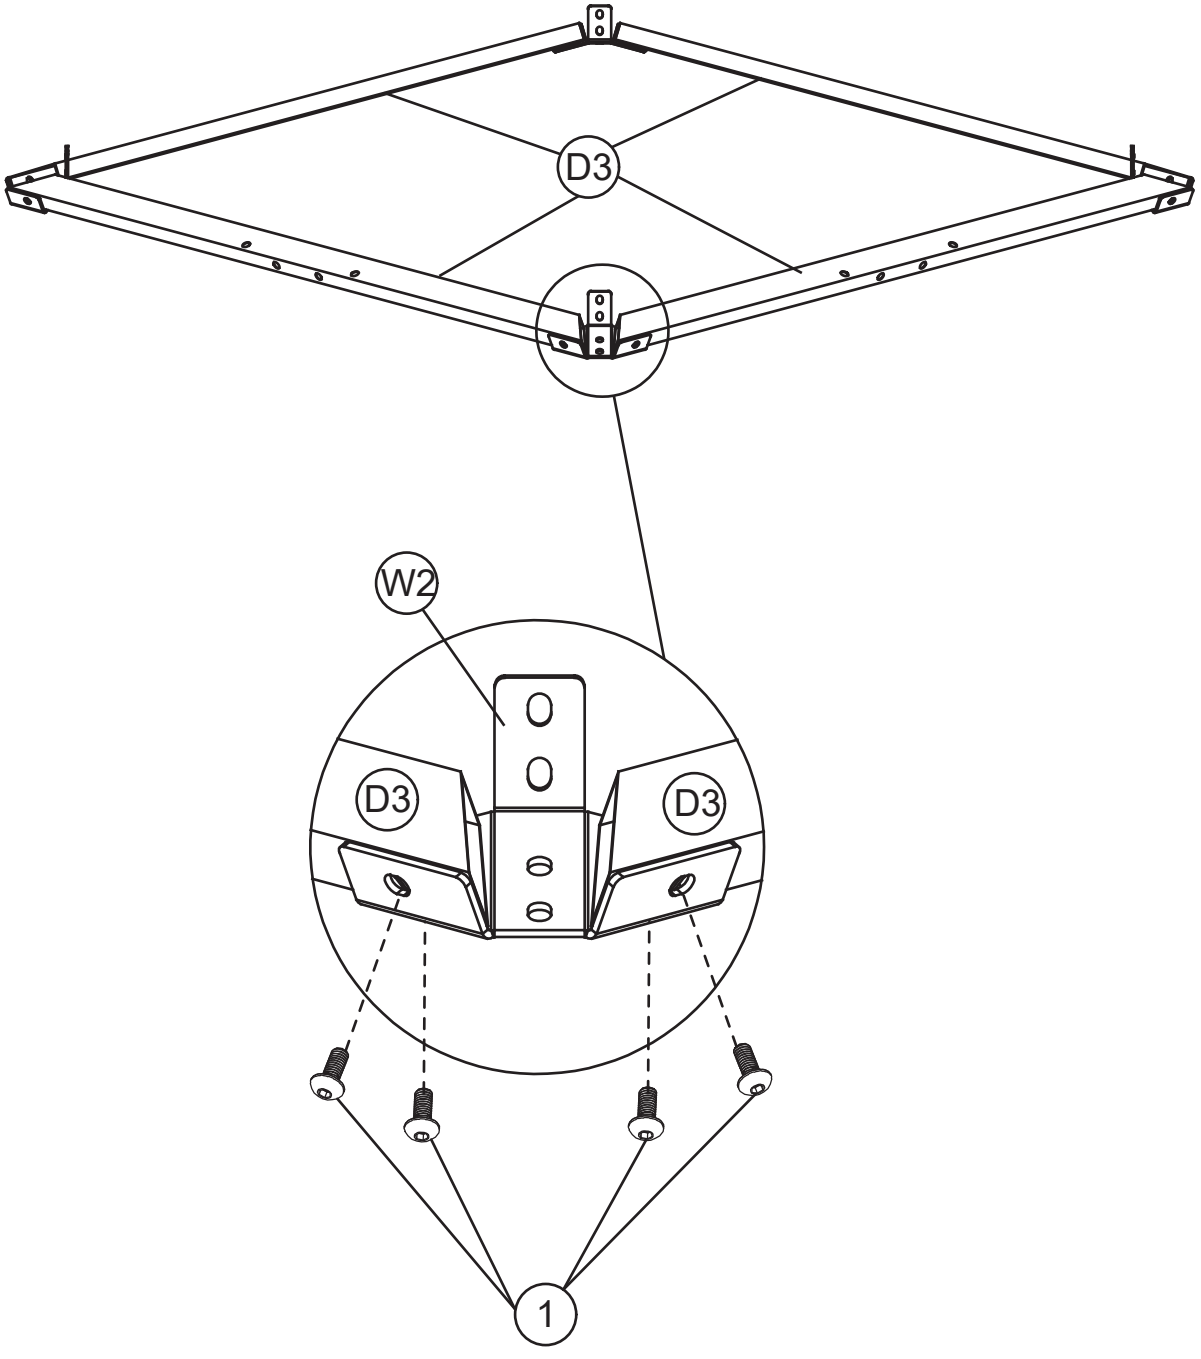




E5 4x



Q2 4x




W4 4x



M6x15

1 20x

<6>

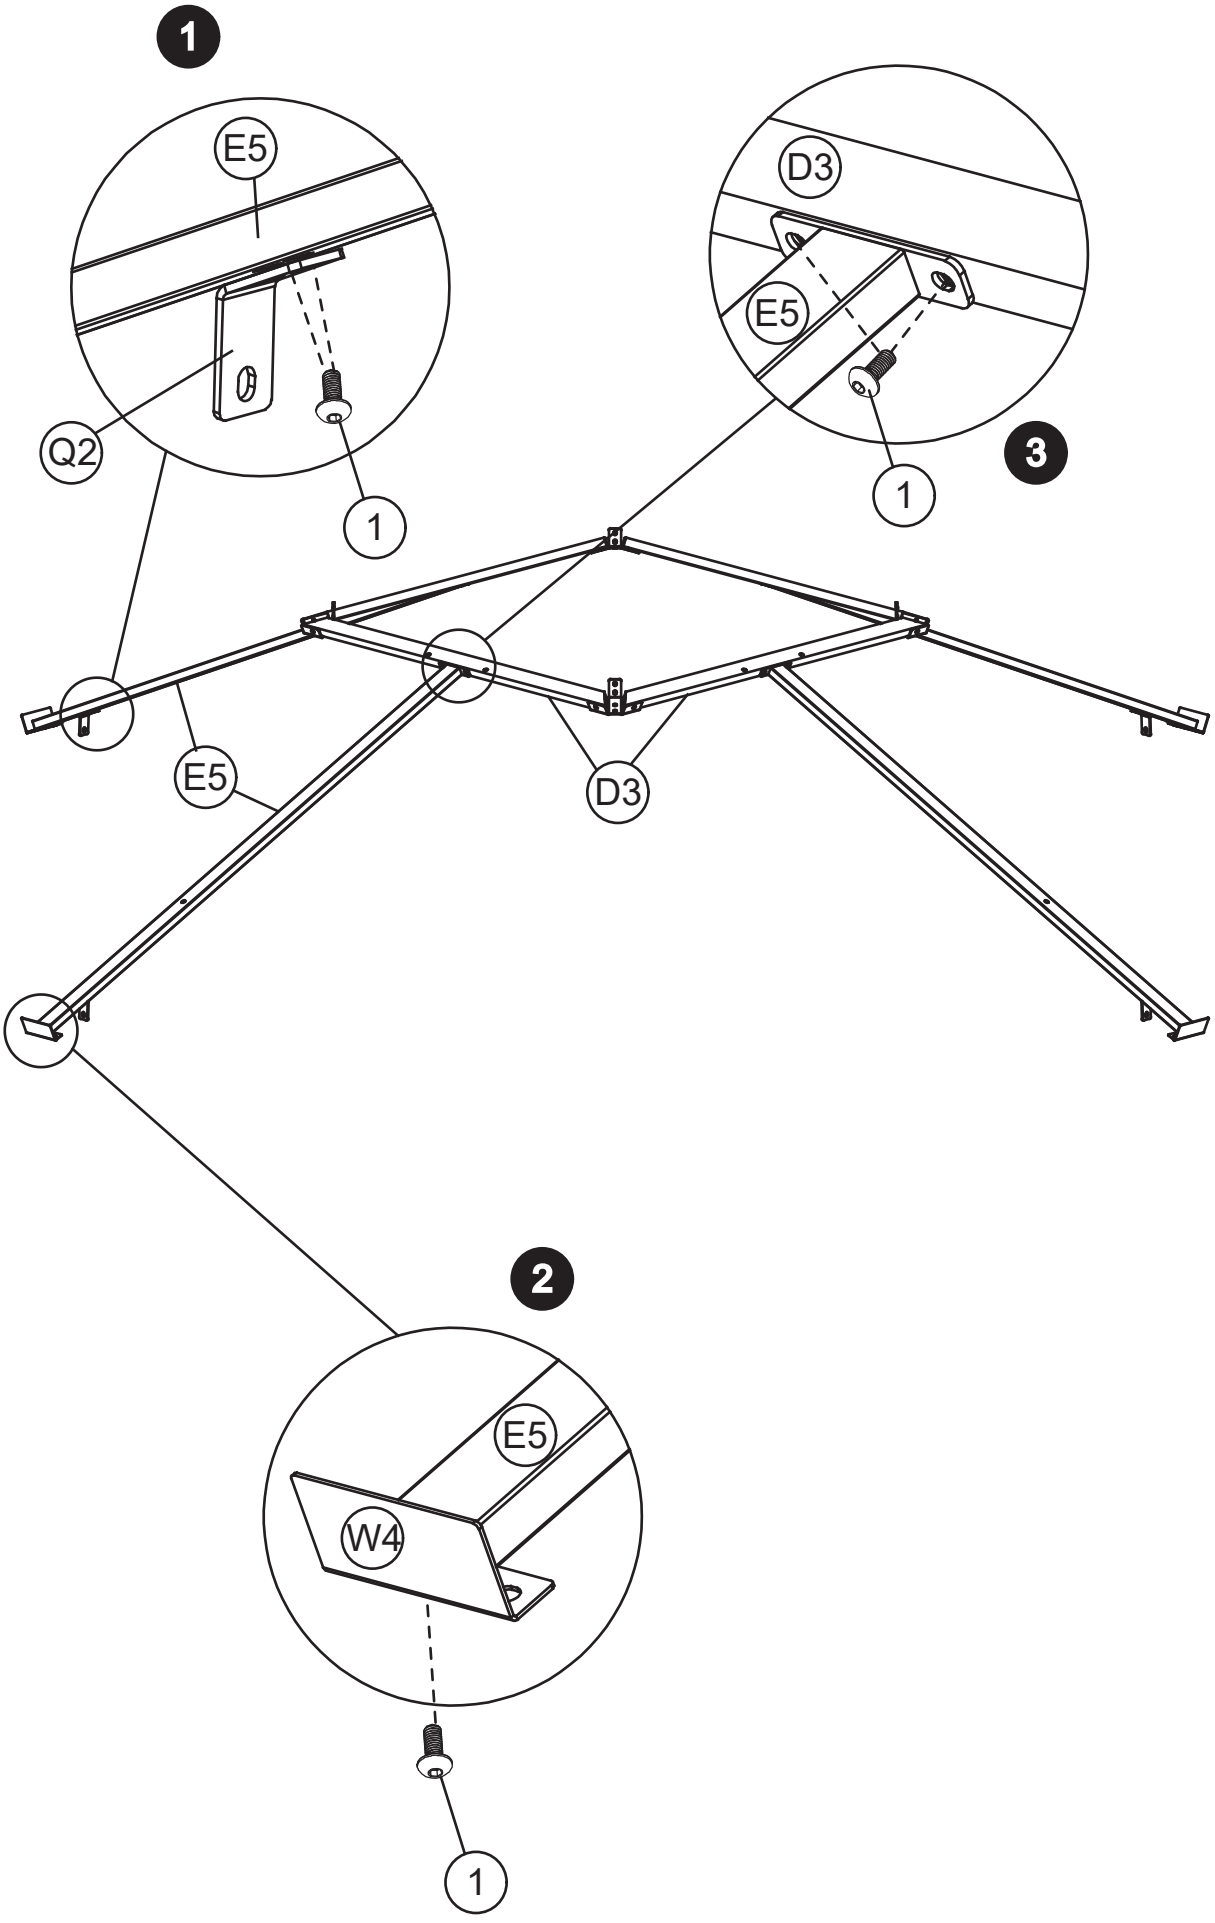




M6x15

1 4x

<7>

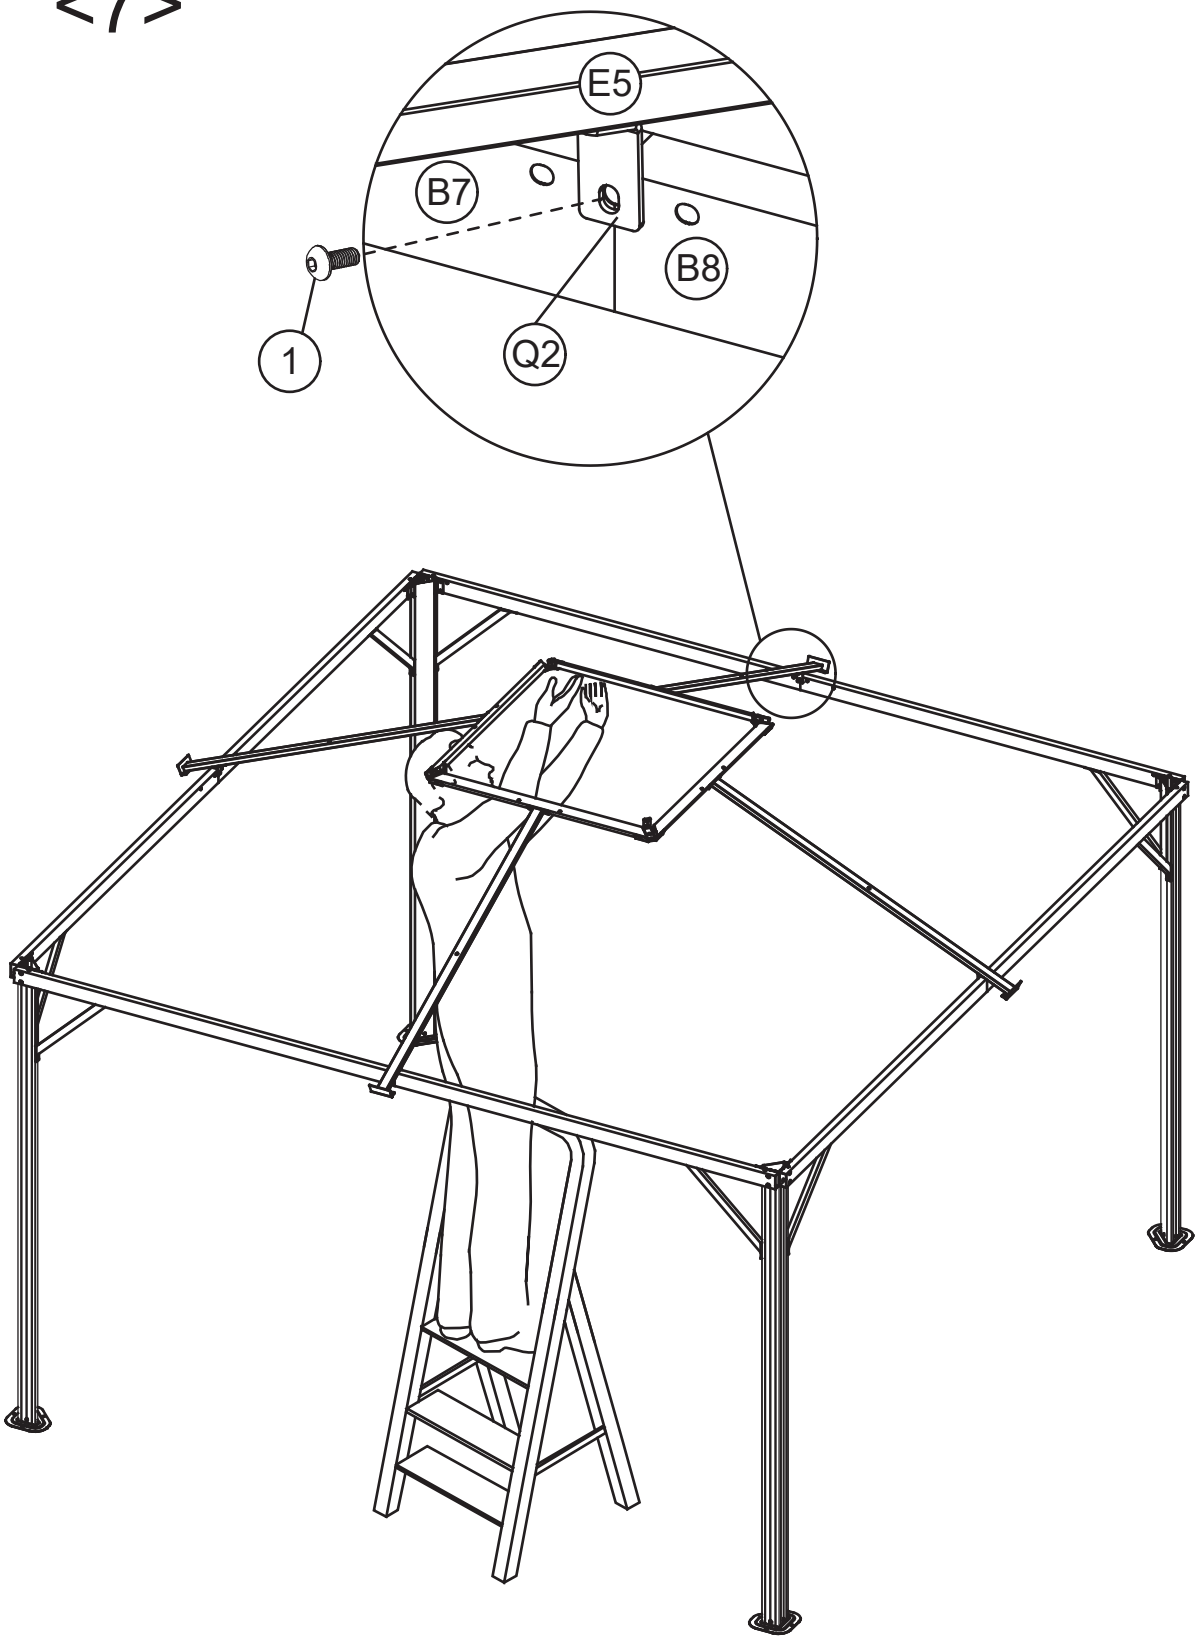

1. Have one person stand on the ladder to lift and hold D3 in place, while the other secure it by fastening the E5 screws.
2. Do not release D3 until all E5 screws are fully tightened.




C4 8x



M6x15


1 16x

<8>

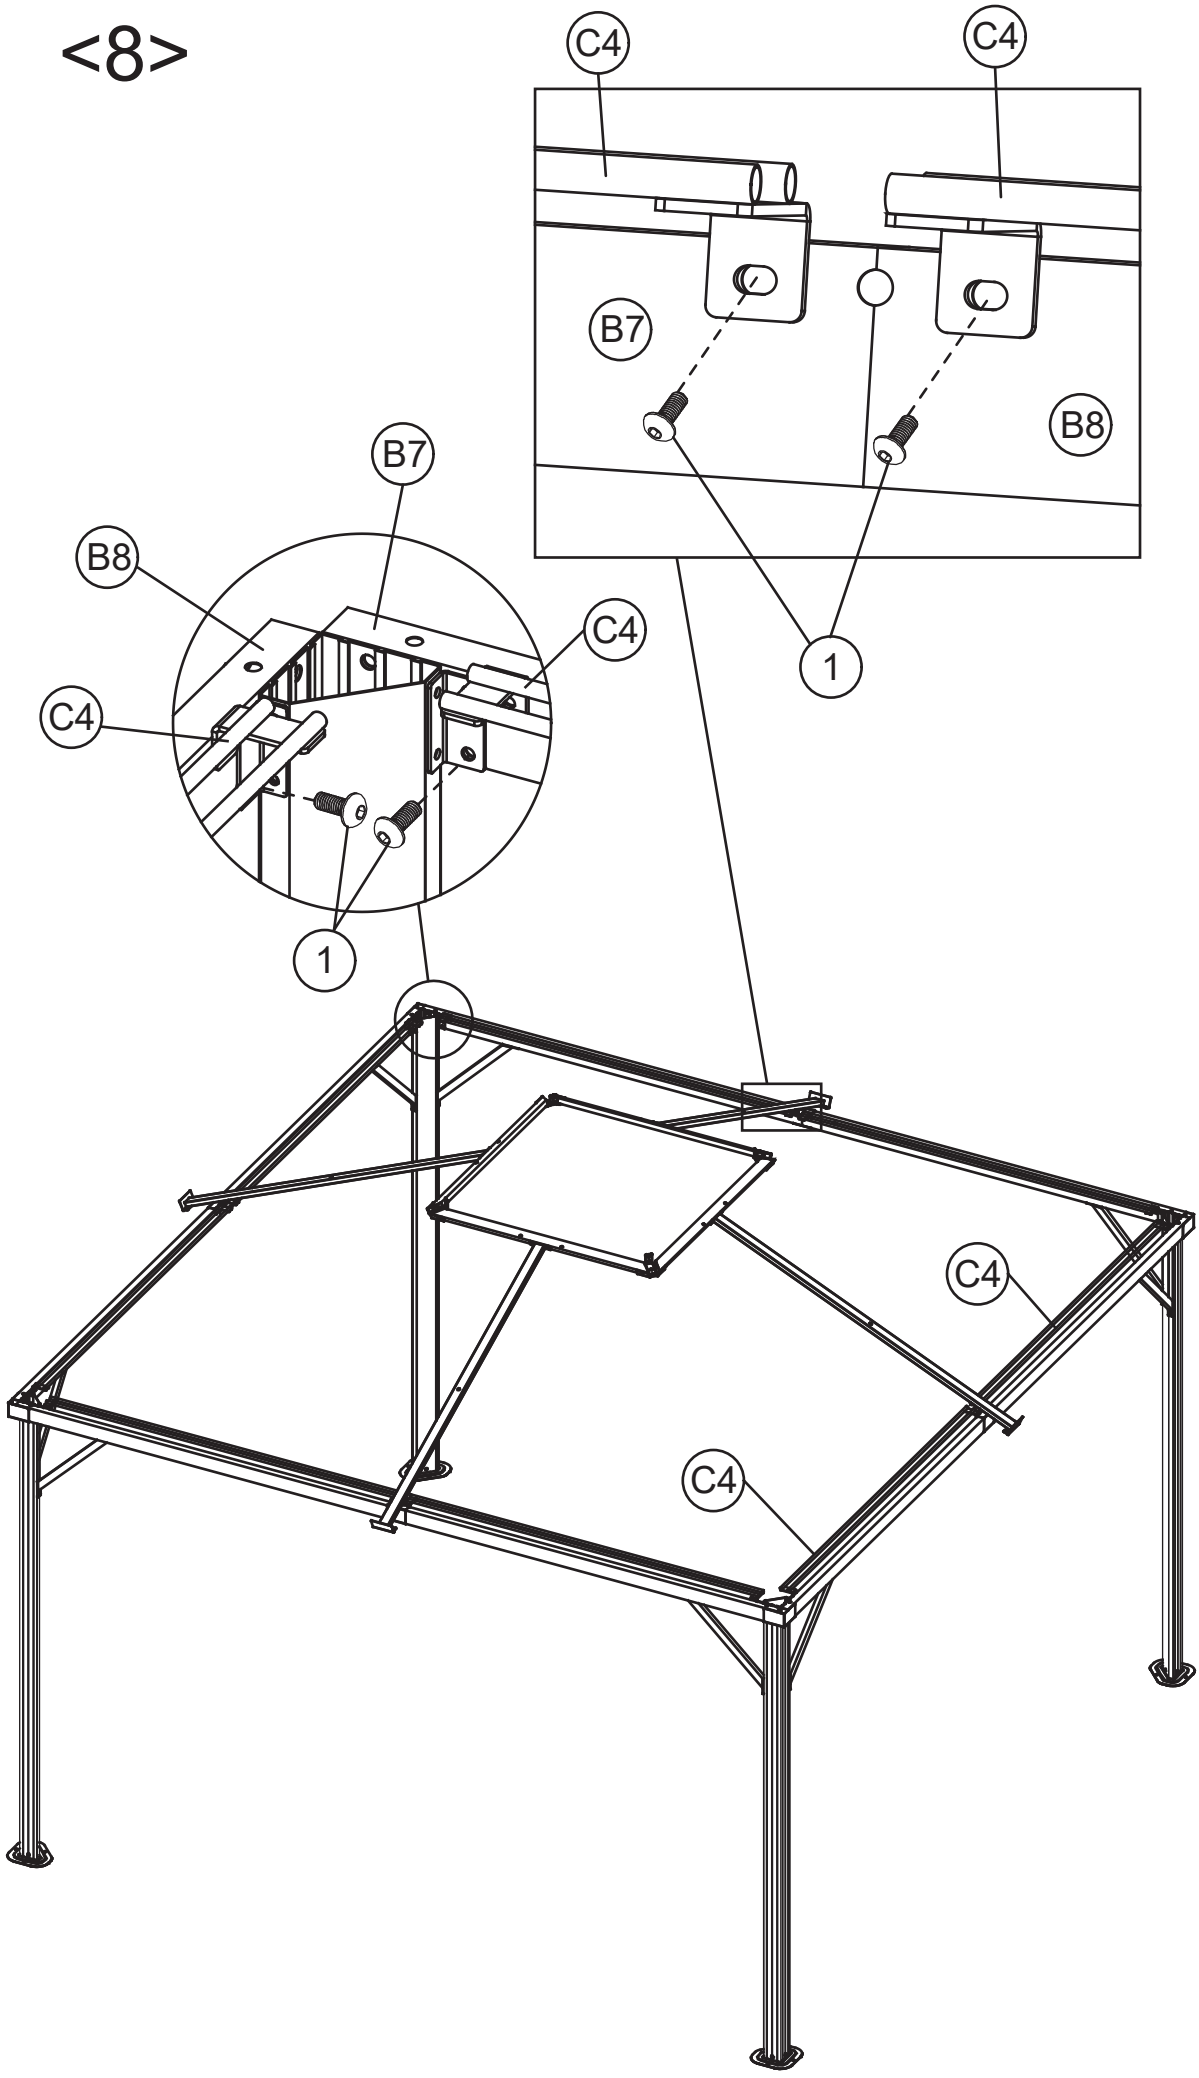



K1 4x



K2 4x



M6x15


1 8x



ST4.8x12


4 8x

<9>

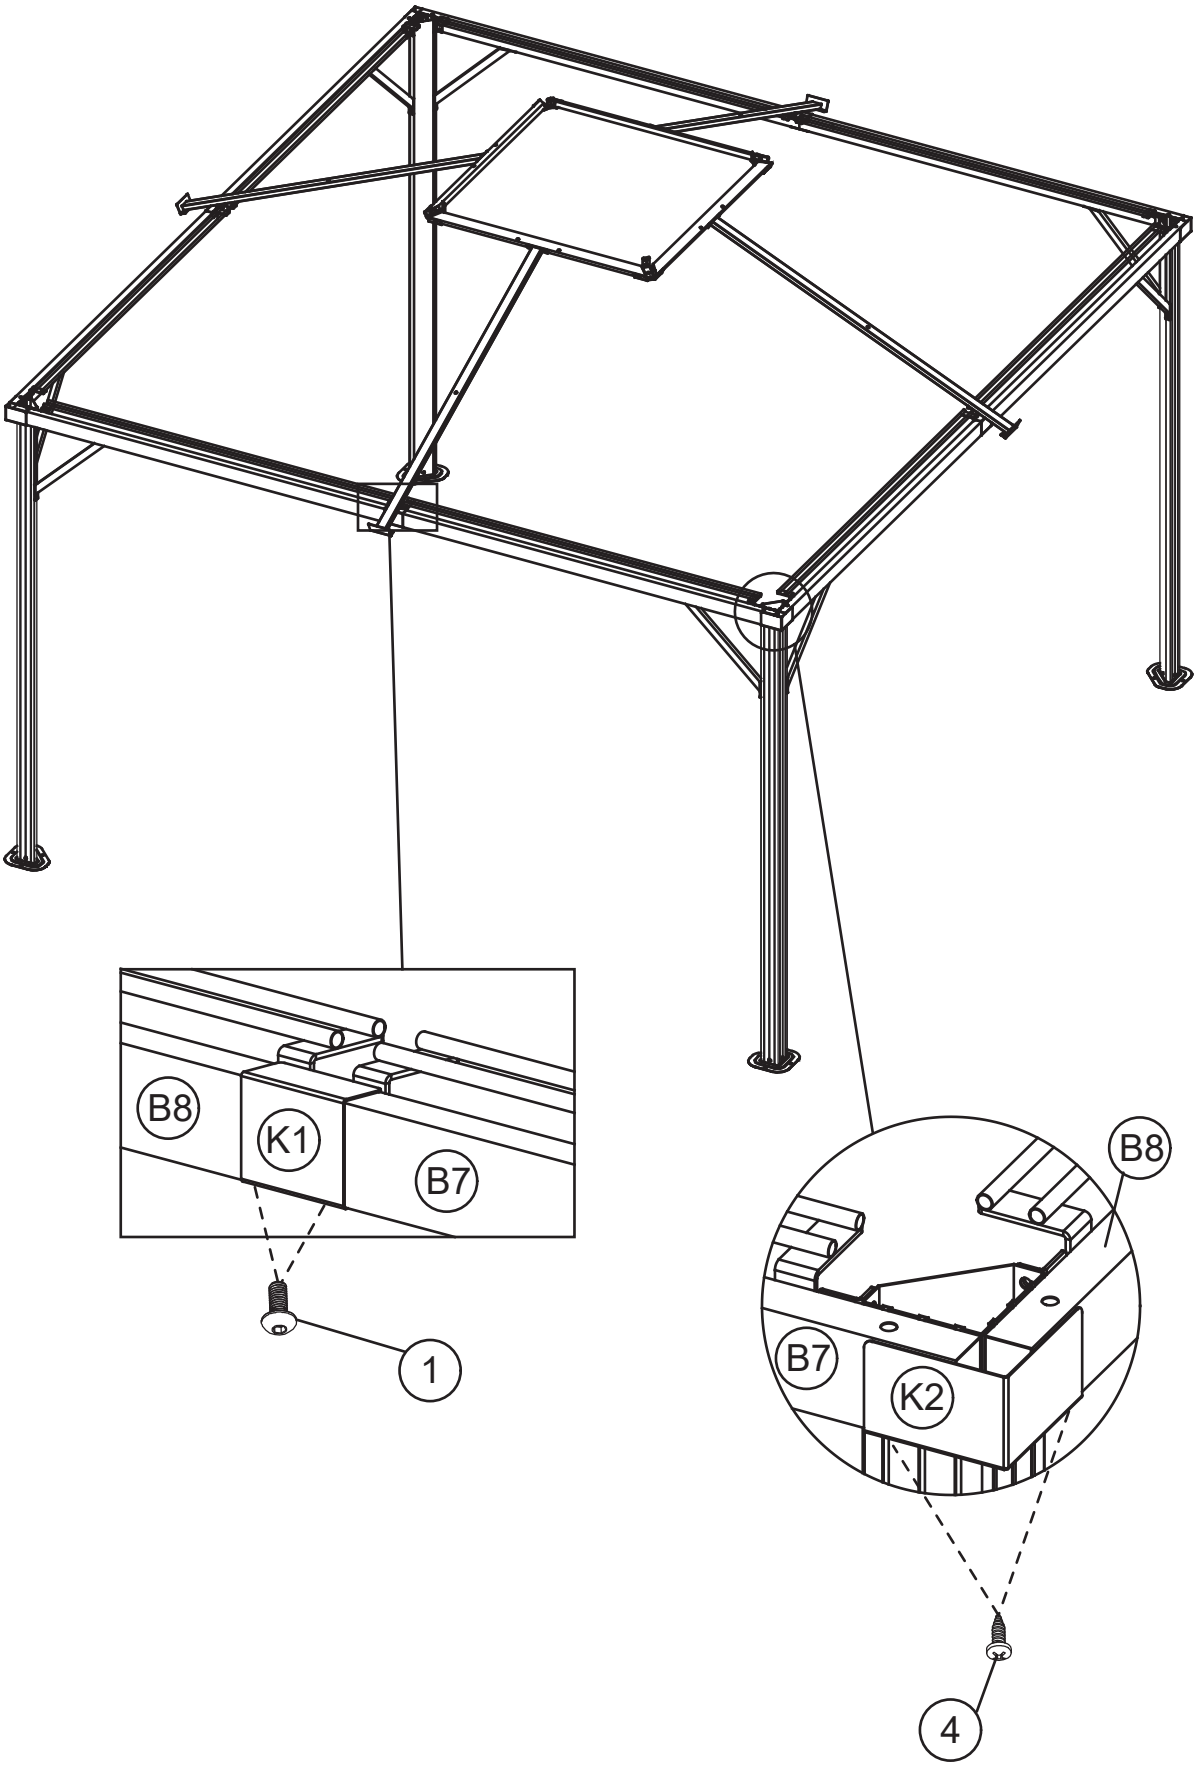




E4 4x

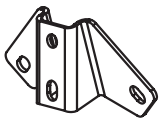

W3 4x




W5 4x



M6x15

1 32x

<10>

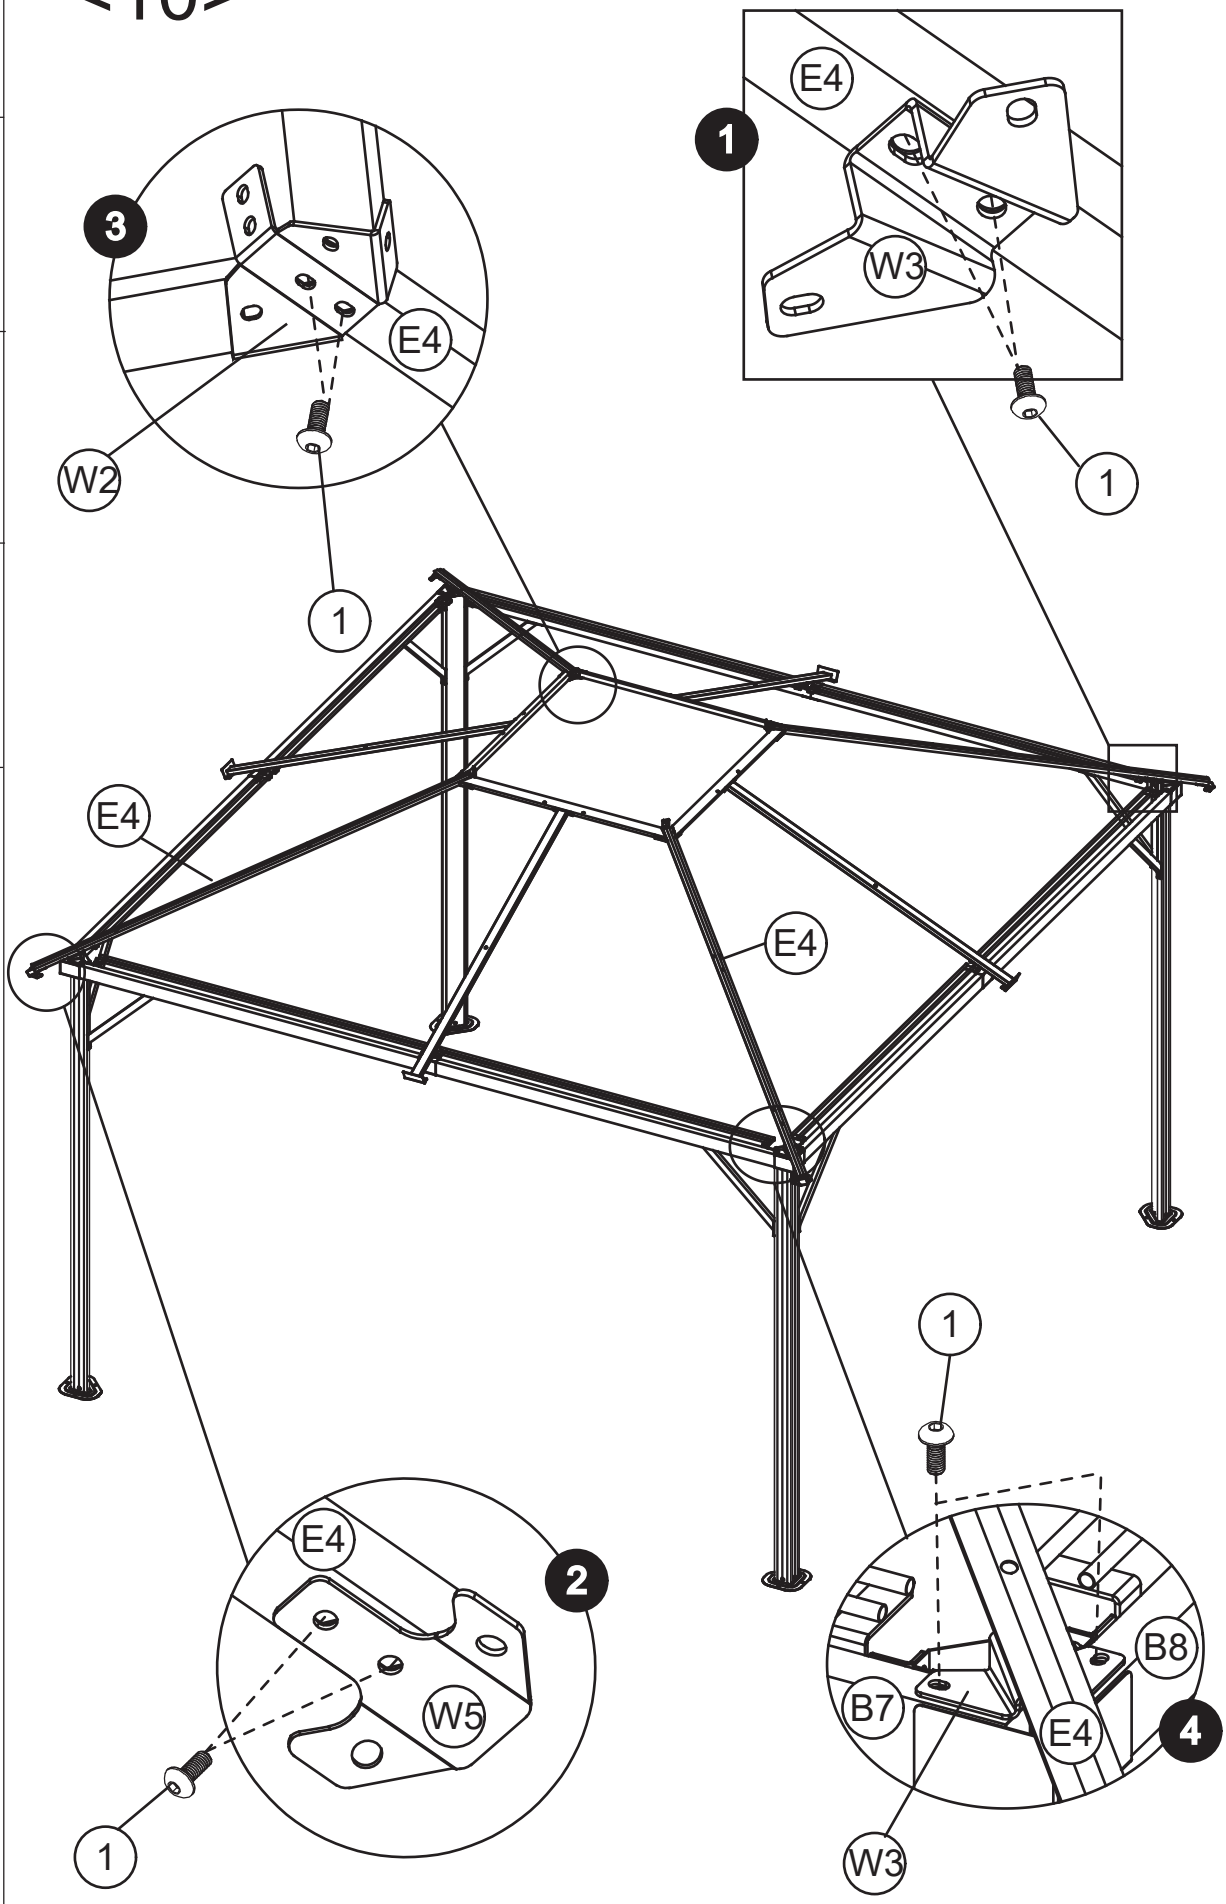



F5 4x



F6 4x



M6x15


1 4x



M6x12

3 4x

<11>

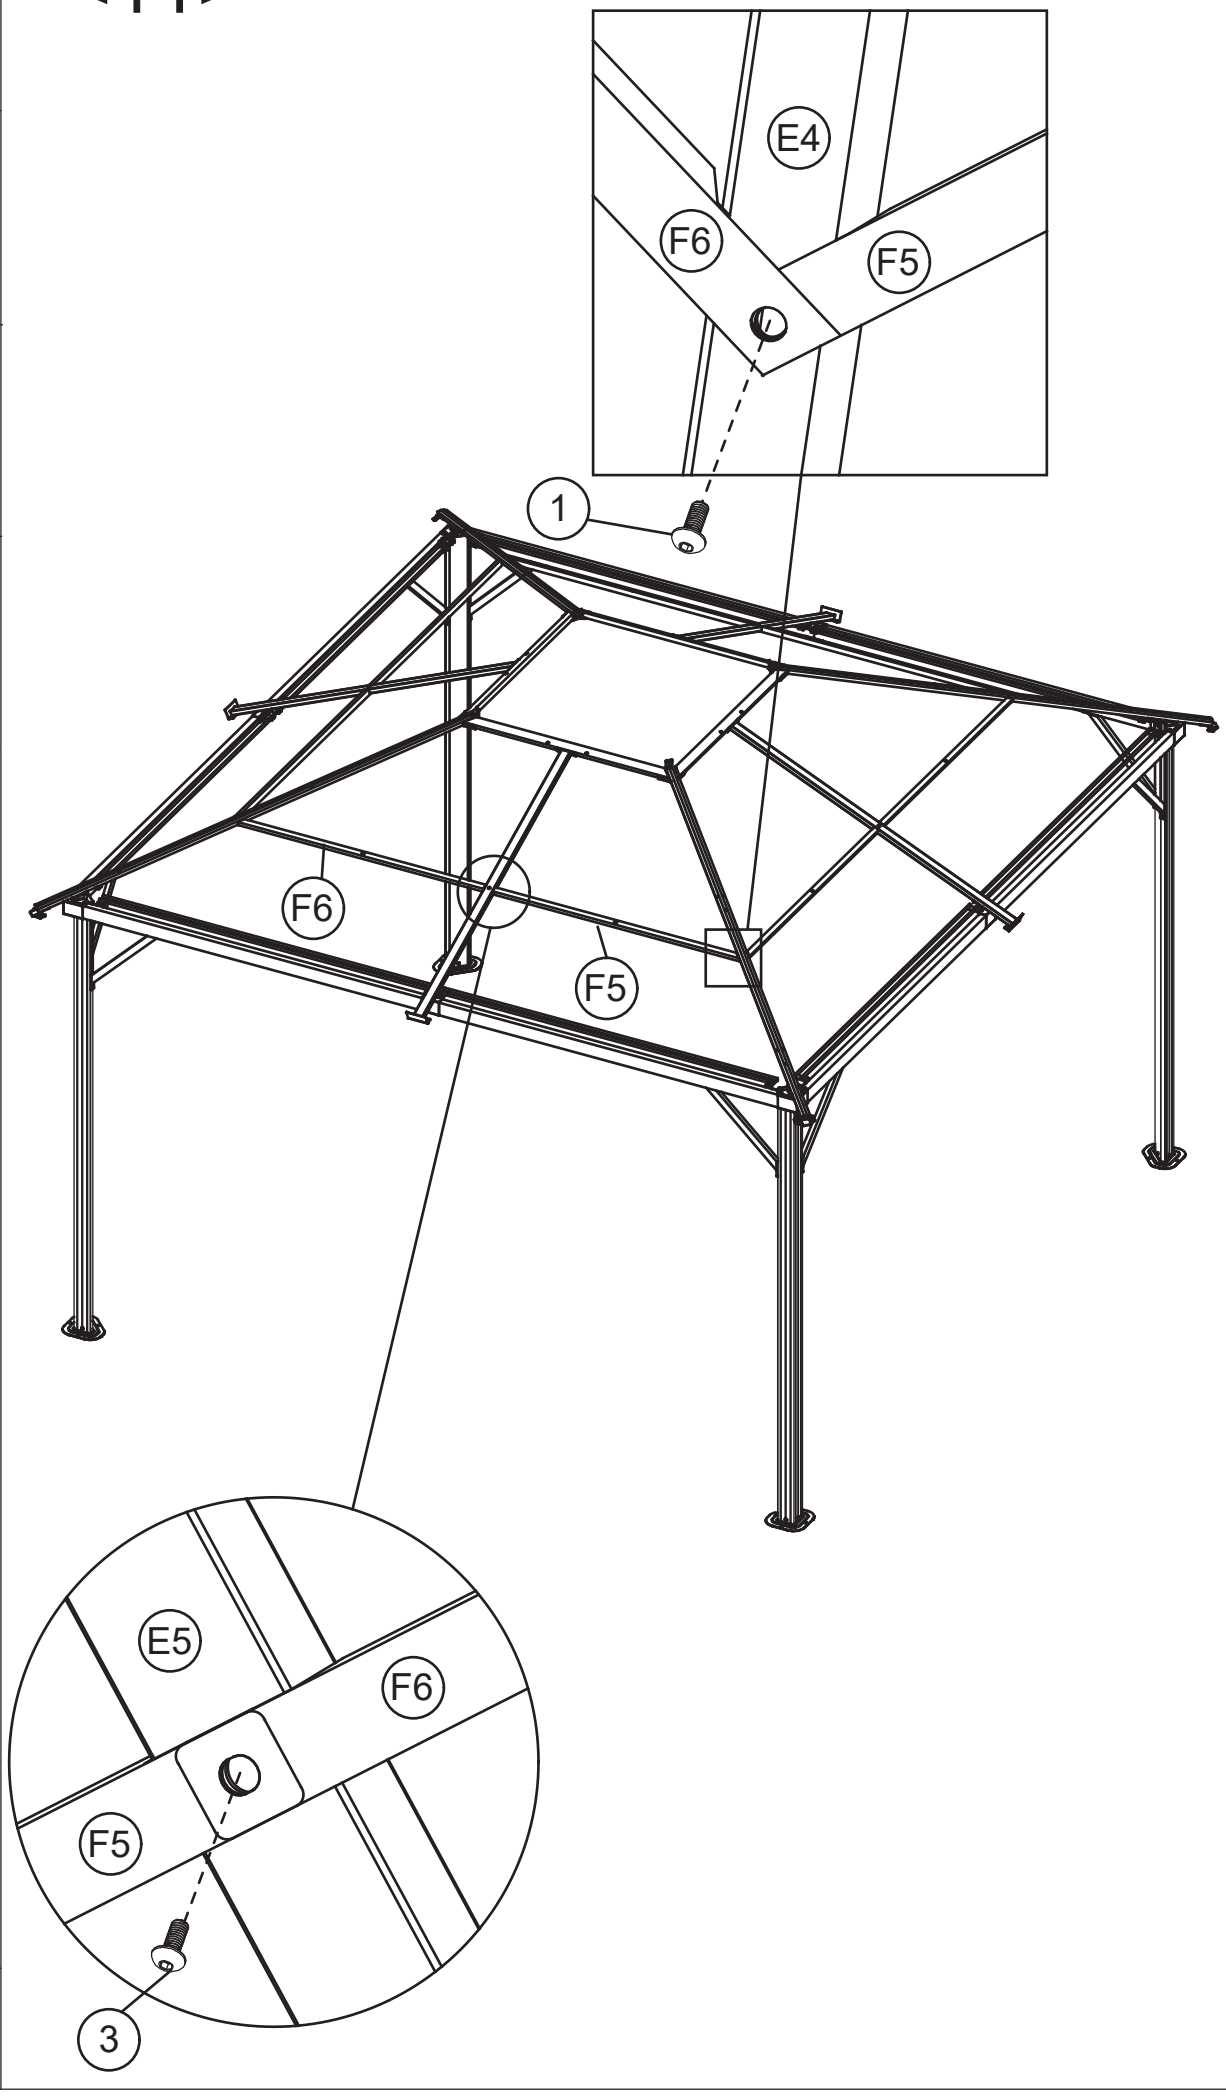



I5 4x




I6 4x





M6x15

1 16x

<12>

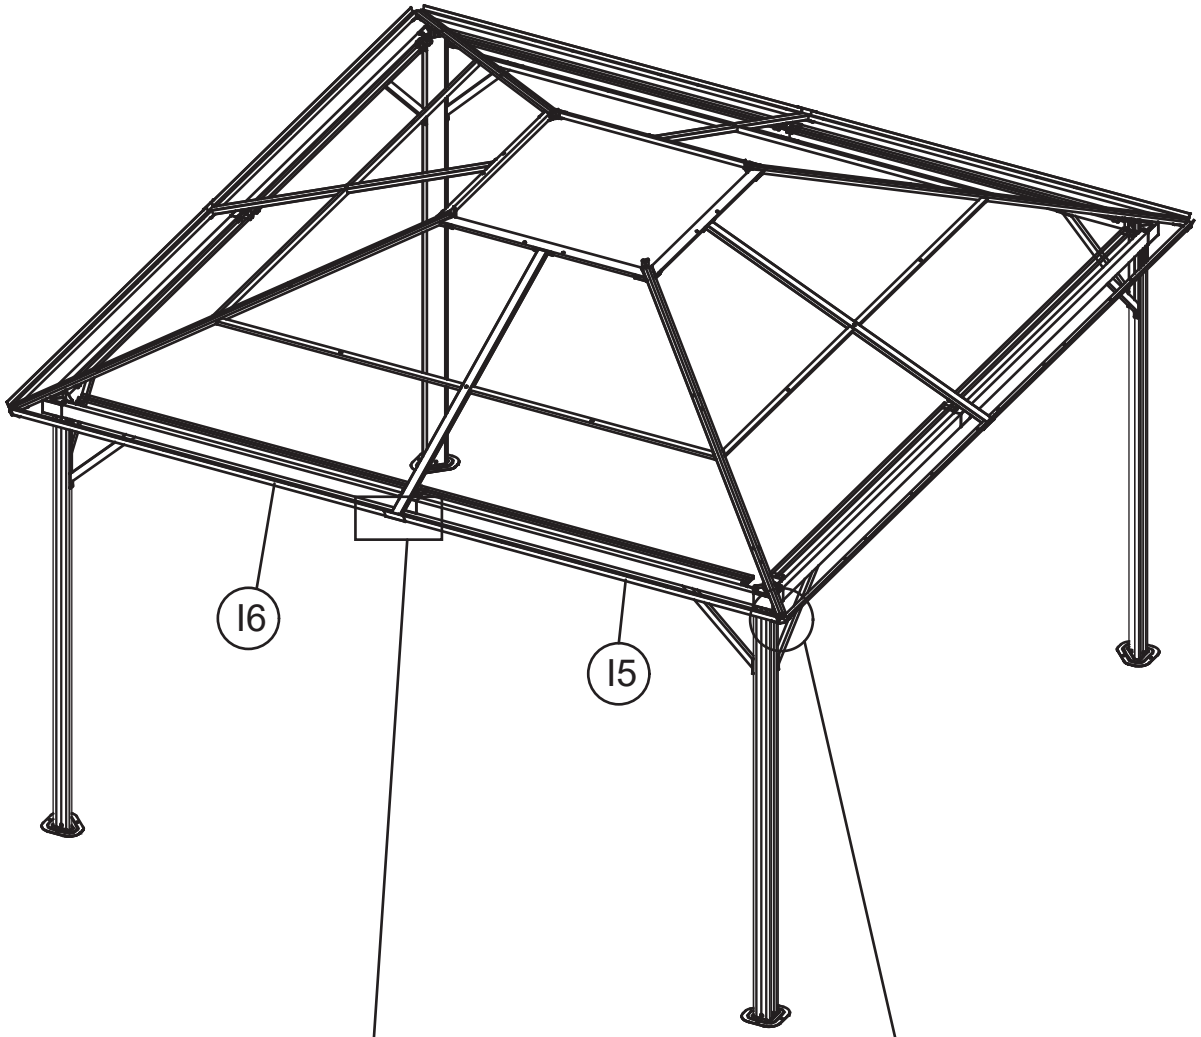

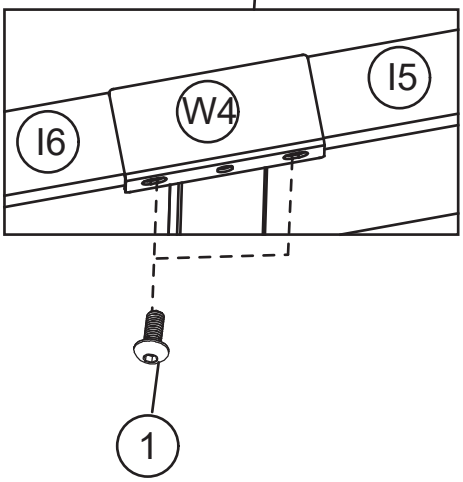

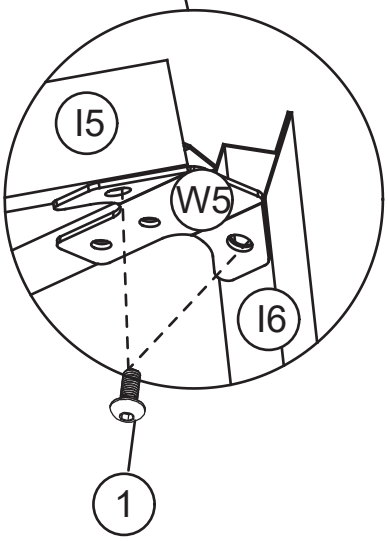



E6 4x




L3 1x




M6x15

1 4x

<13>

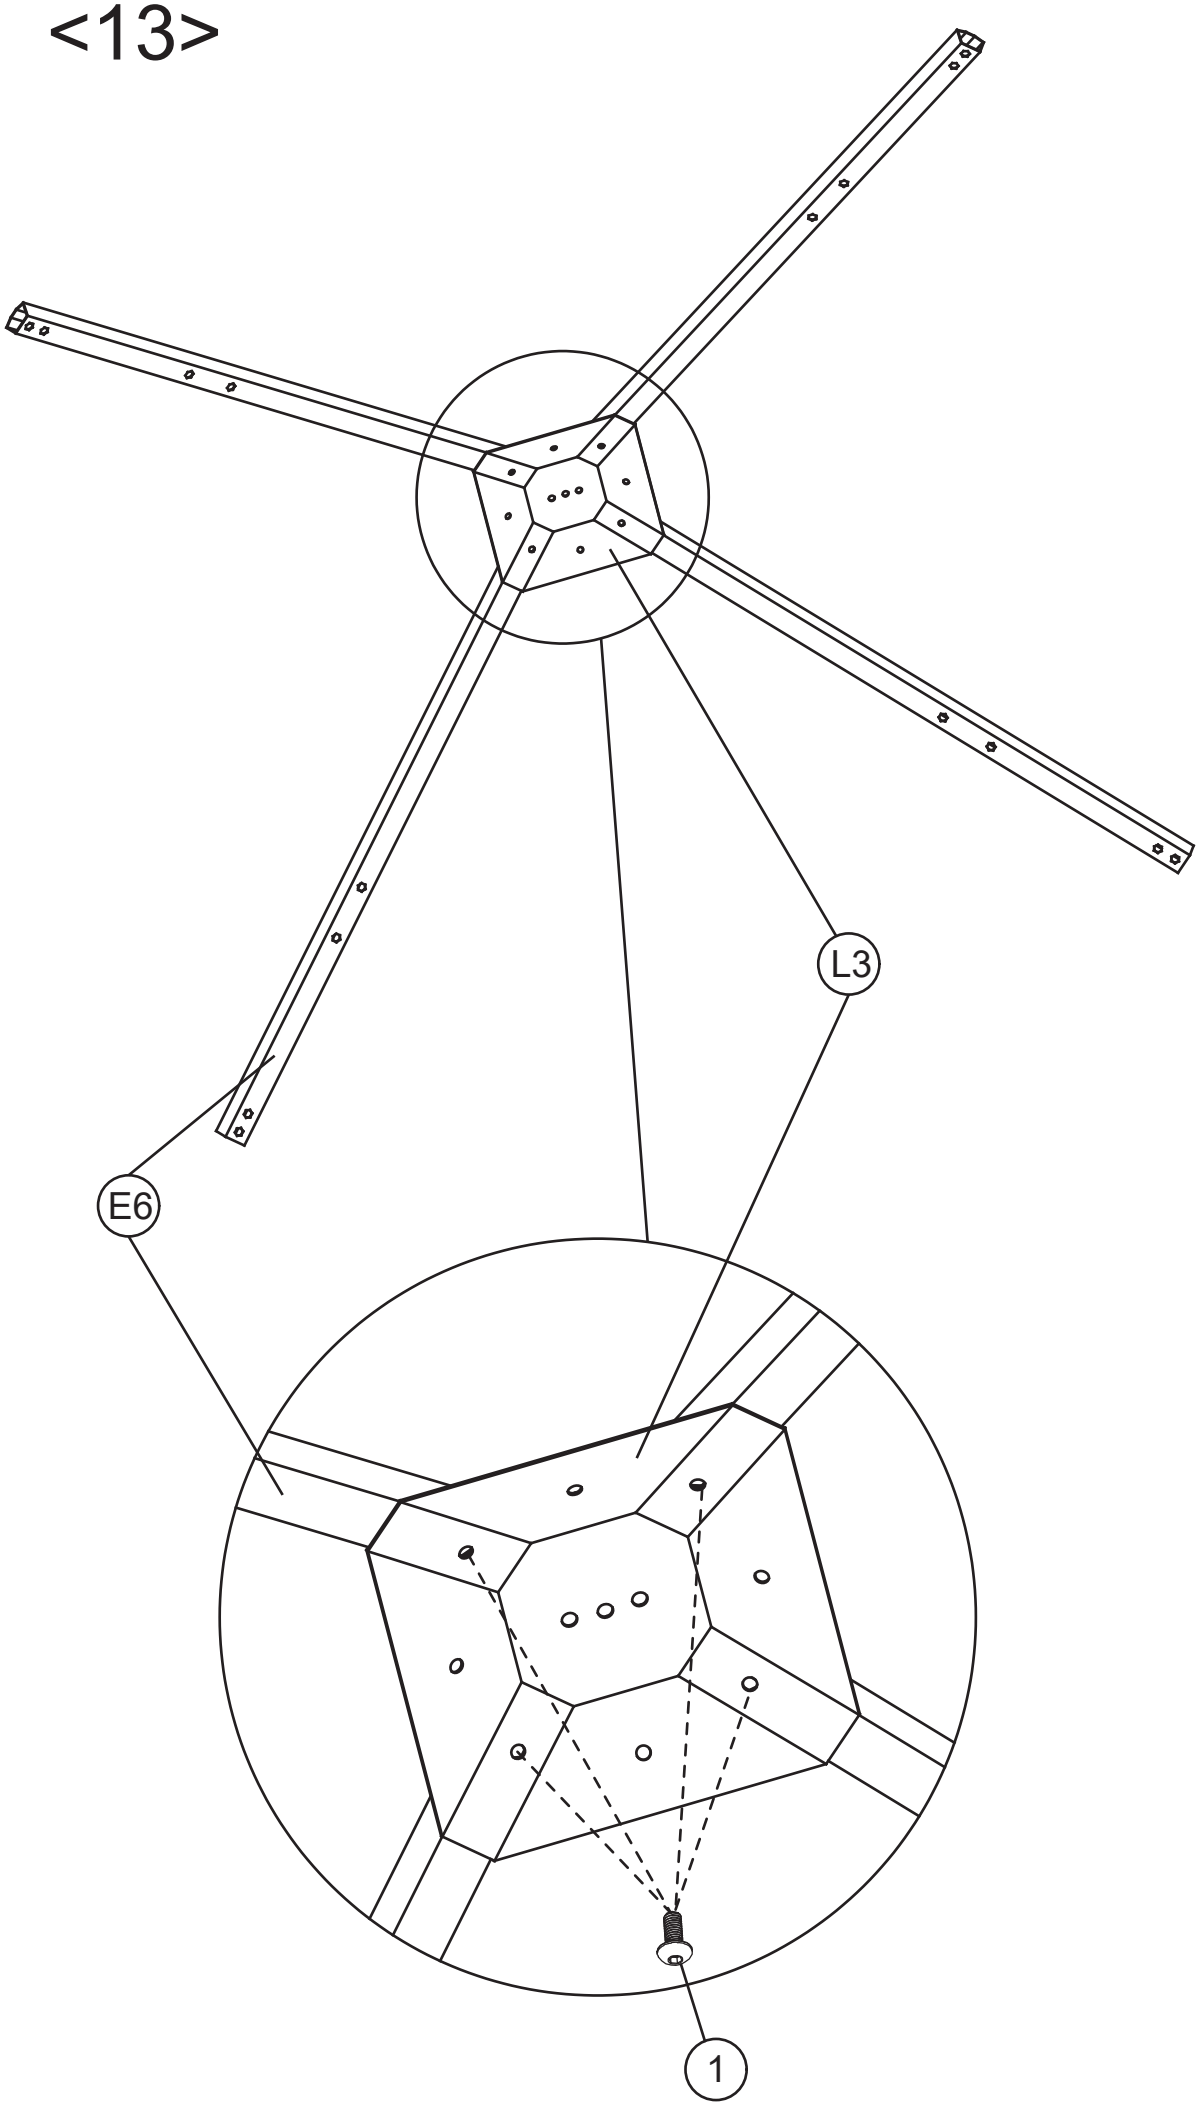

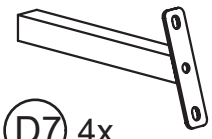


D7 4x



M6x15


1 8x

<14>

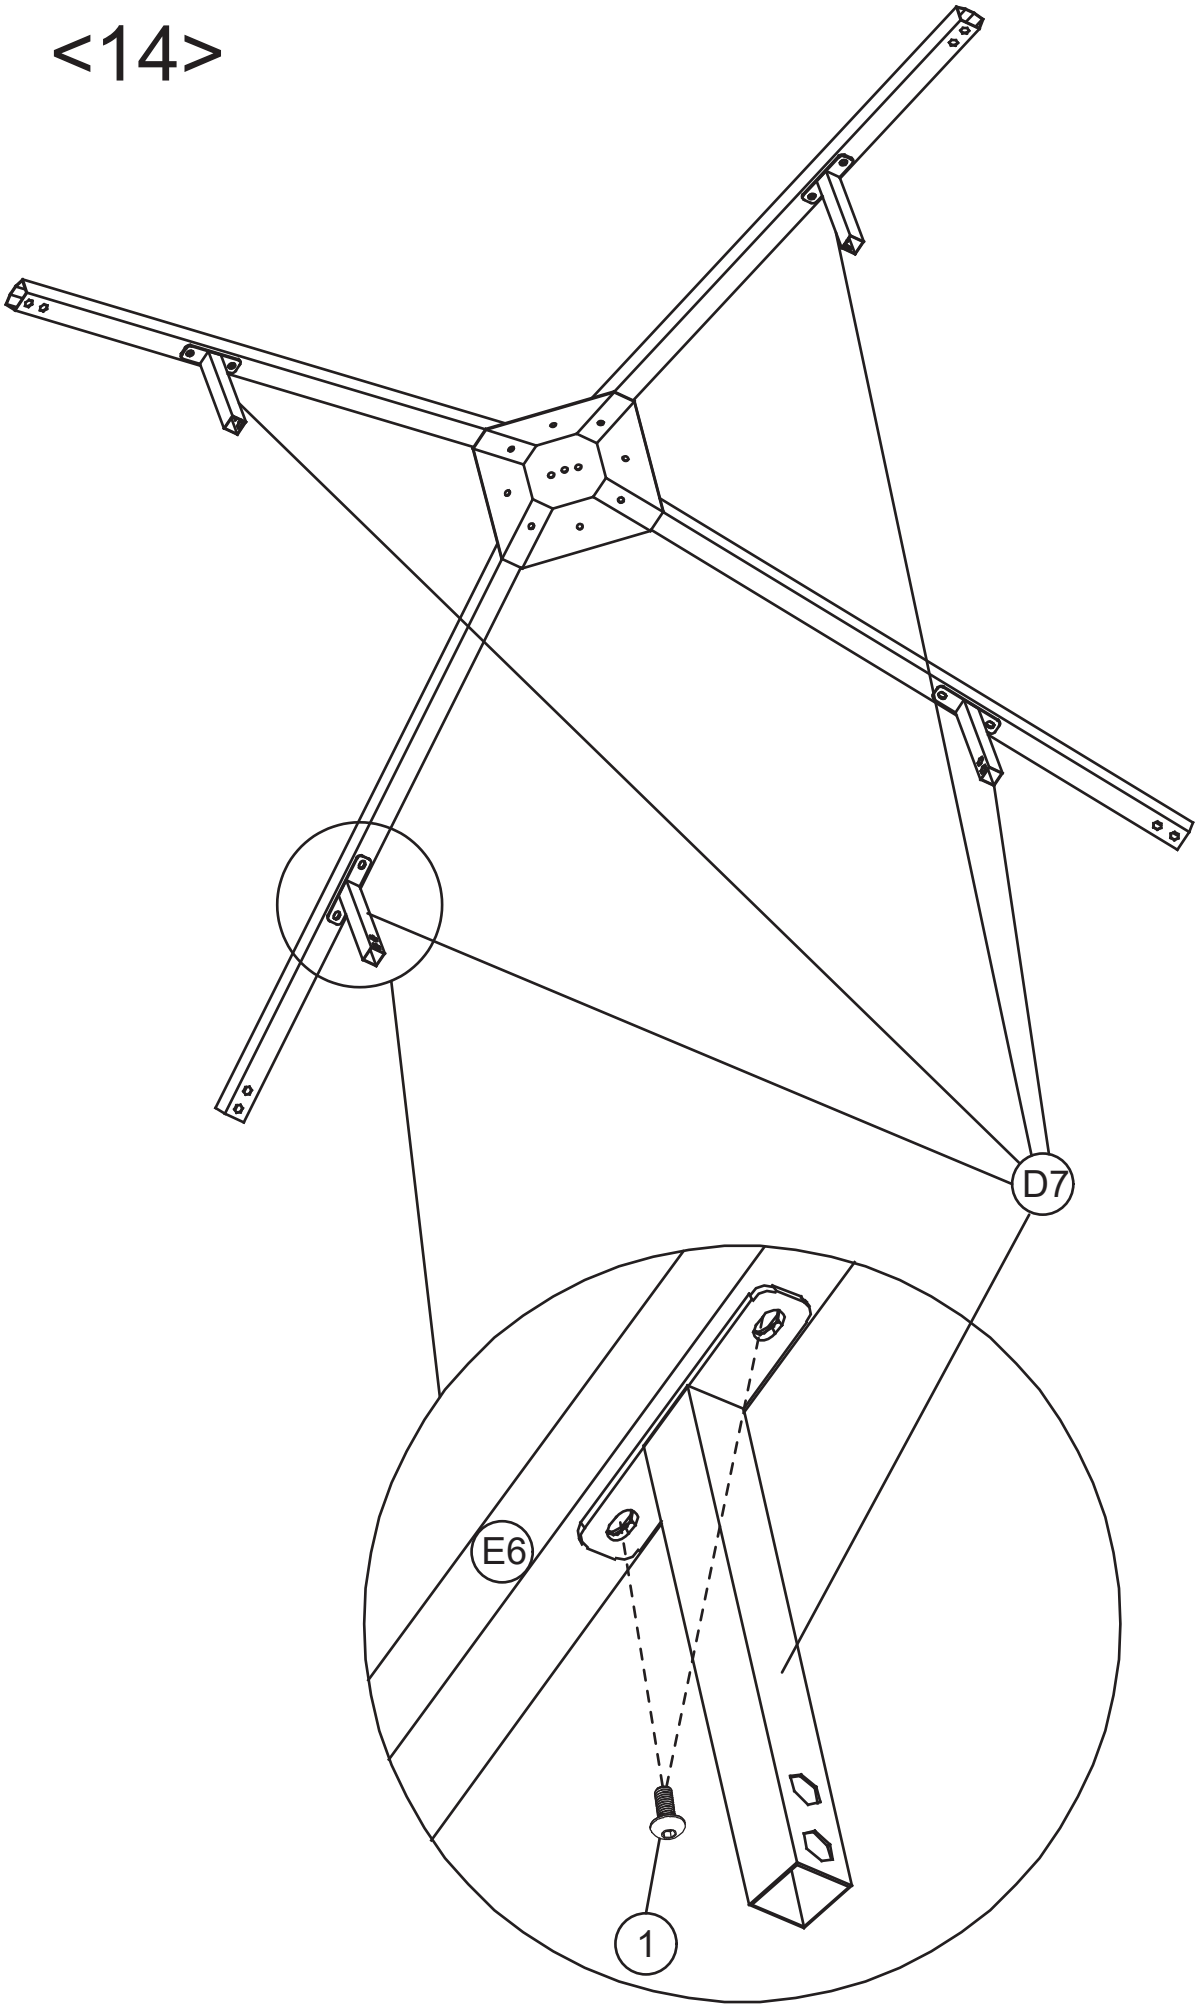



G3 4x




W5 4x




M6x15

1 16x

<15>

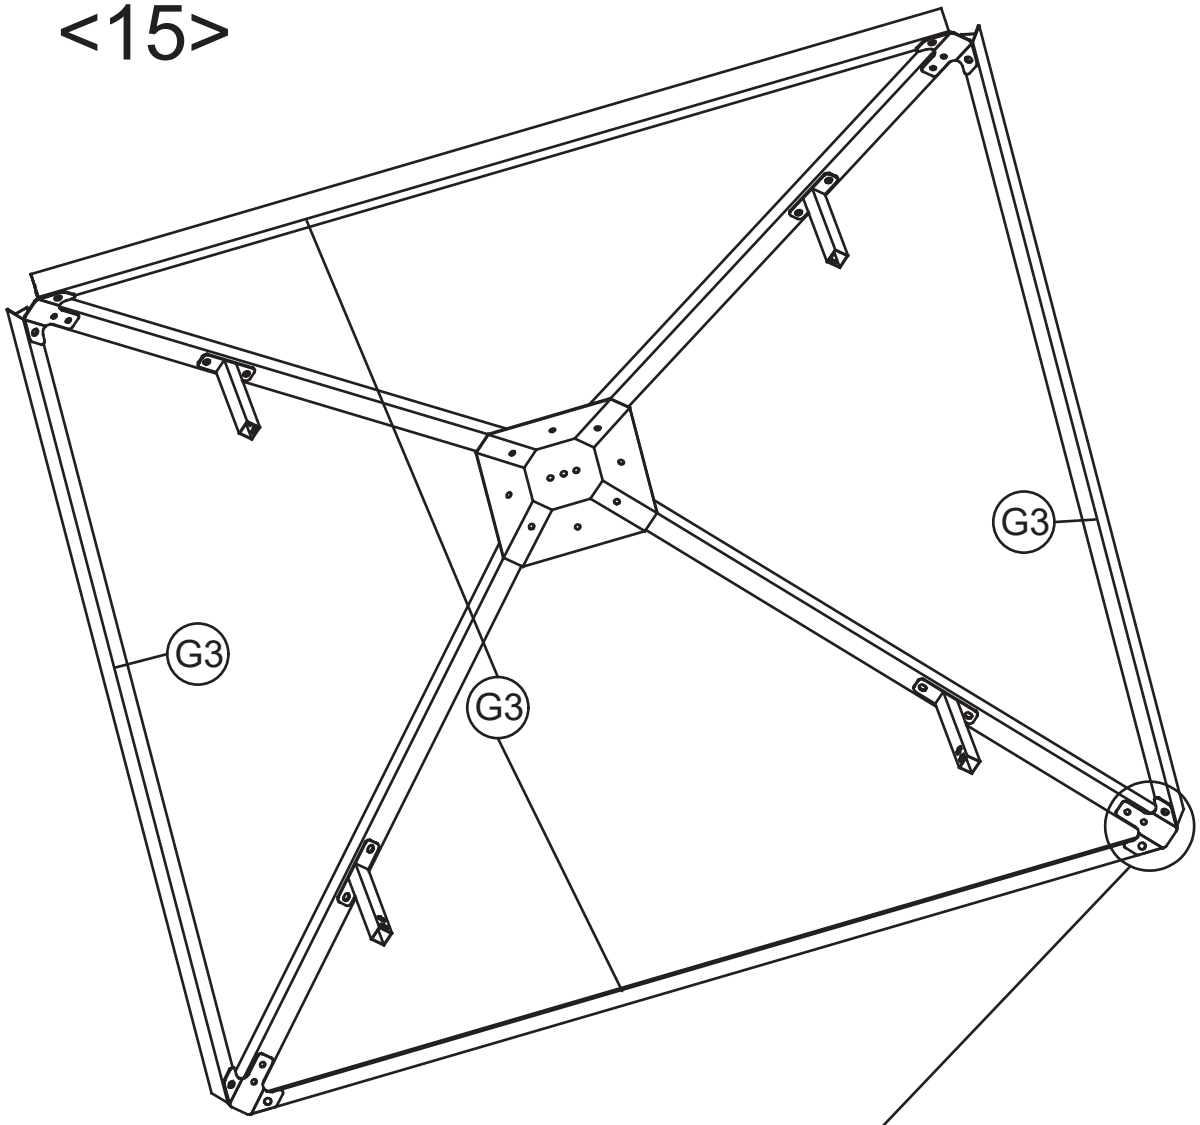

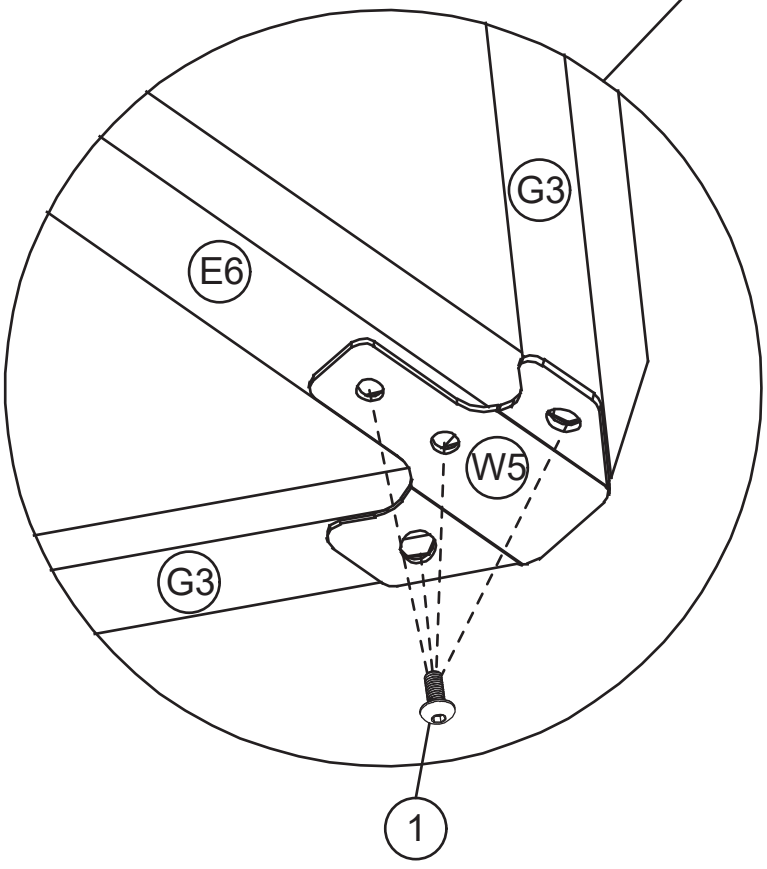




M6x15

(1) 8x

<16>

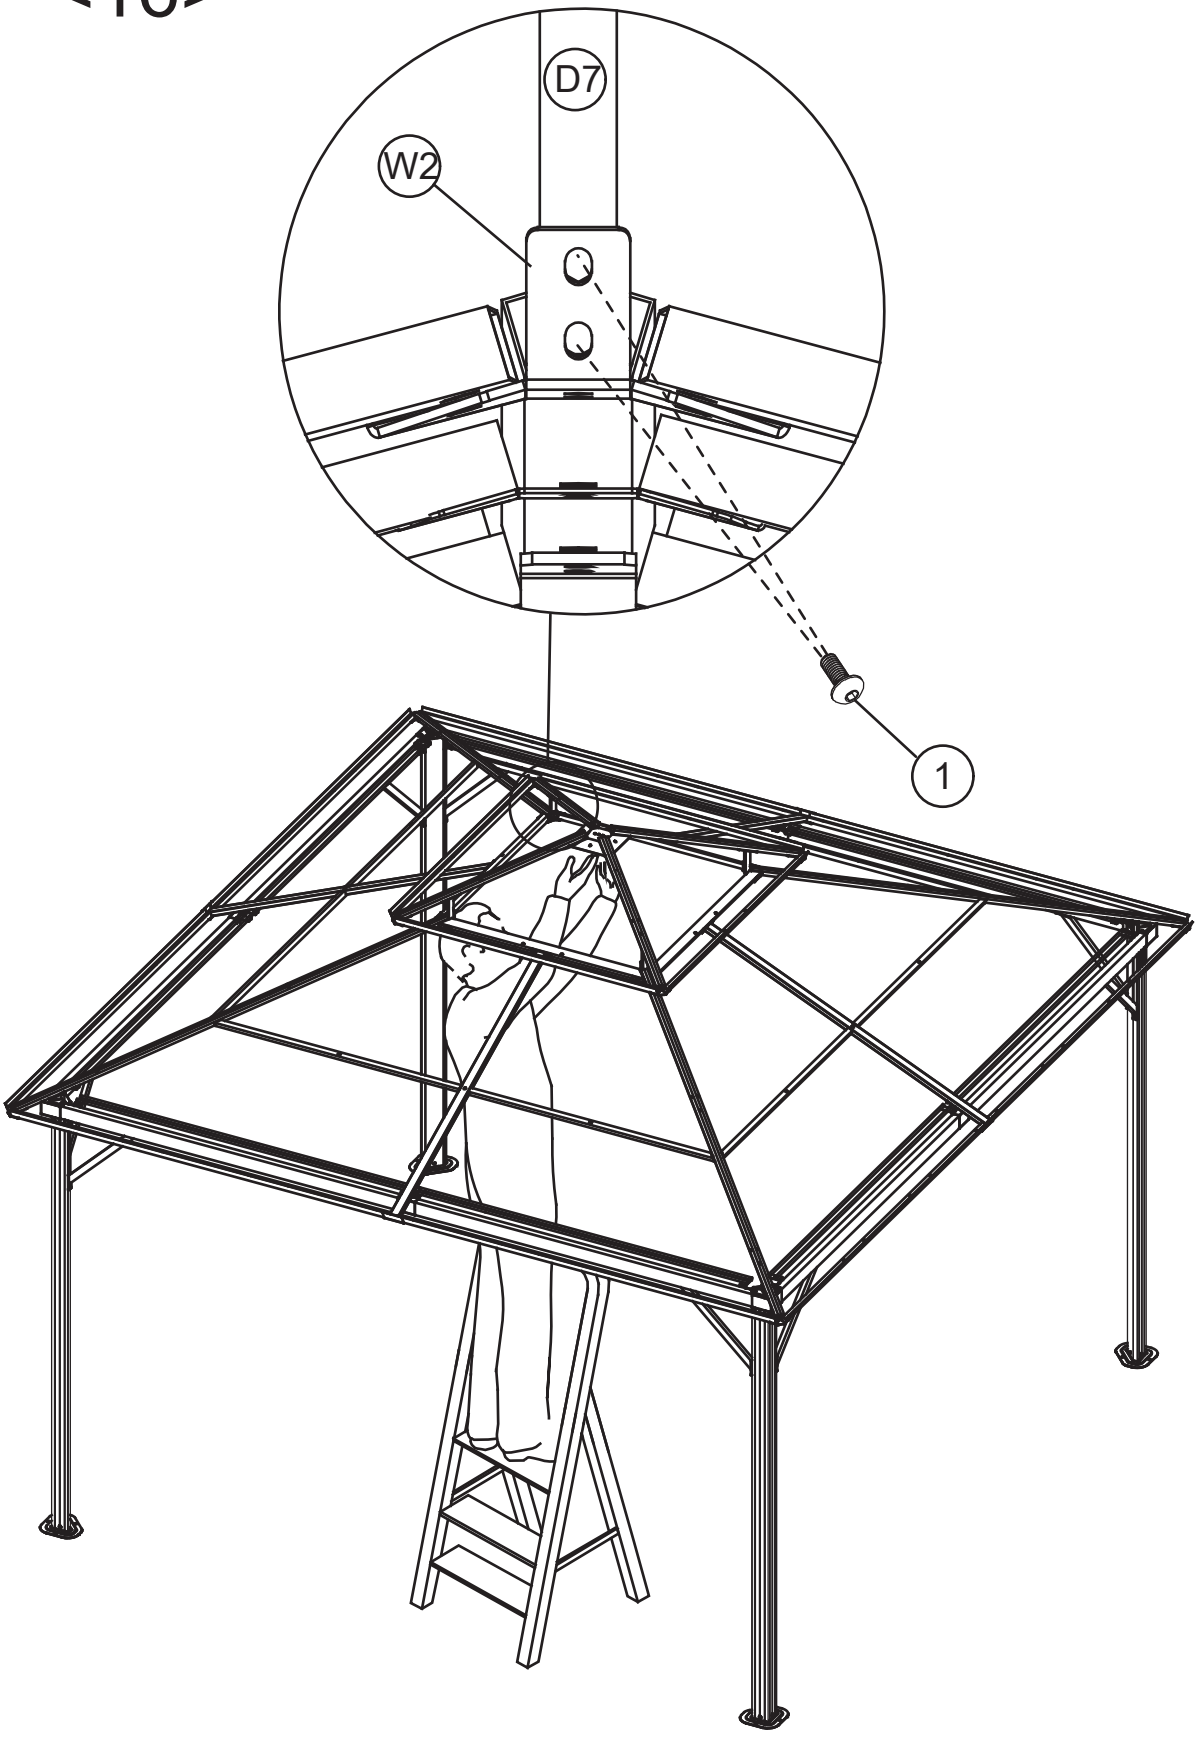

1. Have one person stand on the ladder to lift and hold L3 in place, while the other secure it by fastening the D7 screws.
2. Do not release L3 until all D7 screws are fully tightened.



O6 4x



O7 4x

N1 4x



Y2 8x




M6x15

1 16x

<17>

Tips: When install the roof panel ,remove the protective film first.

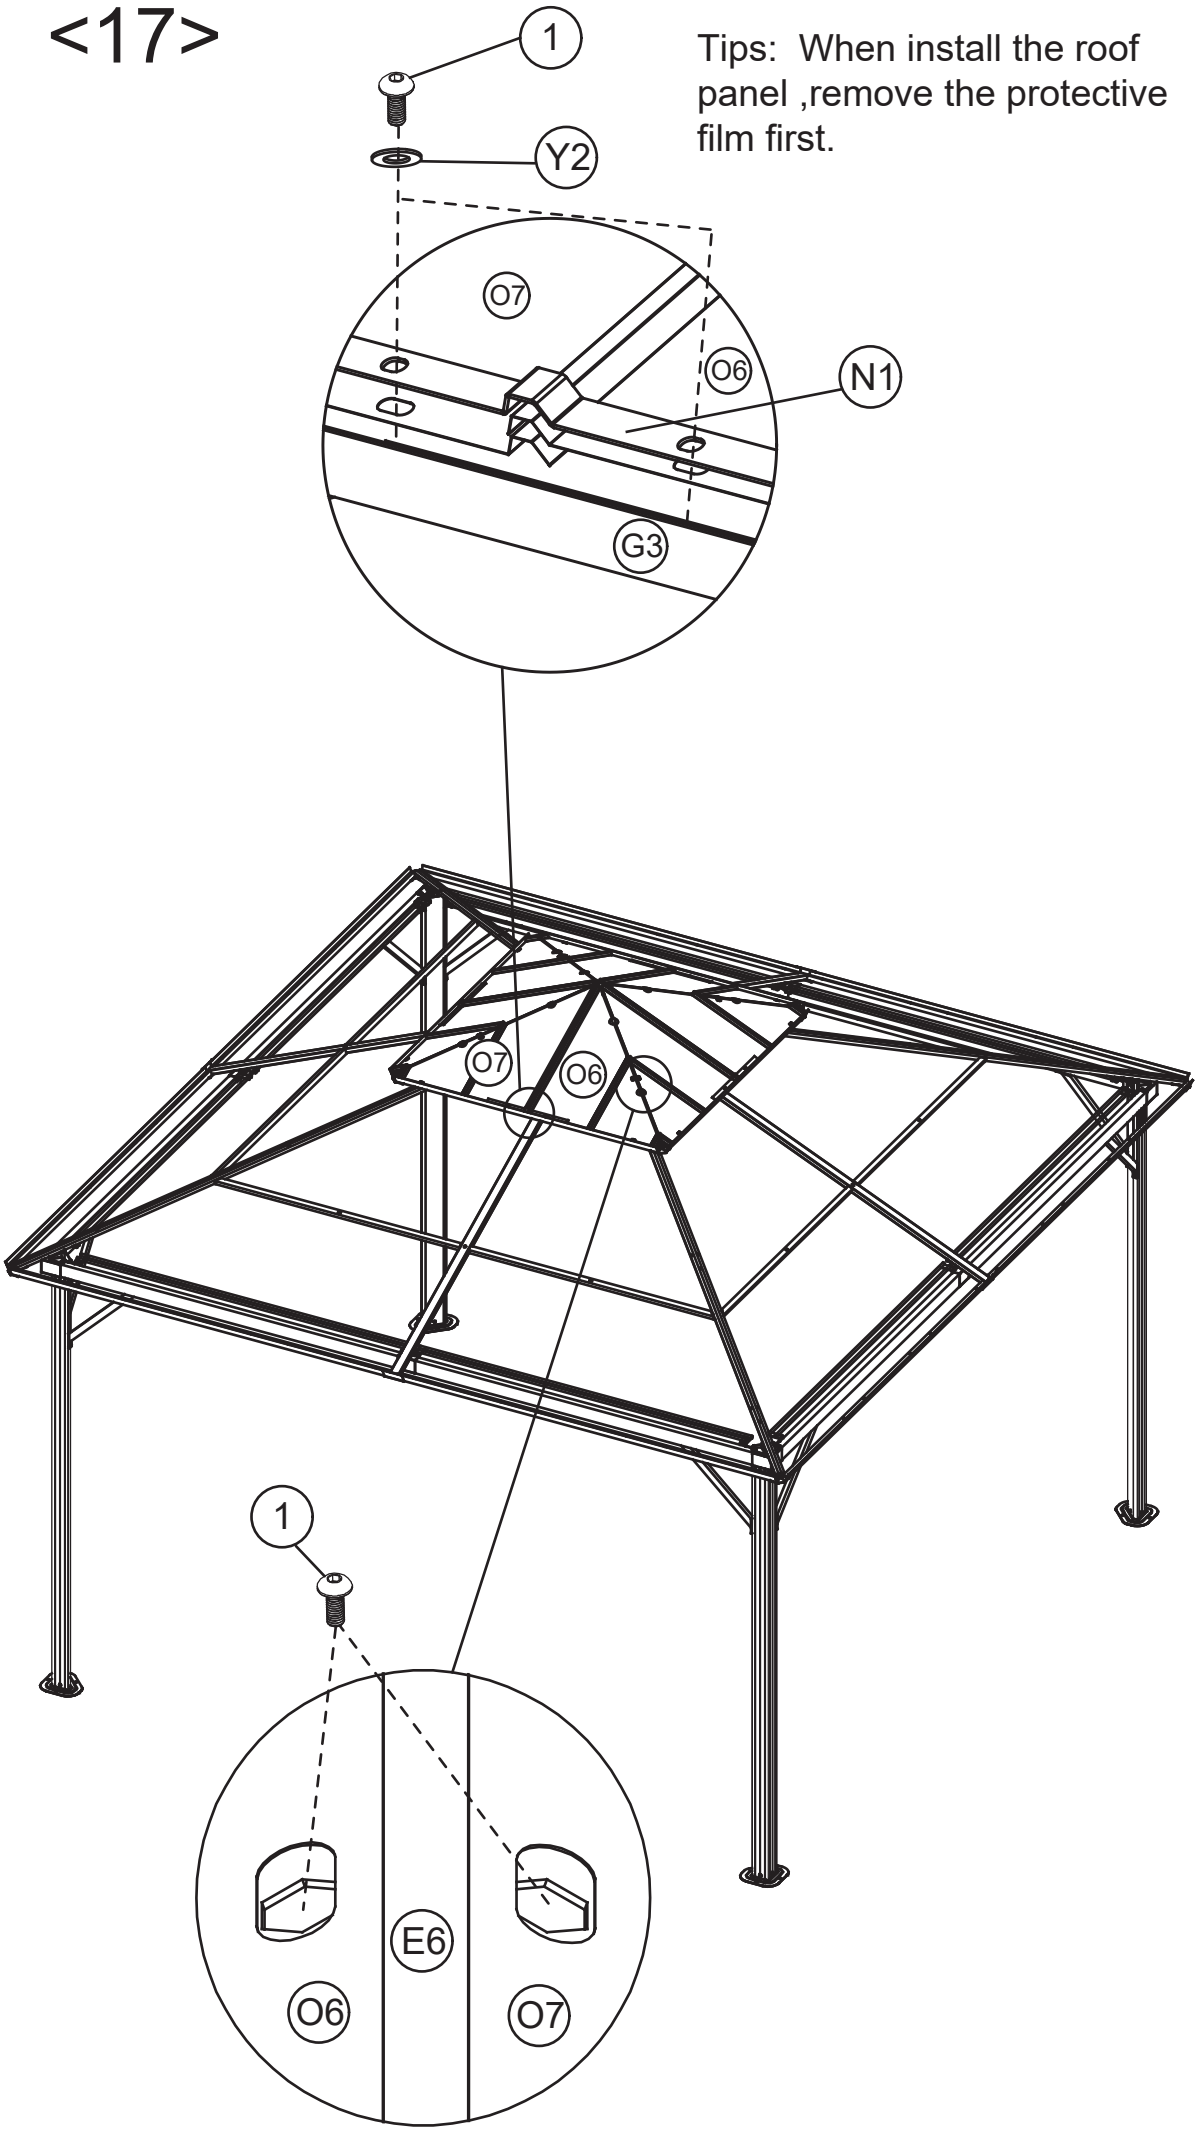



R7 4x




Y2 4x




M6x40


9 4x

<18>

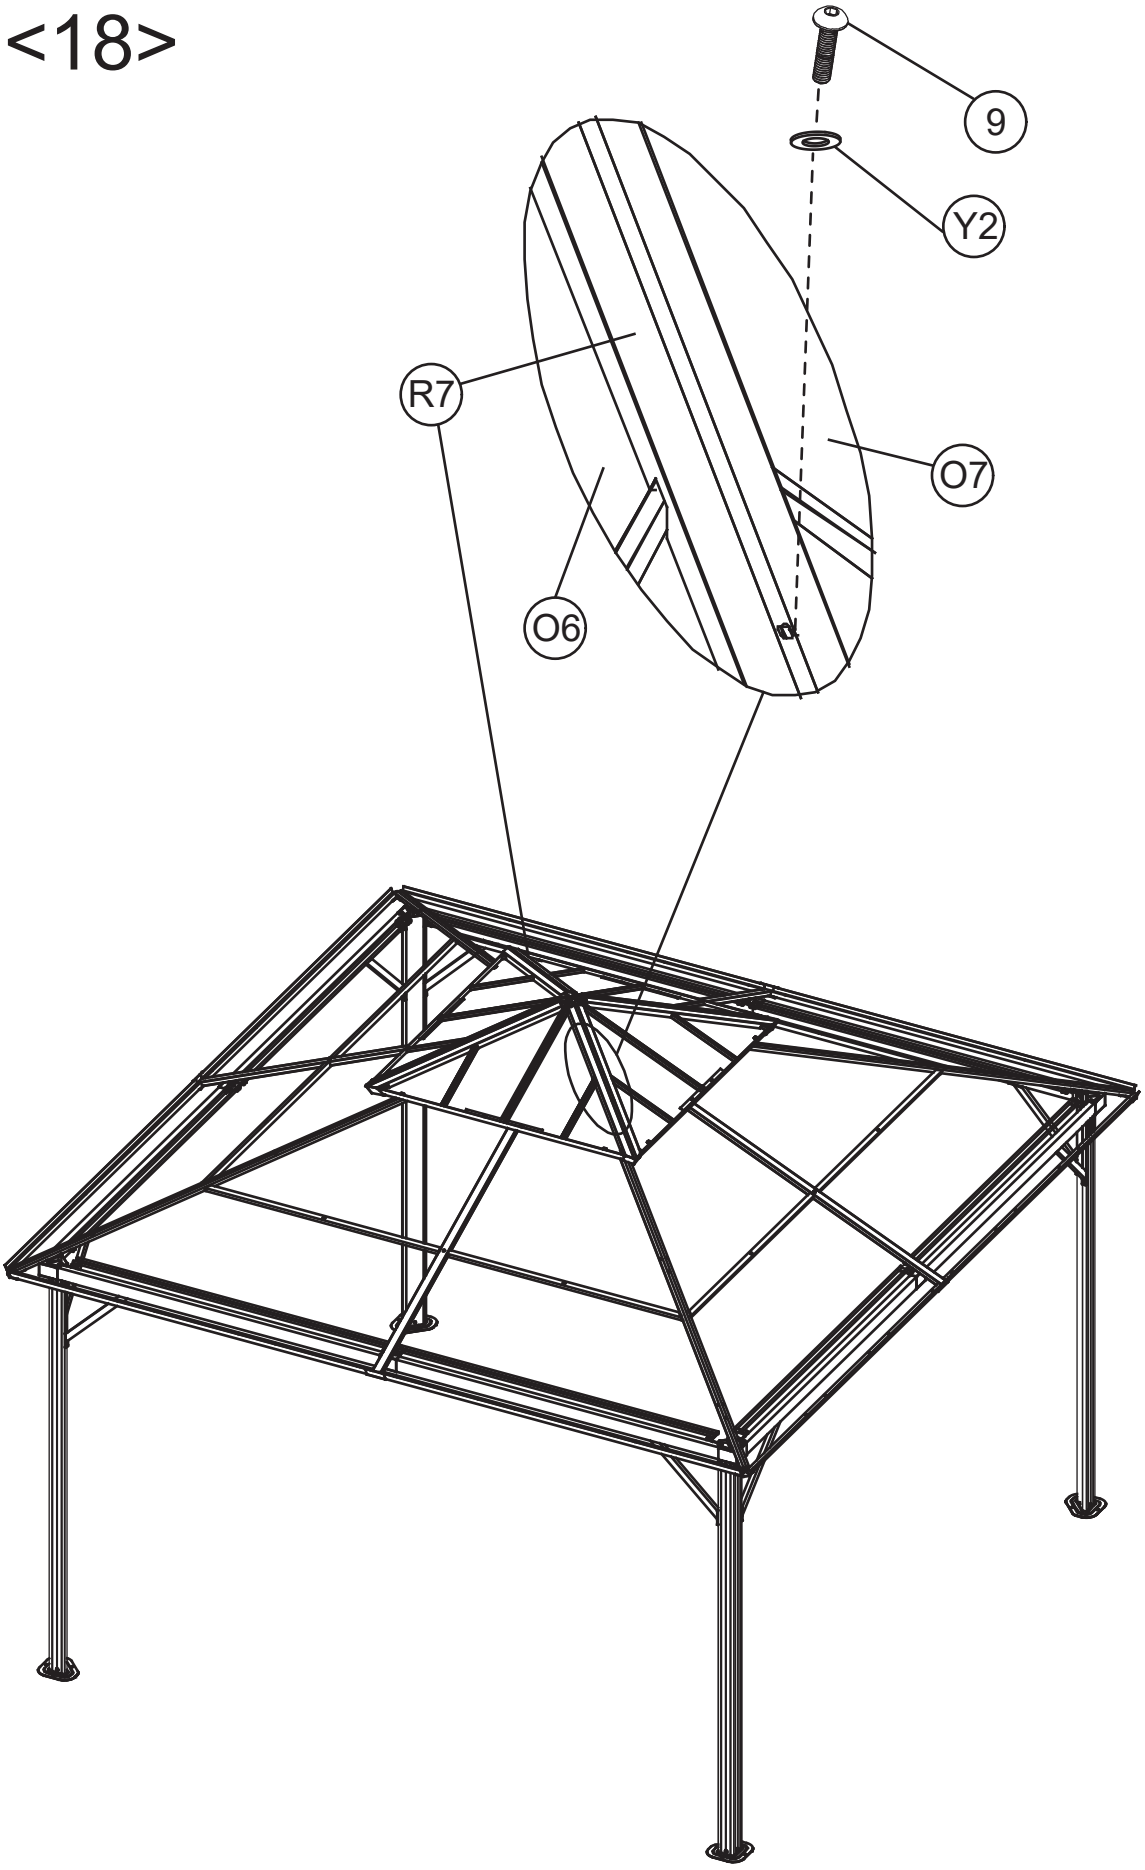

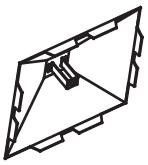

L4 1x

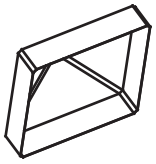


M3 1x




7 1x

<19>

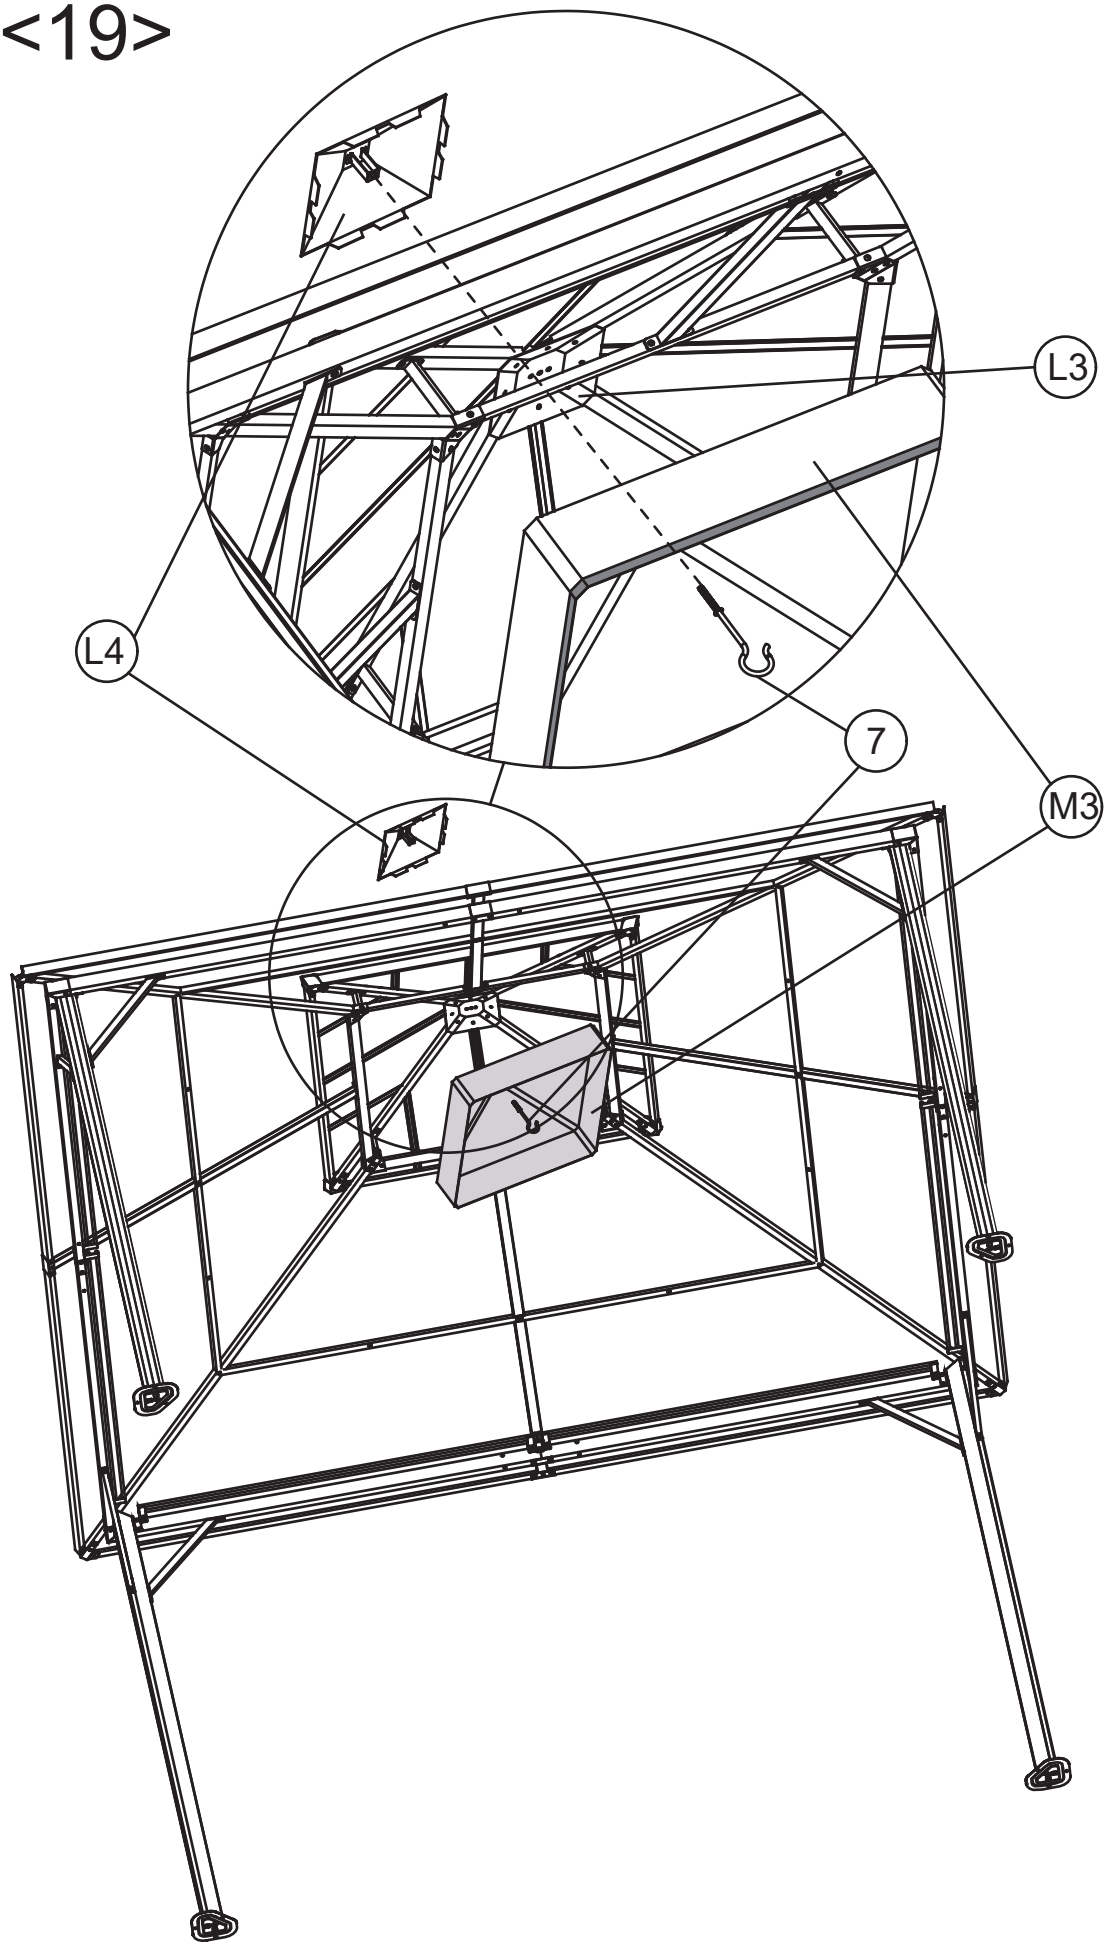

Install the top net cover with velcro after the step 21.

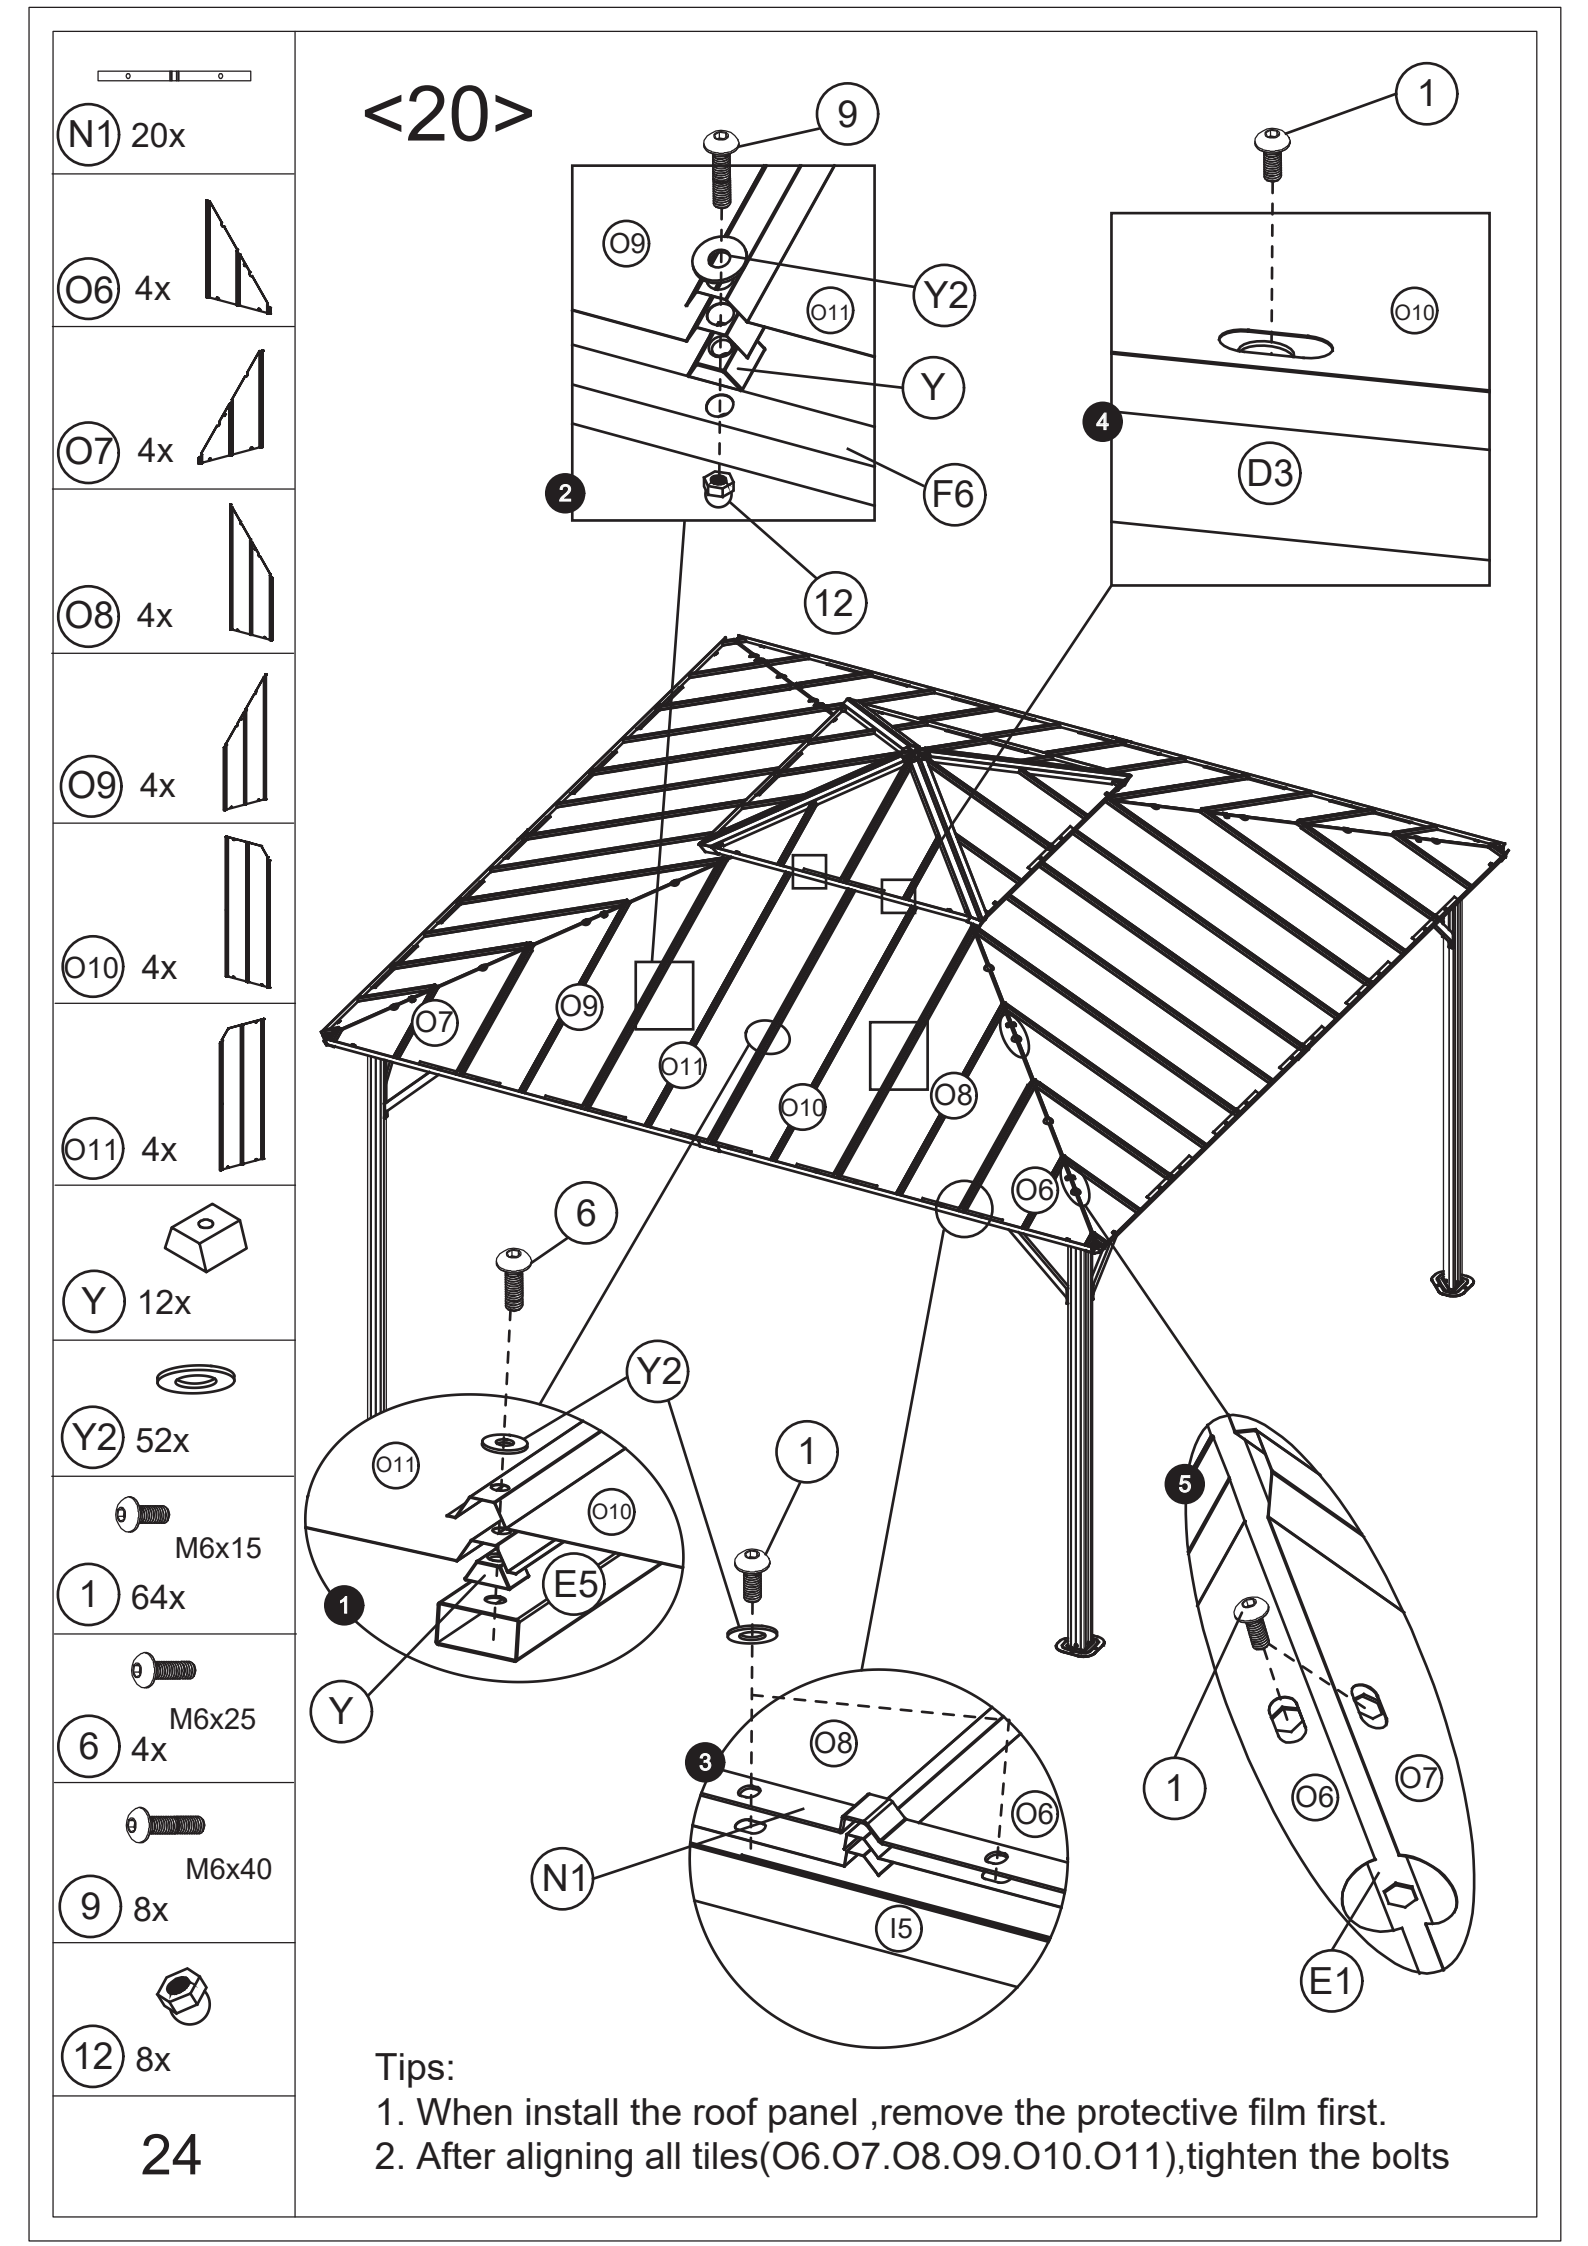

Tips:

1. When install the roof panel ,remove the protective film first.
2. After aligning all tiles(O6.O7.O8.O9.O10.O11),tighten the bolts



R3 4x




Y2 8x




M6x40


9 8x

<21>

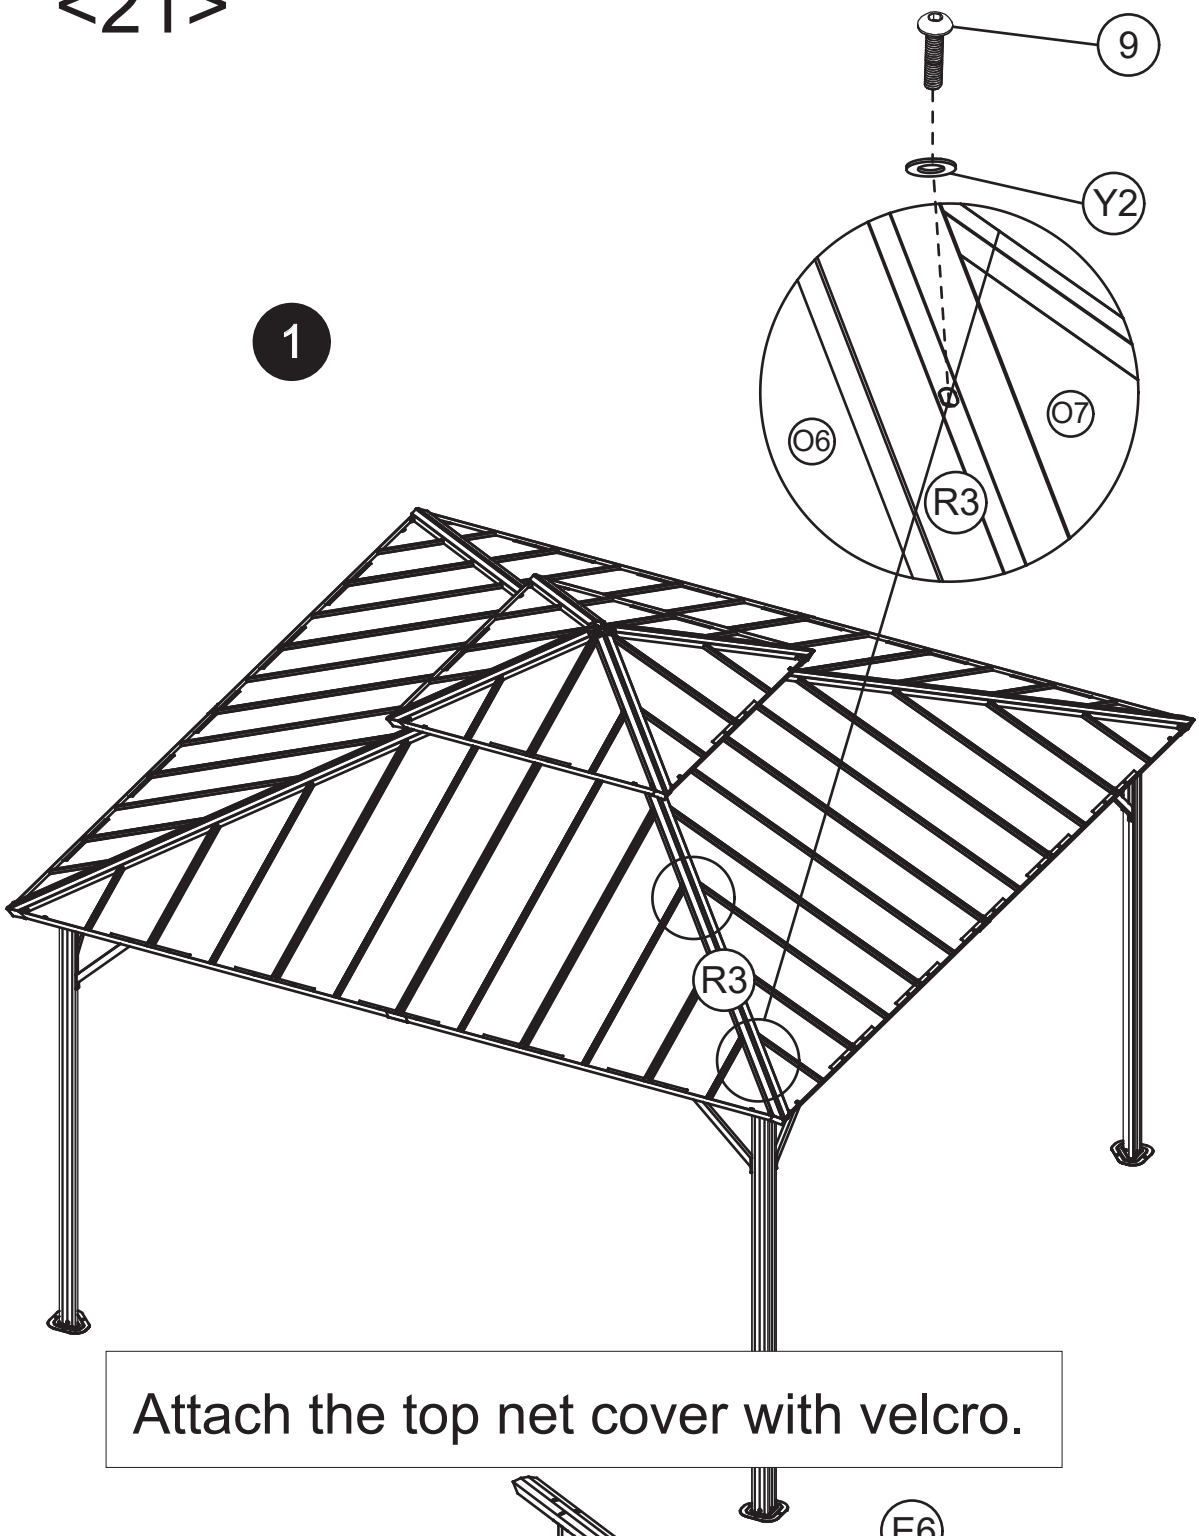

Attach the top net cover with velcro.

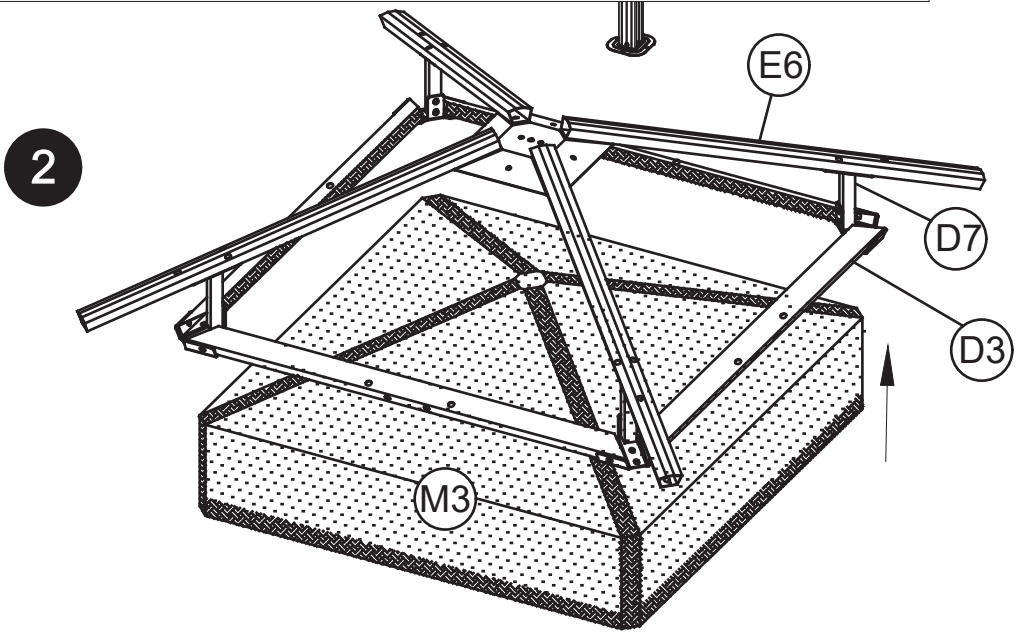




M1 4x





Y1 56x

<22>

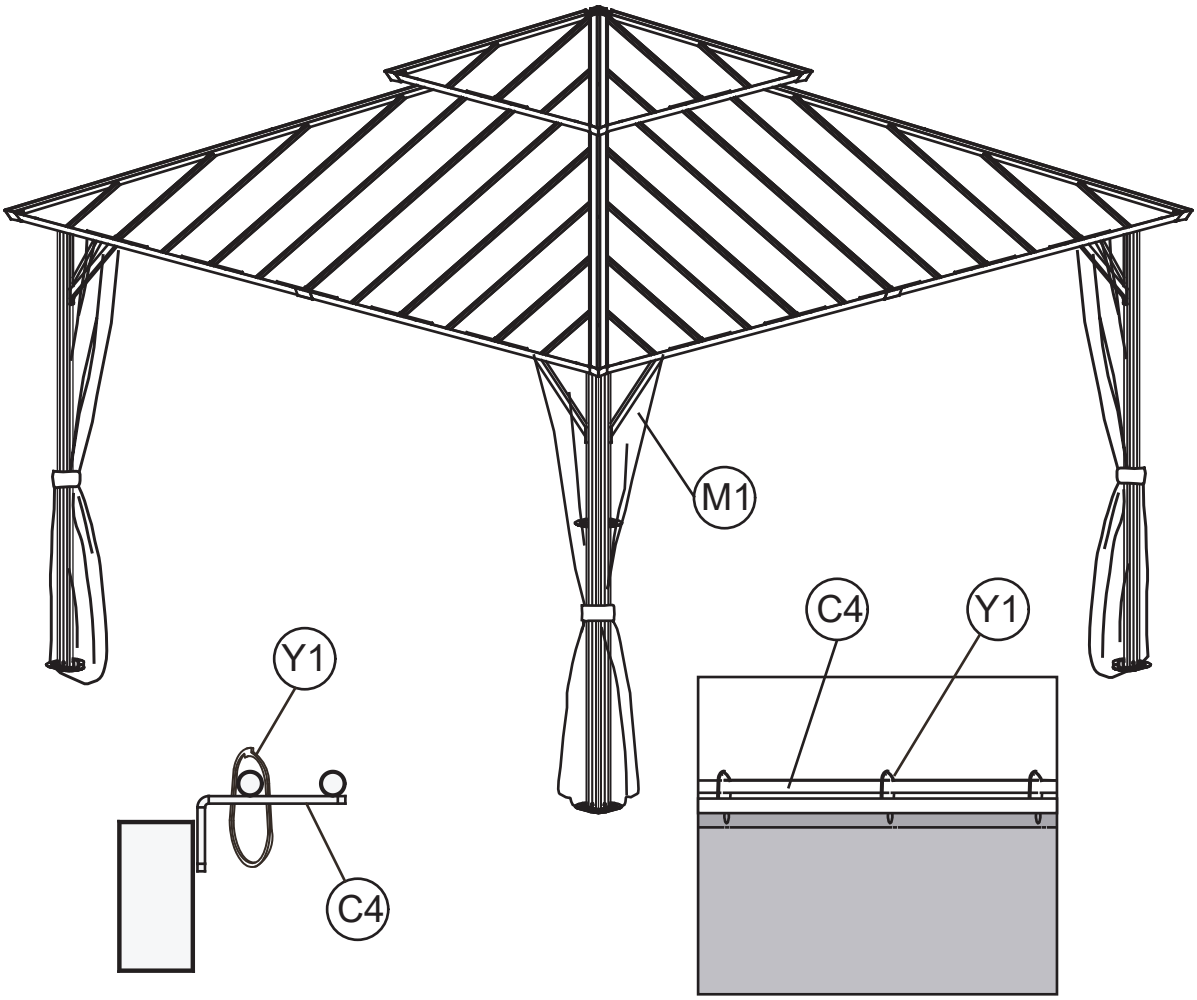

Curtain

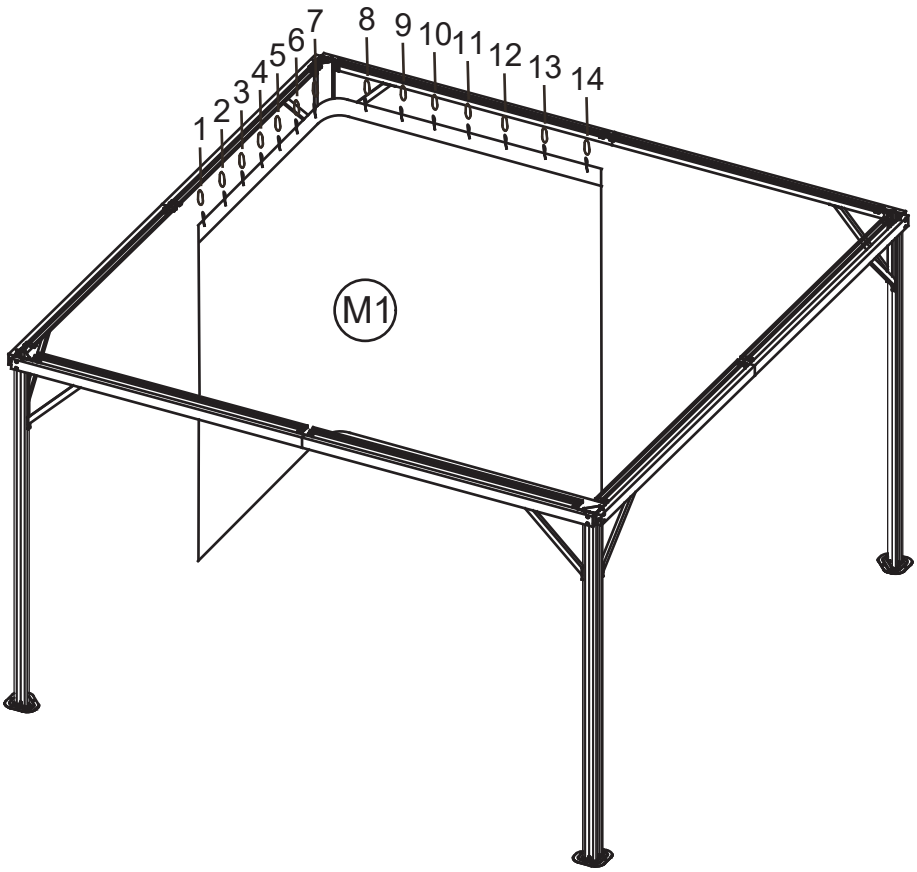





M2 4x




Y1 56x


<23>

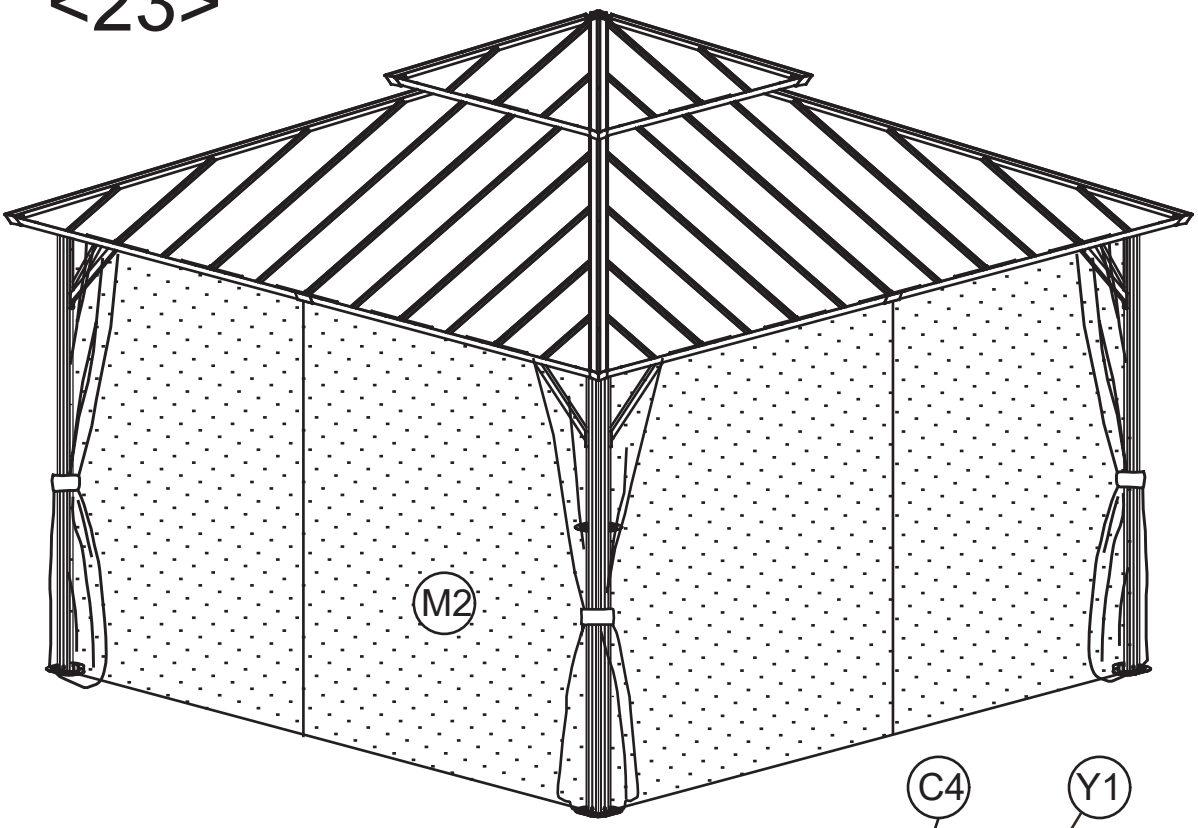

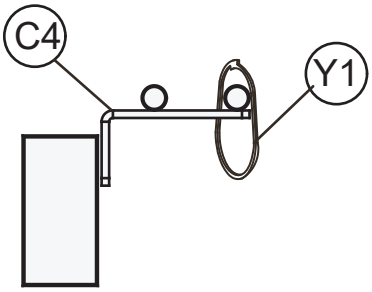

Net

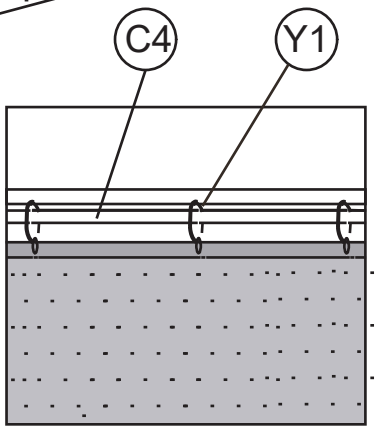

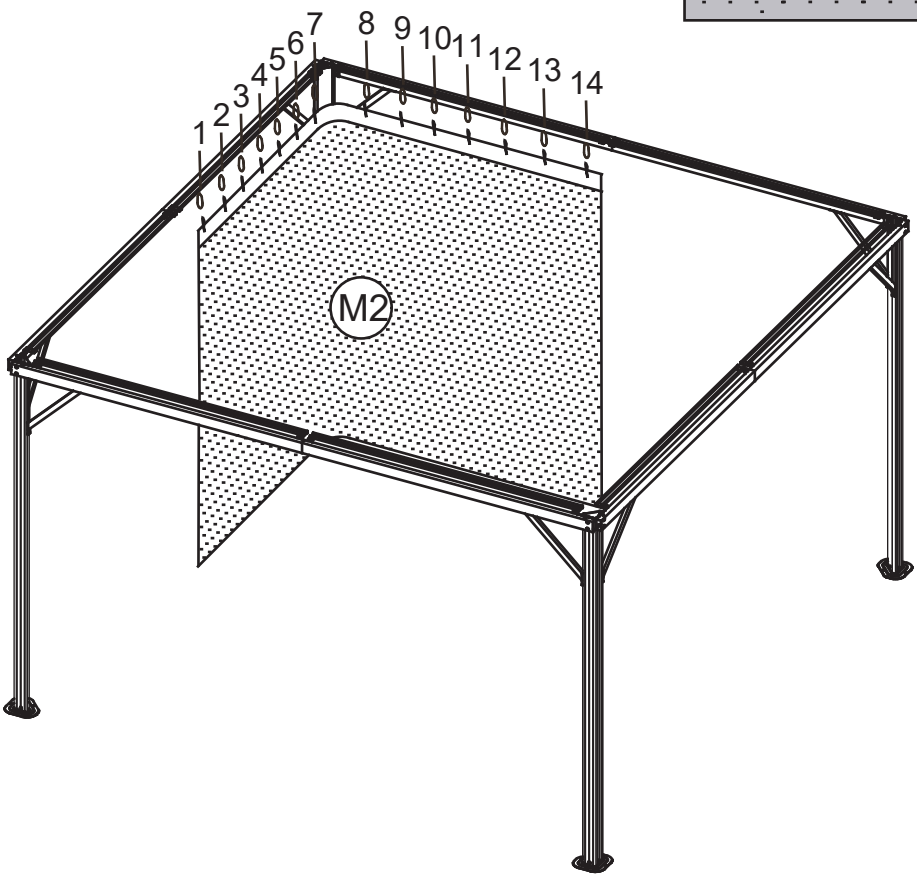

Carton-1/3	
Part	Qty
A2	4
E4	4
E6	4
F5	4
F6	4
G3	4
H2	8
I5	4
I6	4
M3	1
P	4
R3	4
R7	4
Y	12
Y1	112
Y2	72

Carton-2/3	
Part	Qty
B7	4
B8	4
C4	8
D3	4
D7	4
E5	4
J	4
K1	4
K2	4
L3	1
L4	1
M1	4
M2	4
N1	24
Q2	4
Q3	8
W2	4
W3	4
W4	4
W5	8
1.2.3.4.6.7.8.9.10. 12.13.15.16.	1

Carton-3/3	
Part	Qty
O6	8
O7	8
O8	4
O9	4
O10	4
O11	4