


MANUAL INSTRUCTION

GAZEBO WITH SIDEWALL CURTAINS

WYWQG-010

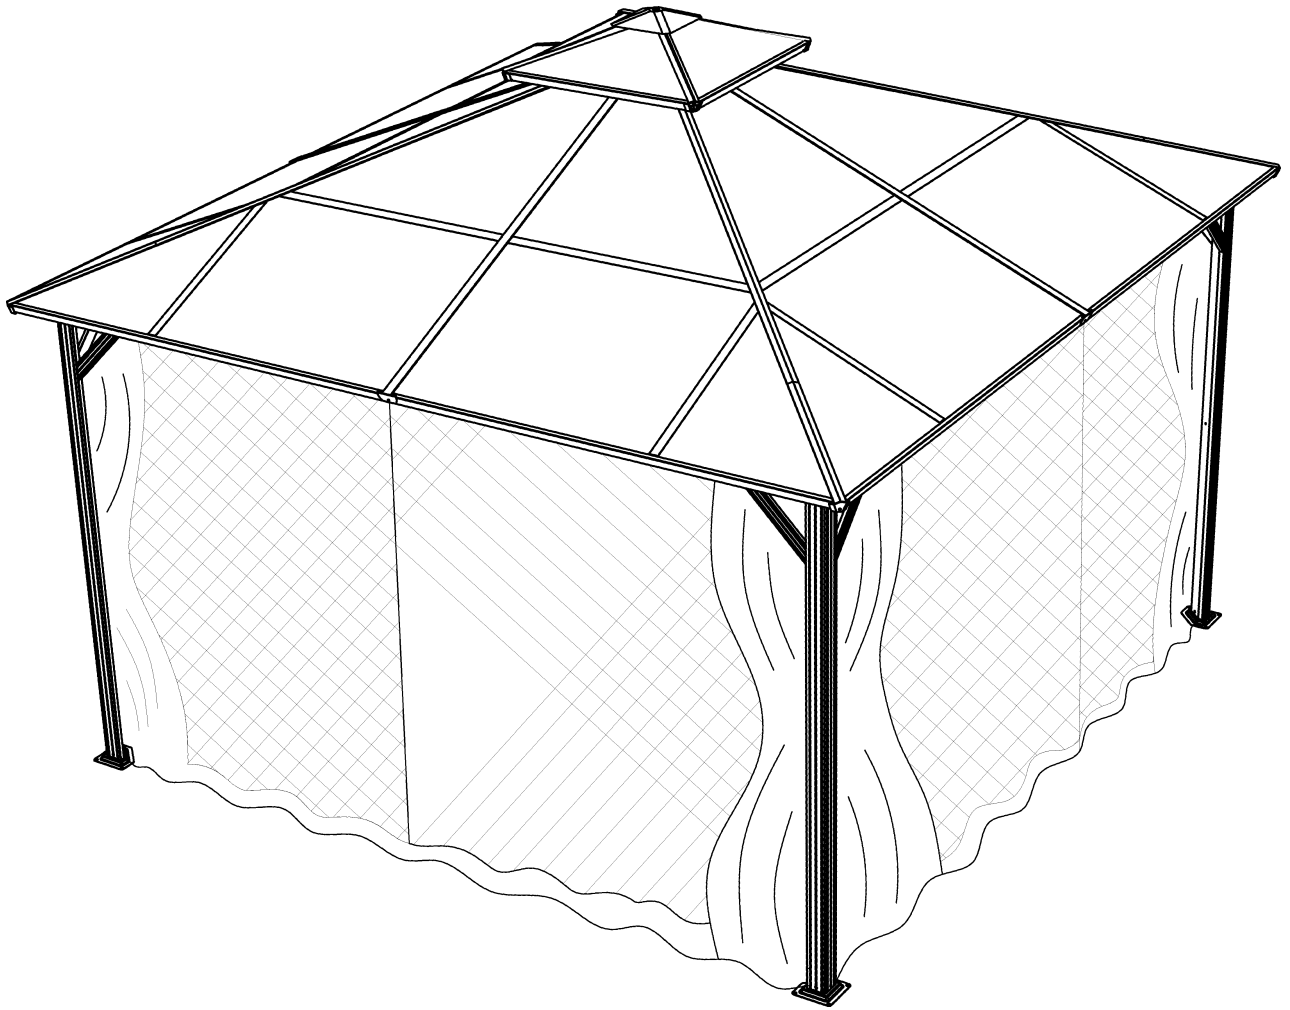

PC ROOF GAZEBO

WARNING

- During windy weather,please avoid standing inside the gazebo.
- Avoid standing under the gazebo during heavy snowfall.
- For safety,please use expansion screws to reinforce the posts around the gazebo.
- During windy weather,tighten the fence and netting to prevent tearing in high winds.
- In extreme weather conditions,you can use a rope to pull the four corners of the gazebo to keep it stable.
- Please clear the snow off the roof in time for heavy snowfall.
- Make sure all screws are tightened before use.
- Periodically check and confirm the tightness of all screws,buckles,and straps every 90 days.
- Please keep all screws loose during the assembly process and tighten them after completing the installation.
- Do not use or store near an open flame or flammable chemicals.
- Please note that some parts have sharp edges and should be handled with gloves.
- If any parts are missing,broken,damaged,or worn,discontinue use of the product until repairs are made or factory replacement parts are installed.
- Installation of the product in a manner that does not conform to the manufacturer's instructions may result in the loss of the warranty policy for this product.
- Consult your local authorities to determine if permits are required for erecting the shed.

I TOOLS REQUIRED

EQUIPMENT REQUIRED (Not included in boxes)

**NOTE: Tools / equipment are not shown to actual size and scale.*



LEVEL



RUBBER Mallet



DRILL



ALLEN KEY



SAFETY HAT



GLOVES



STEPLADDER
(6.5Ft Or More)



SAFETY GOGGLES



PHILLIPS SCREW

Matters needing attention



*Three or more people
are required for
assembly*



*Do not fully tighten
screws prior to complete
assembly*

PACKING LIST

Serial number

Box A






Part name	E	E1	H2	H3	J	J1	J2
Qty	4	4	1	1	4	4	4
Part name	J3	K	K1	L2	Q1	S1	T3
Qty	4	4	4	4	8	4	4
Part name	T2	N	N1	O	O1	O2	O3
Qty	1	4	4	8	4	4	4
Part name	P	P1	P2	U	Z1	Z2	Z3
Qty	8	4	1	72	1	1	1
Part name	Z	Y	Y2	X	X1	W	W1
Qty	12	12	1	8	16	120	12
Part name	V	U1					
Qty	32	8					








PACKING LIST



Serial number





Box B



Part name	A	B	B1	B4	B5	D	D3
Qty	4	4	4	4	4	4	4
Part name	C	C1	D1	E2	E3	G	I
Qty	4	4	4	4	4	4	4
Part name	M	R	F				
Qty	4	4	8				


	A x4
	B x4
	B1 x4
	B4 x4
	B5 x4
	C x4
	C1 x4
	D x4
	D1 x4
 	D3 x4
	E x4
	E1 x4
	E2 x4
	E3 x4
	F x8

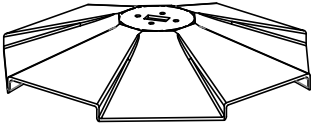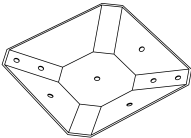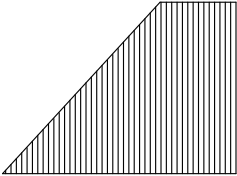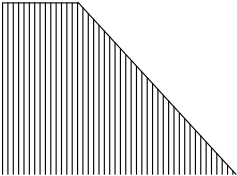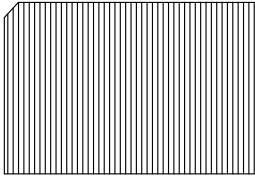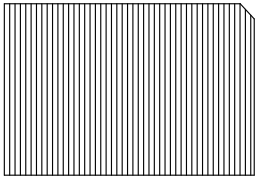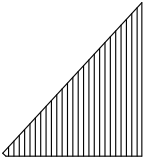	G x4
	H2 x1
	H3 x1
	I x4
	J x4
	J1 x4
	J2 x4
	J3 x4
	K x4

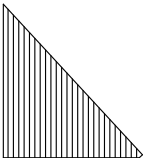
	K1 x4
	L2 x4
	M x4
	N x4
	N1 x4
	O x8
	O1 x4
	O2 x4
	O3 x4
	P x8
	P1 x4
	P2 x1

		Q1 x8
		R x4
		S1 x4
		T3 x4
		T2 x1
		U x72
 Ø11 * Ø6* 20mm		U1 x8
		V x32
 M6 * 15 mm		W x120
 M6 * 20mm		W1 x12
 M6 * 35 mm		X x8
 M4 * 12 mm		X1 x16
 ST4.8* 12 mm		Y x12


 M6	Y2 x1
	Z x12
	Z1 x1
	Z2 x1
	Z3 x1
	Z4 x1

No.	Qty	Picture	No.	Qty	Picture
A	4		W	12	 M6 * 15 mm
R	4				

Step1

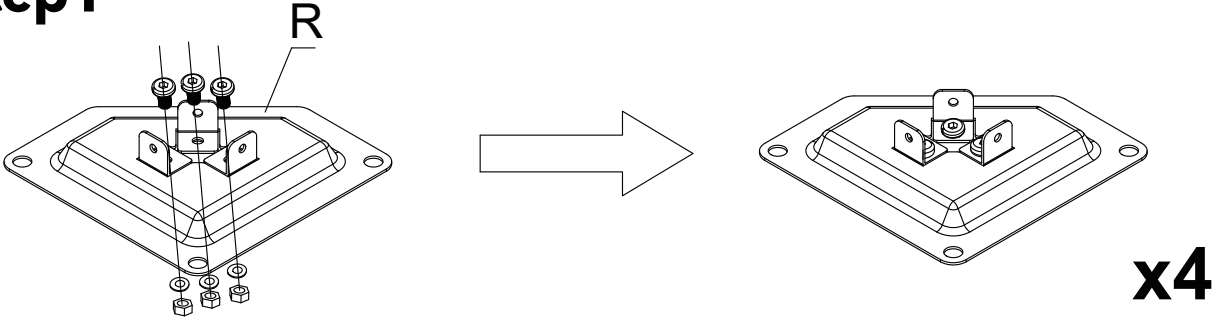


Step2

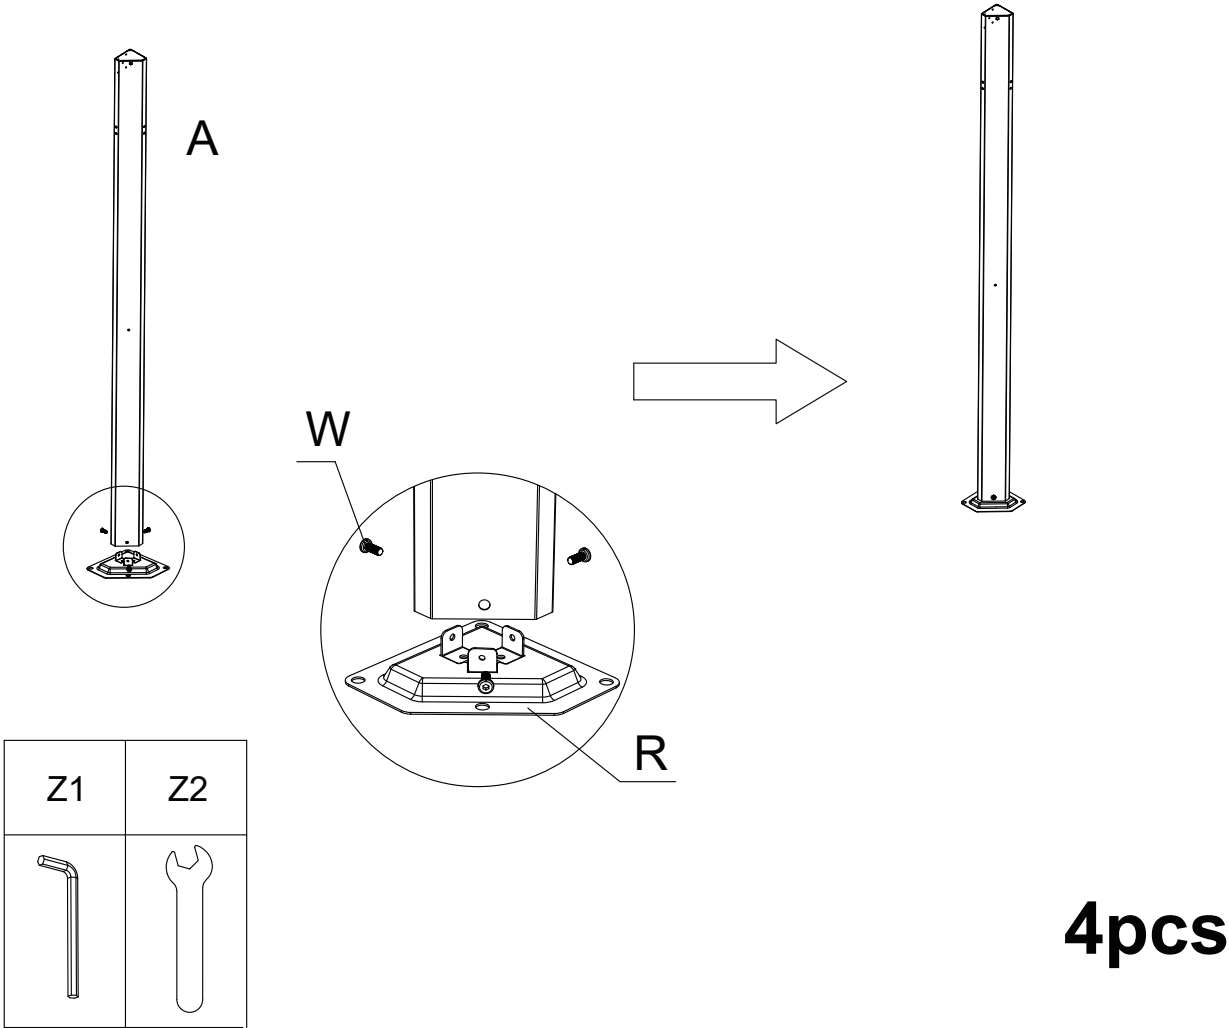


Z1	Z2
	


No.	Qty	Picture	No.	Qty	Picture
B	4		B1	4	
B4	4		B5	4	
W	40	 M6 * 15 mm	M	4	

Step3


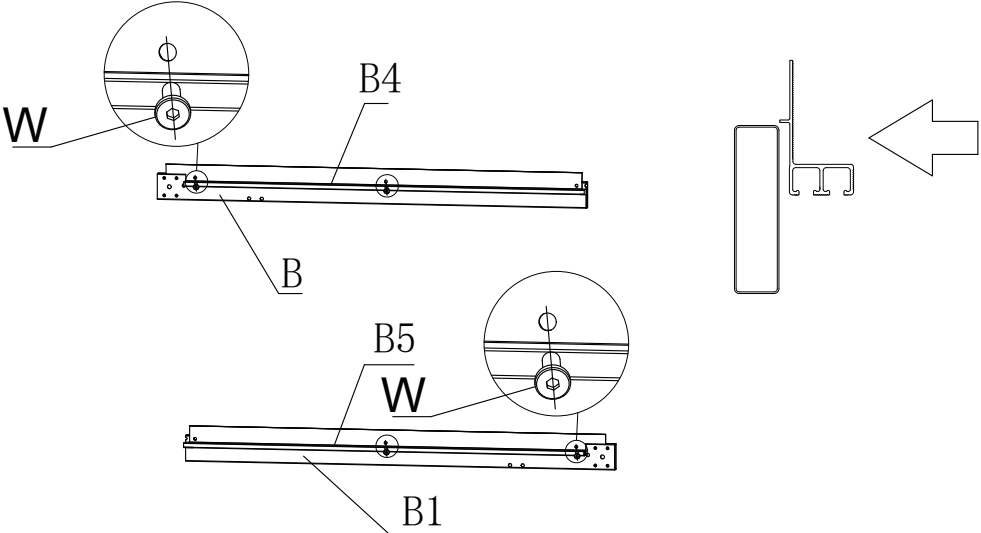


Step4

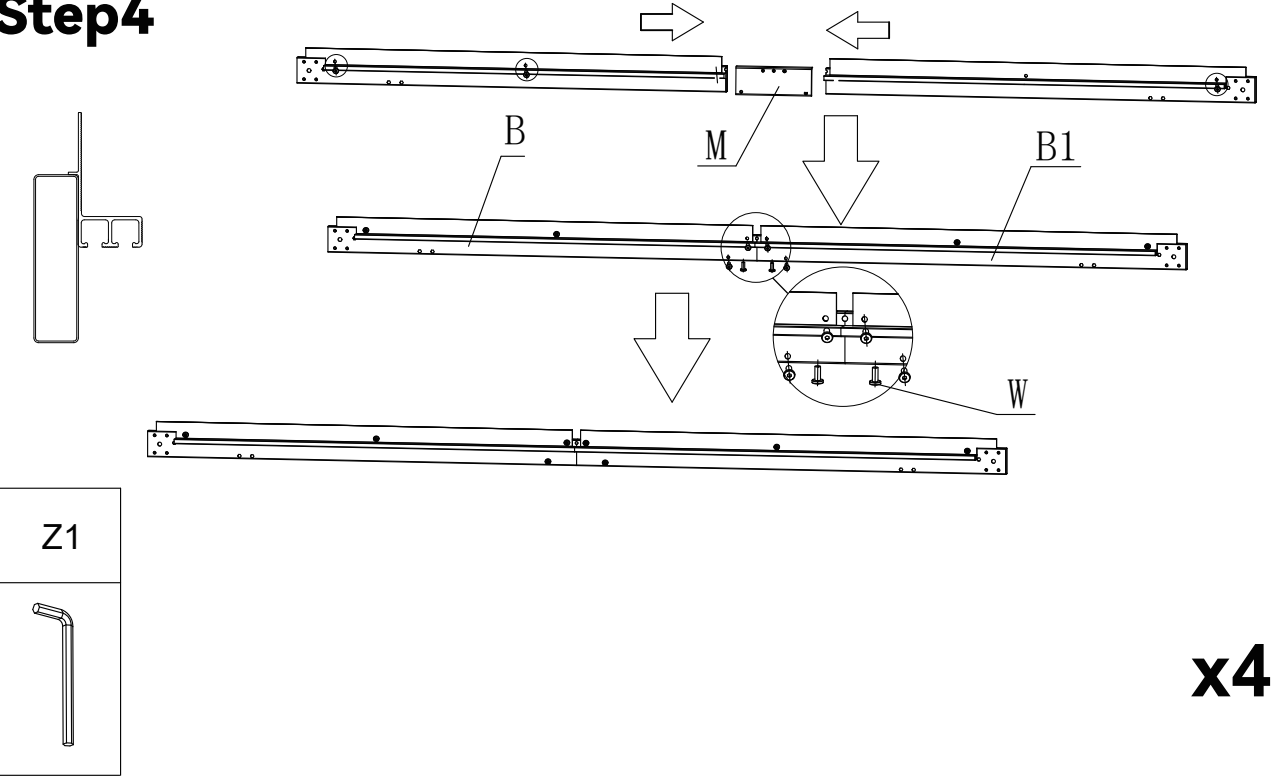


No.	Qty	Picture	No.	Qty	Picture
V	32				

Step5

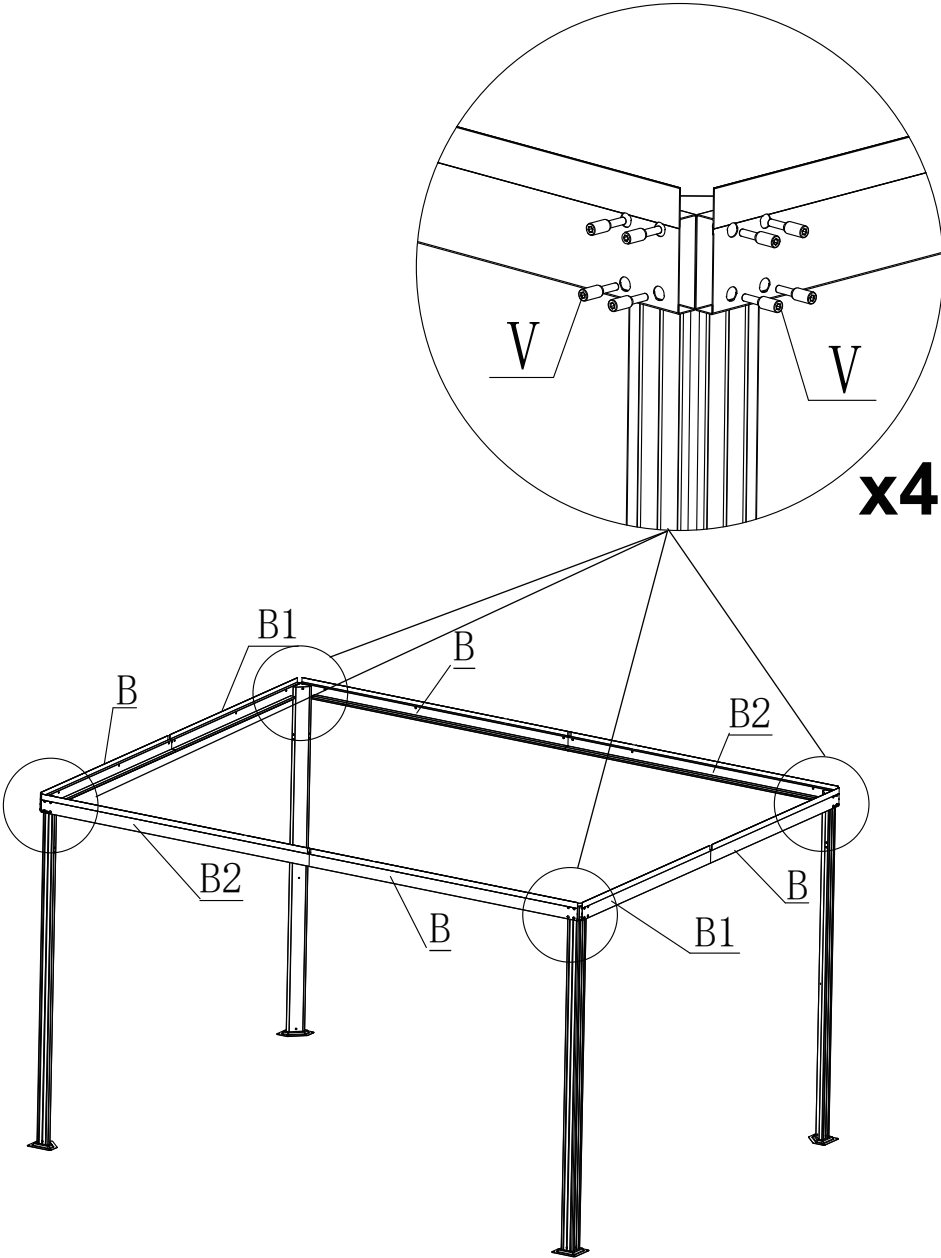

No.	Qty	Picture	No.	Qty	Picture
C	4		W	24	 M6 * 15 mm
C1	4		O	8	
			X1	16	 M4 * 12 mm


Step6

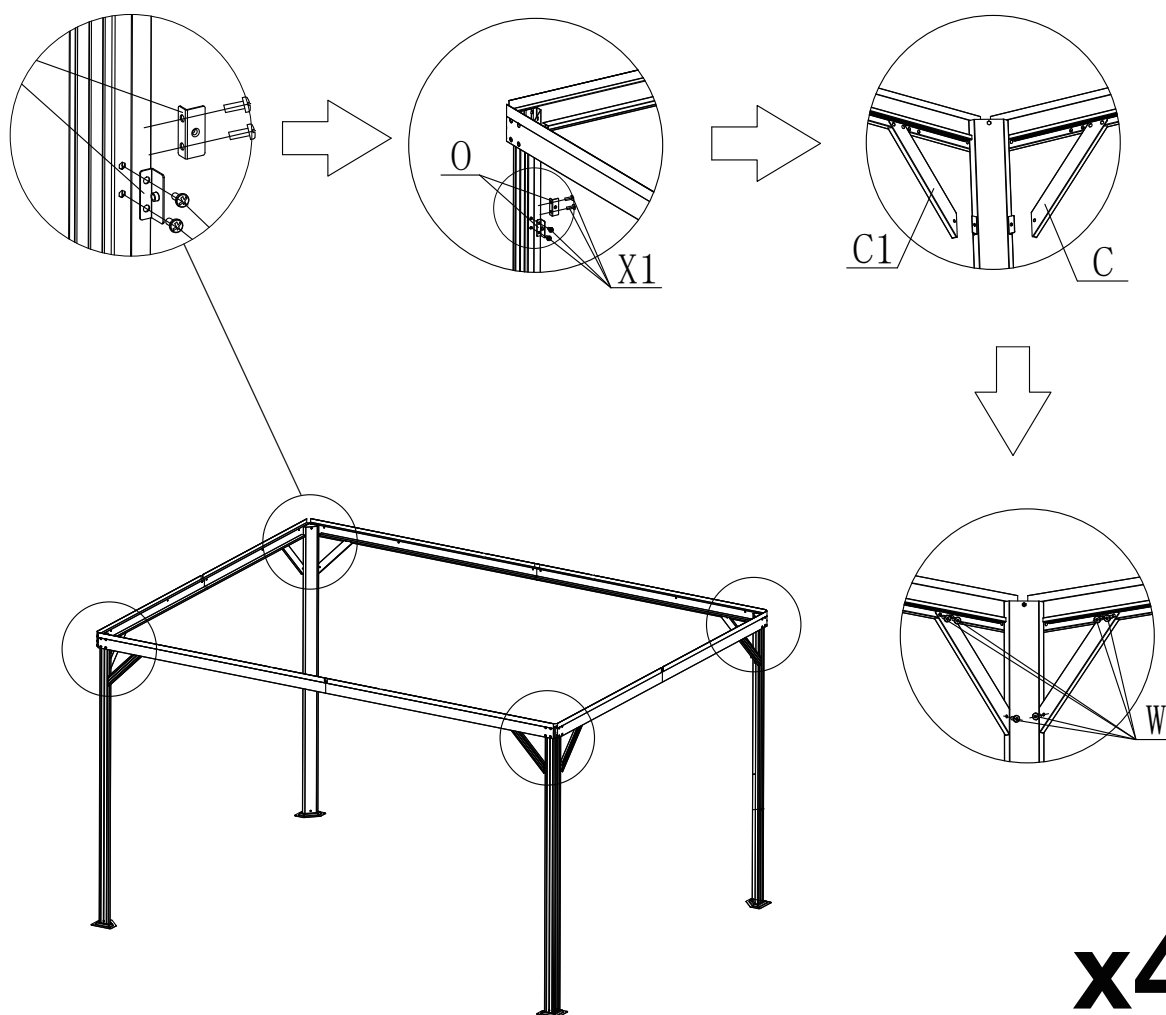

Z1	Z3
	

No.	Qty	Picture	No.	Qty	Picture
N	4		Y	12	 ST4.8* 12 mm
N1	4				

Step7


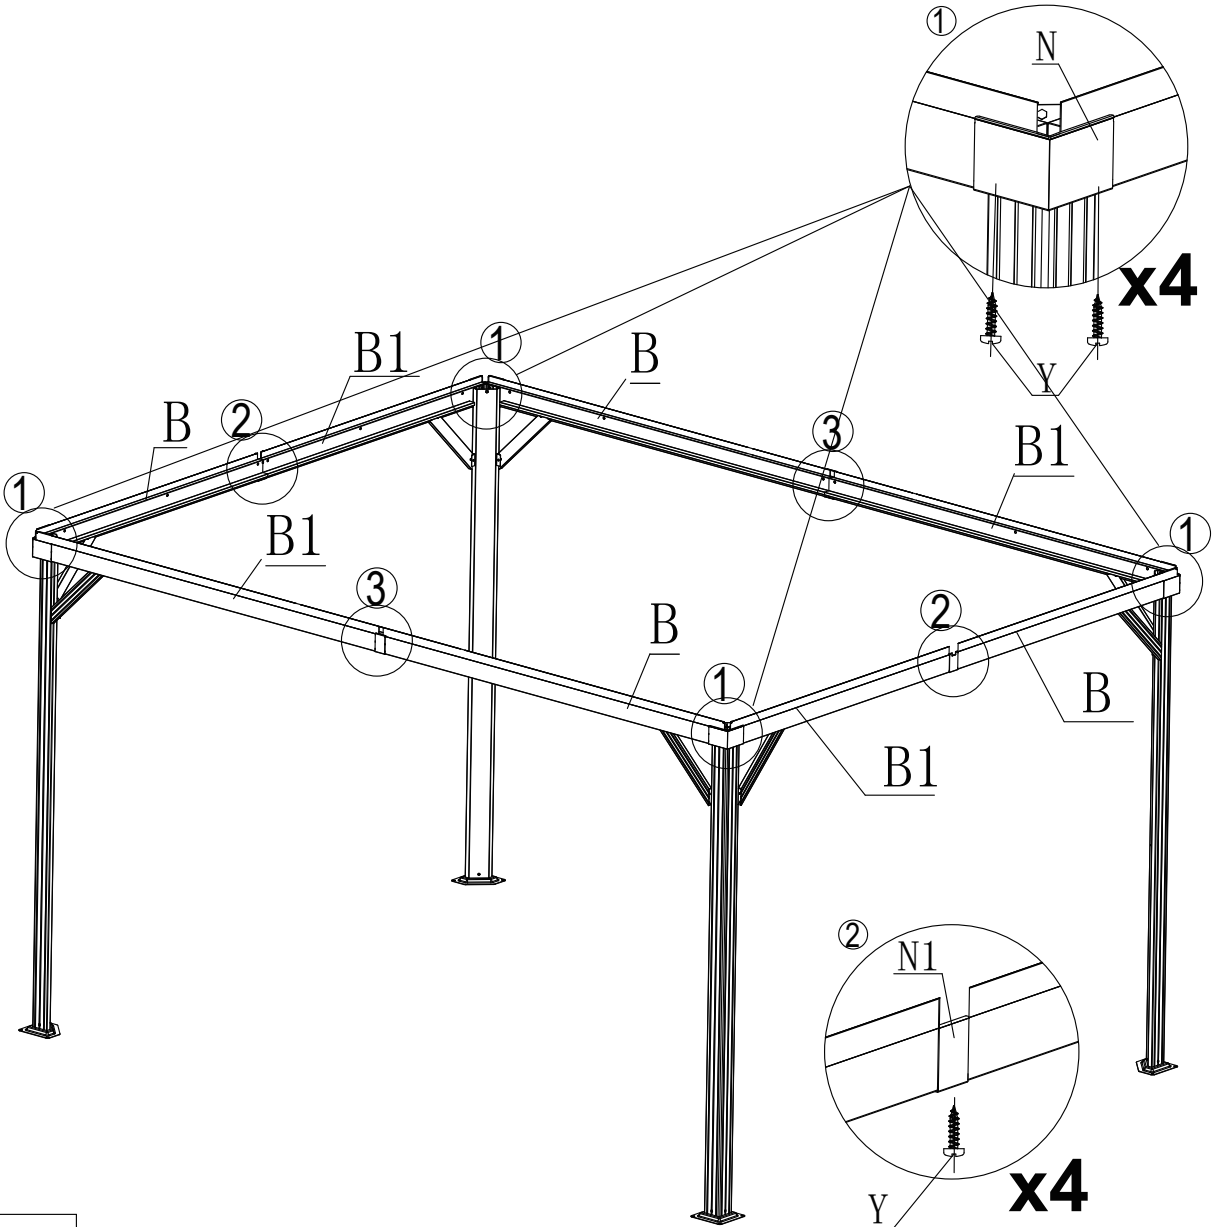


Z3




No.	Qty	Picture	No.	Qty	Picture
D	4		W	16	 15 mm
D1	4		O1	4	
O2	4				



Step8

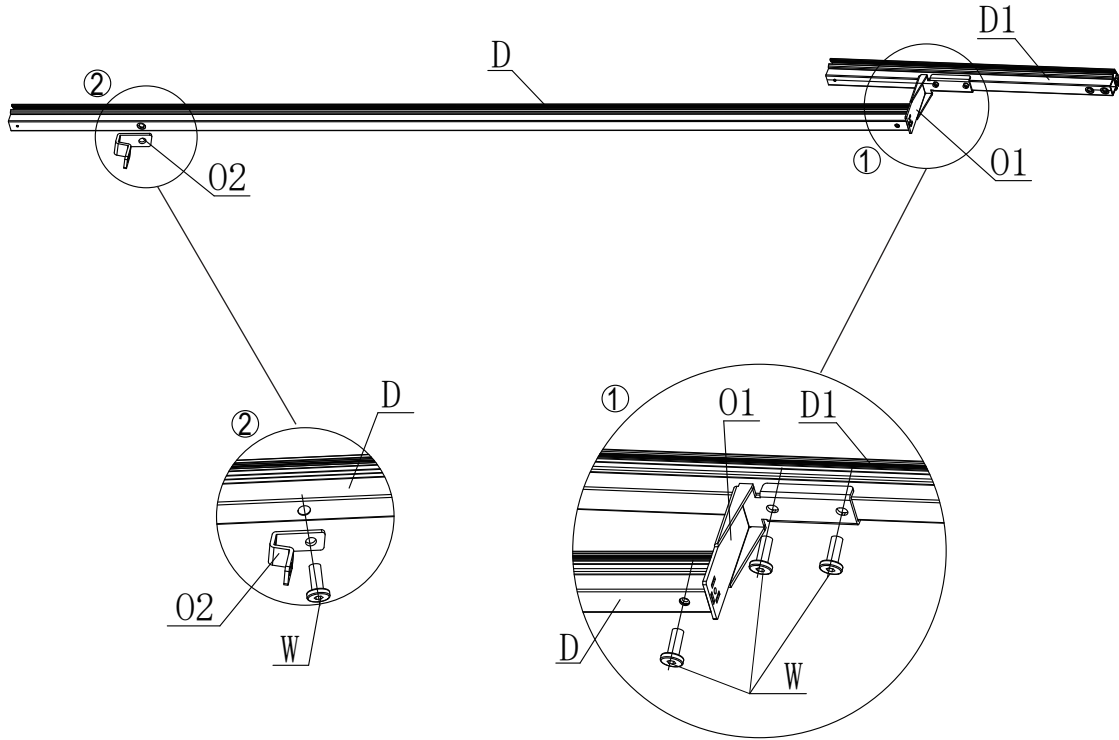

x4


No.	Qty	Picture	No.	Qty	Picture
H3	1		W	8	 M6 * 15 mm

Step9


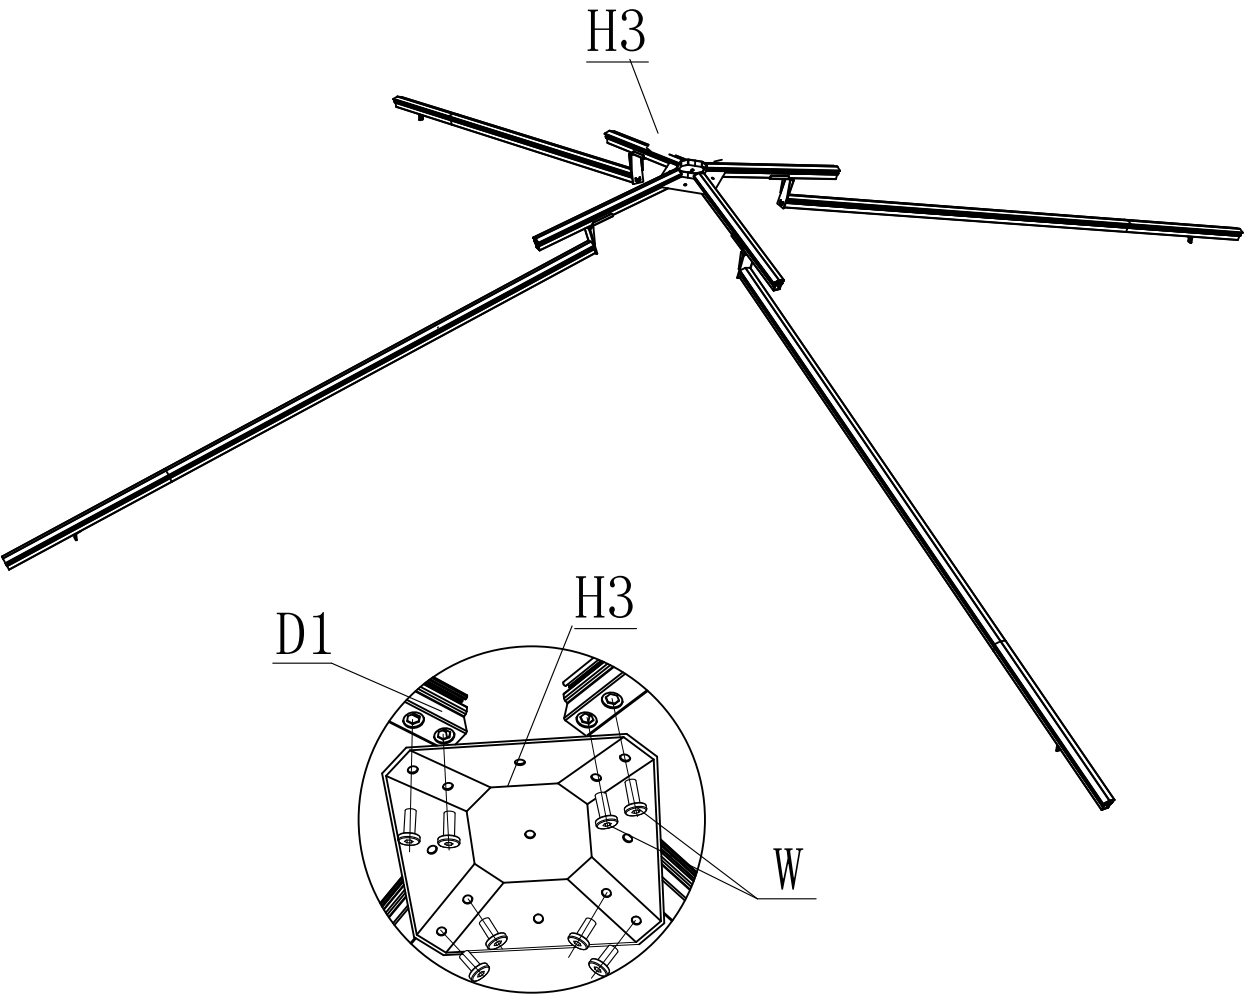


No.	Qty	Picture	No.	Qty	Picture
D2	4		W	8	 M6 * 15 mm
03	4				

Step10

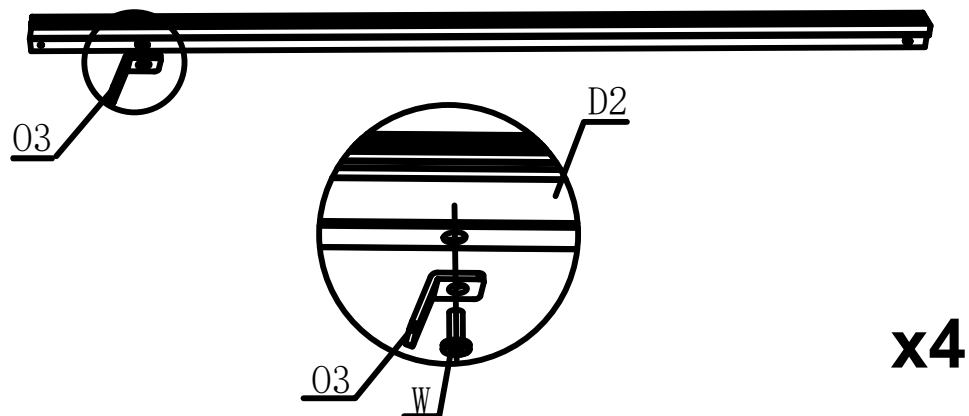





Step11

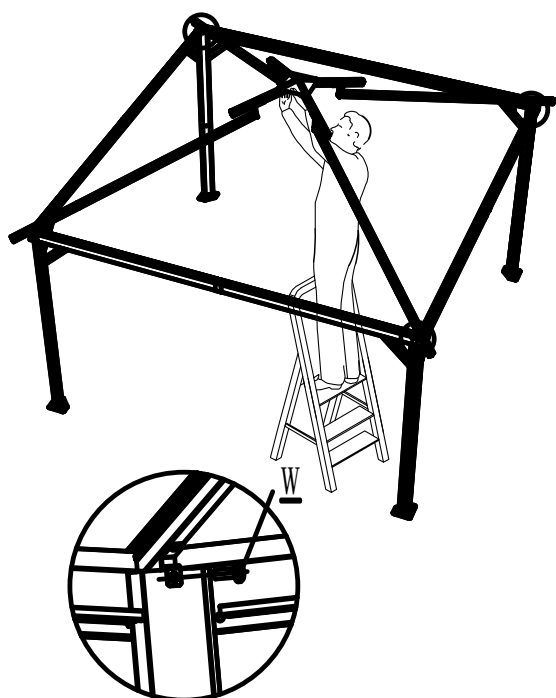



- Note:
1. Have one person stand on the ladder to lift and hold "H3" while others fasten the screws of "02"
 2. Do not release "H3" until all the "02" screws are fully tightend.

No.	Qty	Picture	No.	Qty	Picture
I	4		W	12	 M6 * 15 mm

Step14

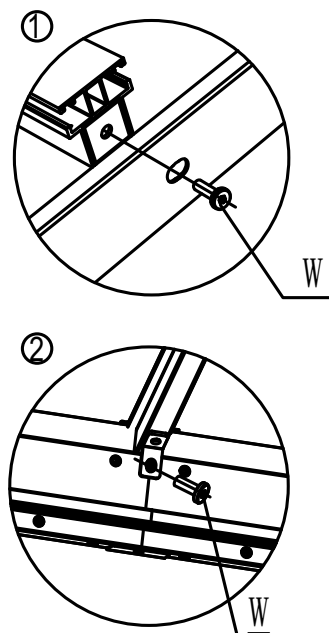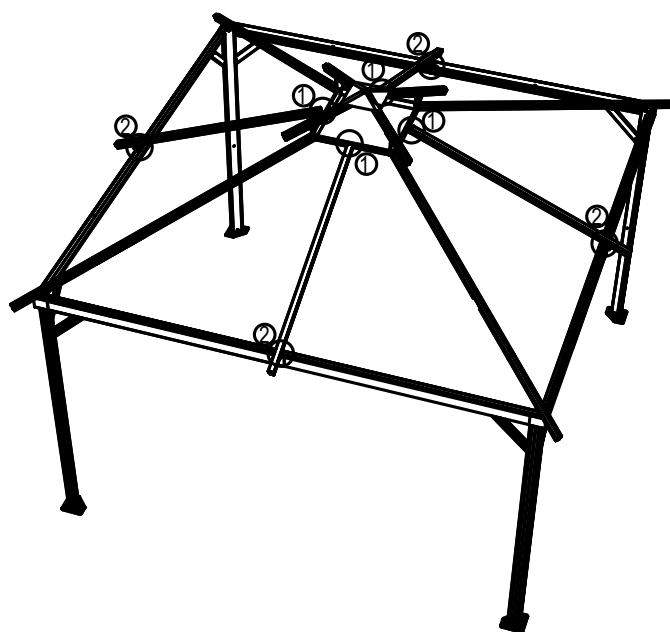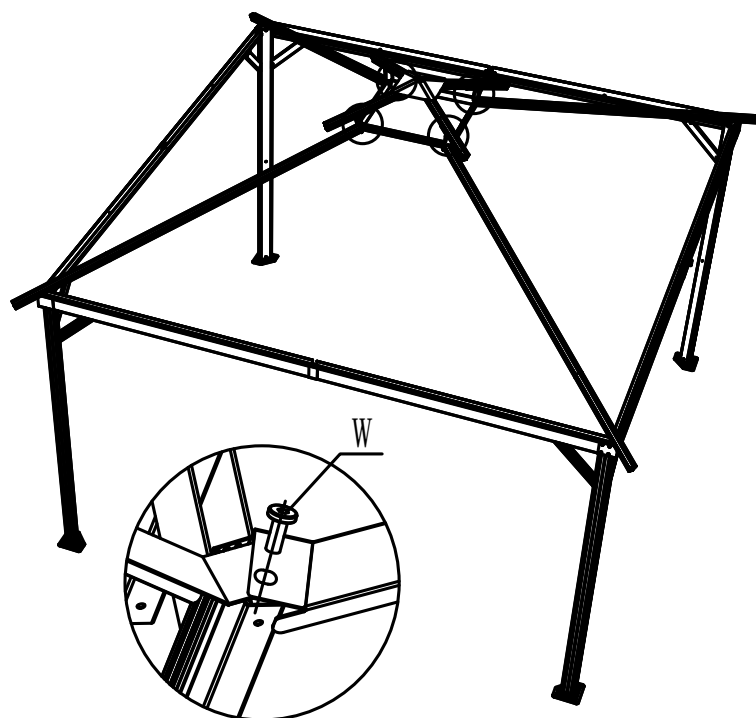


Step15

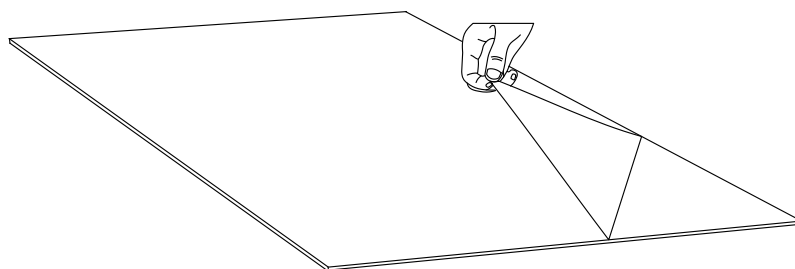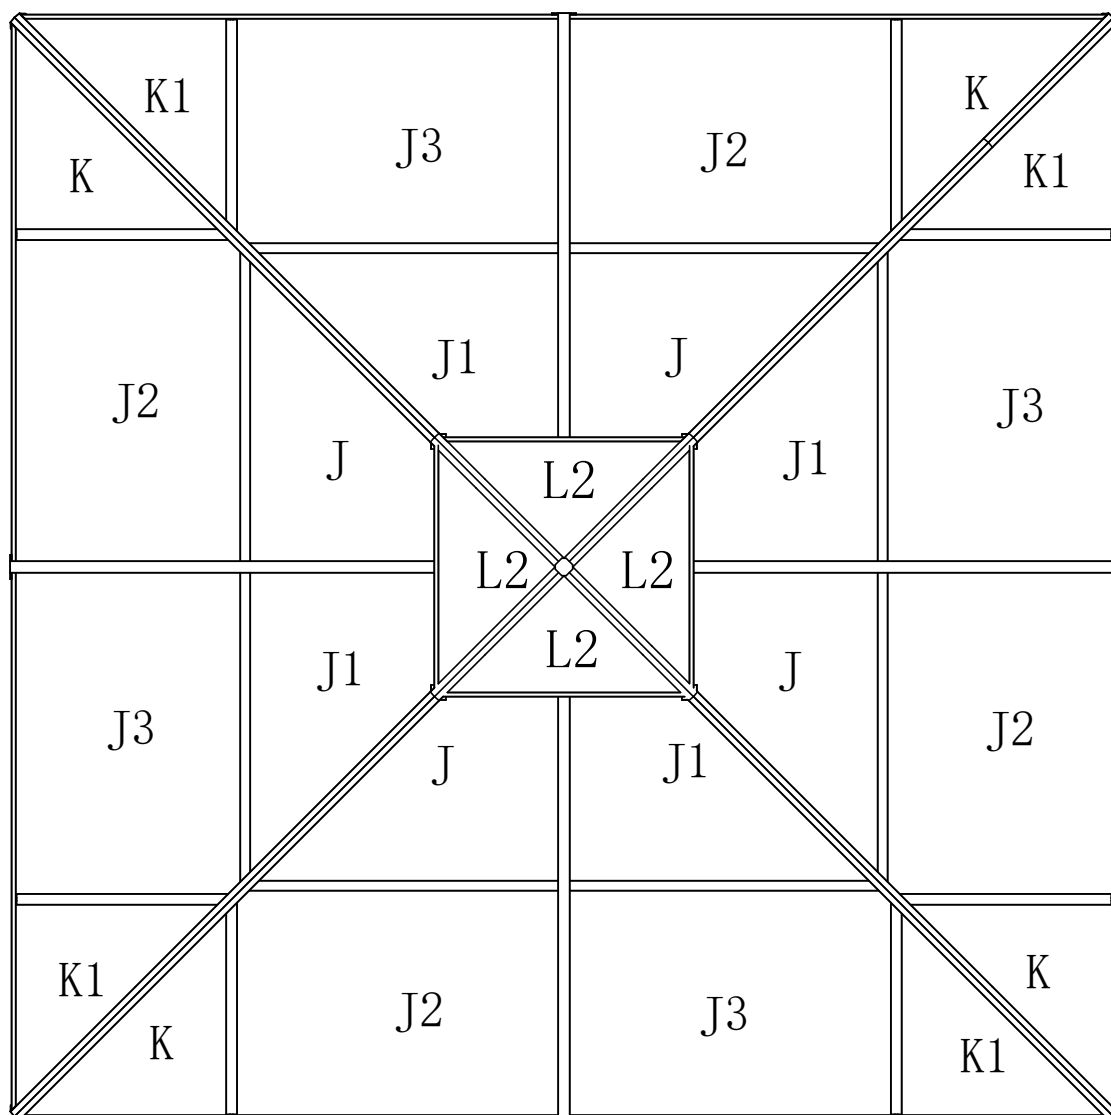

Remove the protective film
before installation.



No.	Qty	Picture	No.	Qty	Picture
L2	4				

Step16




No.	Qty	Picture	No.	Qty	Picture
W1	4	 M6 * 20 mm	P	4	
G	4				

Step17

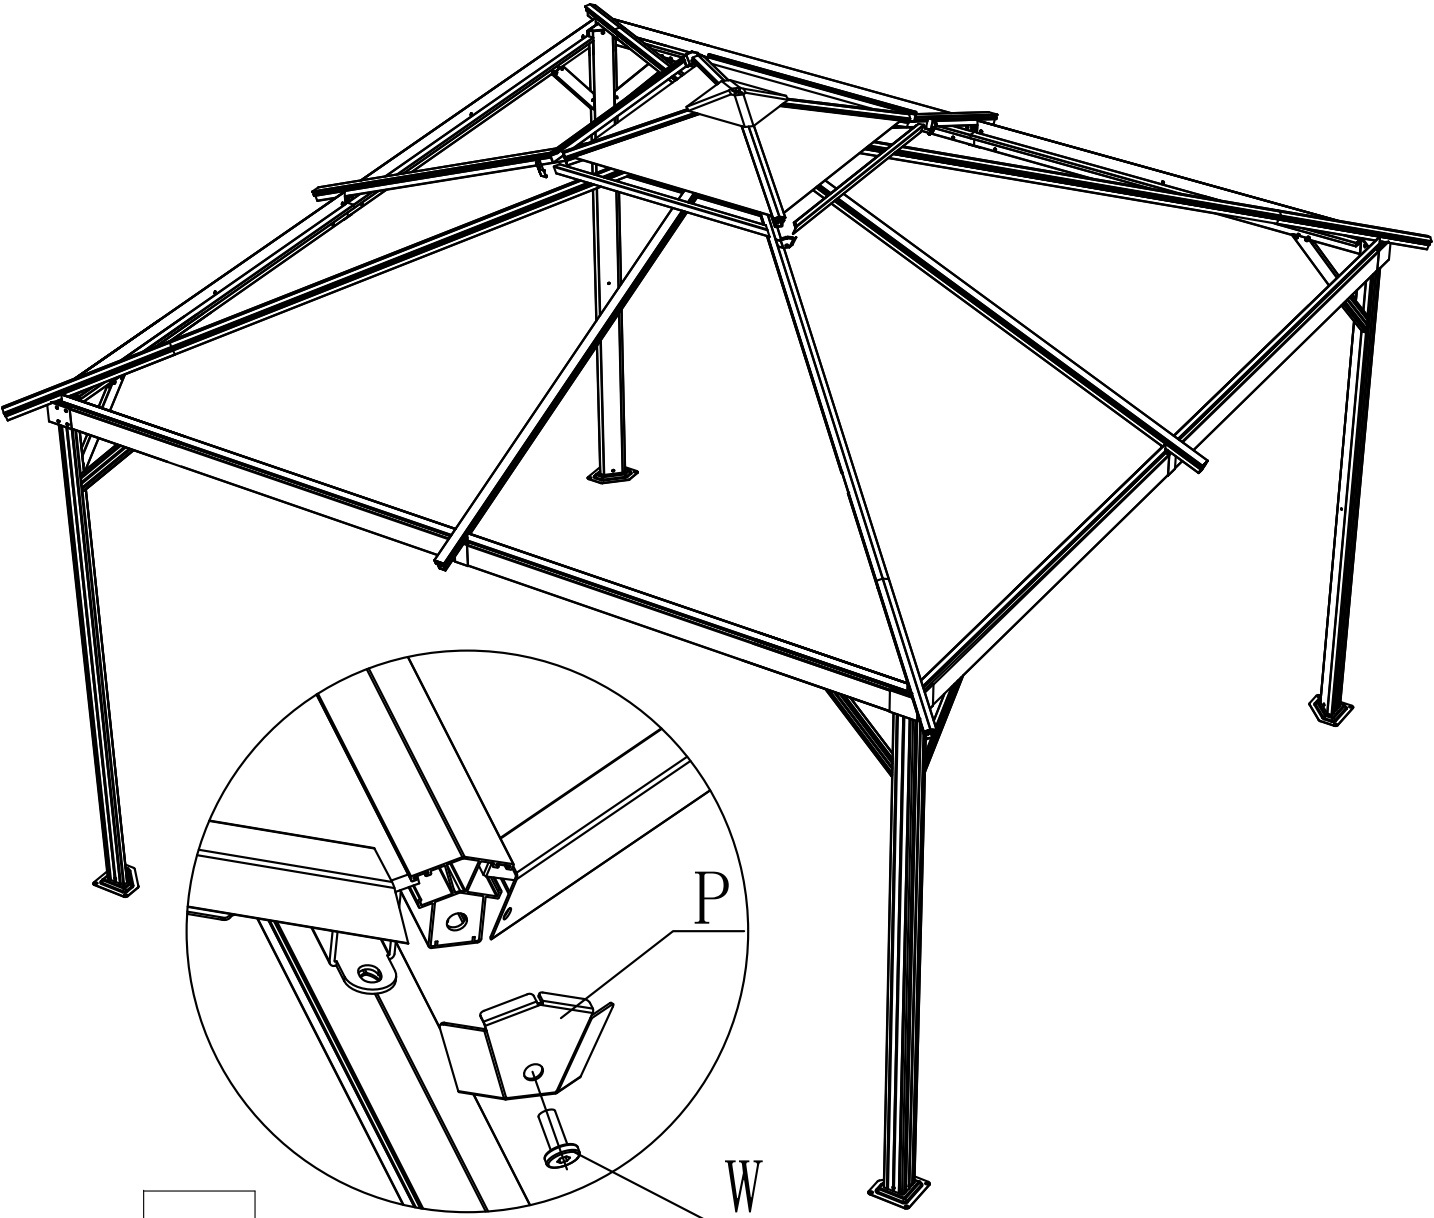


No.	Qty	Picture	No.	Qty	Picture
H2	1		T2	1	
Z4	1		P2	1	
Y2	1	 M6			





Step18

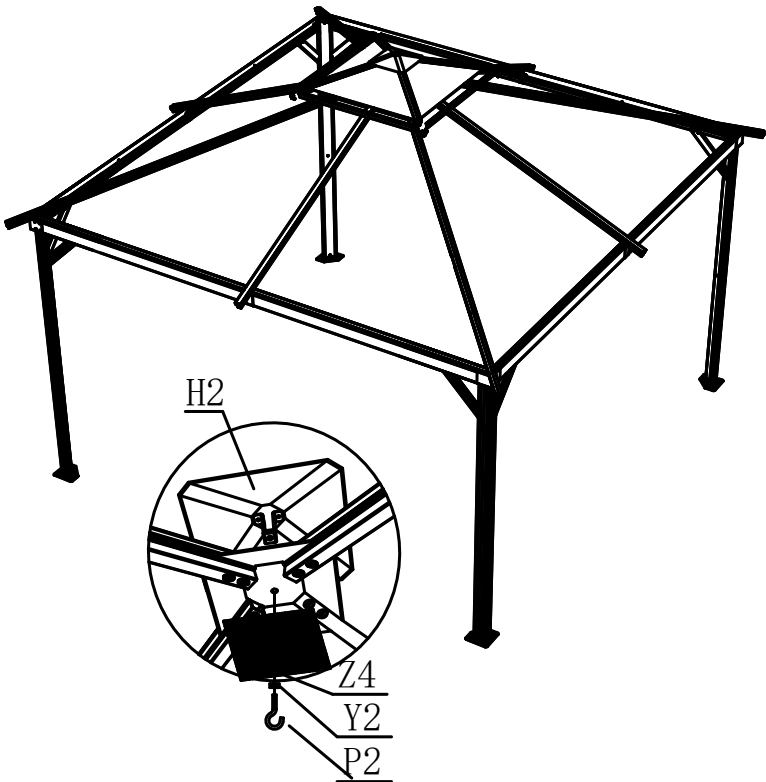



No.	Qty	Picture	No.	Qty	Picture
Q1	8				



Step19

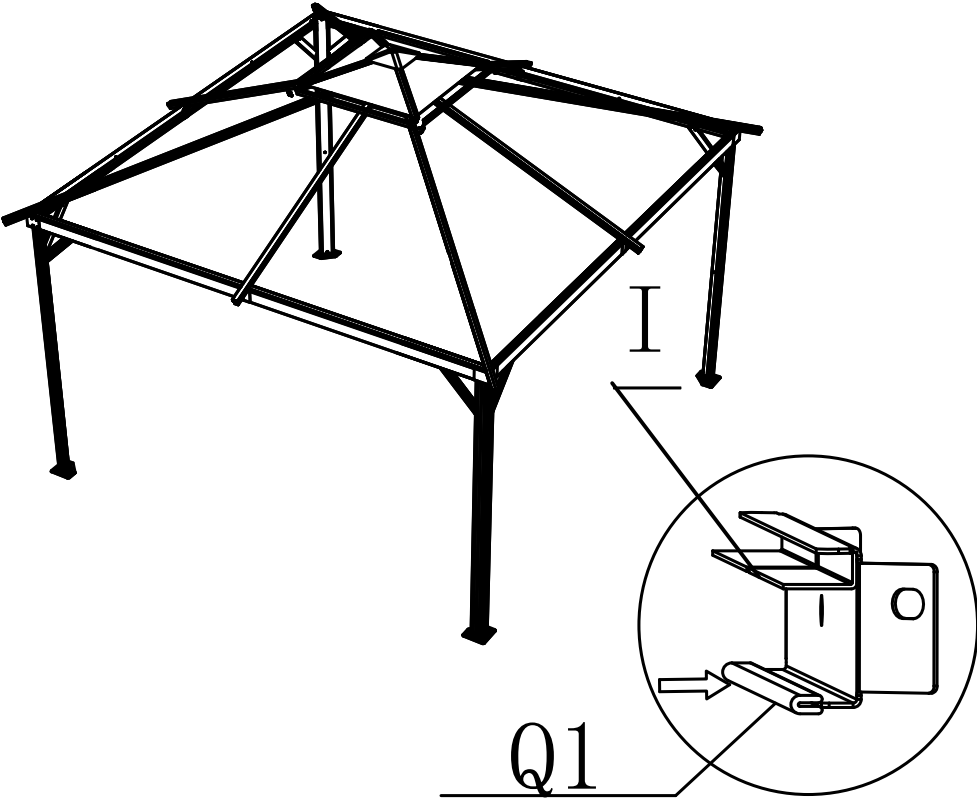



No.	Qty	Picture	No.	Qty	Picture
J	4		J1	4	
E	4		E1	4	



Step20

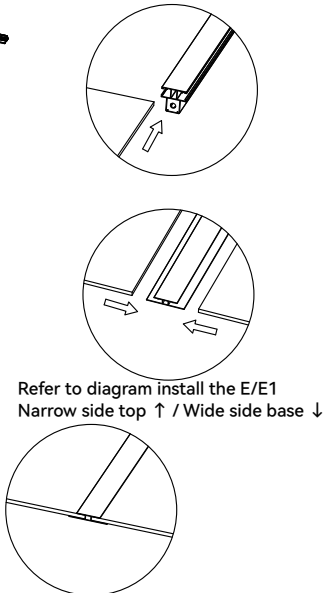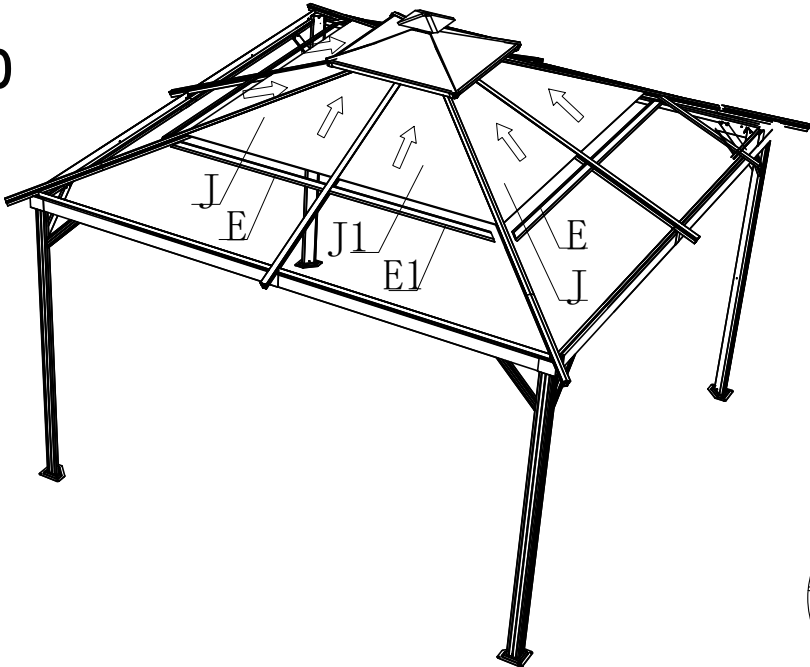




No.	Qty	Picture	No.	Qty	Picture
J2	4		J3	4	

Step21

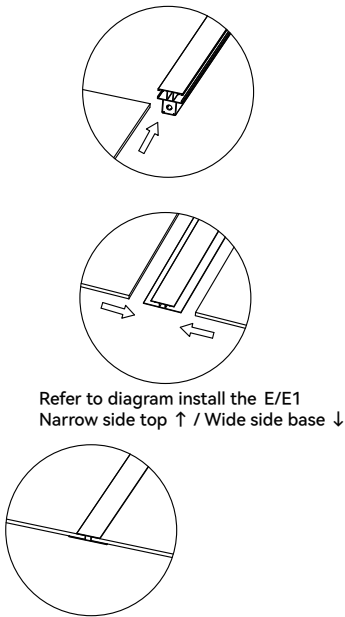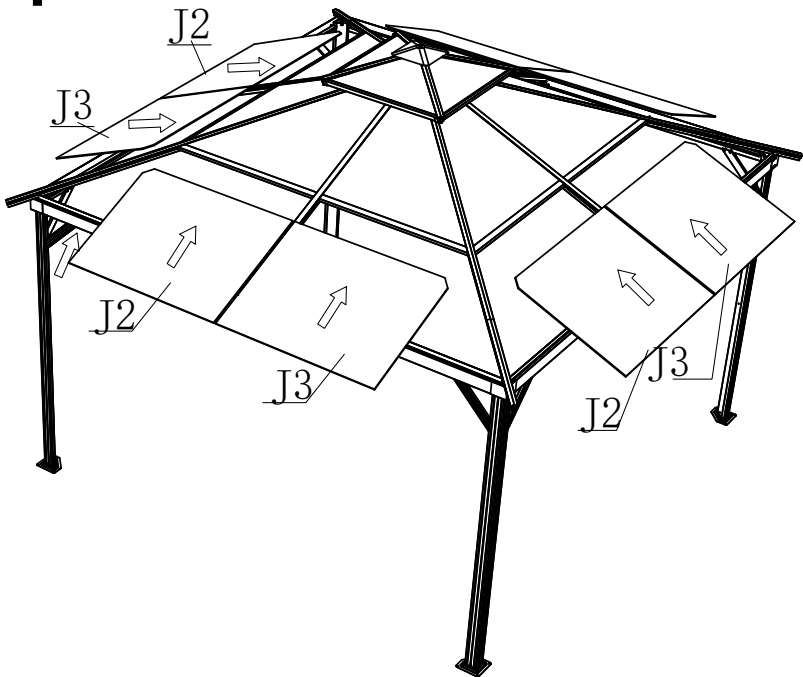


No.	Qty	Picture	No.	Qty	Picture
K	4		K1	4	
E2	4		E3	4	

Step22

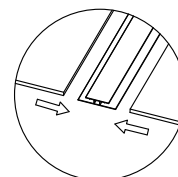
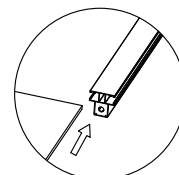
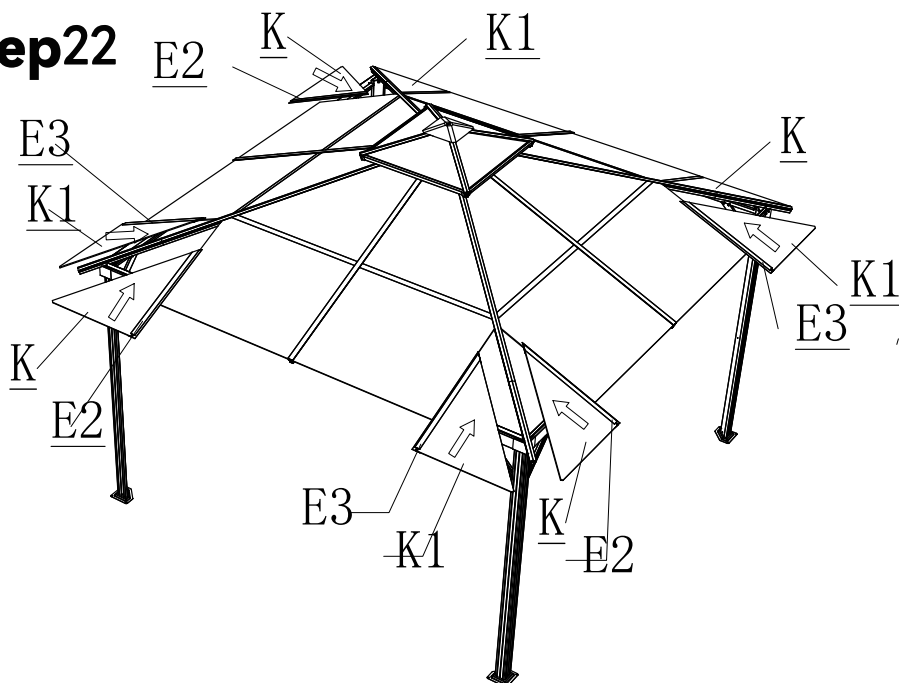


Refer to the previous diagram for installing E2/
E3 Narrow side top ↑ / Wide side base ↓

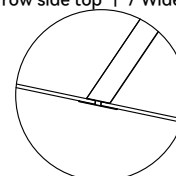



No.	Qty	Picture	No.	Qty	Picture
P	4		P1	4	
F	4		F1	4	
W1	8	 M6 * 20			


Step23

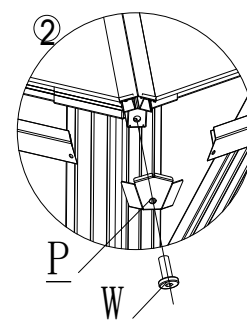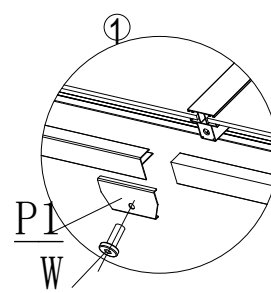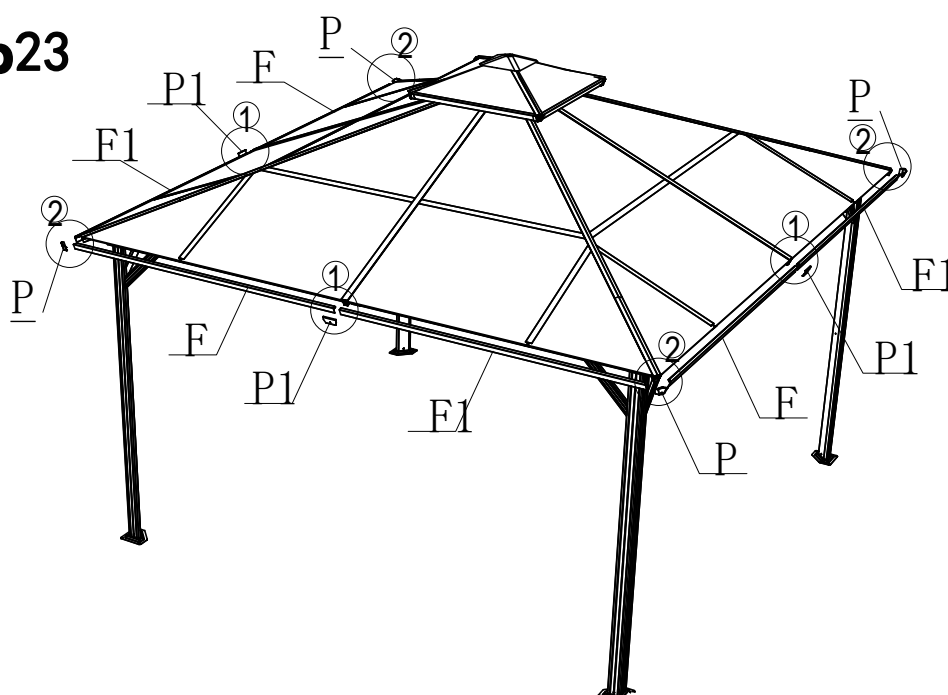




No.	Qty	Picture	No.	Qty	Picture
U	72		U1	8	 Ø11 * Ø 6* 20mm
X	8	 M6 * 35 mm			

Step24

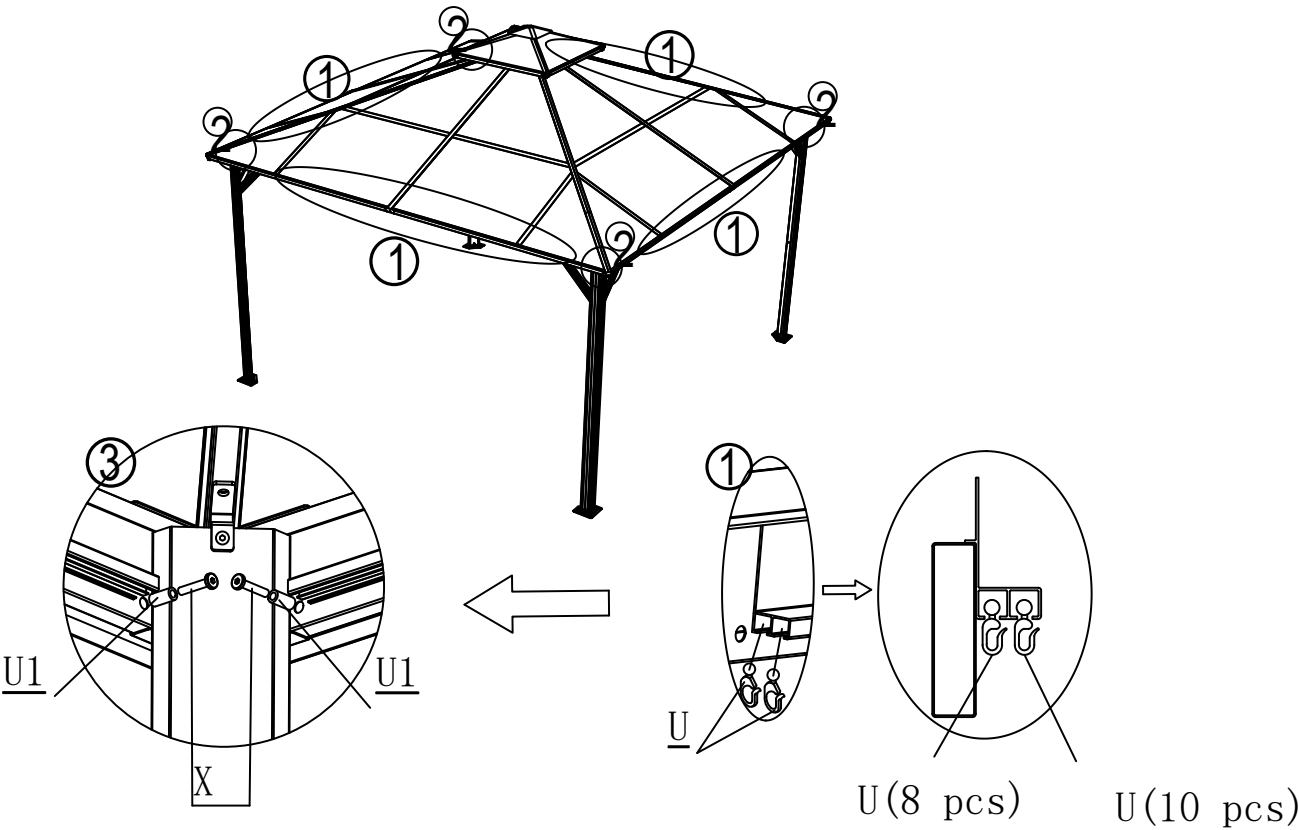


No.	Qty	Picture
S1	4	 Curtain

Step24

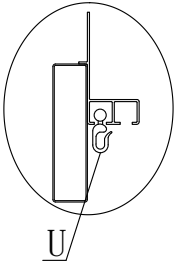
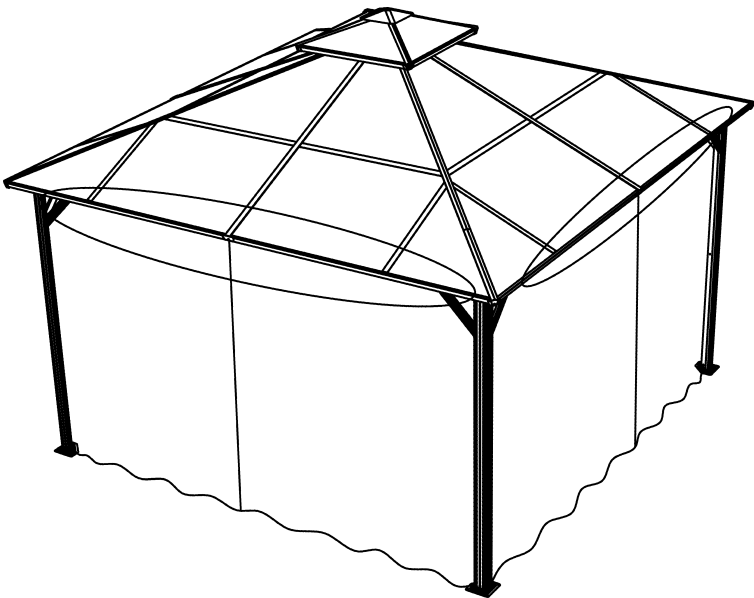
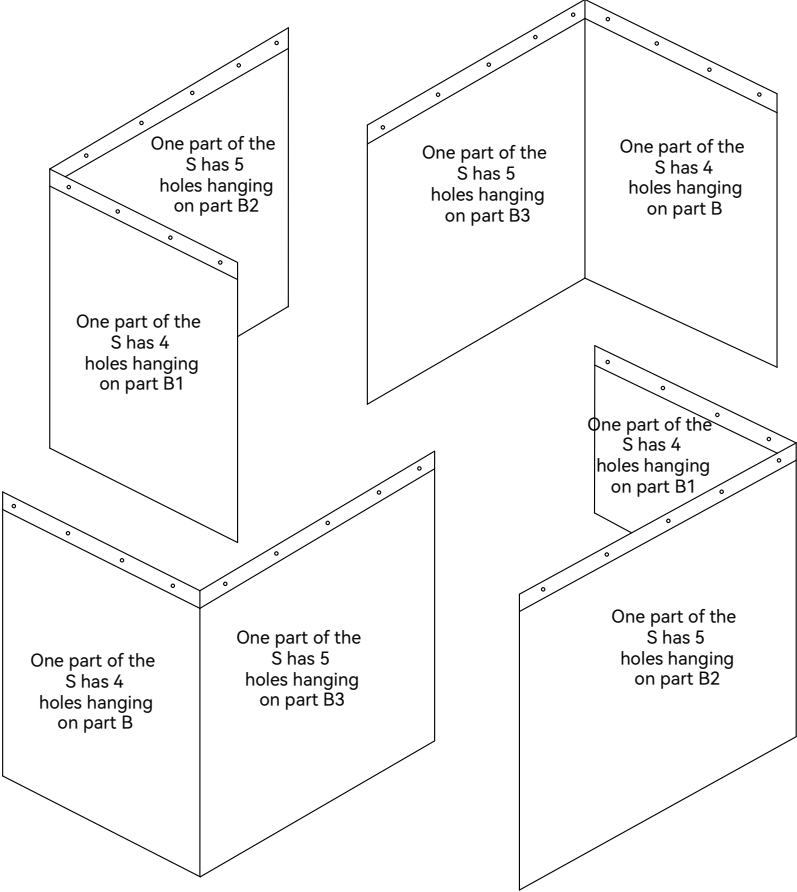


Pay attention to the sidewall curtain's installation position.

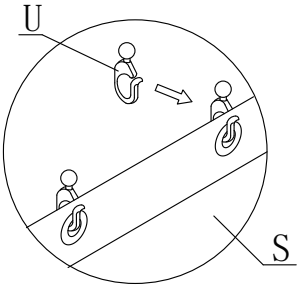


No.	Qty	Picture
T3	4	

Step25

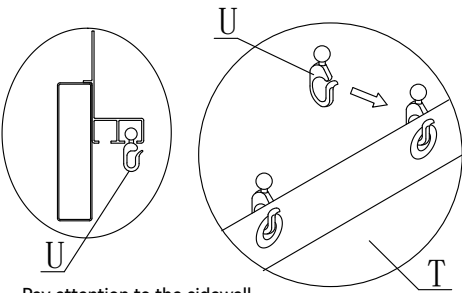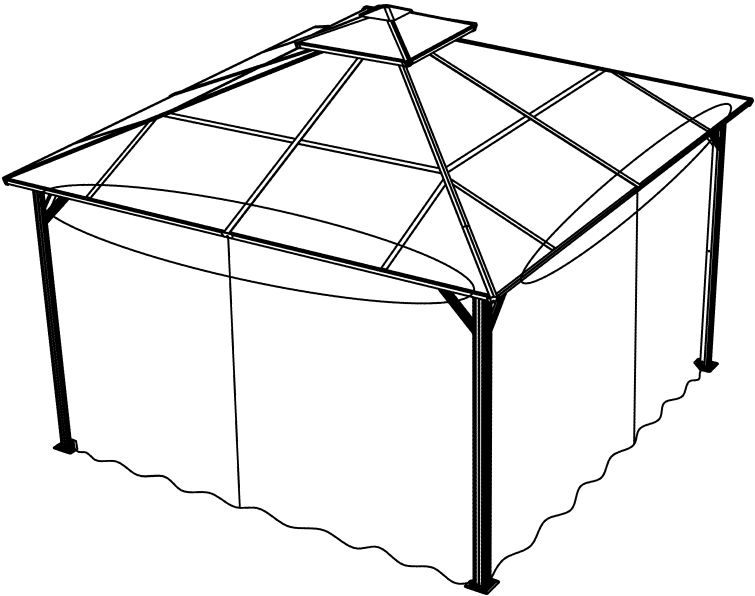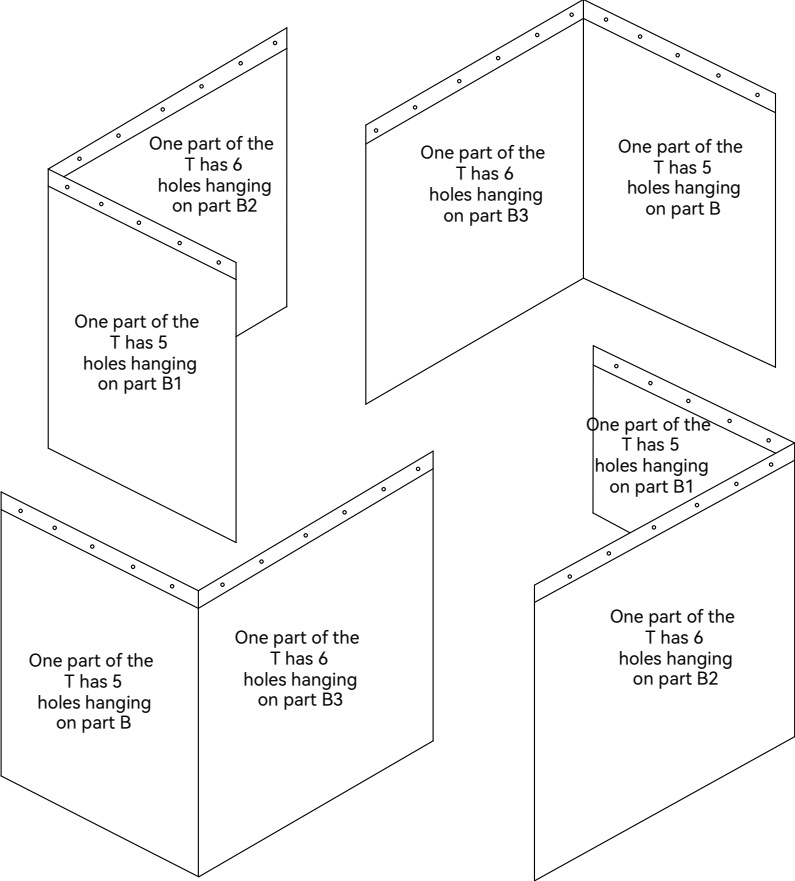

Pay attention to the sidewall netting's installation position.

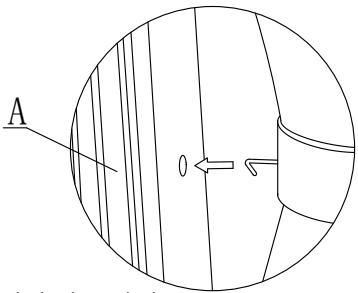

Hang the hook attached to the netting on Part A.

No.	Qty	Picture
Z	12	

Step26

